


**NOTES:**

1. All installations in hazardous locations must comply with requirements listed by certification drawings related to this equipment. Check for the certification number on the nameplate and follow the specified requirements of this equipment.
2. Dial-Up Modem Configuration Shown. When using dial-up dual port modem, power to be connected to P1-9.
3. Software Scheduler Required
4. To access termination board, remove the cover of the I/O Junction box on the BTU.

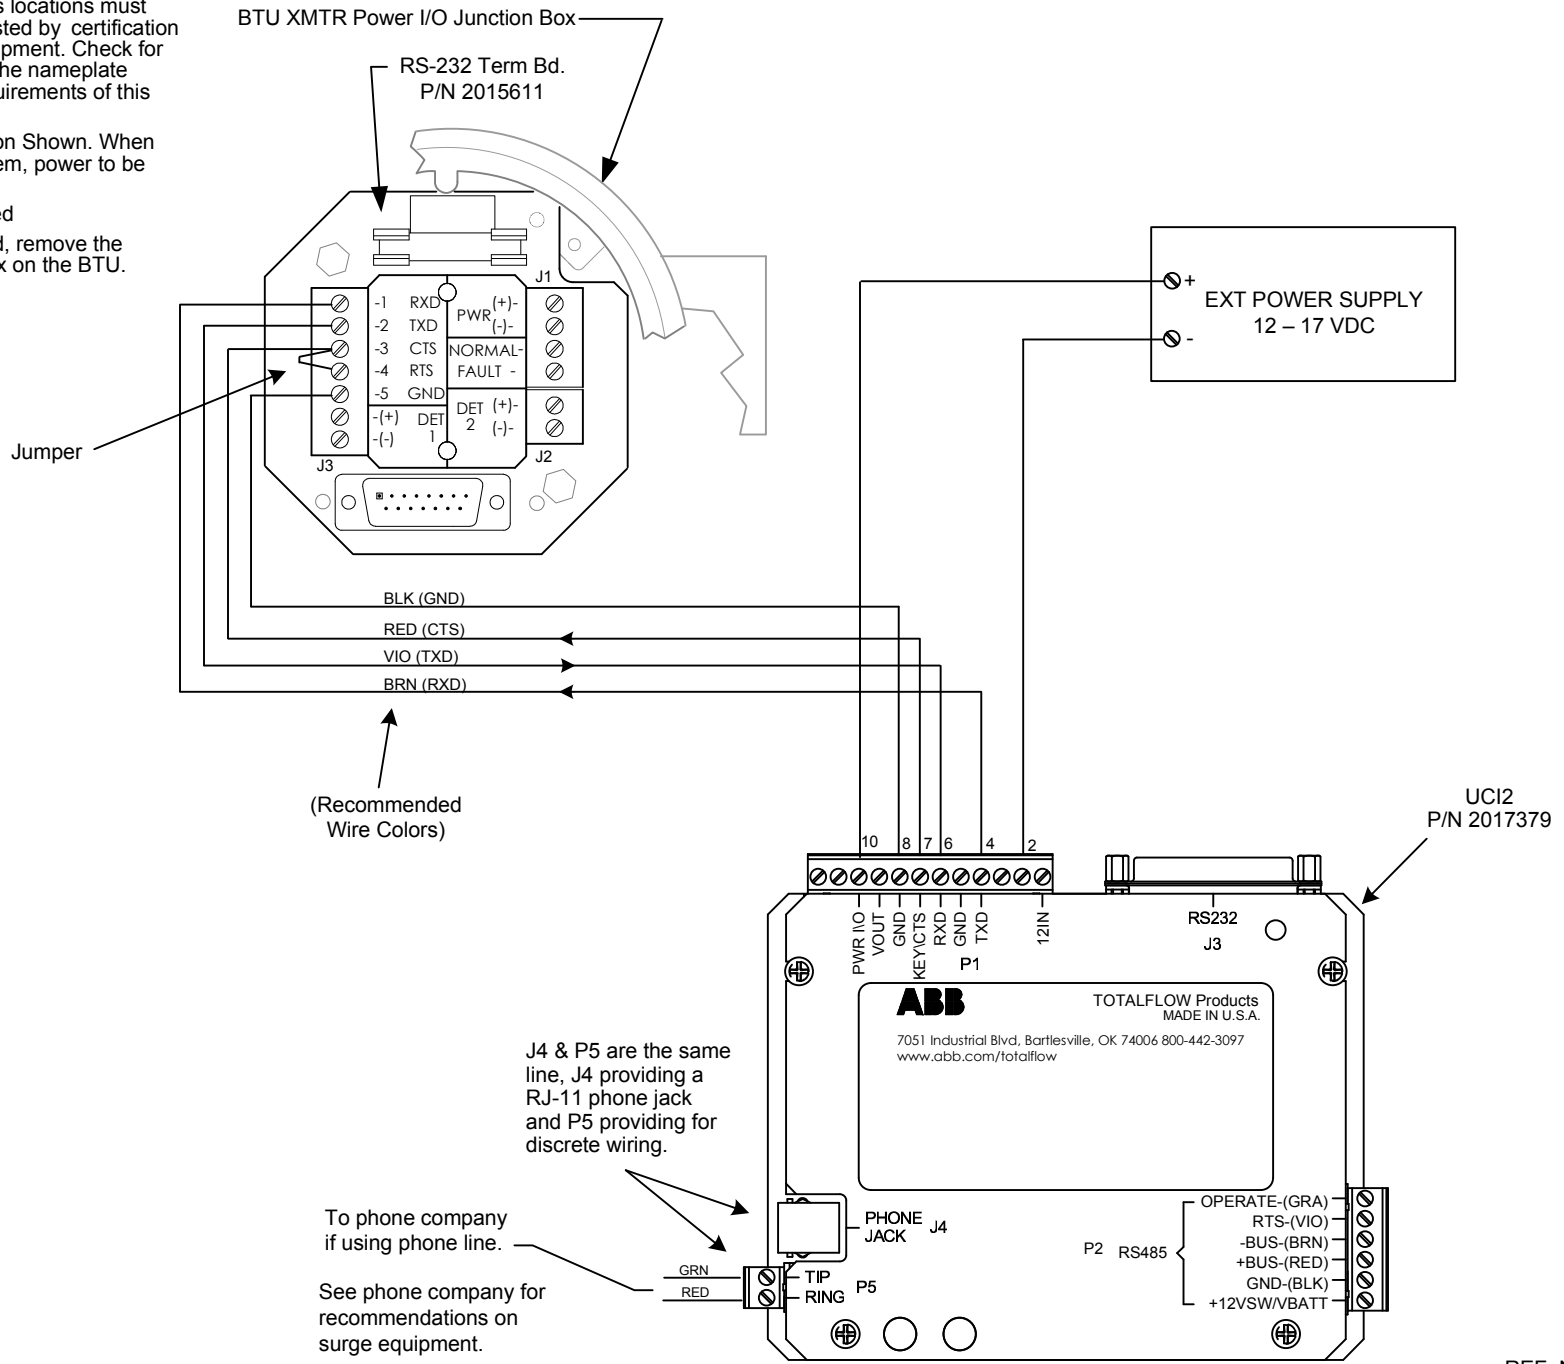

REF: N/A

	<b>TOTALFLOW</b> Products	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
		L18395	UD	BTU8000/8100 (2015611 BD) TO UC12 W/ EXT CONTINUOUS PWR (RS-232)	2102464	AA	1 OF 1