
NOTES:

- All installations in hazardous locations must comply with requirements listed by certification drawings related to this equipment. Check for the certification number on the nameplate and follow the specified requirements of this equipment.
- To access termination board, remove the Rear End Cap of the unit (a 1/16th Hex Set Screw must be loosened to remove the Cap).

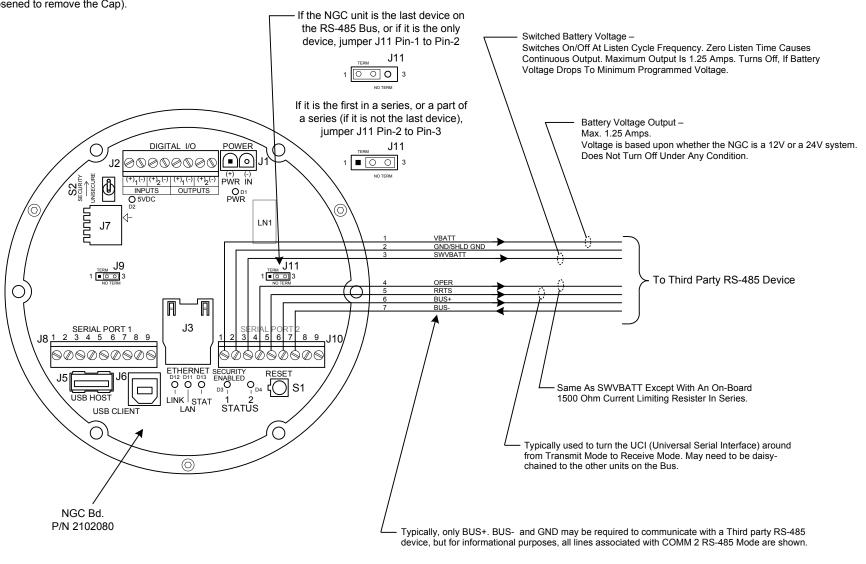

ſ	44 - 14 - 14	TOTAL ELOW	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
	ABB	TOTALFLOW Products			NGC 8200 PORT 2 GENERIC WIRING			
			L17621	UD	GUIDE (RS-485)	2102317	AA	1 OF 1