

NOTES:

 
1. **WARNING:** This drawing does not illustrate the installation methods required for hazardous locations. Prior to any installation in a Classified Hazardous Location, verify installation methods by the Control Drawing referenced on the product's name tag and national and local codes.

2. The Jumper at J16 sets the Power Options:

For Solar & Battery Power, Jumper Pin 1 to Pin 2.
Note: Power to J17 by ABB approved charging source.

For External Power Source: Jumper Pin 2 to Pin 3.
Note: DO NOT CONNECT A BATTERY TO J15.
 Wire external power (9 - 30 Vdc) to charger connector J17.

WARNING: Power at J17 (up to 30 Vdc) is applied to the Communication connector terminals as power for radios, etc. Radio operation and the Inhibit feature may not work properly if other than a nominal 12 Vdc power source is utilized.

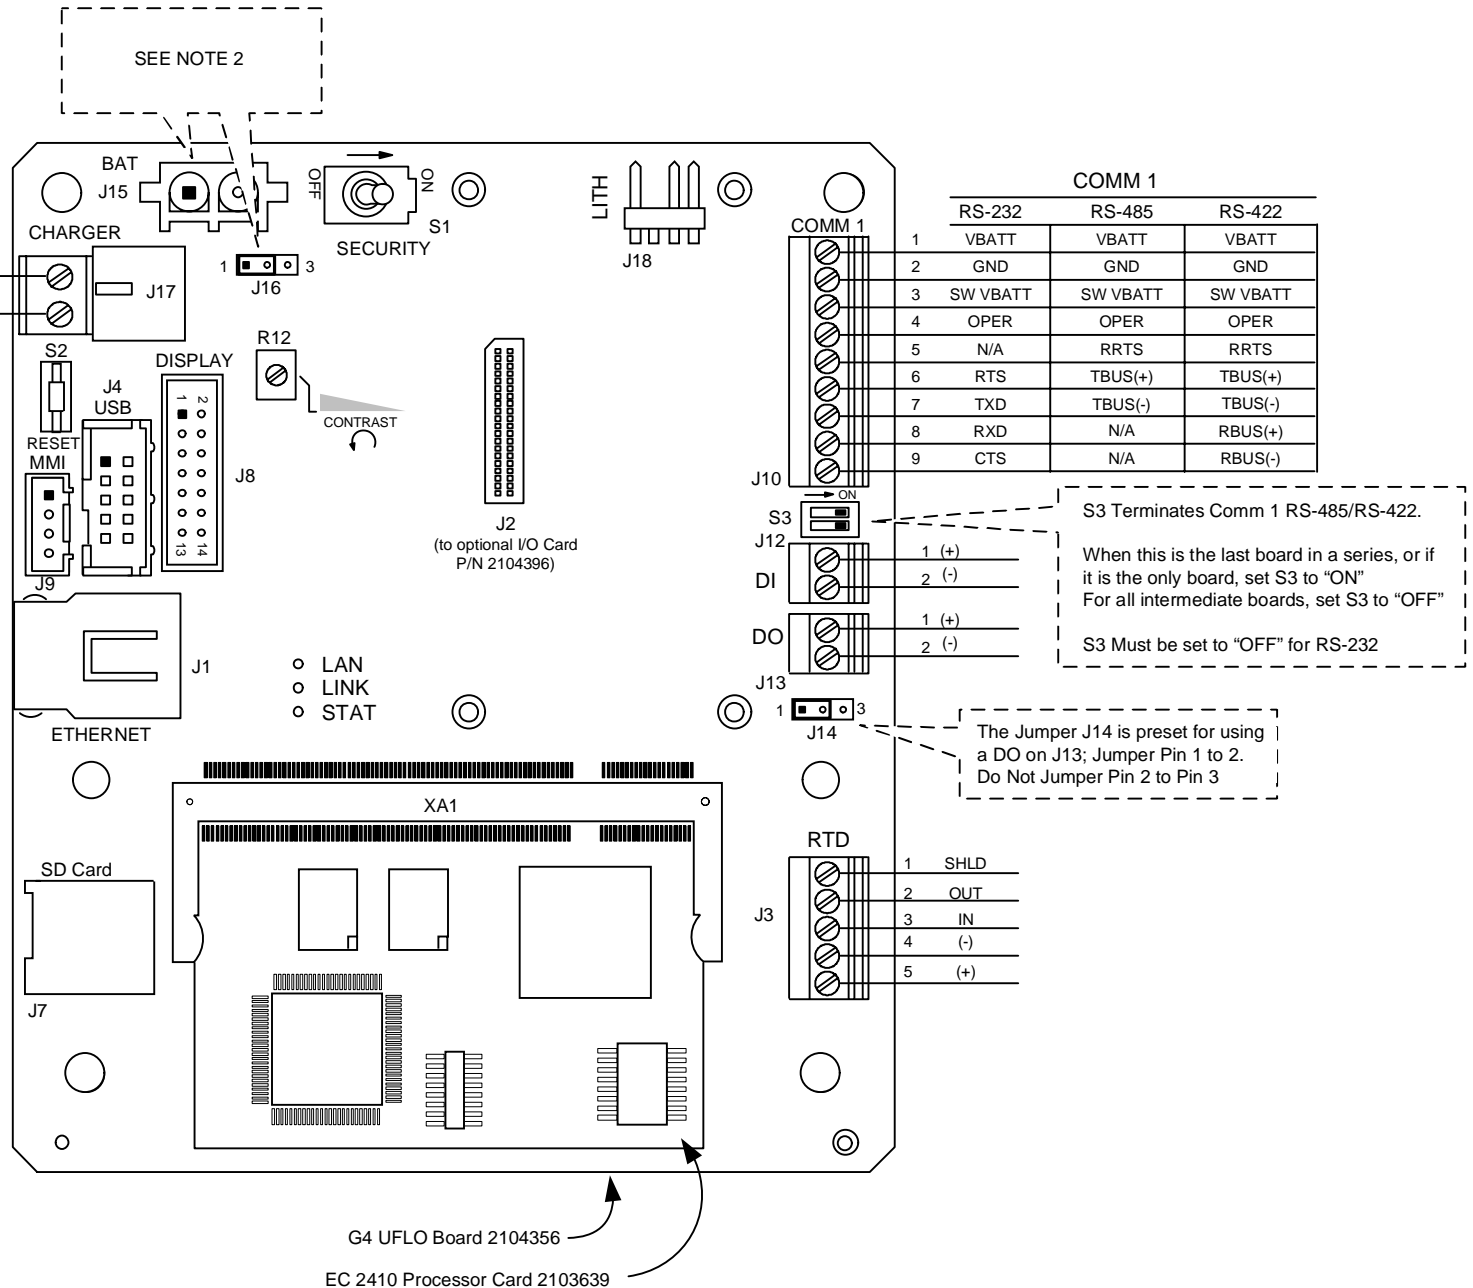

REF: N/A

ABB	TOTALFLOW Products	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
		L31544	UD	UFLO ^{G4} (2104356) BOARD WIRING W/ RS-232, 485 AND 422 FOR COMM1	2104567	AA	1 OF 1