 


SACE Tmax T5D/PV

 
 
Istruzioni di installazione Tmax T5D/PV
 Installation instructions Tmax T5D/PV
 Installationsanleitung Tmax T5D/PV
 Instructions pour l'installation Tmax T5D/PV
 Instrucciones de instalación Tmax T5D/PV




1SDH000780R0002

A


If the device is equipped with motor operator, MOE, openings with current shall be performed using SOR or UVR.

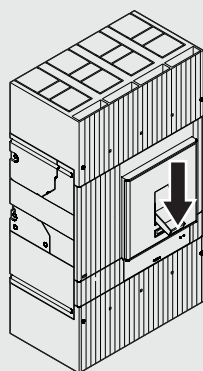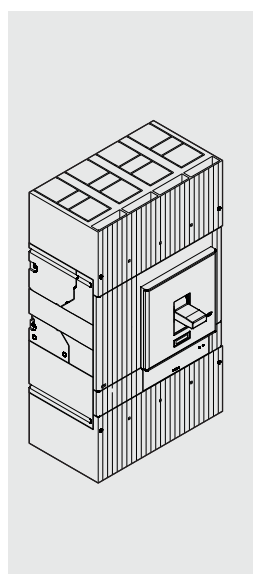

OFF


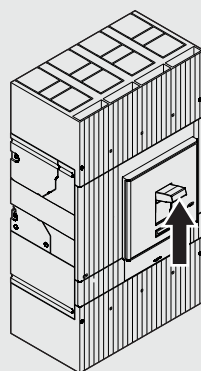 


ON




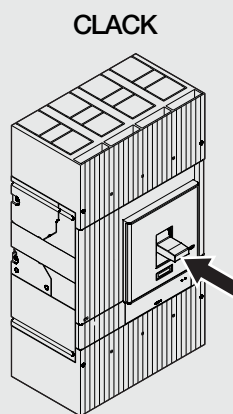 


TRIPPED

  
B

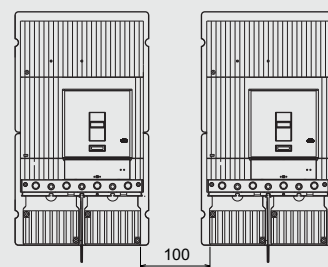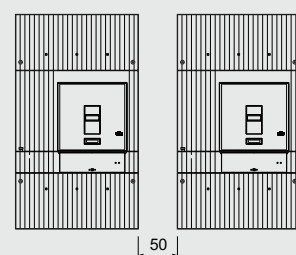


C

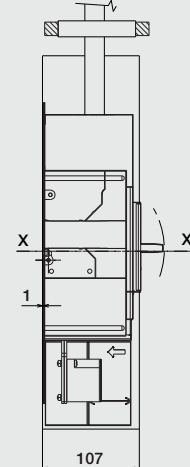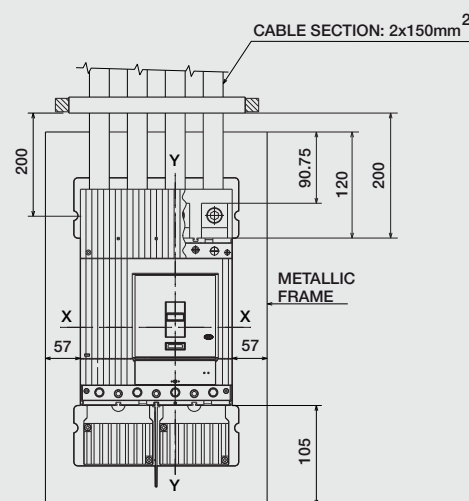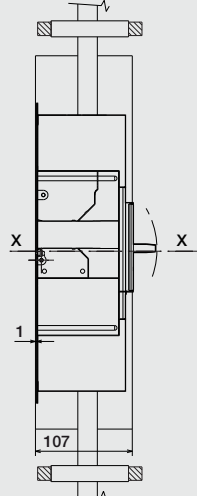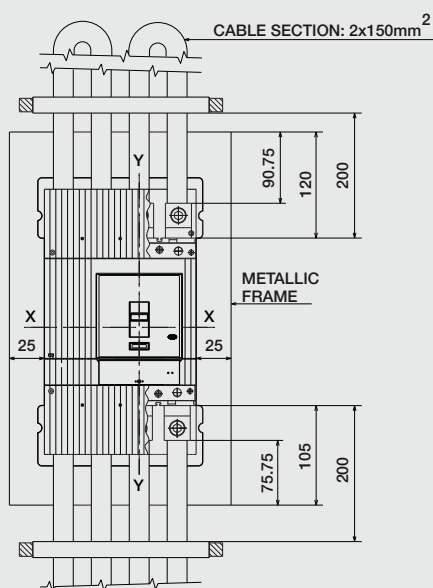    


D

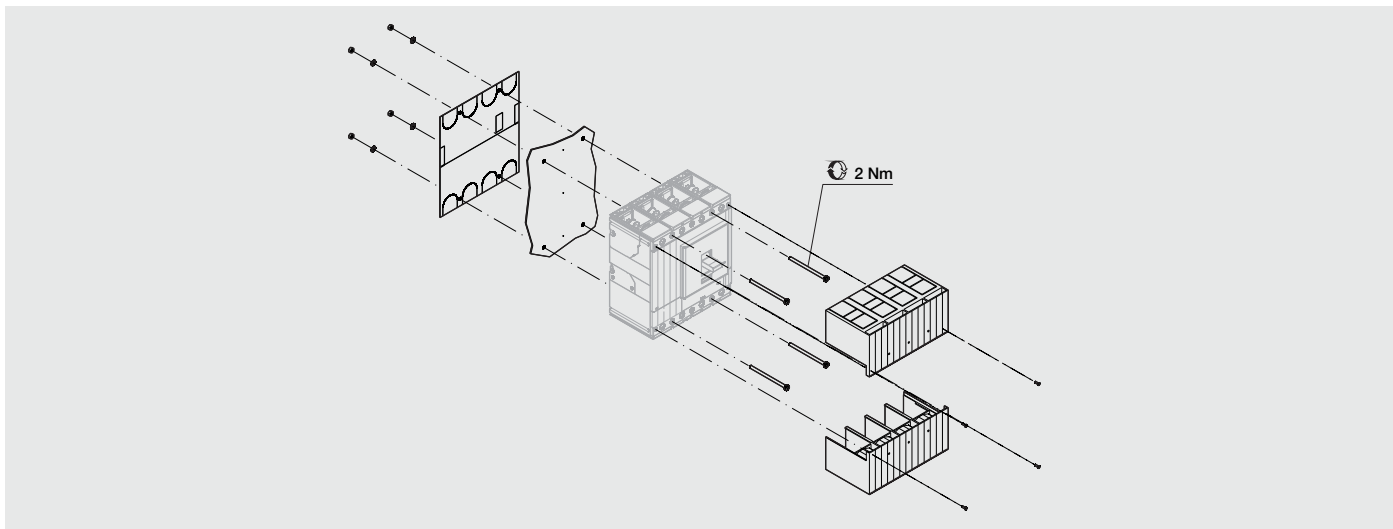 


E

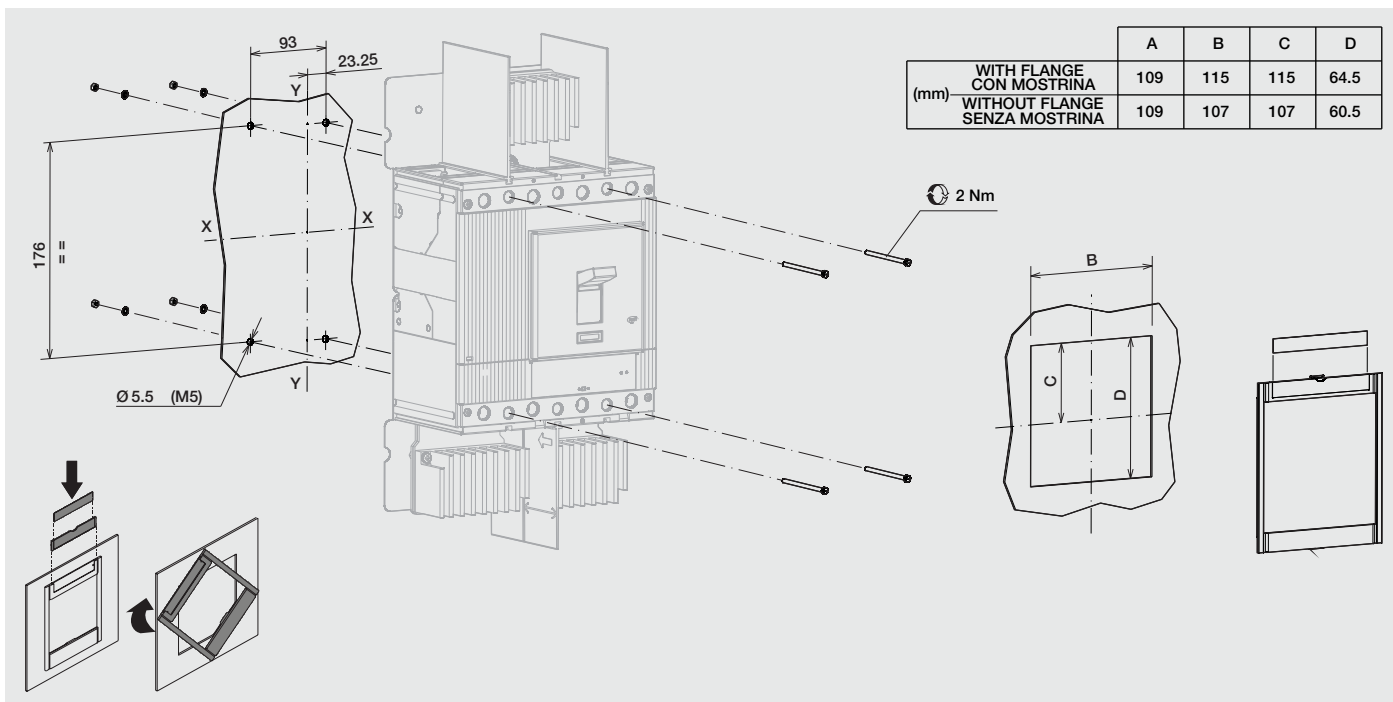 

F

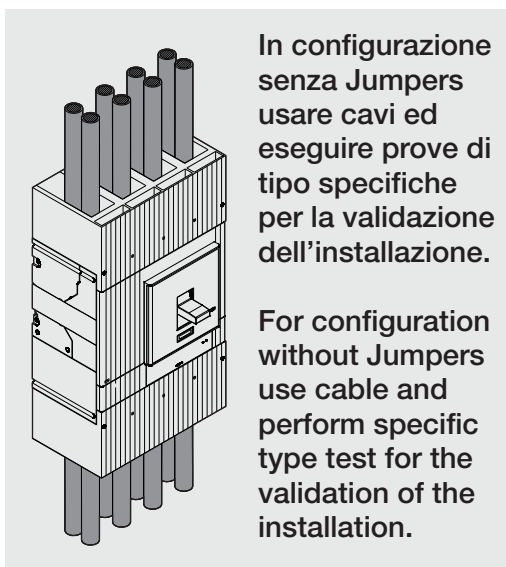 


G

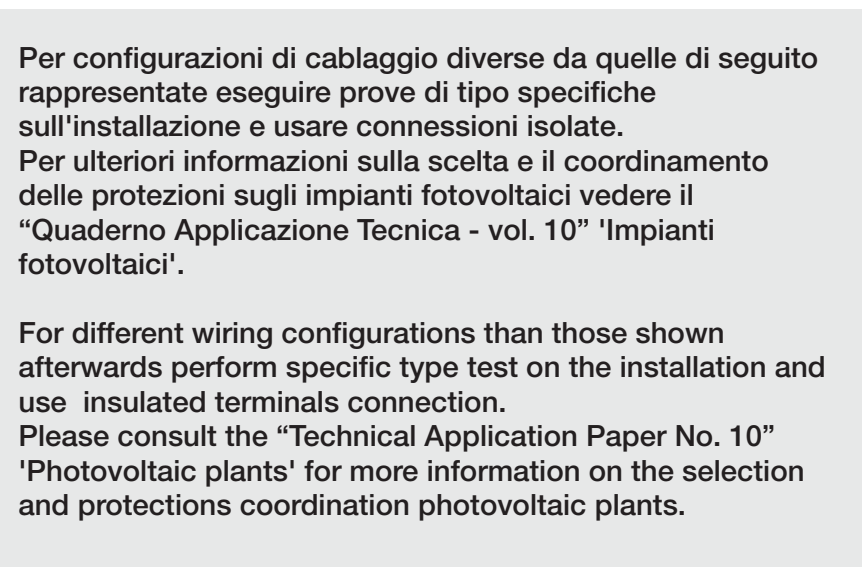 

H

 
Configurations without jumpers

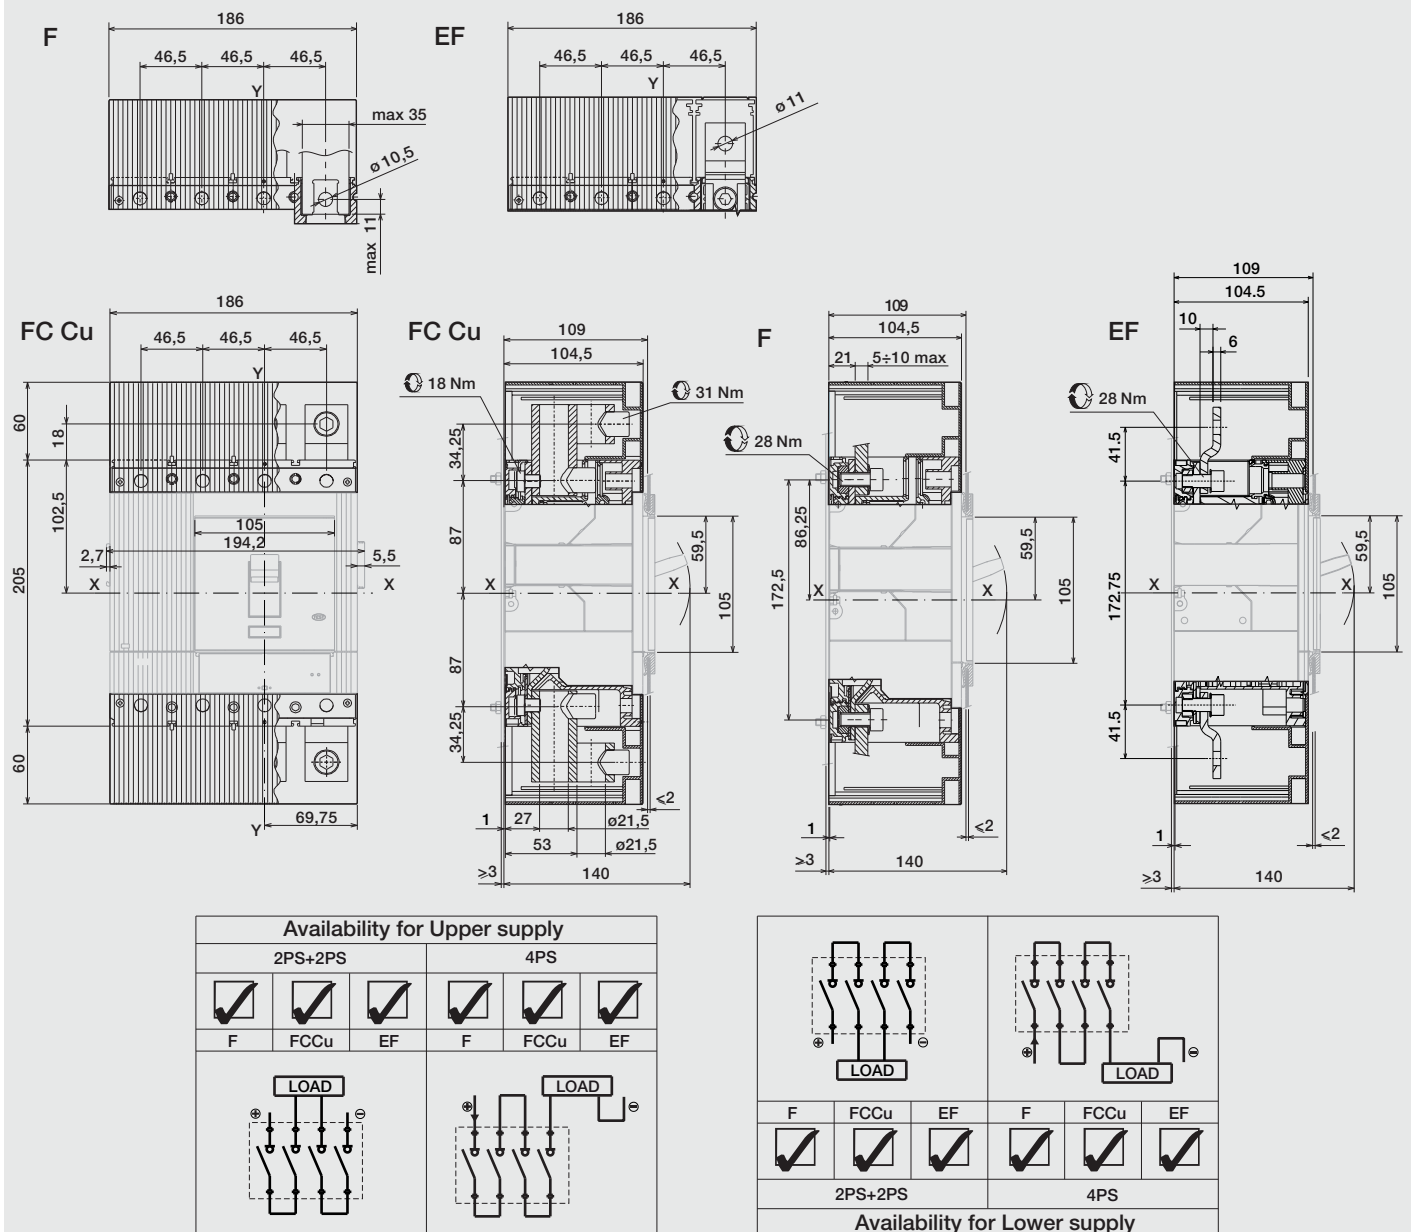


I

Jumper examples

 
Example with jumper (4PS Upper Supply)

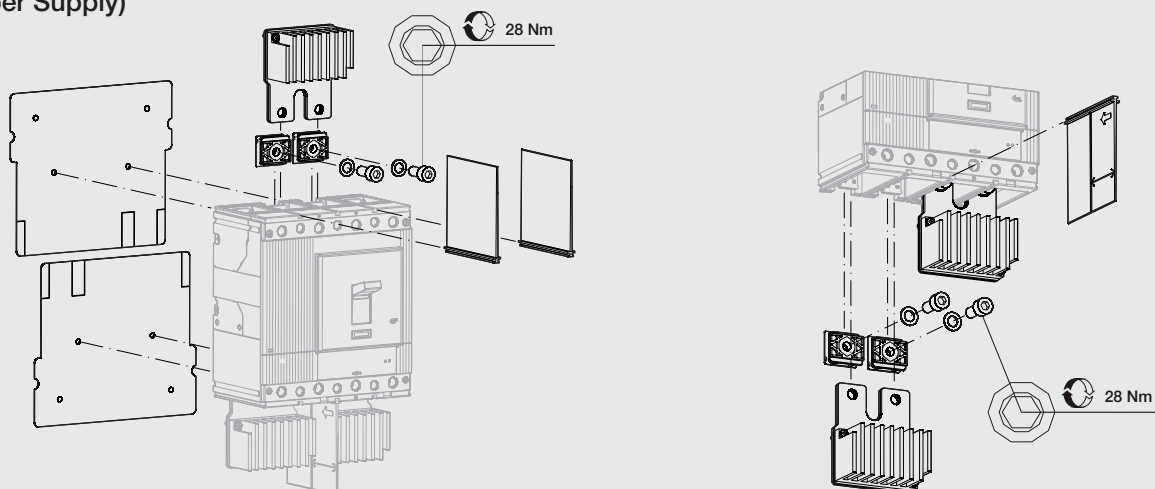





	F	FCCu	EF
Availability for Upper supply	☒	☒	☒

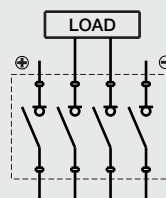 



2PS+2PS
UPPER SUPPLY

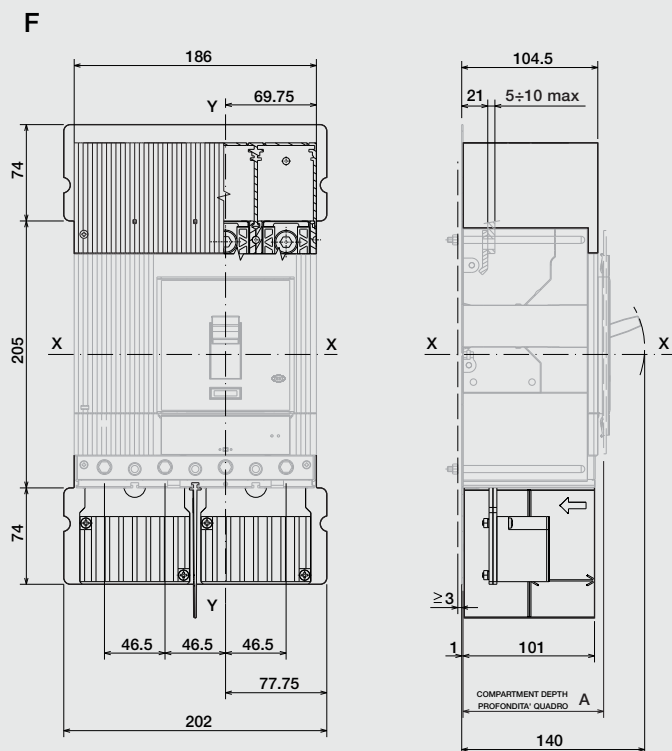 


EF

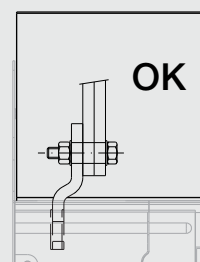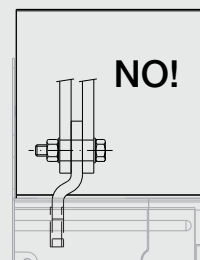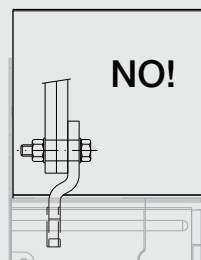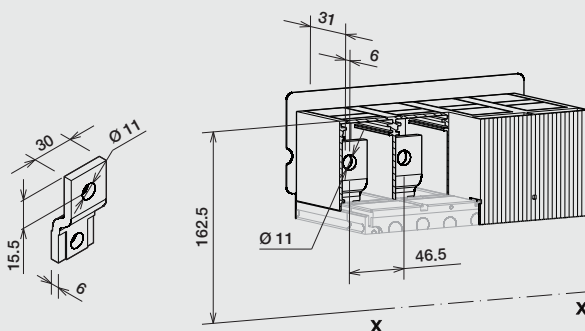    

FCCu

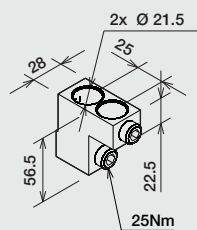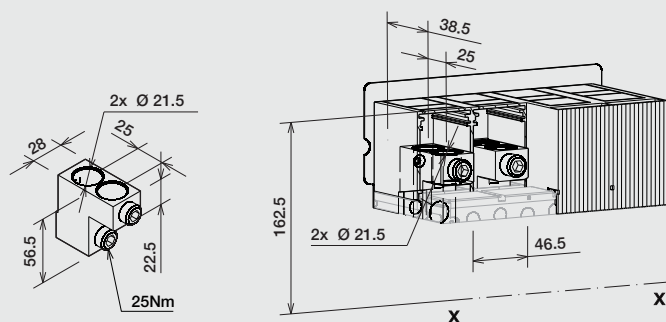  



	F	FCCu	EF
Availability for Lower supply	☒	☒	☒

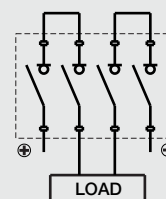 





2PS+2PS
LOWER SUPPLY

* Terminals configurations must be symmetrical with respect to x-x CB axis when CB is supplied from the top


	F	FCCu	EF
Availability for Upper supply	☒	☒	☒

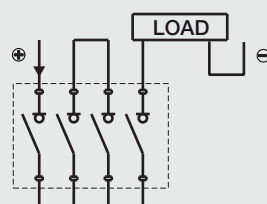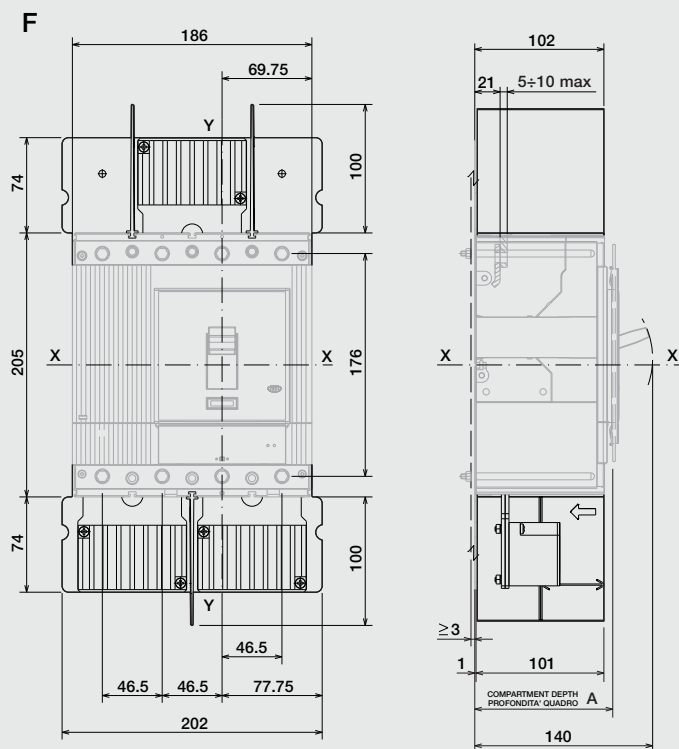  4PS
UPPER SUPPLY

    
EF

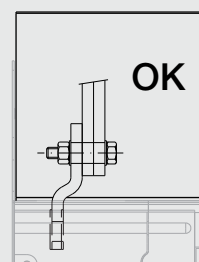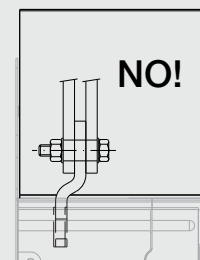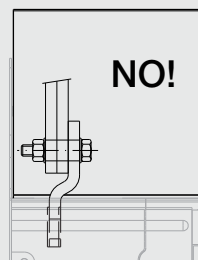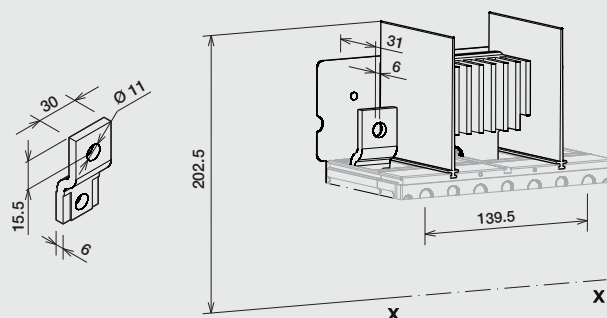

FCCu

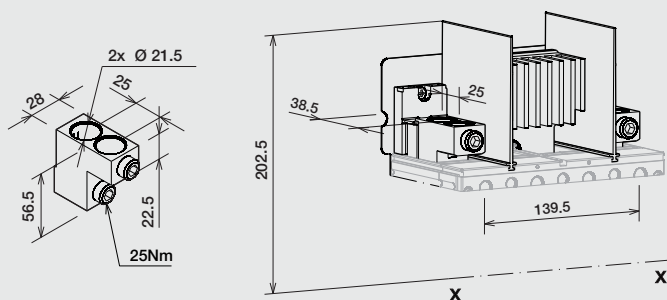 

	F	FCCu	EF
Availability for Lower supply	☒	☒	☒

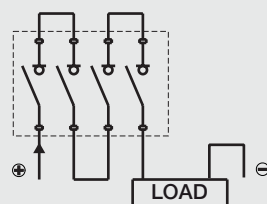 4PS
LOWER SUPPLY

* Terminals configurations must be symmetrical with respect to x-x CB axis when CB is supplied from the top