



# SM2000 – QUICK START GUIDE


## 1 Make Connections & Power-up the Instrument

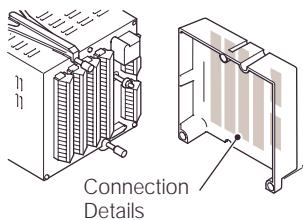

## 2 Select the Configuration Level and a Quick Start Template

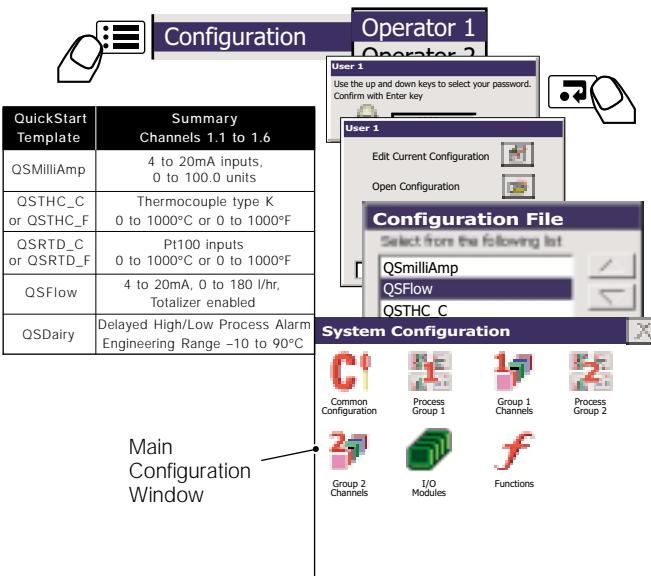

## 3 Set the Time and Date

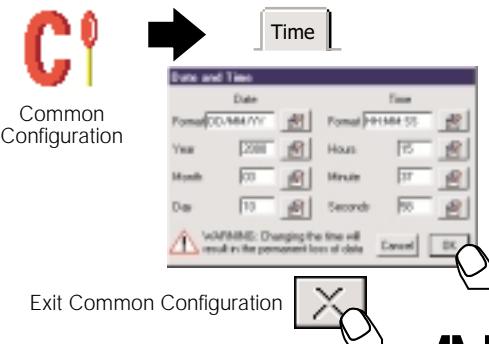

**ABB**


## 4 Set the Sample Rate

Process Group 1

Recording

Chart speed	Sample Rate	On board storage	
10 mm/h	60s	12 months	6 Channels Enabled
20 mm/h	30s	6 months	
60 mm/h	10s	2 months	
120 mm/h	5s	30 days	
240 mm/h	2s	14 days	
720 mm/h	1s	6 days	

## 5 Select the Views Required and the Operator Menu Choices

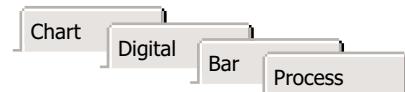

## 6 Set Up the Archive Files

- Archive
- Set the **Archive File Enables** – i.e. the files to be archived
  - Set the **Filename Tag**
  - Set the **New File Interval** (hourly, monthly or none)
  - Exit Group Configuration

## 7 Change the Channel Configurations

- Group 1 Channels
- Recording Channel n.n
- Set Up
- Analog i/p
- Alarm A
- Alarm B
- Totalizer
- Exit Channel Configuration
- Select the Channel Source
  - Set the Input Filter Type: Instantaneous or Max. and Min. Values during the sample interval.
  - Select the input type, linearizer, ranges and tag name
  - Select the Alarm type, set the alarm trip points, the tag and the hysteresis.
  - Set the Count Rate, Preset & Predetermined Count values

## 8 Set Up I/O




Note. Modules fitted are detected automatically

- Set the Mains Rejection Frequency
- Select the Relay Source and the Relay Polarity
- Select the Analog Output Source & Ranges
- Select the Digital Output Sources & Polarity


Exit I/O Module Configuration



## 9 Exit Configuration and Save Changes

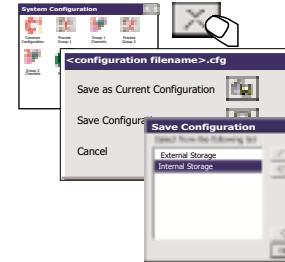

## 10 Start Recording!

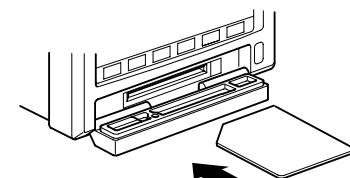

Note. For detailed information on setting all configuration parameters, refer to the SM2000 User Guide, part number IM/SM2000.

# CONFIGURATION OVERVIEW

## Common Configuration



### Set Up

- Configuration Type
- No. of Process Groups
- Language
- Global Alarm Acknowledge Source

### Time

- Current Date/time
- Daylight Saving

### Security

- Usernames
- Passwords
- Config. Access Method

### Logs

- Alarm, Totalizer & Audit Log Sizes

### Operator Messages

- Tag Name
- Activating Source
- Add to Event Log Enable

### RS485

- Protocol
- 2-/4-Wire
- Baud Rate
- Parity

## Process Groups 1 and 2



### Recording

- Group Tag
- Sample Rates
- Recording Enable



### Chart

- Annotations
- Chart Divisions
- Screen Interval
- Operator Menu Options

### Bar

- Display On/Off &
- Operator Menu Options

### Process

### Digital

### Archive

- Channel Data, Log Archive Options
- Filenames
- Archive Rates (Advanced Config. Only)

The Company's policy is one of continuous product improvement and the right is reserved to modify the information contained herein without notice.

© ABB 2004

Printed in UK (01.04)



## ABB Limited

Howard Road, St. Neots  
Cambridgeshire, PE19 8EU

UK

Tel: +44 (0)1480-475-321

Fax: +44 (0)1480-217-948

## Group 1 Channels and Group 2 Channels



### Set Up

- Source ID
- Input Filter Type
- Recording Enable
- Sample Rates (Advanced Config. Only)



### Analog i/p

- Input Type
- Tags, Units & Values
- Linearizer
- Fault Detection

### Digital i/p

- ON Tag
- OFF Tag

### Alarm A

- Type, Source, Tag,
- Trip Level
- Hysteresis
- Alarm Groups

### Alarm B

- Source
- Count Rate, Cut-off, Direction
- Tag Name
- Totalizer Units
- Count, Preset, Intermediate & Predefined Values

### Totalizer

- Primary Chart Range
- Secondary Chart Range

### Scales

## I/O Modules



### A:-Analog

- Mains Rejection Frequency
- Input Scale/Offset Adjust



### B:-Relay

- Source & Polarity



### C:-Hybrid

- Digital Output Source & Polarity
- Analog Output Source, Electrical Range, Engineering Range



### C:-Ethernet

- IP Address
- Sub-net Mask
- Default Gateway
- FTP Username/Password
- Channels Report
- Totalizers Report
- External Media Report

### email 1

### email 2

## Functions



### Custom Linearizer

- Breakpoints

### RTA1

- On Time
- Duration
- Weekly Enables

### RTA2

### RTA3

### RTA4

## OPERATOR FUNCTIONS

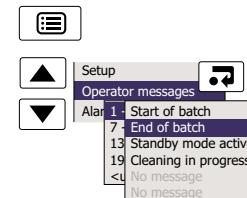
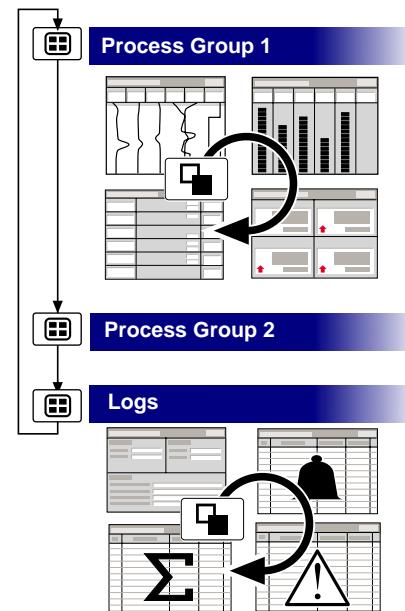


	Chart View	Bar View	Indicator View	Process View	Alarm Event Log	Totalizer Log	Audit Log
--	------------	----------	----------------	--------------	-----------------	---------------	-----------

Configuration	✓	✓	✓	✓	✓	✓	✓
Set up	✓	✓	✓	✓	✓	✓	✓
Historical review							
View select							
Operator messages	✓	✓	✓	✓	✓	✓	✓
Chart annotation	✓						
Screen interval	✓						
Scales	✓						
Trace select	✓						
Channel select							
Max/Min reset		✓					
Totalizer stop/Go			✓	✓			
Totalizer reset			✓	✓			
Filter					✓	✓	✓
Alarm acknowledge	✓	✓	✓	✓	✓	✓	✓