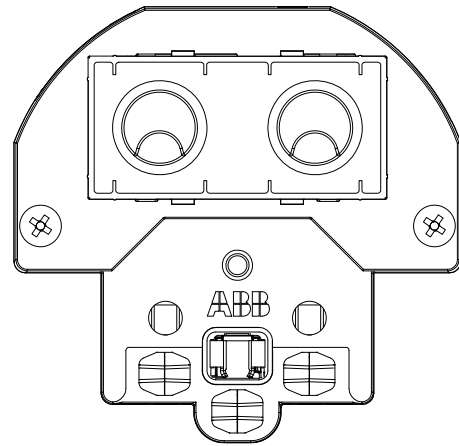


Technical Reference Manual

ABB-free@home®

Compact combination
1/1gang with T13
SSA-F-1.1.2-508



1	Information on the manual	3
2	Safety.....	4
2.1	Information and symbols used.....	4
2.2	Intended use.....	5
2.3	Improper use	5
2.4	Target group / Qualifications of personnel.....	5
2.5	Safety instructions	6
2.6	Environment	7
3	Setup and function	8
3.1	Scope of supply	9
3.2	Overview of types.....	9
3.3	Functions.....	9
3.4	Device overview	10
4	Technical data.....	11
4.1	Types of load.....	11
4.2	Dimensional drawings	12
5	Connection and installation	13
5.1	Planning instructions	13
5.2	Safety instructions	13
5.3	Circuit diagrams.....	14
5.4	Installation	15
6	Commissioning	16
6.1	Allocation of devices and definition of channels.....	16
6.2	Setting options per channel.....	22
6.3	Links	25
7	Update	27
8	Operation	27
9	Maintenance	27
9.1	Cleaning	27
10	Notes.....	28
11	Index	29

1 Information on the manual

Please read this manual carefully and observe the information it contains. This will assist you in preventing injuries and damage to property, and ensure both reliable operation and a long service life for the device.

Please keep this manual in a safe place.

If you pass the device on, also pass on this manual along with it.

ABB accepts no liability for any failure to observe the instructions in this manual.

If you require additional information or have questions about the device, please contact ABB or visit our Internet site at:

www.abb.ch/freathome

2 Safety

The device has been constructed according to the latest valid regulations governing technology and is operationally reliable. It has been tested and left the factory in a technically safe and reliable state.

However, residual hazards remain. Read and adhere to the safety instructions to prevent hazards of this kind.

ABB accepts no liability for any failure to observe the safety instructions.

2.1 Information and symbols used

The following Instructions point to particular hazards involved in the use of the device or provide practical instructions.



Danger

Risk of death / serious damage to health

- The respective warning symbol in connection with the signal word "Danger" indicates an imminently threatening danger which leads to death or serious (irreversible) injuries.



Warning

Serious damage to health

- The respective warning symbol in connection with the signal word "Warning" indicates a threatening danger which can lead to death or serious (irreversible) injuries.



Caution

Damage to health

- The respective warning symbol in connection with the signal word "Caution" indicates a danger which can lead to minor (irreversible) injuries.



Attention

Damage to property

- This symbol in connection with the signal word "Attention" indicates a situation which could cause damage to the product itself or to objects in its surroundings.



NOTE

This symbol in connection with the word "Note" indicates useful tips and recommendations for the efficient handling of the product.

The following safety symbols are used in the operating manual.



This symbol alerts to electric voltage.

2.2 Intended use

This device is a sensor/switch actuator unit for decentralized flush-mounted installation.

The device is intended for the following:

- Switching 230 V loads
- Operation according to the listed technical data
- Installation in dry interior rooms and suitable flush-mounted boxes
- Use with the connecting options available on the device

The intended use also includes adherence to all specifications in this manual.

2.3 Improper use

Each use not listed in Chapter 2.2 "Intended use" on page 5 is deemed improper use and can lead to personal injury and damage to property.

ABB is not liable for damages caused by use deemed contrary to the intended use of the device. The associated risk is borne exclusively by the user/operator.

The device is not intended for the following:

- Unauthorized structural changes
- Repairs
- Outdoor use
- Insert with an additional bus coupler

2.4 Target group / Qualifications of personnel

Installation, commissioning and maintenance of the device must only be carried out by trained and properly qualified electrical installers.

The electrical installer must have read and understood the manual and follow the instructions provided.

The electrical installer must adhere to the valid national regulations in his/her country governing the installation, functional test, repair and maintenance of electrical products.

The electrical installer must be familiar with and correctly apply the "five safety rules" (DIN VDE 0105, EN 50110):

1. Disconnect
2. Secure against being re-connected
3. Ensure there is no voltage
4. Connect to earth and short-circuit
5. Cover or barricade adjacent live parts

2.5 Safety instructions



Danger - Electric voltage!

Electric voltage! Risk of death and fire due to electric voltage of 230 V. Dangerous currents flow through the body when coming into direct or indirect contact with live components. This can result in electric shock, burns or even death.

- Work on the 230 V supply system may only be performed by authorised and qualified electricians.
- Disconnect the mains power supply before installation or dismantling.
- Never use the device with damaged connecting cables.
- Do not open covers firmly bolted to the housing of the device.
- Use the device only in a technically faultless state.
- Do not make changes to or perform repairs on the device, on its components or its accessories.



Caution! - Risk of damaging the device due to external factors!

Moisture and contamination can damage the device.

- Protect the device against humidity, dirt and damage during transport, storage and operation.

2.6 Environment



Consider the protection of the environment!

Used electric and electronic devices must not be disposed of with domestic waste.

- The device contains valuable raw materials which can be recycled. Therefore, dispose of the device at the appropriate collecting depot.

All packaging materials and devices bear the markings and test seals for proper disposal. Always dispose of the packaging material and electric devices and their components via the authorized collecting depots and disposal companies.

The products meet the legal requirements, in particular the laws governing electronic and electrical devices and the REACH ordinance.

(EU Directive 2002/96/EC WEEE and 2002/95/EC RoHS)

(EU REACH ordinance and law for the implementation of the ordinance (EC) No.1907/2006).

3 Setup and function

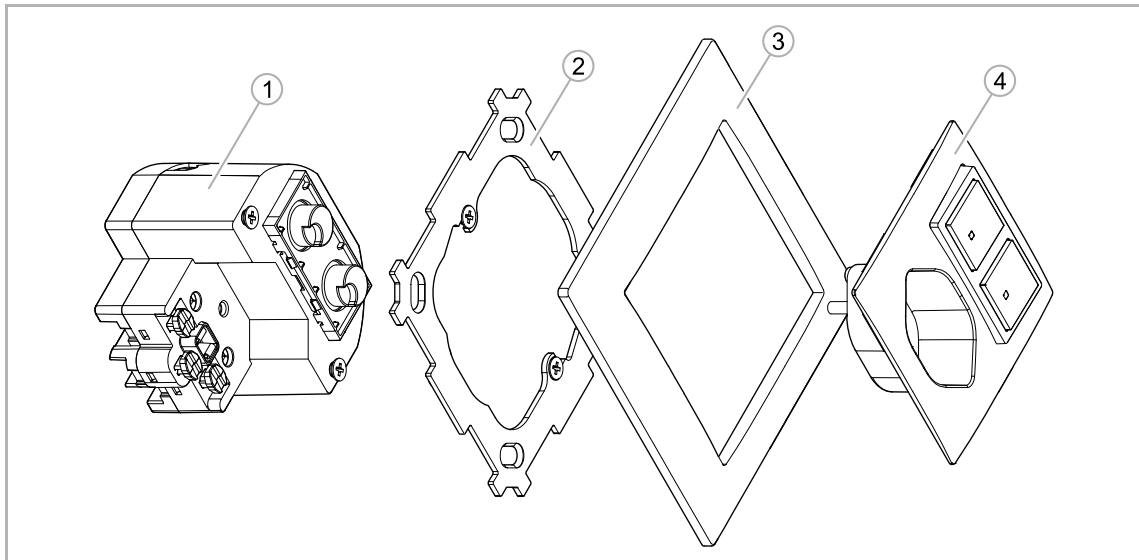


Fig. 1: Product overview

- [1] Flush-mounted insert, 1/1gang with T13
- [2] Support ring
- [3] Cover frame
- [4] Cover plate with push-buttons and socket outlet

This device is a sensor/switch actuator unit with socket outlet for decentralized flush-mounted installation. The device serves both as control element and as actuator for switching electric loads.

Sensor and actuator are combined in a flush-mounted insert [1]. The sensor and switching channels have been pre-programmed at the point of delivery (push-buttons left/right: off/on). This configuration can be changed and adapted.

After activating the bus voltage and connecting the load, the load can be switched directly on the control element. The integrated bus coupler makes possible the connection to the free@home bus line.

Additional product features:

- Green LEDs as light for orientation and status indication.
- Exchangeable push-buttons with the corresponding icons.

3.1 Scope of supply

The scope of supply includes the following:

- Flush-mounted insert [1]

And, depending on the model:

- Support ring [2]
- Cover frame [3]
- Cover plate with push-buttons and socket outlet [4]

See Figure on Page 8.



NOTE

Depending on their use, the push-buttons can be selected with different printing.

Additional information about the switch ranges is available in the electronic catalogue (www.busch-jaeger-catalogue.com).

3.2 Overview of types


Sensor channels		Actuator channels		Product name	Switching load
	1		1	Compact combination 1/1gang with T13	1 x 2300 W

Table 1: Overview of types

3.3 Functions

The following table provides an overview of the possible functions and applications of the device:



Icon of the operating surface	Information	
	Name:	Sensor
	Type:	Sensor
	Made available by:	Sensor/switch actuator
	Function:	Control element for the control of free@home functions
	Name:	Switch actuator
	Type:	Actuator
	Made available by:	Sensor/switch actuator
	Function:	Switches connected loads

Table 2: Overview of functions

3.4 Device overview

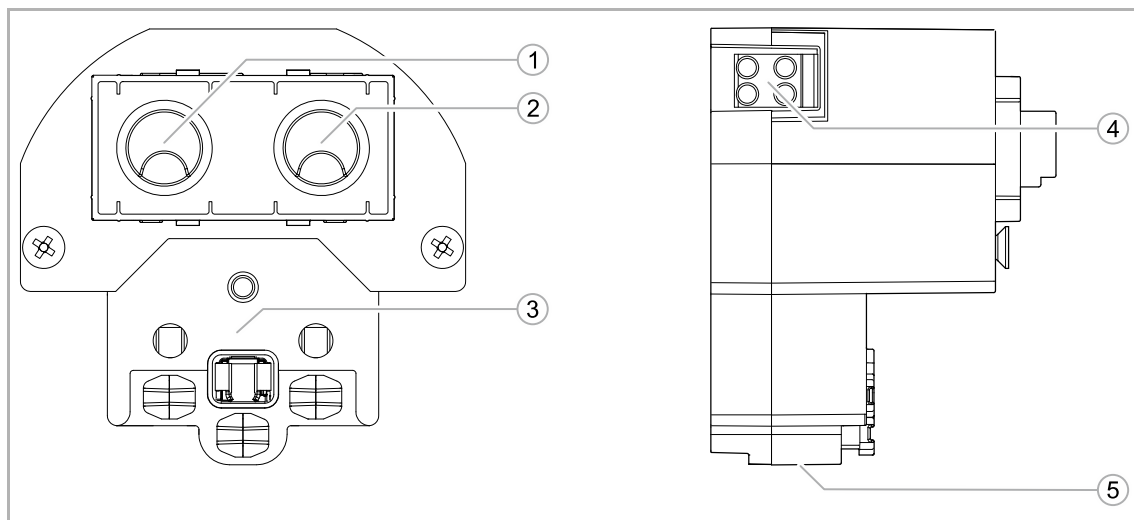


Fig.2: Device overview of sensor/switch actuator 1/1gang

- [1] Left sensor
- [2] Right sensor
- [3] Socket outlet type 13
- [4] Bus connecting terminals
- [5] Socket outlet connecting terminals

4 Technical data

Designation		Value
Power Supply		24 V DC (via bus line)
Bus subscribers		1 (12 mA)
Bus connection	Connecting terminal	0.4 - 0.8 mm
	Line type	J-Y(St)Y, 2 x 2 x 0.8 mm
	Wire stripping	6 - 7 mm
	Maximum load	10 AX
Switched load line	Connection	230 V AC, 50/60 Hz
	Screw terminals	2 x 2.5 mm ² rigid 2 x 1.5 mm ² flexible
Switching capacity		1 x 10 Ax
Socket outlet type 13		10 A, 250 V AC
Protection type		IP20
Ambient temperature		-5°C - +45°C
Storage temperature		-20°C - +70°C

Table 3: Technical data

4.1 Types of load



 




Load type	Maximum load
 230 V~	2300 W
 230 V~	2300 W
	2300 VA
	2300 W
 (CFLi)	2300 W
 LEDi	Typical 100 W
 LEDi 230 V~	Typical 100 W

Table 4: Types of load

4.2 Dimensional drawings

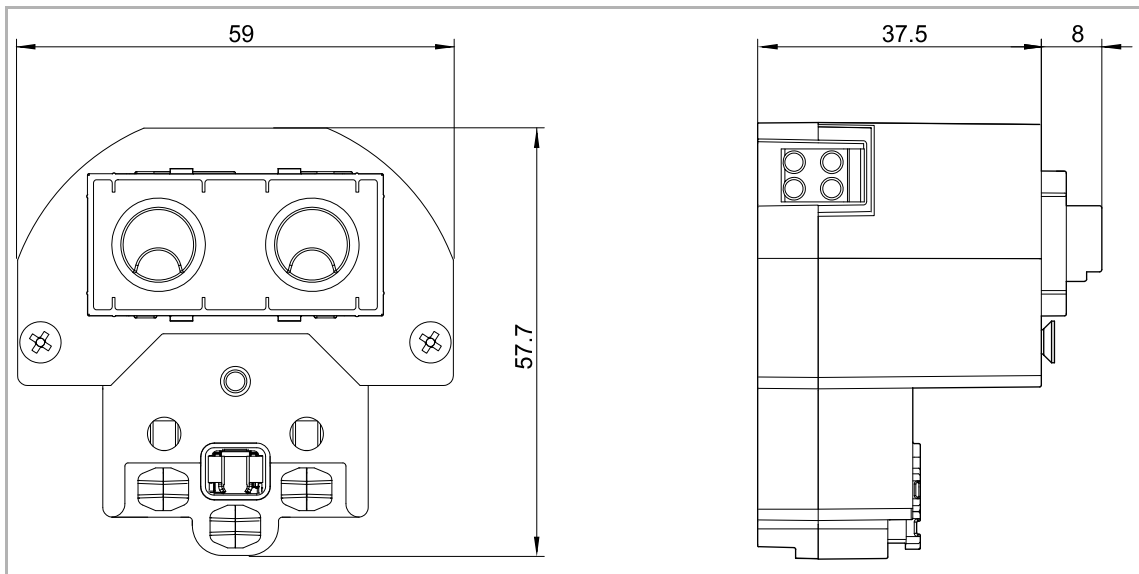


Fig. 3: Dimensions (all dimensions are in mm)

5 Connection and installation

5.1 Planning instructions



NOTE

Planning and application instructions for the system are available in system manual for ABB-free@home®. This can be downloaded via www.abb.ch/freeathome.

5.2 Safety instructions



Danger - Electric shock due to short-circuit!

Risk of death due to electrical voltage of 230 V during short-circuit in the low-voltage line.

- Low-voltage and 230 V cables must not be installed together in a flush-mounted socket!
- Observe the spatial division during installation (> 10 mm) of SELV electric circuits to other electric circuits.
- If the minimum distance is insufficient, use electronic boxes and insulating tubes.
- Observe the correct polarity.
- Observe the relevant standards.



Danger - Electric voltage!

Install the device only if you have the necessary electrical engineering knowledge and experience.

- Incorrect installation endangers your life and that of the users of the electrical system.
- Incorrect installation can cause serious damage to property, e.g. due to fire.

The minimum necessary expert knowledge and requirements for the installation are as follows:

- Apply the "five safety rules" (DIN VDE 0105, EN 50110):
 1. Disconnect
 2. Secure against being re-connected
 3. Ensure there is no voltage
 4. Connect to earth and short-circuit
 5. Cover or barricade adjacent live parts.
- Use suitable personal protective clothing.
- Use only suitable tools and measuring devices.
- Check the type of supply network (TN system, IT system, TT system) to secure the following power supply conditions (classic connection to ground, protective earthing, necessary additional measures, etc.).
- Observe the correct polarity.

5.3 Circuit diagrams

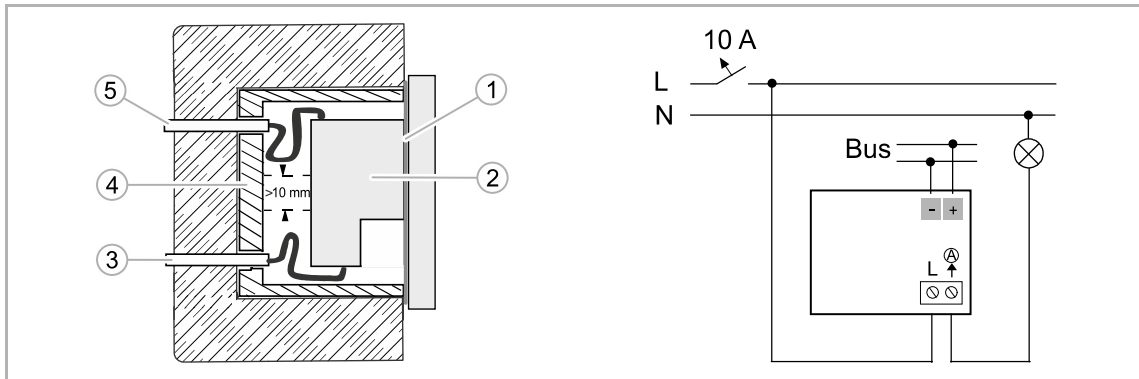


Fig. 4: Electrical connection

- [1] Support ring
- [2] Device insert
- [3] 230 V power cord
- [4] Flush-mounted installation box
- [5] Bus line
- Ⓐ Designation of channel for software commissioning (example)

5.4 Installation



NOTE

They may only be installed in dry interior rooms in flush-mounted boxes. Observe the currently valid regulations.

To install the device, perform the following steps:

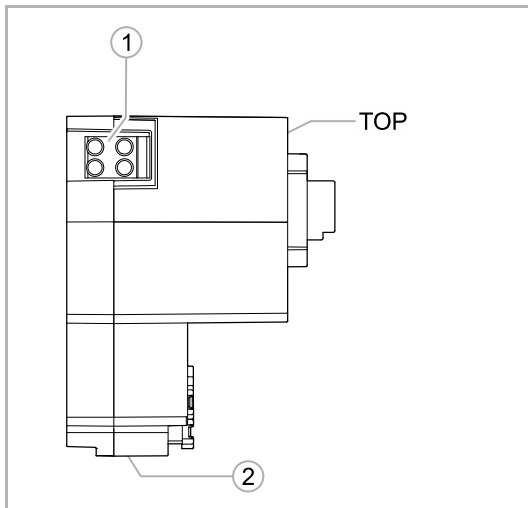


Fig. 5: Connection

1. Pull off the identification label and glue it into the device plan (at System Access Point).
2. Connect the bus line with the bus connection terminal [1] (see chapter 5.3 “Circuit diagrams” on page 14). Observe the correct polarity.
3. Connect the 230 V power cord to the socket outlet connection [2].
4. Turn the device into the correct installation position. The socket outlet must be at the bottom.
5. Insert the device into the flush-mounted box and screw the device on.
6. Attach the cover frame [4] together with the cover plate [5] to the Support ring [3] and screw the cover plate on.

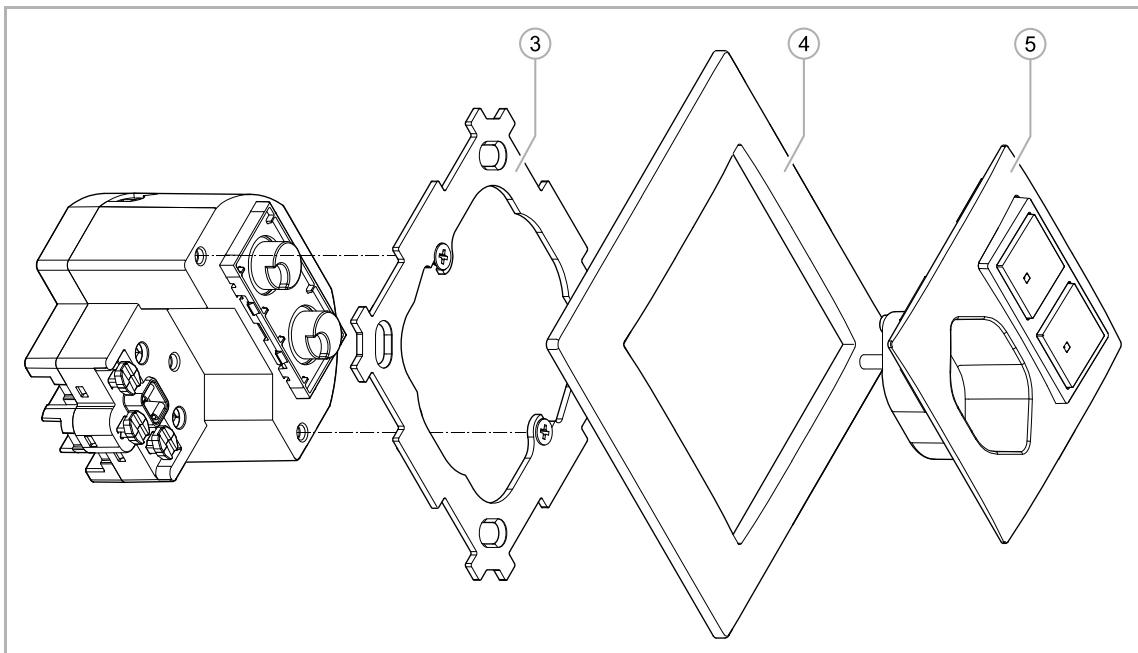


Fig. 6: Installation

6 Commissioning

Commissioning of the device is always carried out via the Web-based surface of the System Access Point. It is assumed that the basic commissioning steps of the overall system have already been carried out. Knowledge about the Web-based commissioning software of the System Access Point is assumed.

The System Access Point establishes the connection between the free@home participants and the smartphone, tablet or PC. The System Access Point is used to identify and program the participants during commissioning.

Devices which are physically connected to the free@home bus, log themselves automatically into the System Access Point. They transmit information about their type and supported functions (see chapter 3.3 "Functions" on page 9).

During initial commissioning all devices are given a universal name, e.g. "Sensor/switch actuator 1/1gang". The installer must assign names that are practical and specific for the system, e.g. in "Living room ceiling light".

The devices must be parameterised for the use of additional functions.



NOTE

General information about commissioning and parameterization is available in the technical reference manual and the online Help of the System Access Point.

6.1 Allocation of devices and definition of channels

The devices connected to the system must be identified, i.e. they are allocated to a room according to their function and are given a practical name.



The allocation is made via the allocation function of the Web-based user interface of the System Access Point.

6.1.1 Add device

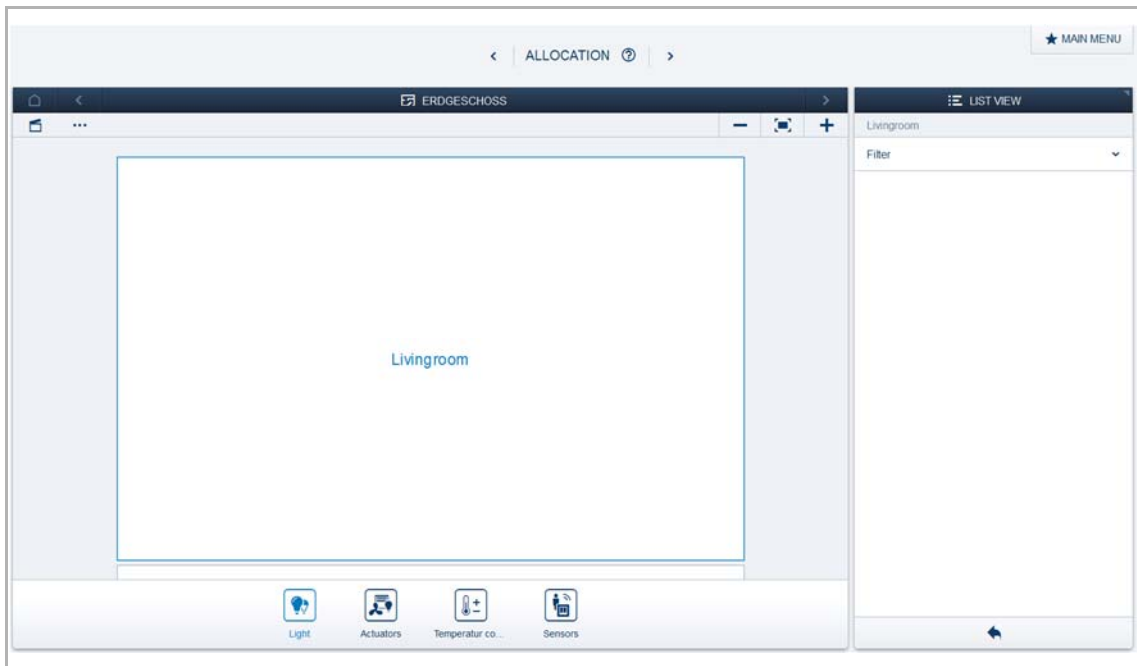


Fig. 7: Allocation - Start screen

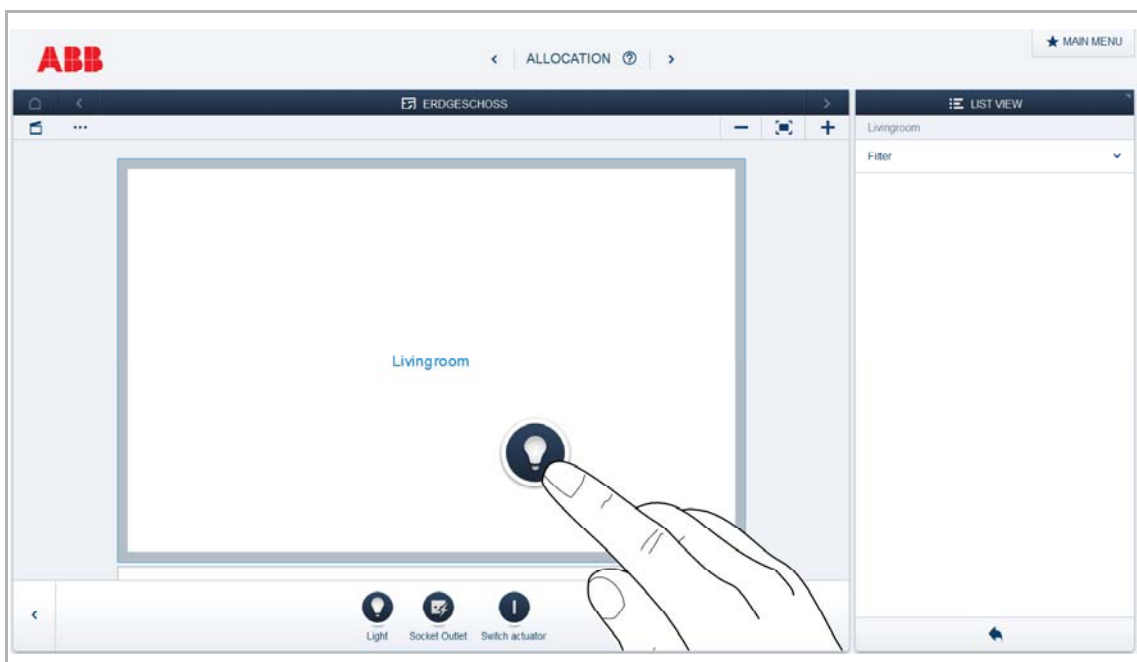


Fig. 8: Add device

■ In the "Add device" bar select the desired application and pull the icon via drag-and-drop onto the floor plan in the working area.

A window opens which lists all the devices suitable for the application selected.

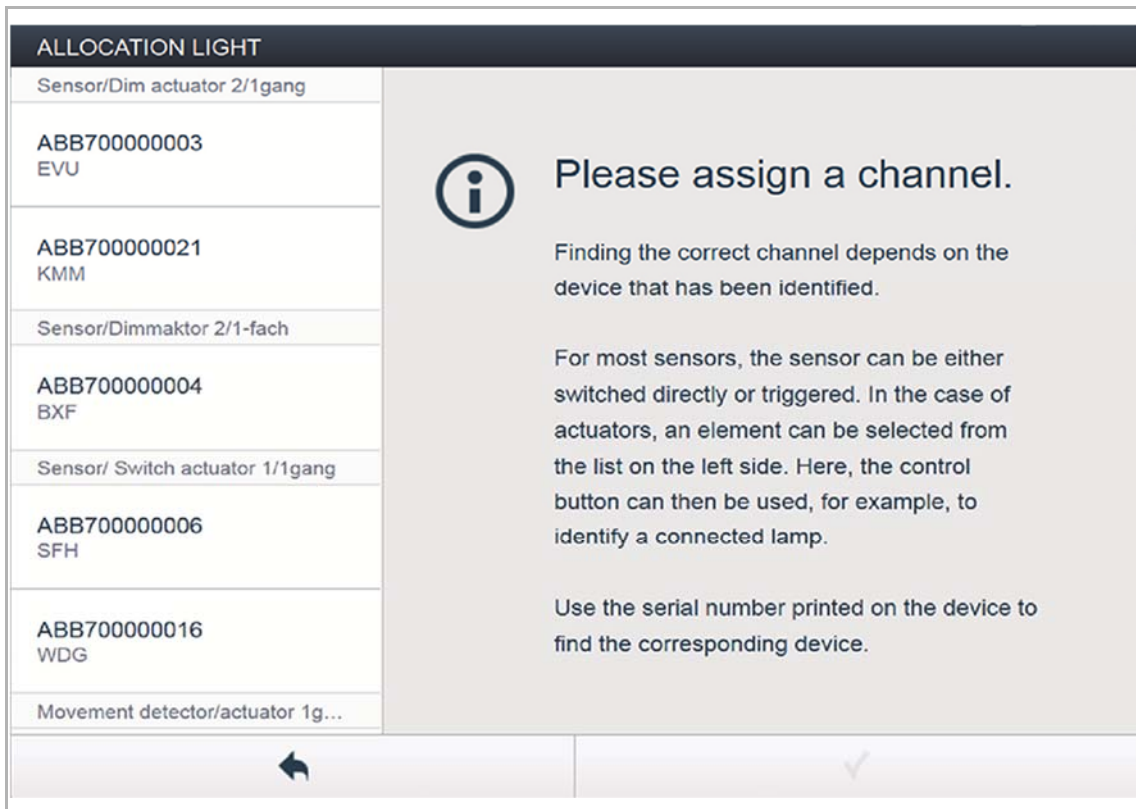


Fig. 9: Allocation of devices

The device can be identified via the serial number or via switching.

Identification via serial number

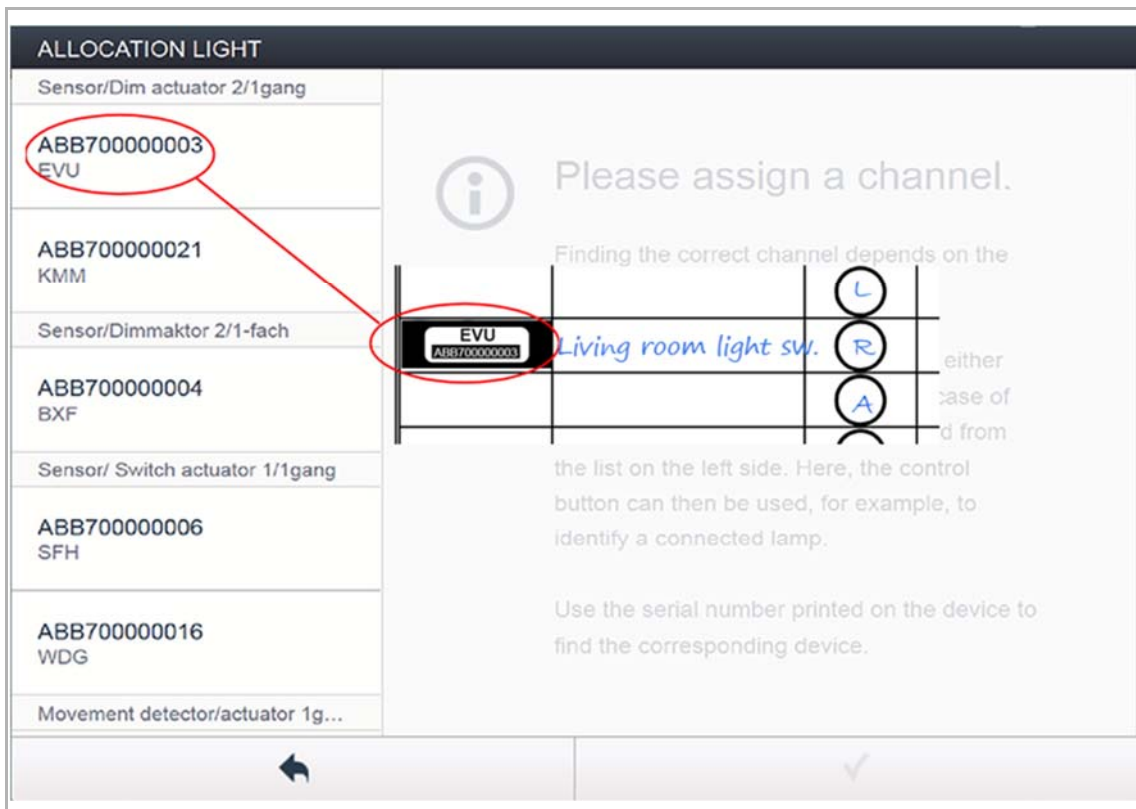


Fig. 10: Identification via serial number

- Compare the serial number and the short ID of the identification label, which is glued on the device, with the numbers and IDs in the list. This is how the searched-for device and possibly the searched-for channel are identified.

Identification via switching (only suitable for actuators)

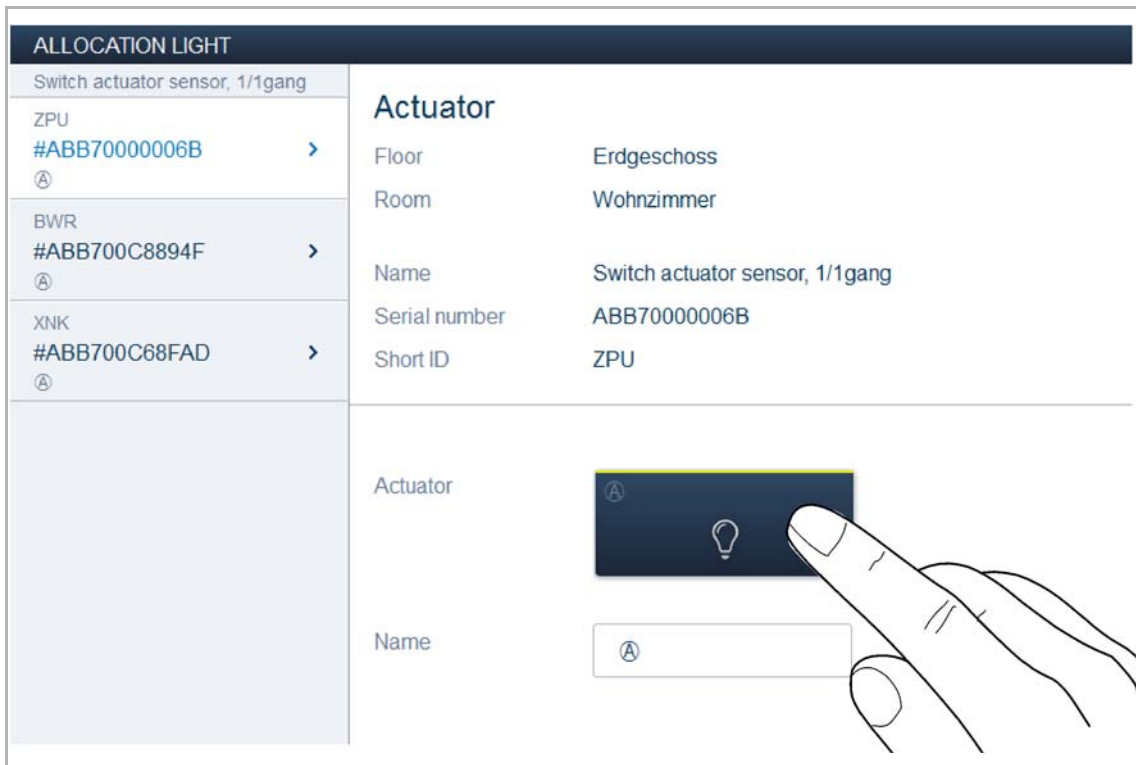


Fig. 11 Identification via switching

- Select a device and a channel from the list.
- Press the button in the detailed view of the device.
The connected load is switched.
- Repeat the last two steps until you have located the searched for device.

Assigning a name


ALLOCATION LIGHT	
Switch actuator sensor, 1/1gang	
ZPU #ABB70000006B > Ⓐ	Actuator
BWR #ABB700C8894F > Ⓐ	Floor Erdgeschoss
XNK #ABB700C68FAD > Ⓐ	Room Wohnzimmer
	Name Switch actuator sensor, 1/1gang
	Serial number ABB70000006B
	Short ID ZPU
	Actuator 
	Name <input type="text" value="Ⓐ"/>
✘ ✔	

Fig. 12: Assigning a name

- Enter a name that is easy to understand and under which the application is to be displayed later, (e.g. "Ceiling light").
- Press the tick at the bottom right.
This takes over the entry.



NOTE

The settings of the device can be adjusted via the Web-based user interface of the System Access Point.

For pre-programmed devices (sensor/switch actuator units) the default settings can be adjusted. This allows the channel selection to be influenced. For these settings, however, a fitter access is partly necessary (see online Help of the System Access Point). The parameter settings remain as described above.

6.2 Setting options per channel

General settings and special parameter settings must be made for each channel.



The settings are made via the allocation function of the Web-based user interface of the System Access Point.

Select device

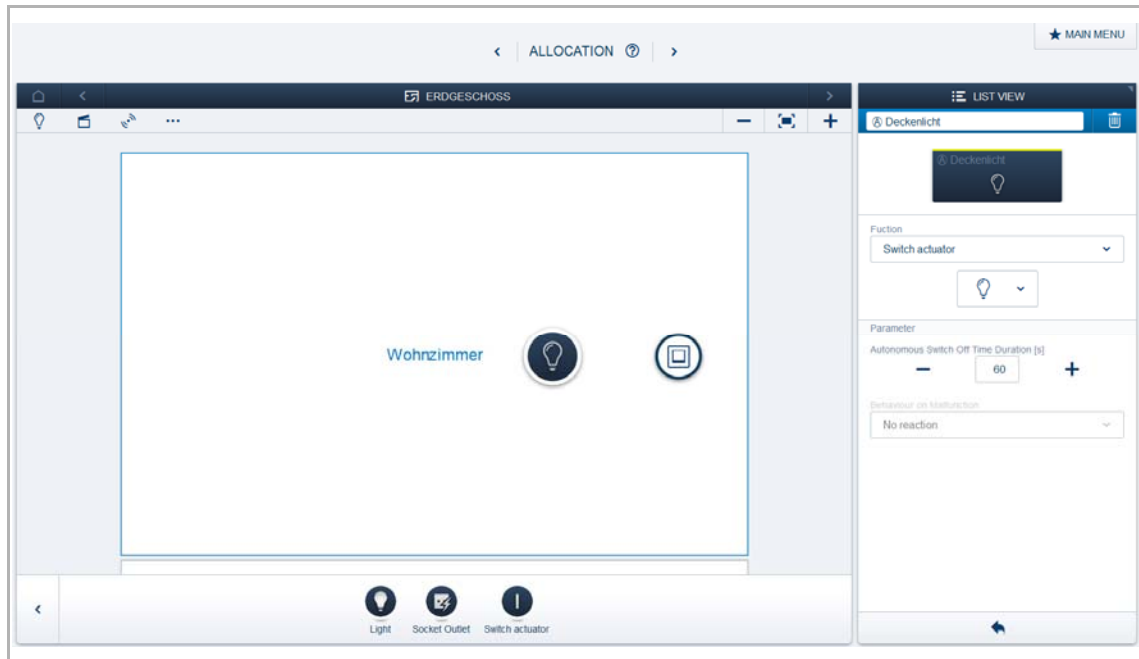


Fig. 13: Select device

- Select the device icon [1] in the floor plan of the working area view.

All setting options for the respective channel are displayed in the list view [2]. For push-buttons (sensors) the corresponding push-button must be selected.

The following settings are available.

6.2.1 Settings – Overview of setup menus

General settings

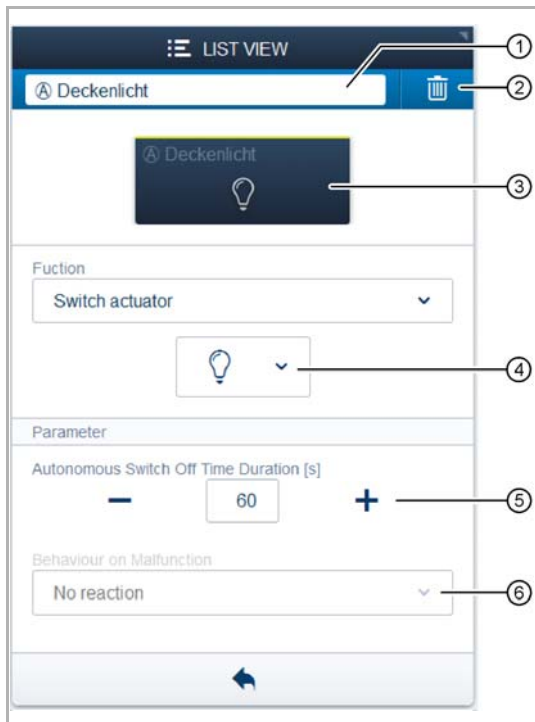


Fig. 14: General settings

- [1] Changing the name
- [2] Deleting the channel
- [3] Switching the actuator (user interface)
- [4] Selecting an icon
- [] Setting the seconds for the switch-off delay, e.g. switch-off delay for staircase lighting
- [5] Behaviour of the device during faults: Merely a display. Settings cannot be changed.

Setting the sensor

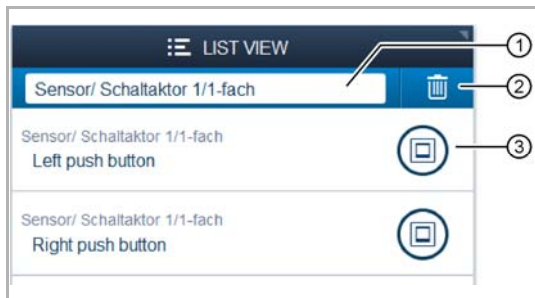
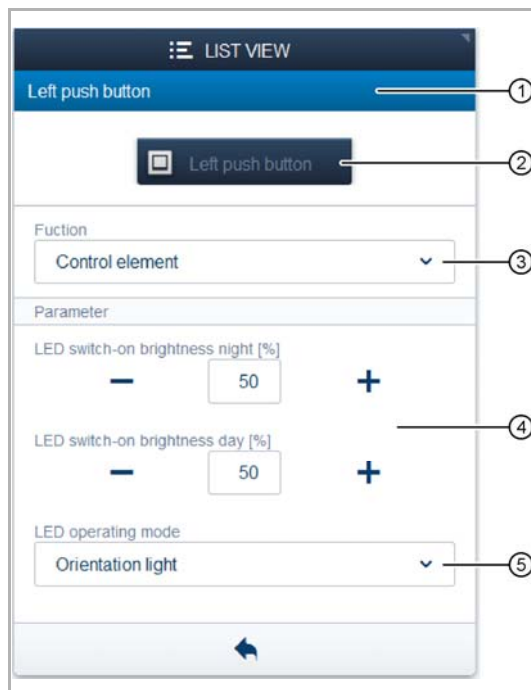


Fig. 15: Setting the sensor

- [1] Changing the name
- [2] Deleting the channel
- [3] Selecting push-buttons in the list

Setting the push-button



- [1] Changing the name
- [2] Switching the sensor (user interface)
- [3] Selecting the function.
 - "Control element"
 - "Dimming sensor"
 - "Staircase light sensor"
 - "Sensor force-position On/Off"
 - "Blind sensor"
 - "Blind sensor force-position"
- [4] Brightness of push-button LEDs during the day and at night in percent.
- [5] Selecting the LED operating mode.
 - "Orientation light": LED lights up permanently.
 - "Status display": LED lights up during actuation

Fig. 16: Setting the push-buttons



NOTE

Parameter "Function" [3] is available immediately for pre-programmed devices. For all other devices it becomes available only after being linked with an actuator.

The setting in the list view is then made via the linking function of the Web-based user interface of the System Access Point.



NOTE

The parameters "LED switch-on brightness Night" and "LED switch-on brightness Day" [4] only function when a time profile with the application "LED day/night switchover" is available. The device (channel) must be linked with this application.



Icon of the application

6.3 Links

The sensor/switch actuator units created via the allocation function can now be linked with each other. This allows simple switch-off or two-way circuits to be implemented.



The linking in the list view is made via the linking function of the Web-based user interface of the System Access Point.



NOTE

For pre-programmed devices (switch actuator units) a link is automatically established between actuator and sensor, since they are combined in the one device.

6.3.1 Linking actuator and sensor

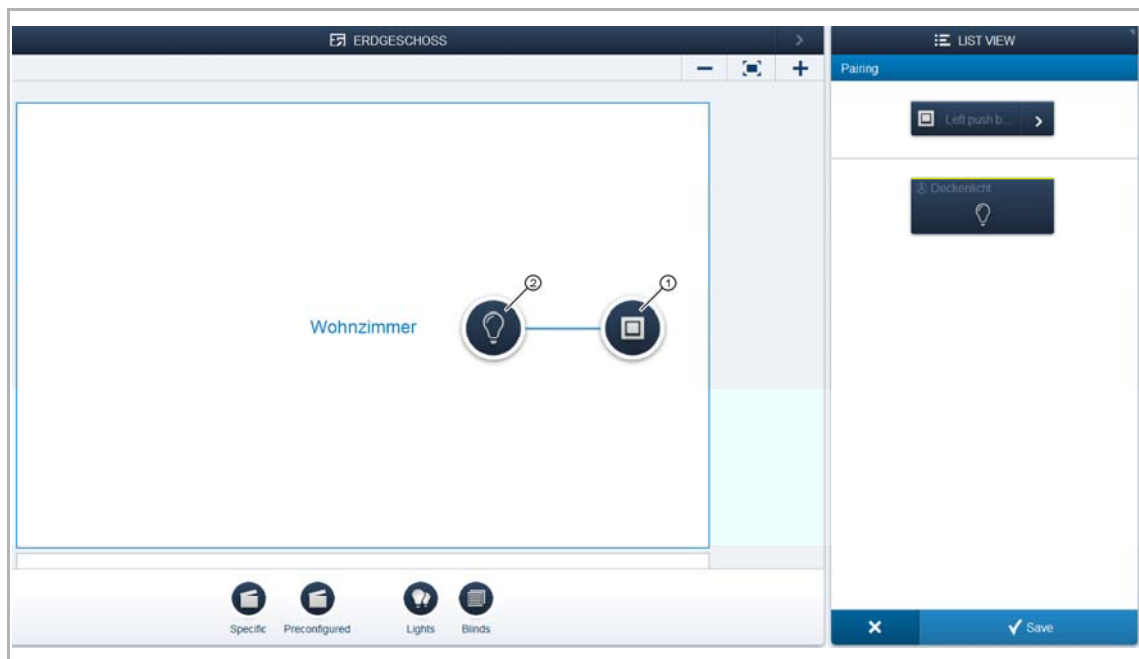


Fig. 17: Linking actuator and sensor

1. On the working area select the sensor [1] that is to be linked with the actuator.
 - . Select the actuator [2] that is to be served by the sensor.
2. Press "Save" at the bottom right to take over the entries.

A blue connecting line indicates the link between the two devices. The configuration is now transmitted automatically to the devices. The transmission can, depending on the number of affected devices, take a number of seconds. During the transmission a progress bar is displayed around the devices affected.

6.3.2 Linking an actuator with an additional sensor

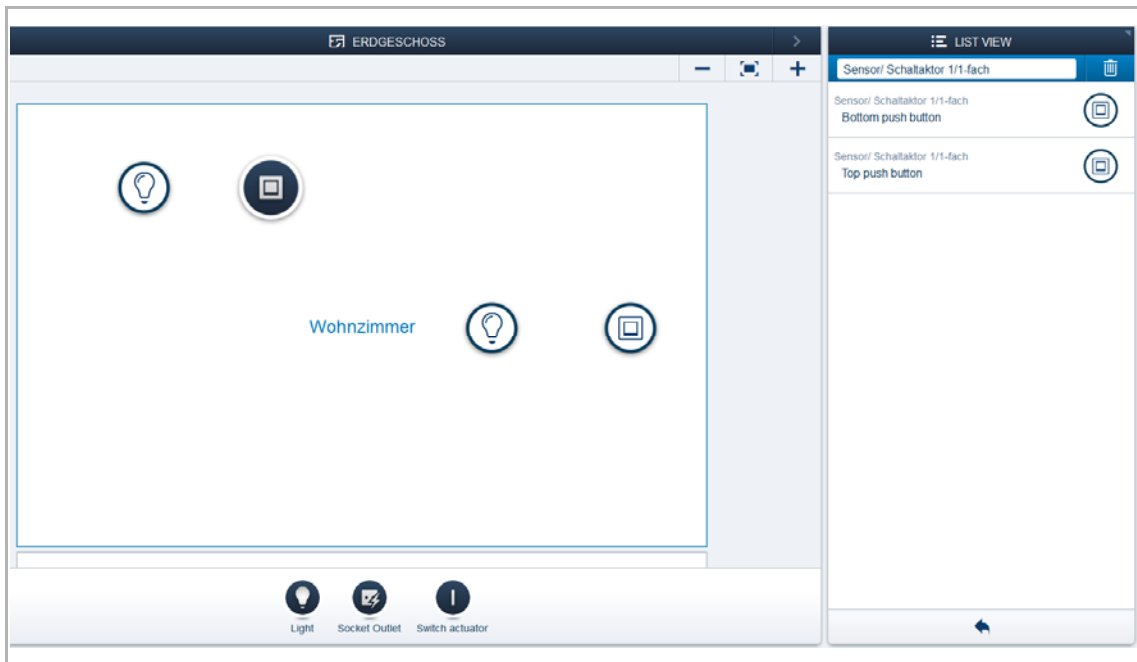



Fig. 18: Linking an actuator with an additional sensor

1. On the working area select the second sensor [1] that is to be linked with the actuator.
2. Select the actuator [2] that is to be served by the sensor.
3. Press the arrow  at the bottom right to take over the entries.

An additional blue connecting line indicates the link between the two devices. After the transmission of the configuration the sensor can be operated directly locally.

7 Update

A firmware update is carried out via the Web-based user interface of the System Access Point.

8 Operation

Operation is carried out by pressing the individual push-buttons (not included in the scope of delivery). The function of the push-buttons is fixed via the assigned application or its pre-programming and its parameter settings.

Extensive applications are available for the push-buttons (control buttons).

9 Maintenance

The device is maintenance-free. In case of damage, e.g. during transport or storage), do not perform repairs. Once the device is opened, the warranty is void.

Access to the device must be guaranteed for operation, testing, inspection, maintenance and repairs (according to DIN VDE 0100-520).

9.1 Cleaning



Caution! - Risk of damaging the device!

- When spraying on cleaning agents, these can enter the device through crevices.
 - Do not spray cleaning agents directly onto the device.
- Aggressive cleaning agents can damage the surface of the device.
 - Never use caustic agents, abrasive agents or solvents.

Clean dirty devices with a soft dry cloth.

- If this is insufficient, the cloth can be moistened slightly with a soap solution.

10 Notes

11 Index

A	
Actuator	9
Add device	17
Allocation of devices	16
B	
Bus coupler	8
C	
Circuit diagrams	14, 15
Cleaning	27
Commissioning	16
Connection and installation	13
D	
Device overview	10
Dimensional drawings	12
E	
Environment	7
F	
Firmware update	27
Functions	9, 16
G	
General settings	23
I	
Identification	18
Identification label	15, 19
Improper use	5
Information and symbols used	4
Information on the manual	3
Initial commissioning	16
Installation	15
Intended use	5
L	
LED	8
Liability	3
Links	25
actuator	25
Additional sensors	26
sensor	25
M	
Maintenance	27
N	
Notes	28
O	
Operation	27
Overview of types	9
P	
Planning instructions	13
Power Supply	11
Protection type	11
Q	
Qualification of personnel	5
S	
Safety	4
Safety instructions	6, 13
Scope of supply	9
Select device	22
Sensor	9
Serial number	18
Setting the sensor	23
Settings	23
Setup and function	8
Setup menus	23
Socket outlet	8
Switching capacity	11
System Access Point	16
T	
Target group	5
Technical data	11
Temperature	
ambient	11
storage	11
Types of load	11
U	
Update	27

A member of the ABB Group

ABB Switzerland AG

Low-voltage products
Brown Boveri Platz 3
5400 Baden

Tel.: +41 58 586 06 53
www.ABB.ch/gebaeudeautomation

NOTE

We reserve the right to at all times make technical changes as well as changes to the contents of this document without prior notice. The detailed specifications agreed upon apply for orders. ABB accepts no responsibility for errors or incompleteness in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. The document and its contents, or extracts thereof, must not be reproduced, transmitted or reused by third parties without prior written consent by ABB.

Copyright© 2016 Busch-Jaeger
Elektro GmbH
All rights reserved