


SACE Tmax XT


AUP - Contatti ausiliari di posizione per parte fissa
 AUP - Auxiliary position contacts for fixed part
 AUP - Hilfspositionsmeldekontakte, für Unterteil
 AUP - Contacts auxiliaires de position pour partie fixe
 AUP - Contactos auxiliares de posición para parte fija

XT1-XT2-XT2-XT4/III-IV

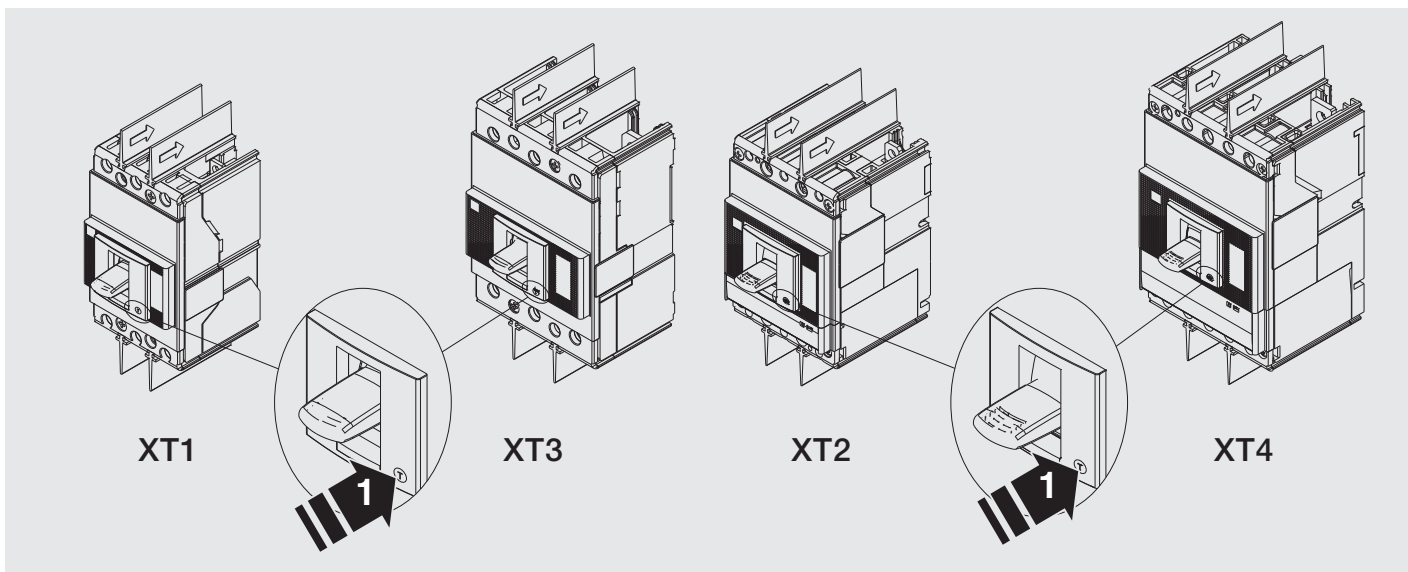


		XT1		XT2		XT3		XT4	
		III	IV	III	IV	III	IV	III	IV
P-W S75/1..4		4	4	2	4	4	4	4	4
		4	4	2	4	4	4	4	4
		XT2				XT4			
		III		IV		III		IV	
W S75E/1..2		2		2		2		2	
		1		1		1		1	

A

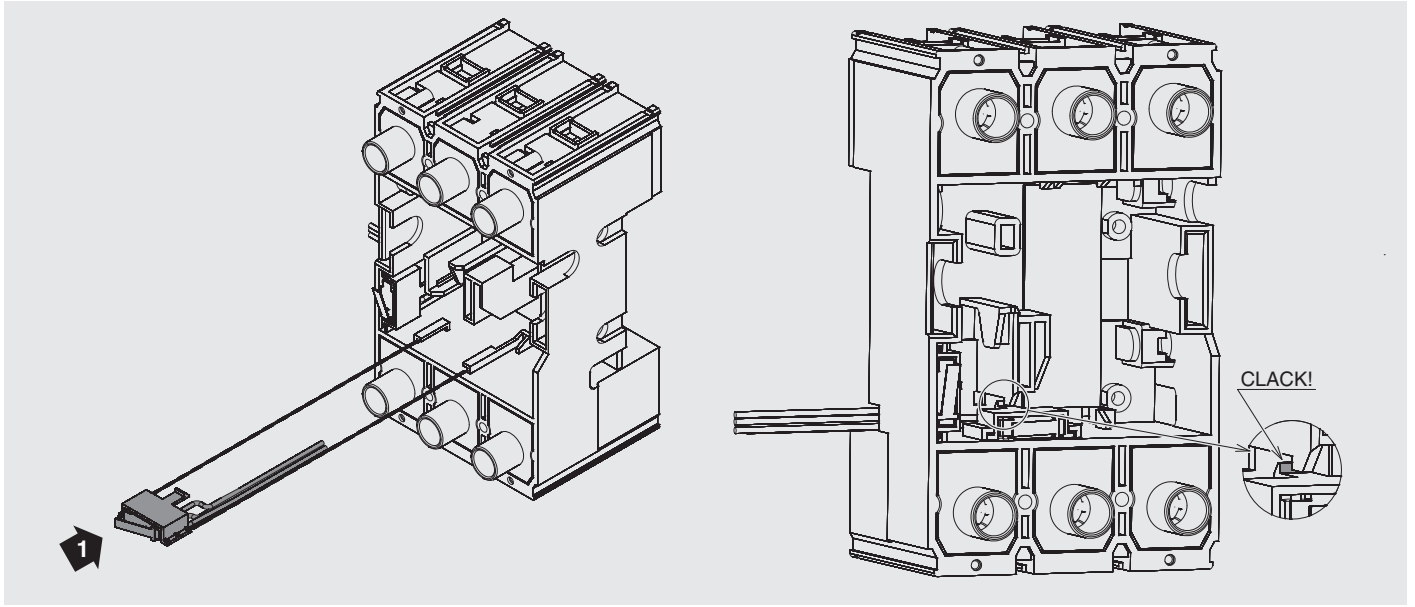


B1

XT1-S75/1..4

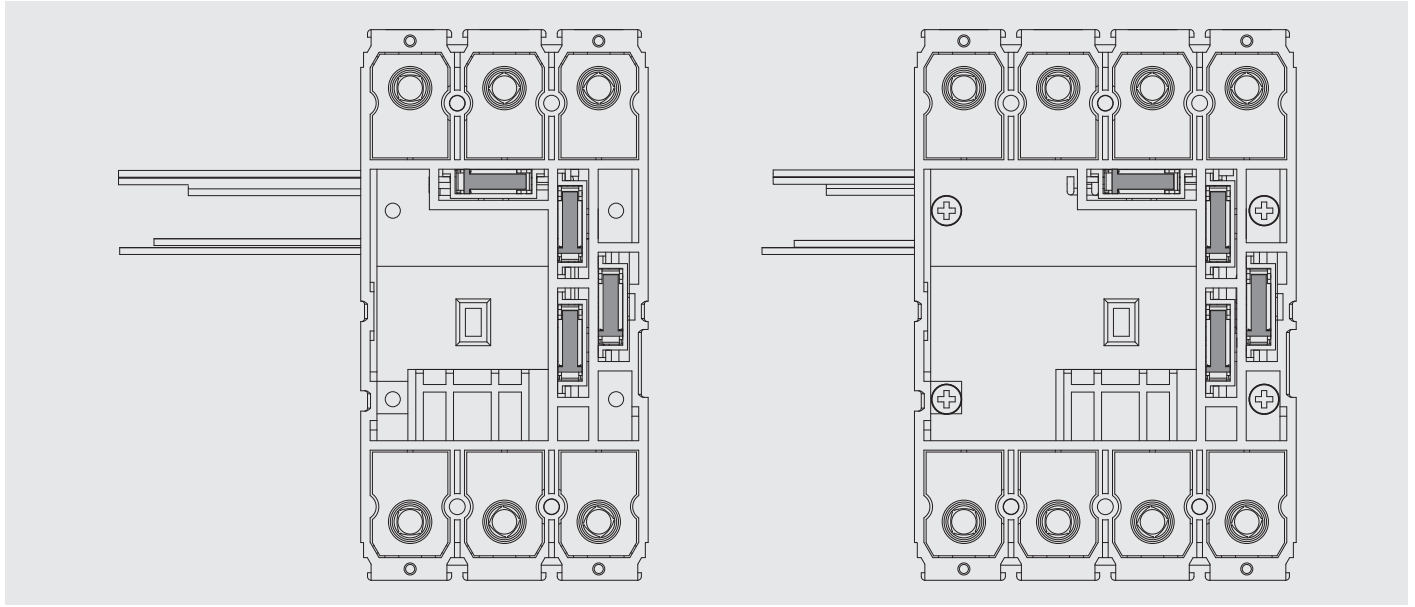


B2

XT1

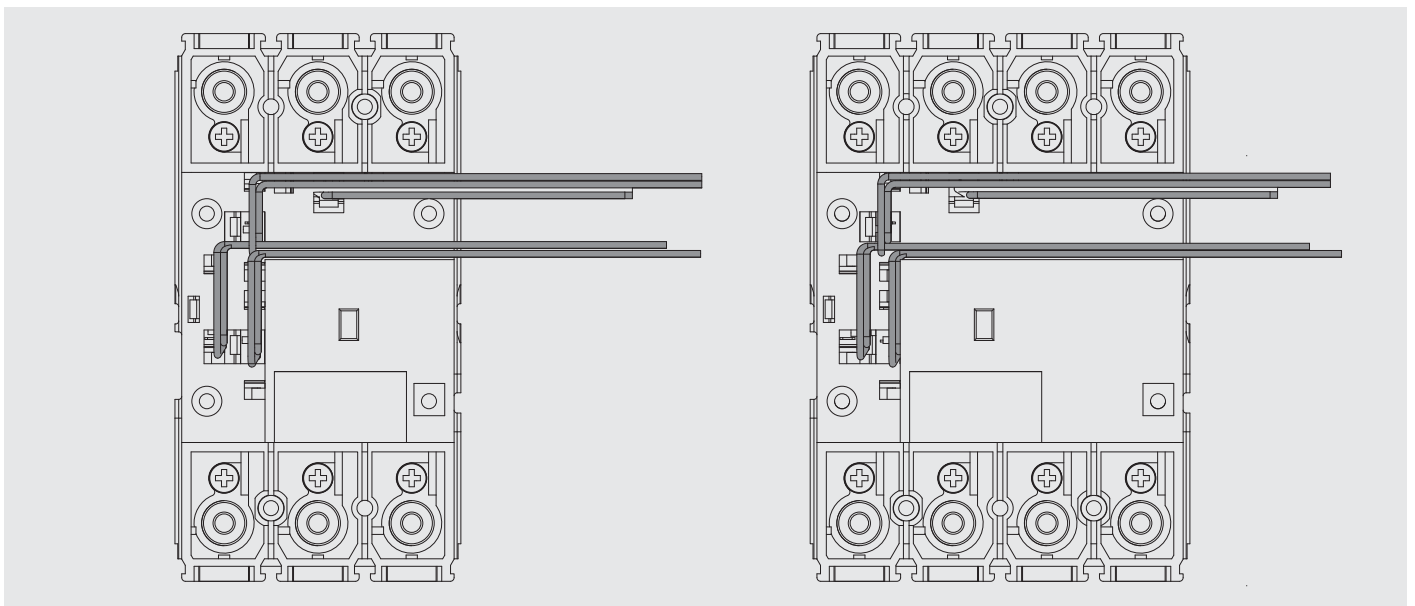


C1

XT3-S75/1..4

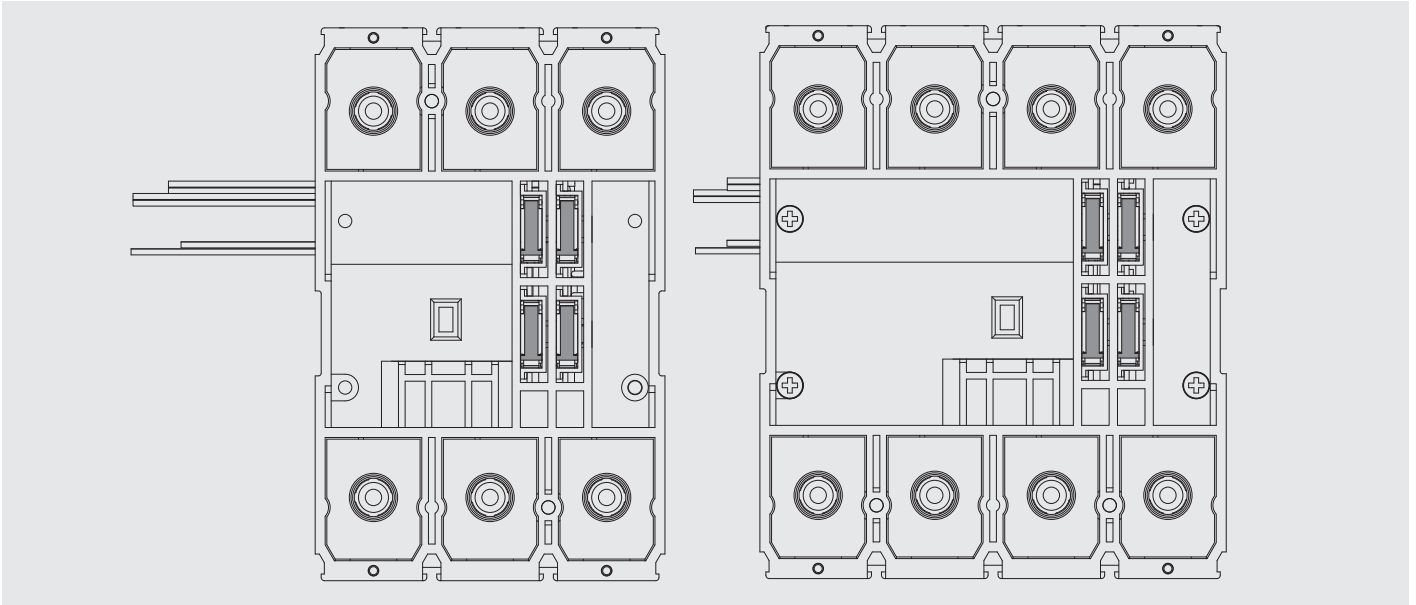


C2




XT3



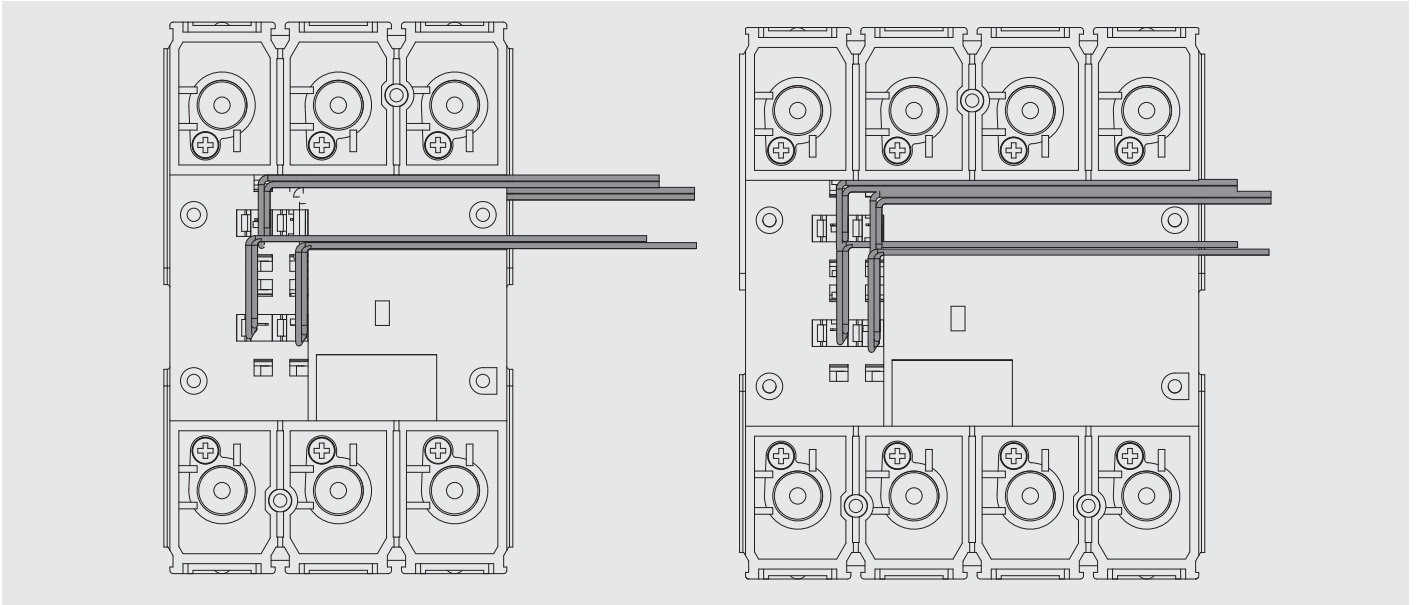


D1


XT2-S75/1..4

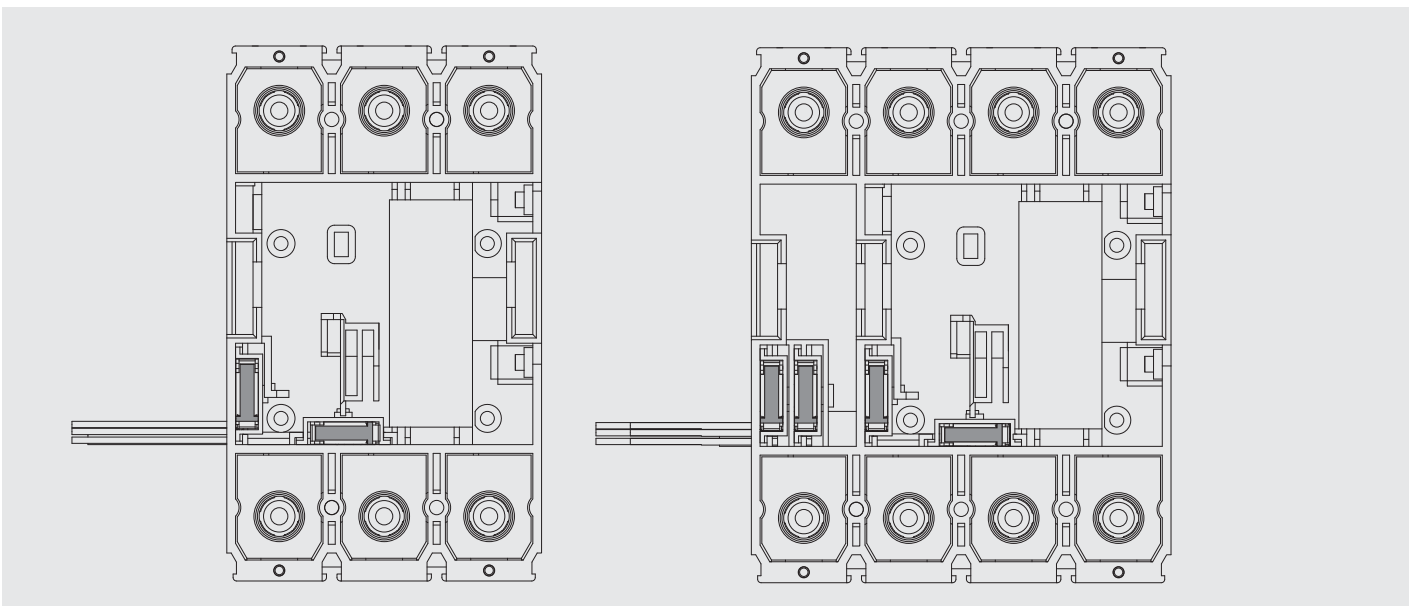

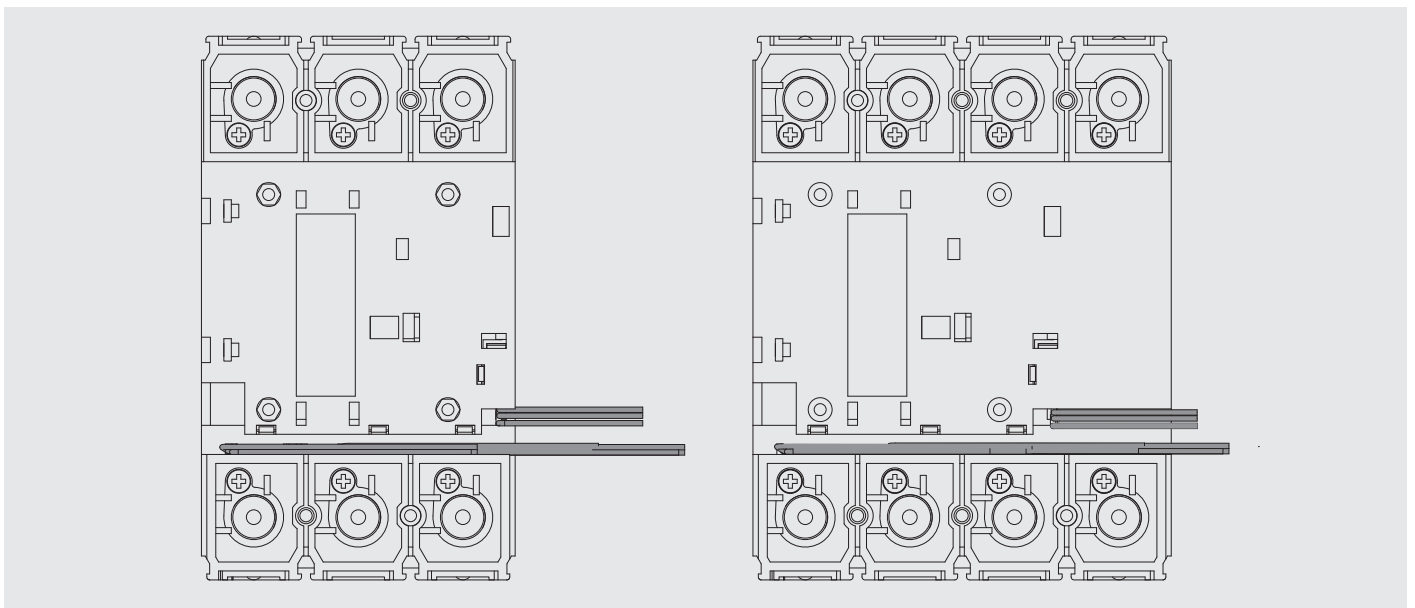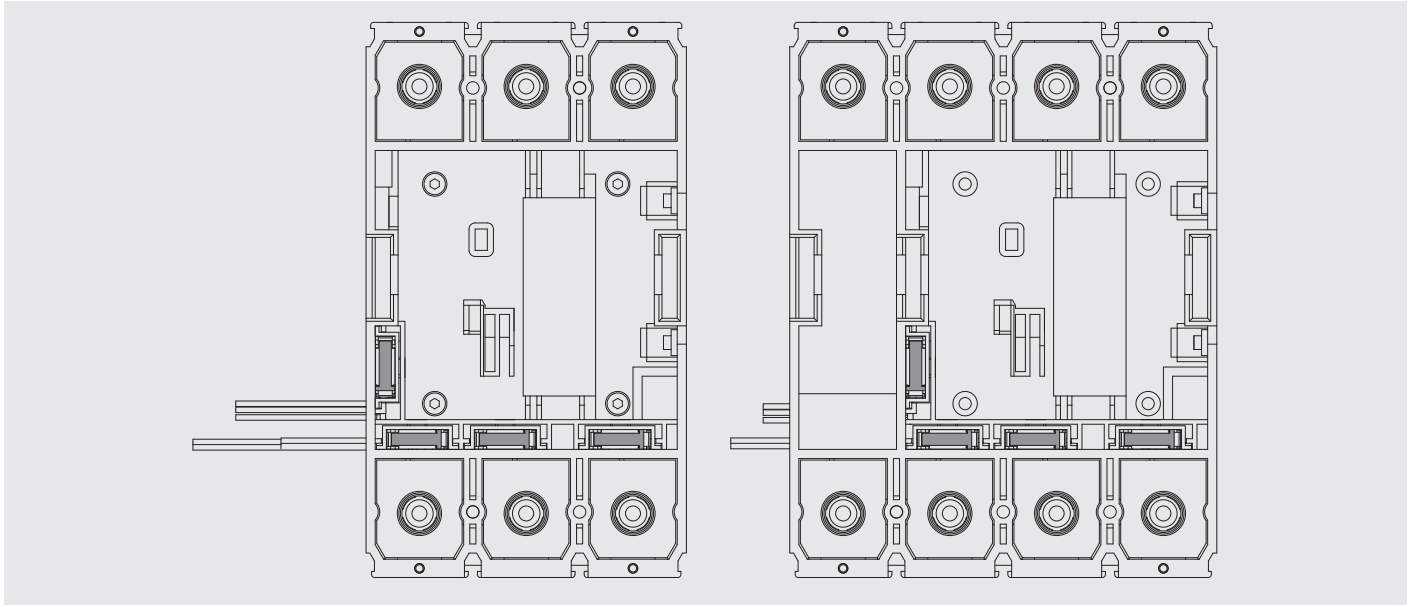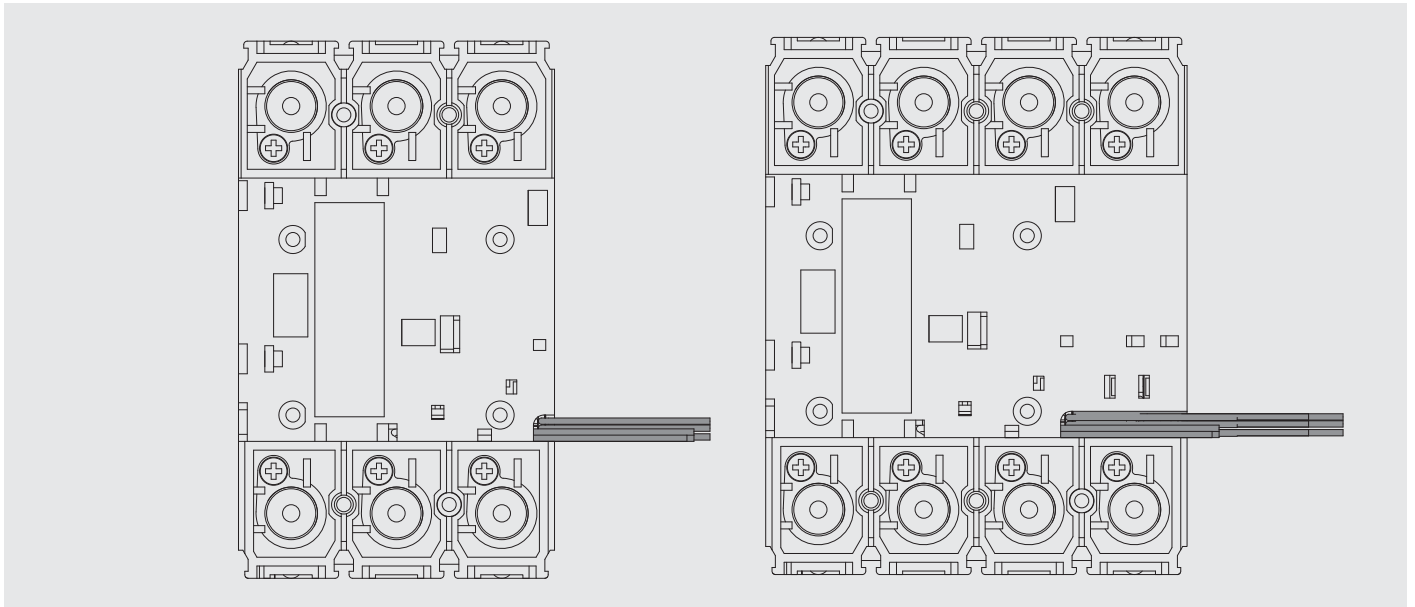

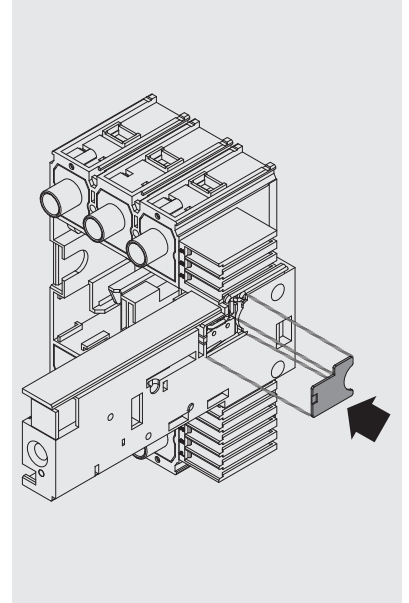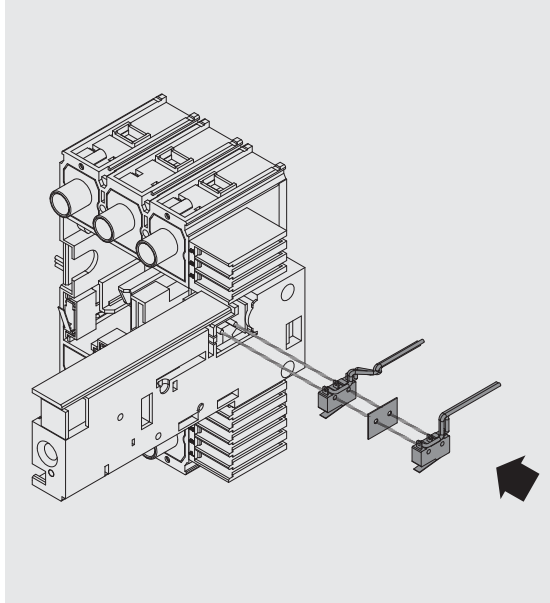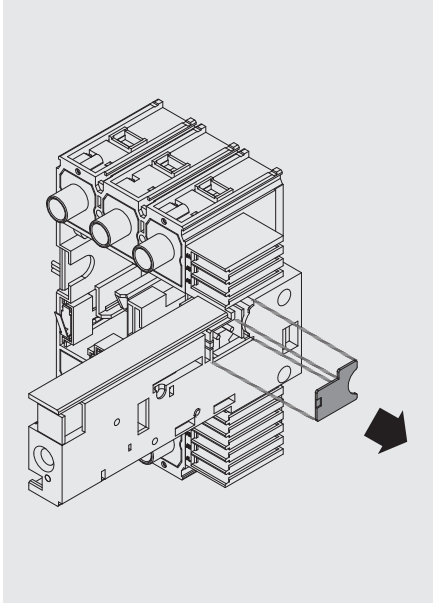

I

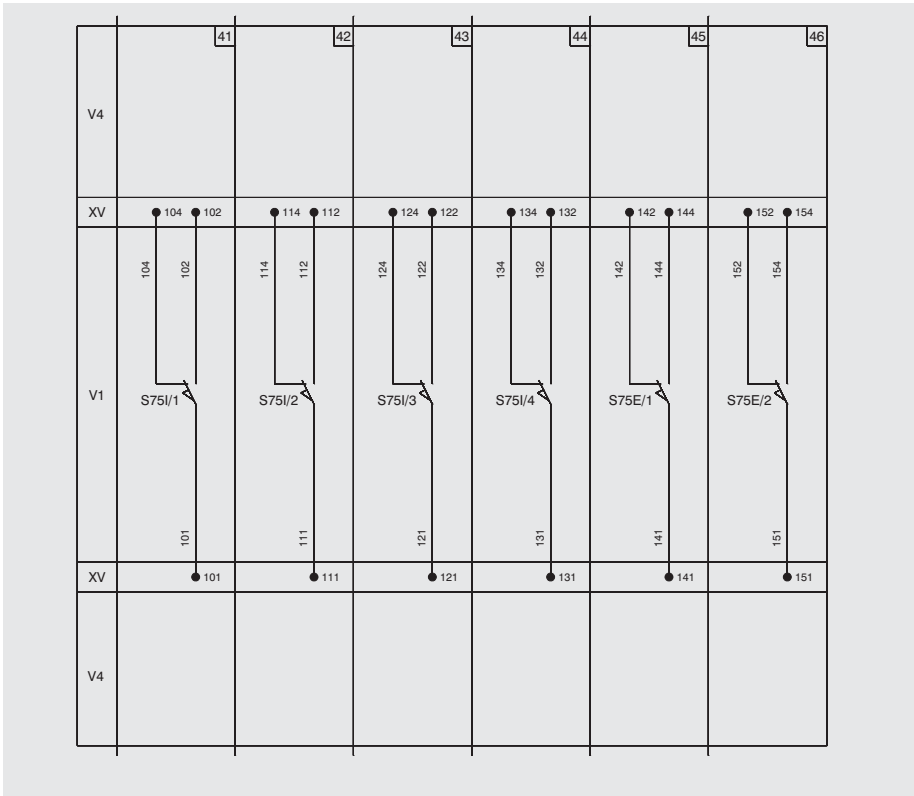

For more information please contact:

ABB S.p.A.
 ABB SACE Division
 Via Baioni, 35
 24123 Bergamo - Italy
 Phone: +39 035 395 111
 Fax: +39 035 395 306 - 433

www.abb.com