



1. **WARNING:** This drawing does not illustrate completely the installation methods required for hazardous locations. Prior to any installation in a Classified Hazardous Location, verify installation methods by the Control Drawing referenced on the product's name tag and national and local codes.
2. To access the Main & Auxiliary NGC termination boards, remove the Rear End Caps of the units (a 1/16th Hex Set Screw must be loosened to remove each of the Caps).

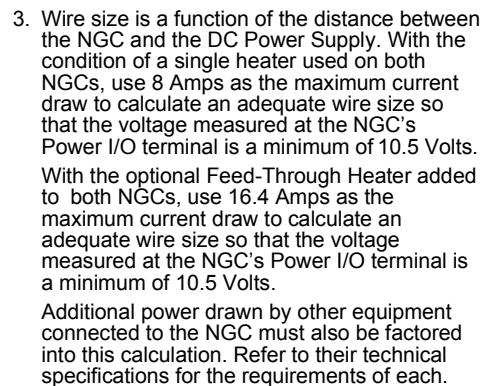

 TOTALFLOW Products	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
	D20579	UD	NGC DUAL8200 POWER AND COMM WIRING; MAIN UNIT TO AUXILIARY UNIT	2103087	AB	1 OF 1