

### Troubleshooting guide

If you have installed and connected the fitting as per the instructions listed earlier and it does not function correctly, use the following table as a guide to fixing the problem. Look up the type of fault in the left column and check the possible causes from the right column.

If the fitting still does not work after checking these possible causes, contact ABB customer service in Australia on 1800 60 20 20.

No.	Fault	Possible causes
1	LED lamp and indicator LED not lit	AC supply not connected; <b>or</b> AC supply turned off
2	LED lamp not lit but red indicator is lit	LED lamp damaged; <b>or</b> LED lamp plug incorrectly inserted in the mother board
3	LED lamp not lit but indicator LED is flashing green	LED lamp damaged; <b>or</b> LED lamp plug incorrectly inserted in the mother board
4	LED lamp is lit but red indicator LED not lit	LED damaged; <b>or</b> Check battery connection
5	The LED lamp does not switch to emergency mode when the test button is pressed	Test switch damaged
6	Indicator LED is constant green	Test switch damaged; <b>or</b> Self check fail - return to factory
7	Indicator LED not red after commissioning	Check battery connection and battery plug polarity
8	The LED lamp works momentarily on emergency when the test button is pressed	Battery not yet charged (allow up to 24 hours)

### ABB Australia Pty Limited

For enquiries  
ABB contact centre: 1800 60 20 20  
E-mail: AU-ABB-Stanilite@abb.com

## INSTALLATION MANUAL

### Stanilite®

## Platinum exit LED edgelit surface mount DALI emergency



### Thank you for choosing ABB product

Please read this document thoroughly before commencing installation and retain for future reference. Contact ABB customer service in Australia on 1800 60 20 20 if you need any assistance. The installation instructions were correct at the time of print. To reflect changes in technology and Australian standards; ABB reserves the right to amend the instructions without notice. Updated document can be found on the Stanilite website.

### Safety warning

In Australia and New Zealand, only licensed electricians are permitted by law to work with 240 volt electrical installations. Do not attempt to install or connect this product unless you are a licensed electrician. Turn off and isolate the electrical supply before connecting this fitting to the building wires. Do not touch the terminals of the terminal block when the light fitting is energised. The only user-serviceable part is the battery pack. LED light source is not user-serviceable. Do not attempt to service other parts of the fitting as this will void the warranty. As the installer, it is your responsibility to ensure

### This document covers

Safety warning

Installation instructions

Removal instructions

Testing precautions

Troubleshooting guide

### What's inside the box

Surface mount base assembly

Diffuser assembly

Surface mount base cover

Pictograph insert pack

Installation manual

Warranty information

compliance with all relevant building and safety codes, (ie: AS/NZS 3000, AS/NZS 2293). Refer to the applicable standards for data and mains cabling installation procedures and requirements.

### Important to note:

- This product is designed for indoor use only.

### DALI (Digital Addressable Lighting Interface)

DALI is widely acknowledged as being an open protocol as defined under IEC 62386 and is designed only for communication in lighting systems.

ABB exit and emergency luminaire with DALI functionality comply with DALI standard IEC 62386.

The DALI edgelit surface mount wiring consists of additional 2 way terminal block in the base labelled as + and - for DALI control wires apart from the mains terminals, ie: USA, N and E.

**Note: No mains or mains carrying cables are to be connected to DALI terminals or 2 control wires (white and black).**

## Installation instructions

**Note: The circuit supplying mains power to the fitting must not be energised until installation of the fitting is completed.**

1. The base of the fitting is installed first on the ceiling (refer figure 1a), the mounting and cable entry hole dimensions shown in figure 1b can be used as a template, for the purpose of marking/drilling. Once the base is installed on the ceiling, connect the incoming unswitched active, neutral and earth to terminal marked USA, N and E respectively. Connect the DALI control wires to the DALI terminal block.

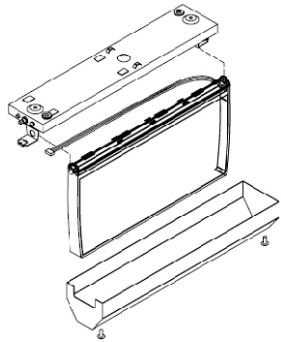


Figure 1a: Showing sequence of components

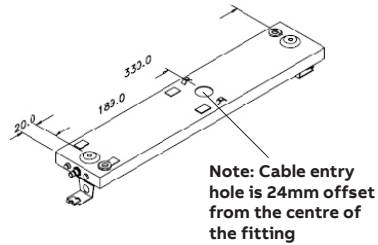


Figure 1b: Mounting and cable entry hole dimensions

2. Once the base is secured to the ceiling, hold the diffuser assembly in your hand and connect the diffuser wire loom polarised plug to the mother board (refer figure 2), the white wires on the plug should be towards the centre of the fitting. Once the plug is connected, lay the wire loom carefully inside the base. Place one end of the diffuser in the diffuser holding latch hole (refer figure 2) and then push up the other side of the diffuser, the diffuser clicks and locks in place. Once the diffuser is locked in place, the cover is easily fixed to the base via 2 screws. Hold the cover in your hand and bring up to the base, pass diffuser through the cut out; make sure the side rectangular cut out on the cover for the LED and test switch lines up with LED and test switch on the base. Once the holes on both sides of the base and cover line up, secure with the screws provided.

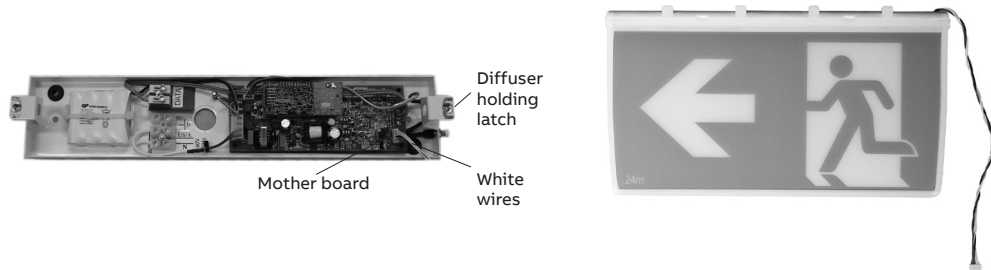


Figure 2: Connect wire loom plug to the mother board

3. Install the pictograph inserts by sliding into the diffuser. The pictograph inserts can be installed in the diffuser prior to installing the diffuser assembly in the fitting. Fitting is supplied standard with all pictograph insert options for single and double sided, as a complete one box solution to meet any site/project needs.



Figure 3: Pictograph inserts

4. The circuit supplying mains power to the fitting can now be energised.
5. Check the operation of the fitting to ensure that the installation was successful. When powered up, allow a few minutes to give the battery a small charge, then press the manual test button located on the fitting. Hold the test button in for a few seconds and observe the operation of the lamp switching from mains to the emergency mode. If the lamp on emergency mode works momentarily, that's okay. Try again in a few more minutes because if the battery was completely discharged, it may take a little time to charge up enough to operate even momentarily. After this time, press the test button again and if the lamp does not work at all, check the supply, the connections and the troubleshooting guide at the end of this document.

**Important: 24 hours is required to allow the fitting battery to reach full capacity, ie: prior to a discharge test. As the installer, it is your responsibility to conduct the initial discharge testing of the installed fitting. Refer to AS/NZS 2293.**

## Removal instructions

1. To remove/uninstall fitting from the ceiling, the steps to be followed are the reversal of installation process. Turn off mains power to fitting, the fitting will automatically switch onto emergency mode as the mains power has been turned off. It will stay on in the emergency mode until such time as the battery cut-off threshold is reached.
2. Remove cover by undoing the 2 cover screws turning anti-clockwise one by one using suitable screwdriver, make sure to hold cover with one hand while undoing the last screw. Once the screws are undone, remove the cover gently. The next step is to remove the diffuser assembly.
3. To remove diffuser assembly, hold the diffuser holding latch with thumb and fingers on one end and push gently to the opposite end to remove diffuser from the holding latch. Once diffuser is removed from the latch, disconnect/remove wire loom plug from the mother board. Once the diffuser assembly is removed,
4. disconnect the battery pack plug on the mother board. The next step is to remove base of the installed fitting.
4. Undo the mains wire connections ie: unswitched active, neutral and earth cable (and data cable connection where applies) from the terminal block using a suitably sized screwdriver. Unscrew the mounting screws turning anti-clockwise one by one using suitable screwdriver, and make sure to hold base with one hand while undoing the last screw. Once the mounting screws are undone, the base can be pulled down gently from the ceiling.
5. When the fitting is reconnected to the mains supply, it will need time to recharge its battery before it will be capable of a full length discharge again. The ability of the fitting to operate on emergency is determined by the age, charge level, operating temperature conditions and environmental circumstances of the battery in the fitting.

## Testing precautions

Once the fitting is permanently connected to the mains supply, a commissioning discharge test as required in AS/NZS 2293.2 must be carried out. You will need to allow 24 hours for the battery to fully charge prior to conducting this test, presently (at the time of writing), the standard requires that fittings operate in emergency mode for a period not less than 2 hours for their commissioning test and for not less than 90 minutes thereafter (it is required that 6 monthly discharge tests be carried out). You will need to keep the records for the commissioning test and enter them into the building emergency services logbook or via other recording methods as allowed by AS/NZS 2293.2.

## Construction sites

Continuously switching off the mains power supply that is connected to emergency light fittings during the construction phase of an installation will cause these fittings to discharge and charge their batteries many times over a short period; this can shorten life of the battery. ABB does not recommend such practices and may not honour the warranty on batteries when they are subjected to such harsh operating conditions. Emergency light fittings are designed to be discharge tested once every 6 months as per AS/NZS 2293.2, subjecting the product to repeated discharge or charge cycles is regarded as an abuse of the fittings.