

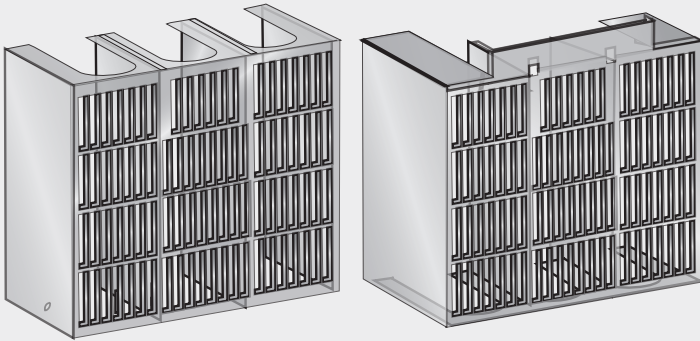


—
INSTALLATION INSTRUCTION

Terminal shroud OTS125FL3

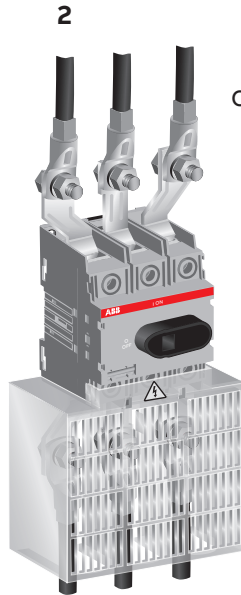


OTS125FL3

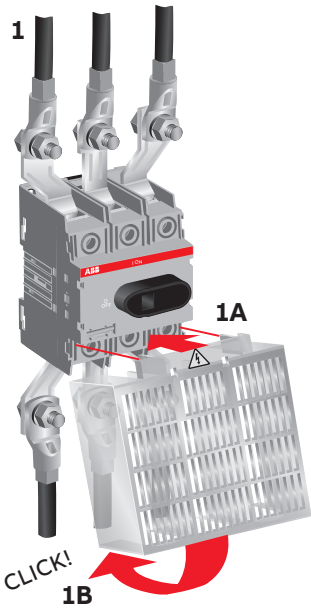

Or:



OTS125FL3

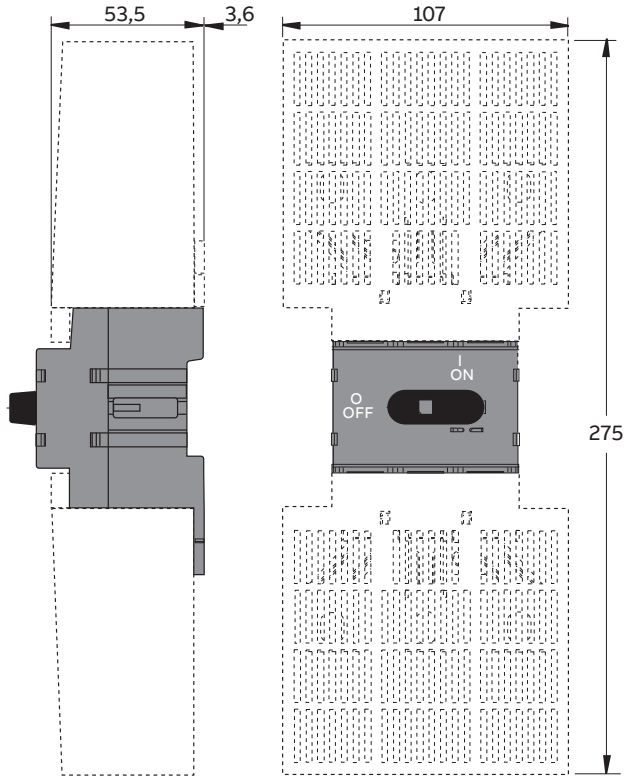



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage