


Multifunctional three-phase monitoring relays

CM-MPS.11, CM-MPS.21, CM-MPS.31 and CM-MPS.41

Data sheet

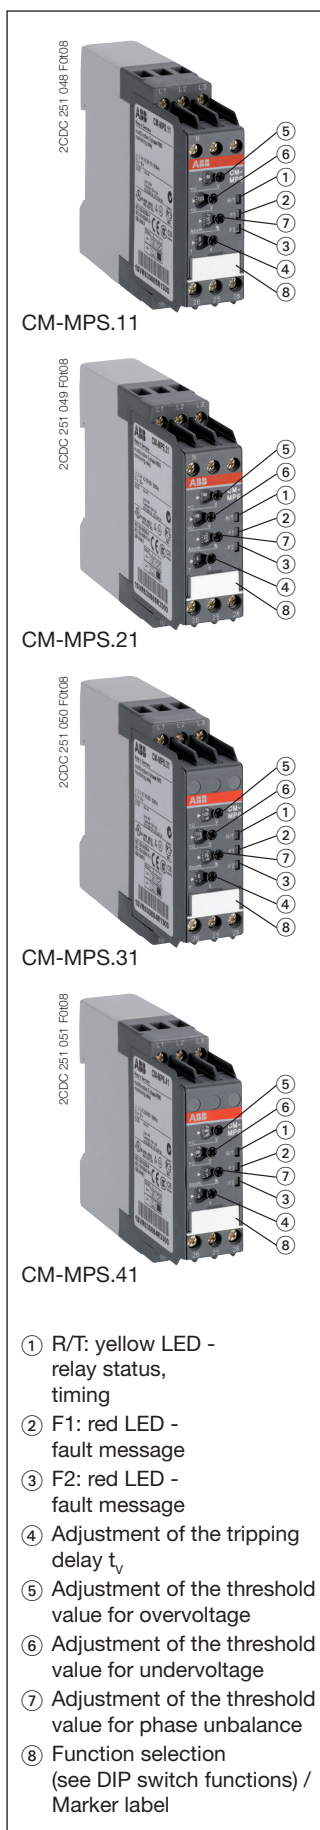

Features

- Monitoring of three-phase mains for phase sequence (can be switched off), phase failure, over- and undervoltage as well as phase unbalance
- Interrupted neutral monitoring possible with CM-MPS.11 and CM-MPS.21
- CM-MPS.11 and CM-MPS.21 can also be used to monitor single-phase mains
- Threshold values for phase unbalance, over- and undervoltage are adjustable as absolute values
- Tripping delay can be adjusted or switched off by means of a logarithmic scale
- ON-delayed or OFF-delayed tripping delay selectable
- Powered by the measuring circuit
- True RMS measuring principle
- 2 c/o (SPDT) contacts
- 3 LEDs for status indication

Approvals

	UL 508, CAN/CSA C22.2 No.14
	GL
	GOST
	CB scheme
	CCC

Marks

	CE
	C-Tick

Order data

Type	Rated control supply voltage = measuring voltage	Interrupted neutral monitoring	Order code
CM-MPS.11	3 x 90-170 V AC	yes	1SVR 630 885 R1300
CM-MPS.21	3 x 180-280 V AC	yes	1SVR 630 885 R3300
CM-MPS.31	3 x 160-300 V AC	no	1SVR 630 884 R1300
CM-MPS.41	3 x 300-500 V AC	no	1SVR 630 884 R3300

Order data - Accessories

Type	Description	Order code
ADP.01	Adapter for screw mounting	1SVR 430 029 R0100
MAR.02	Marker label for devices with DIP switch	1SVR 430 043 R0000
COV.01	Sealable transparent cover	1SVR 430 005 R0100

Application

The CM-MPS.x1 are multifunctional monitoring relays for three-phase mains. They monitor the phase parameters phase sequence, phase failure, over- and undervoltage and phase unbalance. CM-MPS.11 and CM-MPS.21 also monitor the neutral for interruption. The threshold values for over- and undervoltage and phase unbalance are adjustable.

CM-MPS.11 and CM-MPS.21 are also suitable for monitoring single-phase mains. For this, all three external conductors (L1, L2, L3) have to be jumpered and connected as one single conductor. Phase sequence monitoring has to be deactivated and the threshold value for phase unbalance has to be set to the maximum (25 %).

Multifunctional three-phase monitoring relays

CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41

Data sheet

Operating mode

Configuration of the devices is made by means of setting elements accessible on the front of the unit and signalling is made by means of front-face LEDs.

Adjustment potentiometer

Threshold values





By means of three separate potentiometers with direct reading scales, the threshold values for over- and undervoltage as well as for phase unbalance can be adjusted within the measuring range.

	Measuring range for overvoltage	Measuring range for undervoltage	Measuring range for phase unbalance
CM-MPS.11	3 x 120-170 V AC	3 x 90-130 V AC	2-25 % of average of phase voltages
CM-MPS.21	3 x 240-280 V AC	3 x 180-220 V AC	

 
 
Tripping delay t_v



The tripping delay t_v can be adjusted within a range of 0.1-30 s by means of a potentiometer with logarithmic scale. By turning to the left stop, the tripping delay can be switched off.

DIP switches

Position	2	1
ON \uparrow		
OFF		

20102 252 040 110008

DIP switch 1 = Timing function	
ON = ON-delayed 	OFF = OFF-delayed 
In case of a fault, the de-energizing of the output relays and the respective fault message are suppressed for the adjusted tripping delay t_v .	In case of a fault, the output relays de-energize instantaneously and a fault message is displayed and stored for the length of the adjusted tripping delay t_v . Thereby, also momentary undervoltage conditions are recognized.

  













DIP switch 2 = Phase sequence monitoring	
ON = Phase sequence monitoring deactivated 	OFF = Phase sequence monitoring activated 
Phase sequence errors will not be recognized.	The output relays de-energize as soon as a phase sequence error occurs. The output relays re-energize automatically as soon as the phase sequence is correct again.

Multifunctional three-phase monitoring relays

CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41

Data sheet

LEDs

Function	R/T: yellow LED	F1: red LED	F2: red LED
Control supply voltage applied, output relay energized		-	-
Tripping delay t_v active		-	-
Phase failure	-		
Phase sequence	-	 alternating	
Overvoltage	-		-
Undervoltage	-	-	
Phase unbalance	-		
Interruption of the neutral	-		
Adjustment error ¹⁾			

¹⁾ Overlapping of the threshold values: An overlapping of the threshold values is given, if the threshold value for overvoltage is set to a smaller value than the threshold value for undervoltage.

Multifunctional three-phase monitoring relays

CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41

Data sheet

Function descriptions/diagrams

Function diagram legend


- Control supply voltage not applied / Output contact open / LED off
- Control supply voltage applied / Output contact closed / LED glowing

Interrupted neutral monitoring

The interruption of the neutral in the main to be monitored is detected by means of phase unbalance evaluation.

If the star point is displaced by asymmetrical load in the three-phase main, an interrupted neutral will be detected.

Determined by the system, in case of unloaded neutral, i.e. symmetrical load between all three phases, it may happen that an interruption of the neutral will not be detected.

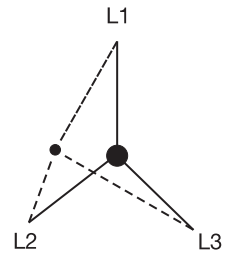

Phase sequence and phase failure monitoring


Applying control supply voltage begins the fixed start-up delay t_s . When t_s is complete and all phases are present with correct voltage, the output relays energize and the yellow LED R/T glows.

Phase sequence monitoring

If phase sequence monitoring is activated, the output relays de-energize as soon as a phase sequence error occurs. The fault is displayed by alternated flashing of the LEDs F1 and F2. The output relays re-energize automatically as soon as the phase sequence is correct again.

Phase failure monitoring

The output relays de-energize instantaneous if a phase failure occurs. The fault is indicated by lightning of LED F1 and flashing of LED F2. The output relays re-energize automatically as soon as the voltage returns to the tolerance range.

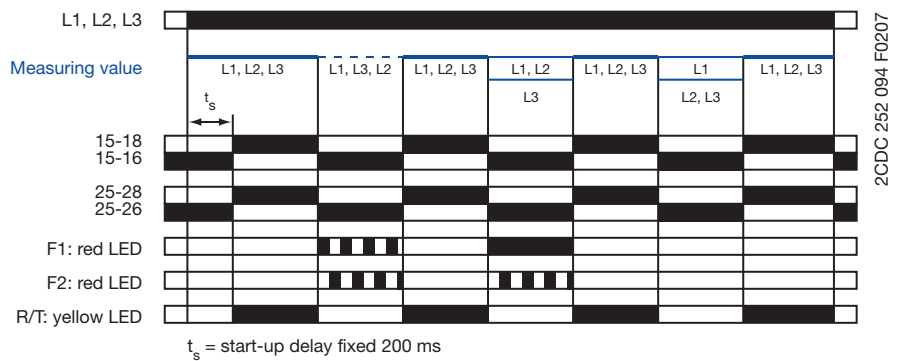

Multifunctional three-phase monitoring relays

CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41

Data sheet


Over- and undervoltage monitoring

Applying control supply voltage begins the fixed start-up delay t_s . When t_s is complete and all phases are present with correct voltage and with correct phase sequence, the output relays energize and the yellow LED R/T glows.

Type of tripping delay = ON-delay ☒

If the voltage to be monitored exceeds or falls below the set threshold value, the output relays de-energize after the set tripping delay t_v is complete. The LED R/T flashes during timing and turns off as soon as the output relays de-energize.


The output relays re-energize automatically as soon as the voltage returns to the tolerance range, taking into account a fixed hysteresis of 5 %. The LED R/T glows.

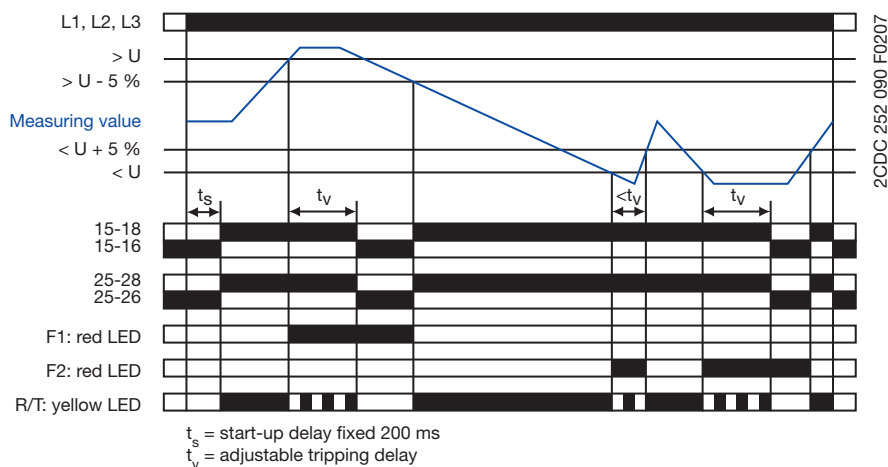

Type of tripping delay = OFF-delay ■

If the voltage to be monitored exceeds or falls below the set threshold value, the output relays de-energize instantaneously and the LED R/T turns off.

As soon as the voltage returns to the tolerance range, taking into account a fixed hysteresis of 5 %, the output relays re-energize automatically after the set tripping delay t_v is complete. The LED R/T flashes during timing and turns steady when timing is complete.

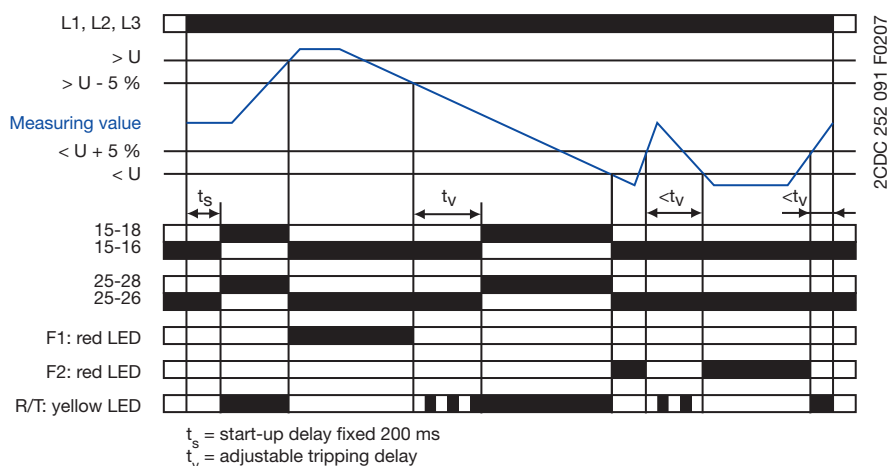

Multifunctional three-phase monitoring relays

CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41

Data sheet


Phase unbalance monitoring

Applying control supply voltage begins the fixed start-up delay t_s . When t_s is complete and all phases are present with correct voltage and with correct phase sequence, the output relays energize and the yellow LED R/T glows.

Type of tripping delay = ON-delay ☒

If the voltage to be monitored exceeds or falls below the set phase unbalance threshold value, the output relays de-energize after the set tripping delay t_v is complete. The LED R/T flashes during timing and turns off as soon as the output relays de-energize.


The output relays re-energize automatically as soon as the voltage returns to the tolerance range, taking into account a fixed hysteresis of 20 %. The LED R/T glows.

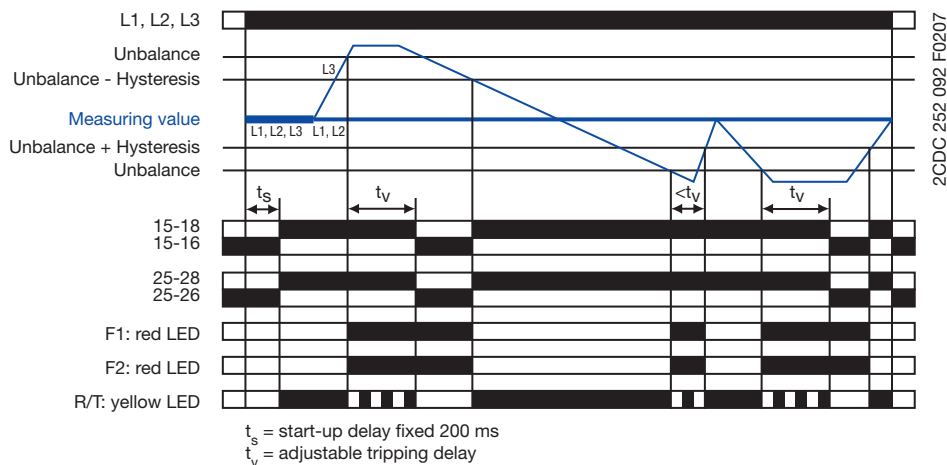

Type of tripping delay = OFF-delay ■

If the voltage to be monitored exceeds or falls below the set phase unbalance threshold value, the output relays de-energize instantaneously and the LED R/T turns off.

As soon as the voltage returns to the tolerance range, taking into account a fixed hysteresis of 20 %, the output relays re-energize automatically after the set tripping delay t_v is complete. The LED R/T flashes during timing and turns steady when timing is complete.

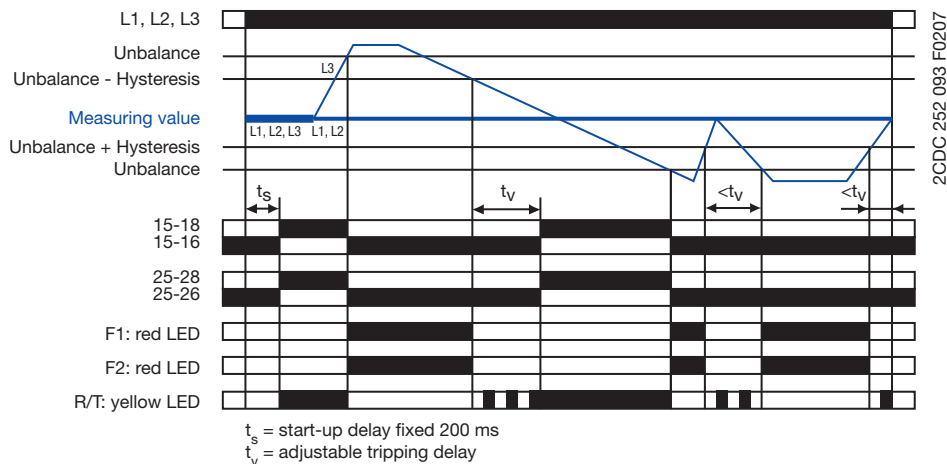


Multifunctional three-phase monitoring relays

CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41


Data sheet

Connection diagrams

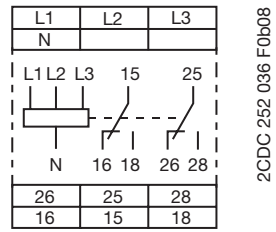

L1, L2, L3, N Control supply voltage = measuring voltage
 15-16/18 Output contacts -
 25-26/28 closed-circuit principle

CM-MPS.11 and CM-MPS.21

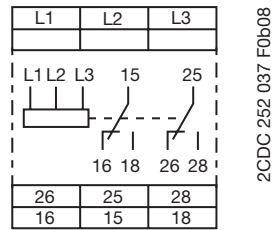

L1, L2, L3, N Control supply voltage = measuring voltage
 15-16/18 Output contacts -
 25-26/28 closed-circuit principle

CM-MPS.31 and CM-MPS.41

Multifunctional three-phase monitoring relays

CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41

Data sheet

Data at $T_a = 25\text{ °C}$ and rated values, unless otherwise indicated

Type		CM-MPS.11	CM-MPS.21	CM-MPS.31	CM-MPS.41
Input circuit = Measuring circuit		L1, L2, L3, N		L1, L2, L3	
Rated control supply voltage U_s = measuring voltage		3 x 90-170 V AC	3 x 180-280 V AC	3 x 160-300 V AC	3 x 300-500 V AC
Rated control supply voltage U_s tolerance		-15...+10 %			
Rated frequency		50/60 Hz			
Frequency range		45-65 Hz			
Typical current / power consumption		25 mA / 10 VA (115 V AC)	25 mA / 18 VA (230 V AC)	25 mA / 10 VA (230 V AC)	25 mA / 18 VA (400 V AC)
Measuring circuit		L1, L2, L3, N		L1, L2, L3	
Monitoring functions	Phase failure	■	■	■	■
	Phase sequence	can be switched off			
	Automatic phase sequence correction	-	-	-	-
	Over-/undervoltage	■	■	■	■
	Phase unbalance	■	■	■	■
	Interrupted neutral	■	■	-	-
Measuring range	Overvoltage	3 x 120-170 V AC	3 x 240-280 V AC	3 x 220-300 V AC	3 x 420-500 V AC
	Undervoltage	3 x 90-130 V AC	3 x 180-220 V AC	3 x 160-230 V AC	3 x 300-380 V AC
	Phase unbalance	2-25 % of average of phase voltages			
Thresholds	Overvoltage	adjustable within measuring range			
	Undervoltage	adjustable within measuring range			
	Phase unbalance (switch-off value)	adjustable within measuring range			
Hysteresis related to the threshold value	Over-/undervoltage	fixed 5 %			
	Phase unbalance	fixed 20 %			
Rated frequency of the measuring signal		50/60 Hz			
Frequency range of the measuring signal		45-65 Hz			
Maximum measuring cycle time		100 ms			
Accuracy within the rated control supply voltage tolerance		$\Delta U \leq 0.5\%$			
Accuracy within the temperature range		$\Delta U \leq 0.06\% / \text{°C}$			
Measuring method		True RMS			
Timing circuit					
Start-up delay t_s		fixed 200 ms			
Tripping delay t_v		ON- or OFF-delay 0; 0.1-30 s adjustable			
Repeat accuracy (constant parameters)		$< \pm 0.2\%$			
Accuracy within the rated control supply voltage tolerance		$\Delta t \leq 0.5\%$			
Accuracy within the temperature range		$\Delta t \leq 0.06\% / \text{°C}$			
Indication of operational states		1 yellow LED, 2 red LEDs Details see operating mode and function description/diagrams			
Output circuits		15-16/18, 25-26/28			
Kind of output		1 x 2 c/o (SPDT) contacts (Relays)			
Operating principle ¹⁾		closed-circuit principle			
Contact material		AgNi alloy, Cd free			
Rated operational voltage U_e (IEC/EN 60947-1)		250 V			
Minimum switching power		24 V / 10 mA			
Maximum switching voltage		see load limit curves			
Rated operational current I_e (IEC/EN 60947-5-1)	AC12 (resistive) 230 V	4 A			
	AC15 (inductive) 230 V	3 A			
	DC12 (resistive) 24 V	4 A			
	DC13 (inductive) 24 V	2 A			
AC rating (UL 508)	Utilization category (Control Circuit Rating Code)	B 300			
	max. rated operational voltage	300 V AC			
	max. continuous thermal current at B 300	5 A			
	max. making/breaking apparent power at B 300	3600/360 VA			
Mechanical lifetime		30 x 10 ⁶ switching cycles			
Electrical lifetime (AC12, 230 V, 4 A)		0,1 x 10 ⁶ switching cycles			

Multifunctional three-phase monitoring relays

CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41

Data sheet

Data at $T_a = 25\text{ °C}$ and rated values, unless otherwise indicated

Type		CM-MPS.11	CM-MPS.21	CM-MPS.31	CM-MPS.41
Maximum fuse rating to achieve	n/c contact	6 A fast-acting			
short-circuit protection	n/o contact	10 A fast-acting			
General data					
Duty time		100 %			
Dimensions (W x H x D)		22.5 x 78 x 100 mm (0.89 x 3.07 x 3.94 inch)			
Weight		0.14 kg (0.31 lb)	0.13 kg (0.29 lb)		
Mounting		DIN rail (IEC/EN 60715), snap-on mounting without any tool			
Mounting position		any			
Minimum distance to other units	lateral	10 mm (0.4 inch) in case of continuous voltage of ...			
		> 120 V	> 240 V	> 220 V	> 400 V
Degree of protection	enclosure / terminals	IP50 / IP20			
Electrical connection					
Wire size	fine-strand with(out) wire end ferrule	2 x 0.75-2.5 mm ² (2 x 18-14 AWG)			
	rigid	2 x 0.5-4 mm ² (2 x 20-12 AWG)			
Stripping length		7 mm (0.28 inch)			
Tightening torque		0.6-0.8 Nm			
Environmental data					
Ambient temperature ranges	operation / storage	-25...+60 °C / -40...+85 °C			
Damp heat (IEC 60068-2-30)		55 °C, 6 cycles			
Climatic category		3K3			
Vibration (sinusoidal) (IEC/EN 60255-21-1)		Class 2			
Shock (IEC/EN 60255-21-2)		Class 2			
Isolation data					
Rated insulation voltage U_i	input circuit / output circuit	600 V			
	output circuit 1 / output circuit 2	300 V			
Rated impulse withstand voltage U_{imp} (VDE 0110, IEC/EN 60664)	input circuit	6 kV; 1.2/50 μ s			
	output circuit	4 kV; 1.2/50 μ s			
Test voltage between all isolated circuits (type test)		2.5 kV, 50 Hz, 1 s			
Basis isolation	input circuit / output circuit	600 V			
Protective separation (VDE 0106 part 101 and 101/A, IEC/EN 61140)	input circuit / output circuit	yes	-		
Pollution degree (VDE 0110, IEC/EN 60664)		3			
Overvoltage category (VDE 0110, IEC 60664)		III			
Standards					
Product standard		IEC/EN 60255-6, EN 50178			
Low Voltage Directive		2006/95/EC			
EMC directive		2004/108/EC			
RoHS directive		2002/95/EC			
Electromagnetic compatibility					
Interference immunity to		IEC/EN 61000-6-1, IEC/EN 61000-6-2			
electrostatic discharge	IEC/EN 61000-4-2	Level 3 (6 kV / 8 kV)			
radiated, radio-frequency, electro-magnetic field	IEC/EN 61000-4-3	Level 3 (10 V/m)			
electrical fast transient (burst)	IEC/EN 61000-4-4	Level 3 (2 kV / 2 kHz)			
surge	IEC/EN 61000-4-5	Level 4 (2 kV L-N)	Level 4 (2 kV L-L)		
conducted disturbances, induced by radio-frequency fields	IEC/EN 61000-4-6	Level 3 (10 V)			
harmonics and interharmonics	IEC/EN 61000-4-13	Class 3			
Interference emission		IEC/EN 61000-6-3, IEC/EN 61000-6-4			
high-frequency radiated	IEC/CISPR 22, EN 50022	Class B			
high-frequency conducted	IEC/CISPR 22, EN 50022	Class B			

¹⁾ Closed-circuit principle: Output relay(s) de-energize(s) if measured value exceeds or falls below the adjusted threshold value

Multifunction three-phase monitoring relays


CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41

Data sheet


Technical diagrams

Load limit curves

AC load (resistive)

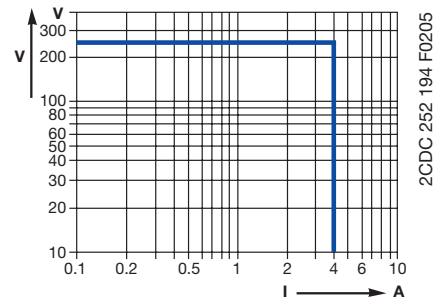


DC load (resistive)

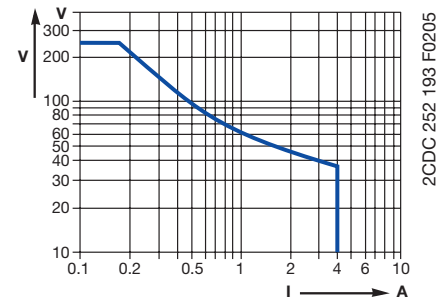


Derating factor F

at inductive AC load


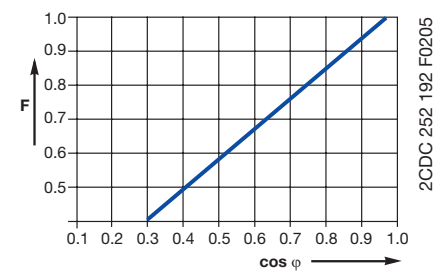


Contact lifetime

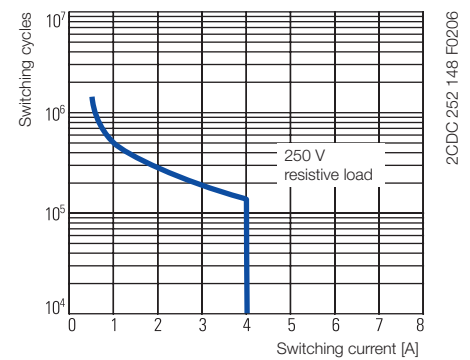

Dimensions

in mm

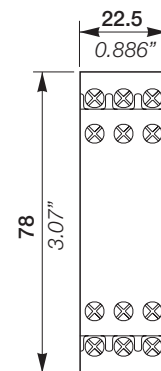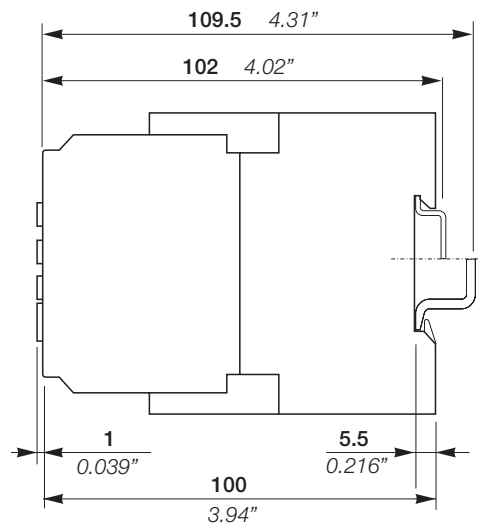

2CDC 252 031 F0003


Multifunction three-phase monitoring relays

CM-MPS.11, CM-MPS-21, CM-MPS.31 and CM-MPS.41

Data sheet


Dimensions - Accessories

in mm

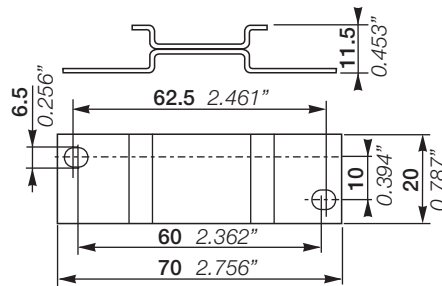


2CDC 252 008 F0010

 ADP.01 - Adapter for screw mounting



2CDC 252 010 F0010

MAR.02 - Marker label

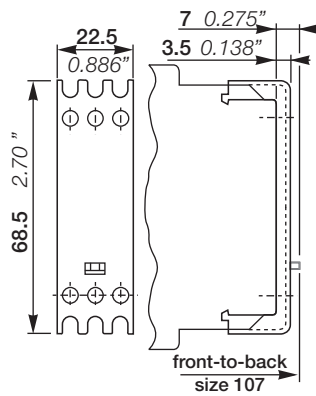

2CDC 252 185 F0005

COV.01 - Sealable transparent cover

Further documentation

Document title	Document type	Document number
Electronic Products and Relays	Technical catalogue	2CDC 110 004 C020x
CM-MPS.11, CM-MPS.21, CM-MPS.31, CM-MPS.41	Instruction manual	1SVC 630 520 M0000

You can find the documentation online at www.abb.com/lowvoltage → Control Products → Electronic Relays and Controls

Contact us

ABB STOTZ-KONTAKT GmbH

P. O. Box 10 16 80
69006 Heidelberg, Germany
Phone: +49 (0) 6221 7 01-0
Fax: +49 (0) 6221 7 01-13 25
E-mail: info.desto@de.abb.com

You can find the address of your
local sales organisation on the
ABB home page
<http://www.abb.com/contacts>
-> Low Voltage Products and Systems

Note:

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG.

Copyright© 2010 ABB
All rights reserved