



# SensyMaster

## FMT4xx\_FMT2xx

- This Version Matrix document helps you to find out what kind of software is available for this field device and which software version you have to use with which kind of Hardware and Firmware Revision.

- You will find the latest documentations or this Version Matrix (recommended) available on:

<http://www.abb.com/measurement>

-> select [our offerings] product type -> select product -> choose Tab "Fieldbus & HART Files"

### Applies to Product-type-designator:

*FMT230, FMT250,  
FMT430, FMT432, FMT450, FMT452*

<b>HART 4-20 mA</b>	<b>Revision</b>
(expanded) <b>Device Type - Code (ID)</b>	<b>1A27</b>
Hardware	all released
Software/Firmware	≤ 01.00.xx
Device (latest SW compatibility status)	<b>01</b>
HART	<b>7</b>
<b>[Doc.-No.] - Device Driver</b>	<b>Version</b>
<b>DTM</b> (FDT1.2) part of DTM700 [3KXF422400S0202]	07.01.01
<b>EDD</b> (General) [3KXF422400S0003] This driver is not needed, if available from your Tool supplier!	<b>01 05</b> (Dev. / <b>EDD</b> )
<b>FDI-Package (unreg.)</b> ABB.FMT4xx_FMT2xx.xx.yy.zz.HART.fidx	01.05.00 (EDD 01 05)
<b>Supplem. Info.-Driver</b> (DTM, EDD, Package) [3KXF422401R3901]	✓

# SensyMaster

## FMT4xx\_FMT2xx

Applies to Product-type-designator:

*FMT430, FMT432, FMT450, FMT452*

<b>Profibus DP</b>	<b>Revision</b>
<b>Device Type - Code PNO (ID)</b>	<b>3435</b>
Hardware	all released
Firmware	≤ 01.01.xx
Device (latest SW compatibility status)	<b>01</b>
<b>[Doc.-No.] - Device Driver</b>	<b>Version</b>
<b>FDI-Package (unreg.)</b> ABB.FMT4xx.xx.yy.zz.HART.fidx	01.00.00 (EDD 01 01)
<b>EDD (PDM)</b> Available in Tool Version ≥ V9.1.	<b>01 01</b> (Dev. / EDD)
<b>Supplem. Info.-Driver</b> (DTM, GSD, EDD, Package) [3KXF422404R39xx]	✓