

MEDIUM VOLTAGE PRODUCT

AdvaSense™ KEVCD A Combined Current and Voltage Sensor

Instructions for Installation, Use and Maintenance





Scope of Contents

3	1. Operating Conditions
3	2. Technical Details
5	3. Instructions for Installation
5	Safety instructions
5	Mounting
5	Primary connections
5	Secondary connections
6	4. Capacitive Voltage Indicator
6	Connection interface
6	Voltage indicator
6	5. Instructions for Use
6	Routine test report
7	6. Instructions for Maintenance
7	7. Transport and Storage
7	8. Recommended Procedure
	for Disposal of the Sensor
8	Appendix 1.: Dimensional drawings

AdvaSense™ KEVCD A Combined Current and Voltage Sensor

Instructions

These instructions for installation, use and maintenance is valid for KEVCD A combined current and voltage electronic transformers (sensors) operating in indoor conditions in the following variants:

01a Example of rating plate (label) according to IEC 60044-7, -8

01b Example of rating plate (label) according to IEC 61869-10, -11

Type designation	Functions included		
	Voltage sensor	Current sensor	Voltage indication
KEVCD 12 AE3	■	■	■
KEVCD 12 AG3		■	■
KEVCD 17.5 AE3	■	■	■
KEVCD 17.5 AG3		■	■
KEVCD 24 AE3	■	■	■
KEVCD 24 AG3		■	■


Tab. 1. Sensor variants

1. Operating Conditions


The combined sensor should be mounted in dry, indoor conditions without excess ingress of dust and corrosive gases. The sensor must be protected against unusually heavy deposits of dust or similar pollution, as well as against direct sunshine. The sensor is designed for standard ambient temperature between -25°C and +80°C (storage and transportation temperature between -40°C and +80°C). The altitude for mounting should be lower than 1000 m above sea level. The sensor may also be used at higher altitudes when agreed upon with the manufacturer.

2. Technical Details

For sensor dimensions see separate dimension drawings. Rated values for each individual sensor are mentioned on the rating plate glued to the sensor. Values mentioned on the rating plate must not be exceeded.

ABB		s.n. 1VLT5416001234	
KEVCD 24AE3			
or.n.: 123456			
Upn: 22/√3kV Kn: 10000/1 Ku: 1.9/8h cl.: 0.5/3P			
Ipr: 80 A Usr: 0.150/0.180 V fr: 50/60 Hz cl.: 0.5/5P630			
Cfs.: aU: 0.1234 pU: +0.203° al: 1.0004 pl: +0.103°			
C1: 12 pF C2: 10 pF Kpcr: 15.625			
<input type="checkbox"/> Ipr: 80/240 A	<input type="checkbox"/> Ipr: 80/640 A		
24/50/125 kV	lth/dyn: 50(1s)/125 kA	15.6 kg	E
IEC 60044-7, -8	Made by ABB		2016

01a

ABB		s.n. 1VLT5419021565	
KEVCD 24 AE3			
or.n.: 1000047405			
Ipr: 80 A Usr: 0.150/0.180 V derivative cl.: 0.5/5P 50kA			
CFi: 1.0102 ϕo cor: 0.0937° Kpcr: 15.625			
Upn: 22/√3 kV Kr: 10000/1 FV: 1.9/8h cl.: 0.5/3P			
CFu: 1.0119 ϕo cor: -0.0308°			
C1: 13 pF C2: 11 pF			
24/50/125/0.82 kV		lth/ldyn: 50(1s)/125 kA fr: 50/60 Hz E	
IEC 61869-10, -11		-25/80 °C 15.6kg Made by ABB 16-APR-24	

01b

ADVASENSE™ KEVCD A COMBINED CURRENT AND VOLTAGE SENSOR
INSTRUCTIONS FOR INSTALLATION, USE AND MAINTENANCE

s.n.	Serial number
KEVCD 24AE3	Type code (KEVCD 24 Axx - combi sensor)
or.n.	Order number
U_{pn}	Rated primary voltage in kV
K_n	Rated transformation ratio for voltage measurement
K_i	Voltage factor
cl.	Accuracy class
I_{pr}	Rated primary current
U_{sr}	Rated secondary voltage in V corresponding to a given rated frequency
F_r	Rated frequency in Hz
Cfs.	Correction factors used for voltage and current sensors. Amplitude correction factor is a number by which the output of sensor must be multiplied in order to have minimum amplitude error. Phase error correction factor is a number by which the output of the sensor must be increased or decreased (depending on the sign) in order to have minimum phase error.
aU	Amplitude correction factor of a voltage sensor
pU	Phase error correction factor of a voltage sensor in degrees
aI	Amplitude correction factor of a current sensor
pI	Phase error correction factor of a current sensor in degrees
C1	Capacitance between primary conductor and Ck-electrode
C2	Capacitance between Ck-electrode and earthed part of the sensor
K_{per}	Rated extended primary current factor
Ipr: 80/240 A	Indication if current adapter 240 A/150 mV is used (Rated primary current of application is 240 A).
Ipr: 80/640 A	Indication if current adapter 640 A/150 mV is used (Rated primary current of application is 640 A).
24/50/125 kV	Rated insulation levels in kV: 24 highest voltage for equipment/50 rated power frequency withstand voltage 1 min/125 rated lightning impulse withstand voltage (peak)
I_{th}/I_{dyn}	Rated short-time thermal current in kA/Rated dynamic current in kA
15.6 kg	Weight (excluding cable)
E	Insulation class
IEC 60044-7, -8	IEC – standards referred to
2016	Production year

Tab. 2. Labels abbreviation definitions (IEC 60044-7, -8)

s.n.	Serial number
KEVCD 24AE3	Type code (KEVCD 24 Axx - combi sensor)
or.n.	Order number
Ipr	Rated primary current
U _{sr}	Rated secondary voltage in V corresponding to a given rated frequency
cl.	Accuracy class
Cfs.	Correction factors
K _{pcr}	Rated extended primary current factor
U _{pr}	Rated secondary voltage
K _r	Rated transformation ratio
FV	Rated voltage factor
CFu	Correction factors
C1	Capacitance between primary conductor and Ck-electrode
C2	Capacitance between Ck-electrode and earthed part of the sensor
pI	Phase error correction factor of a current sensor in degrees
C1	Capacitance between primary conductor and Ck-electrode
C2	Capacitance between Ck-electrode and earthed part of the sensor
24/50/125//0.82 kV	Rated insulation levels in kV: 24 highest voltage for equipment/50 rated power frequency withstand voltage 1 min/125 rated lightning impulse withstand voltage (peak)// Power frequency voltage withstand capability
I _{th} /I _{dyn}	Rated short-time (3s) thermal current in kA and rated dynamic current in kA (peak)
Fr	Rated frequency in Hz
E	Insulation class
IEC 61869-10, -11	IEC – standards referred to
-25/80 °C	Operation temperature
15.6 kg	Weight (excluding cable)
16-APR-24	Production date

Tab. 3. Labels abbreviation definitions (IEC 61869-10, -11)

- 02 Example of Correction factors (aI, pI) setting for current sensor
- 03 Example of Correction factors (aU, pU) setting for voltage sensor
- 04 Busbar fixing

Analog Input 1

Primary Sensor Type :
Current Rogowski

Network:
☒ Network 1
☐ Network 2

Connection

☒ Phase1
☐ Phase2
☐ Phase3

☐ Line1-2
☐ Line2-3
☐ Line3-4

☐ Earth
☐ Residual

Direction

☐ Bus
☒ Line

Rated Primary Value [RPV] :
1600.000

1.000 .. 5000.000 A

Rated Secondary Value [RSV] :
0.150

0.150 .. 0.750 V

Board Input Rated Value [RV] :
0.150

0.150 .. 0.200 V

Calibration Factors

Amplitude :
0.9875

0.7000 .. 1.3000

Phase :
0.087

-180.000 .. 180.000 °

OK

Cancel

02

Analog Input 1

Primary Sensor Type :
Voltage Sensor

Network:
☒ Network 1
☐ Network 2

Connection

☒ Phase1
☐ Phase2
☐ Phase3

☐ Line1-2
☐ Line2-3
☐ Line3-4

☐ Earth
☐ Residual

☐ Invert phase

Rated Primary Value [RPV] :
20.000

0.010 .. 300.000 kV

Rated Secondary Value [RSV] :
2.000

0.600 .. 4.000 V

Board Input Rated Value [RV] :
2.000

0.600 .. 4.000 V

Calibration Factors

Amplitude :
1.0024

0.7000 .. 1.3000

Phase :
-0.092

-180.000 .. 180.000 °

OK

Cancel

03

3. Instructions for Installation

Safety instructions

- a) Always consider the sensor as a part of the circuit to which it is connected, and do not touch the leads or other parts of the sensor unless they are known to be grounded.
- b) Always ground the metallic base plate of the sensor.
- c) Voltage indication must be earthed with a separate wire whenever it is not used.

Mounting

The mounting position for the sensor can be freely chosen. The sensor is fixed using the base plate with four screws and washers. For KEVCD 12_ and 17.5_ types the screw and washer size is M10 and for KEVCD 24_ types it is M12. Fastening must be done on a smooth surface. One of the M10/M12 screws must be earthed. It must be ensured that the ground screw has an electrical connection with the metallic base plate of the sensor.


Use a torque spanner, if necessary. Strength class for the screws is 8.8. The length of the screw within the nut part is at least 1.4x the screw diameter.

Screw	Max. torque [Nm]	Min. torque [Nm]
M5	3.5	2.8
M10	35	20
M12	70	56

Tab. 4. Maximum allowed torques for screw connections

Primary connections

M12 size screws are used in the primary terminals. For primary connection allowed torques, screw lengths, washers and terminal markings see Tab. 4 and Fig. 4.

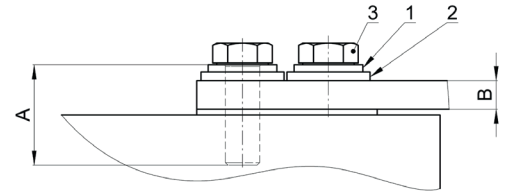

04

- 1 Washer (SFS 3738)
- 2 Spring washer (DIN 6796)
- 3 Screw M12

A (mm)	B (mm)
30	2...10
35...40	10...15
40...45	15...20
45...50	20...25
50...55	25...30

Tab. 5. Primary connection parameters


Note: For proper connection, washers for separate terminal screws used in the primary connections must not touch each other.

- 05 Connection between the sensor and IED
- 06 LEMO connector
- 07 Connector RJ-45
- 08a Connector RJ-45 (IEC 0044-7, -8)
- 08b Connector RJ-45 (IEC 1869-10, -11)
- 09a sensor plug connector pin's assignment (IEC 60044-7, -8)
- 09b sensor plug connector pin's assignment (IEC 61869-10, -11)


Secondary connections

The secondary cable is a single shielded cable designed to give maximum EMI shielding. The sensor is always designed and tested with certain cable length. Sensors cables cannot be additionally extended, shortened, branched or modified due to the guarantee of accuracy and performance of the sensor.


Cable shielding is grounded on both sides, see Fig. 5. If a cable is damaged please contact the manufacturer for instructions.

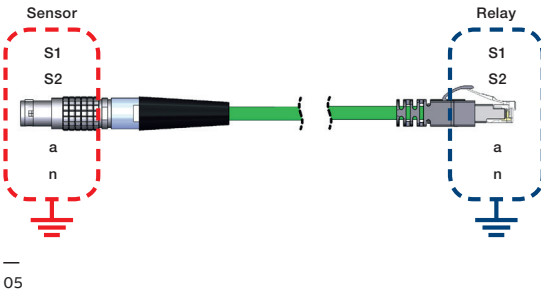


The cable is equipped with a cable eyes on the sensor side, see Fig. 6., and with a RJ-45 connector on the relay side. RJ-45 connector is keyed to prevent all errors in alignment.

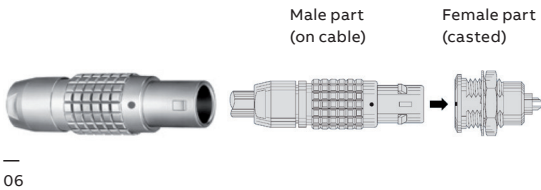

The used RJ-45-type connectors are screened and designed to guarantee low resistance shielding; they are particularly adapted to applications where electromagnetic compatibility (EMC) is important. The connectors are robust but it is necessary to be careful during their assembly --- do not use force!


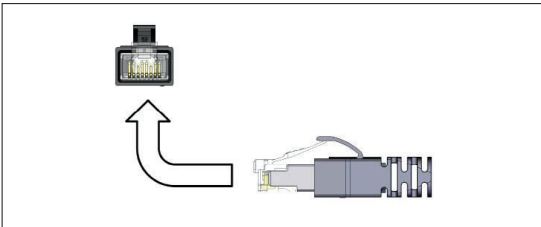


07

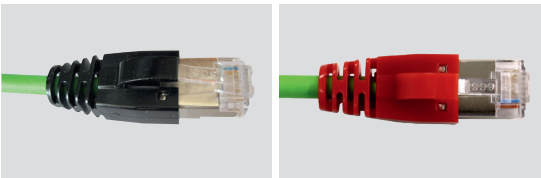

08a

08b

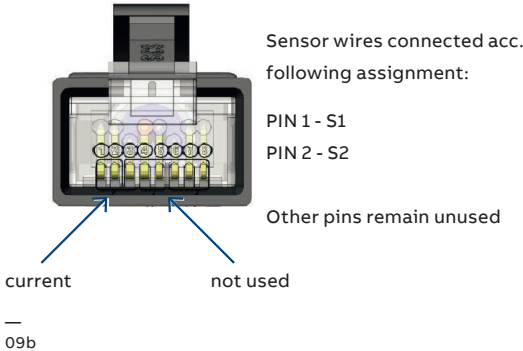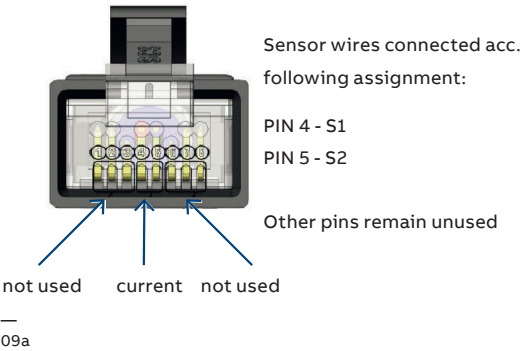

Note: It is recommended to use a cable tie to fasten long sensor cables approximately 10 cm from the RJ-45 socket.

4. Capacitive Voltage Indicator

A separable voltage detecting system is used in the sensors technology. The sensors are commonly equipped with a coupling system (an indicator and indicator connection are not part of the delivery).

The coupling system is tested according to the GCE A106001 instruction, based on IEC 61243-5 and VDE 0682 Part 415 standards.


Electrode	Sensor Highest voltage of equipment	
	12 and 17.5 kV	24 kV
C1	(23 – 40) pF	(10 – 18) pF
C2	≤90 pF	≤90 pF

Tab. 6. Capacitance values

C1 capacitance between primary conductor and coupling electrode
C2 capacitance between coupling electrode and earthed parts

Connection interface

The connection interface is realized by M5 terminals, see Fig. 10. Use a torque spanner, if necessary. Maximum allowed torques are mentioned in Tab. 3. The screen of screened connecting leads should be earthed. The second (left side) outlet hole is intended for connection of capacitive voltage indicator cable. The hole has a diameter for M12 bushing and is plugged from production.

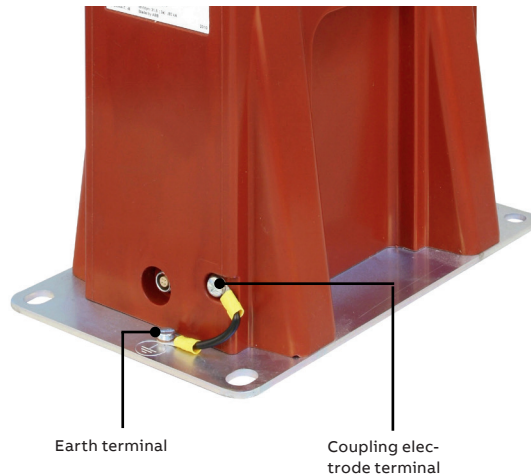

—
10

The coupling electrode terminal must be earthed with a separate wire whenever it is not used (see Fig. 10.)!

Voltage indicator

A voltage indicator is not part of the delivery.

5. Instructions for Use

The combined voltage and current sensors are used:

- To convert large voltages and currents in the primary circuit of the network to the appropriate signal for the secondary equipment (e.g. IEDs)
- To insulate primary and secondary circuits from each other
- To protect secondary equipments from harmful effects or large voltages and currents during abnormal situations in the network

The use of a sensor for other purposes than those described above is forbidden.

Routine test report

- Verification of terminal marking
- Power-frequency withstand test on the primary circuit
- Partial discharge measurement
- Power-frequency withstand test on secondary circuits (see Note 1)
- Test for accuracy
- Measurement of a capacitive voltage indicator

Note:

- No power-frequency withstand test on secondary terminals (connector) of the voltage sensor is allowed.**

The maximum power-frequency test voltage for current sensor secondary terminals (connector) is 0.5 kV. Test voltage can be connected between short-circuits signal wires and the earth.

6. Instructions for Maintenance

Excessive dust or other kinds of pollution must be brushed off the sensor. Polluted sensors can be cleaned with spirit, petrol or toluene. Traces of arcs and minor surface damages can be easily removed with sandpaper after which the surface is to be treated by applying a thin layer of silicone paste on it. Instructions for repairing bigger surface damage must be requested from the manufacturer.

Otherwise, during normal use the sensors do not need any additional maintenance.

7. Transport and Storage

The permissible transport and storage temperature for sensors is from -40 to +80°C. During transport and storage the sensors must be protected against direct sunshine. The sensors are delivered packed into wooden boxes or fastened to transport pallets.

8. Recommended Procedure for Disposal of the Sensor


The sensor does not contain environmentally hazardous materials. For disposal of the product after it has been taken out of use, local regulations, if there are any, should be followed.

Dimensional Drawing

KEVCD 12_

KEVCD 17.5_

Drawing No.: 1VL5300733R0101

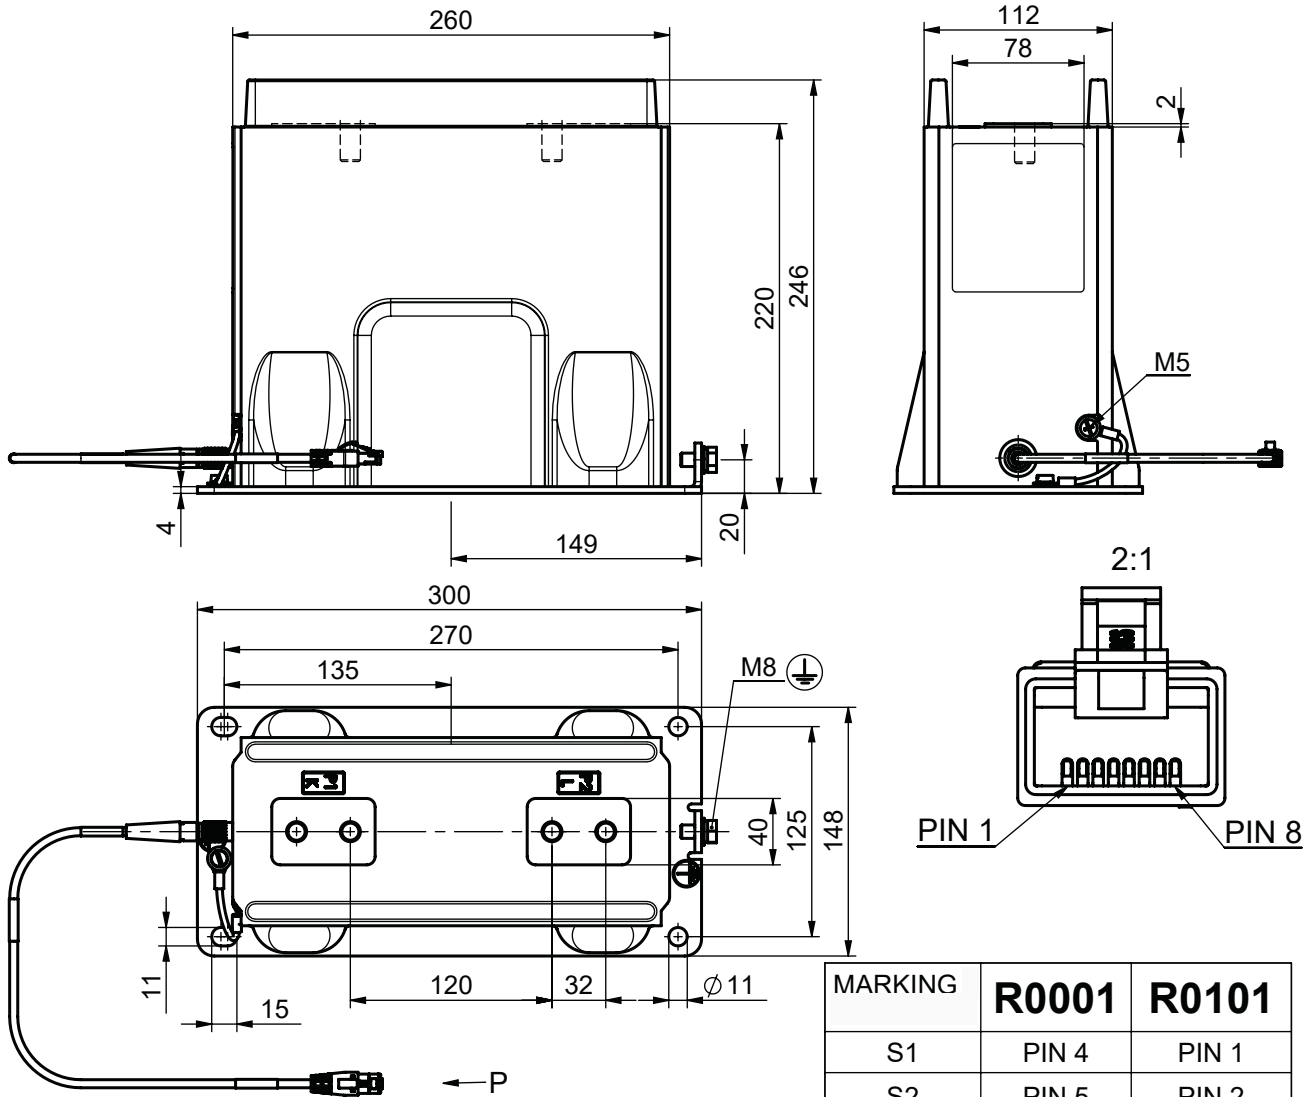


MARKING	R0001	R0101
S1	PIN 4	PIN 1
S2	PIN 5	PIN 2
a	PIN 7	
n	PIN 8	

ONLY FOR TYPE AE

Dimensional Drawing
KEVCD 24_

Drawing No.: 1VL5300734R0101

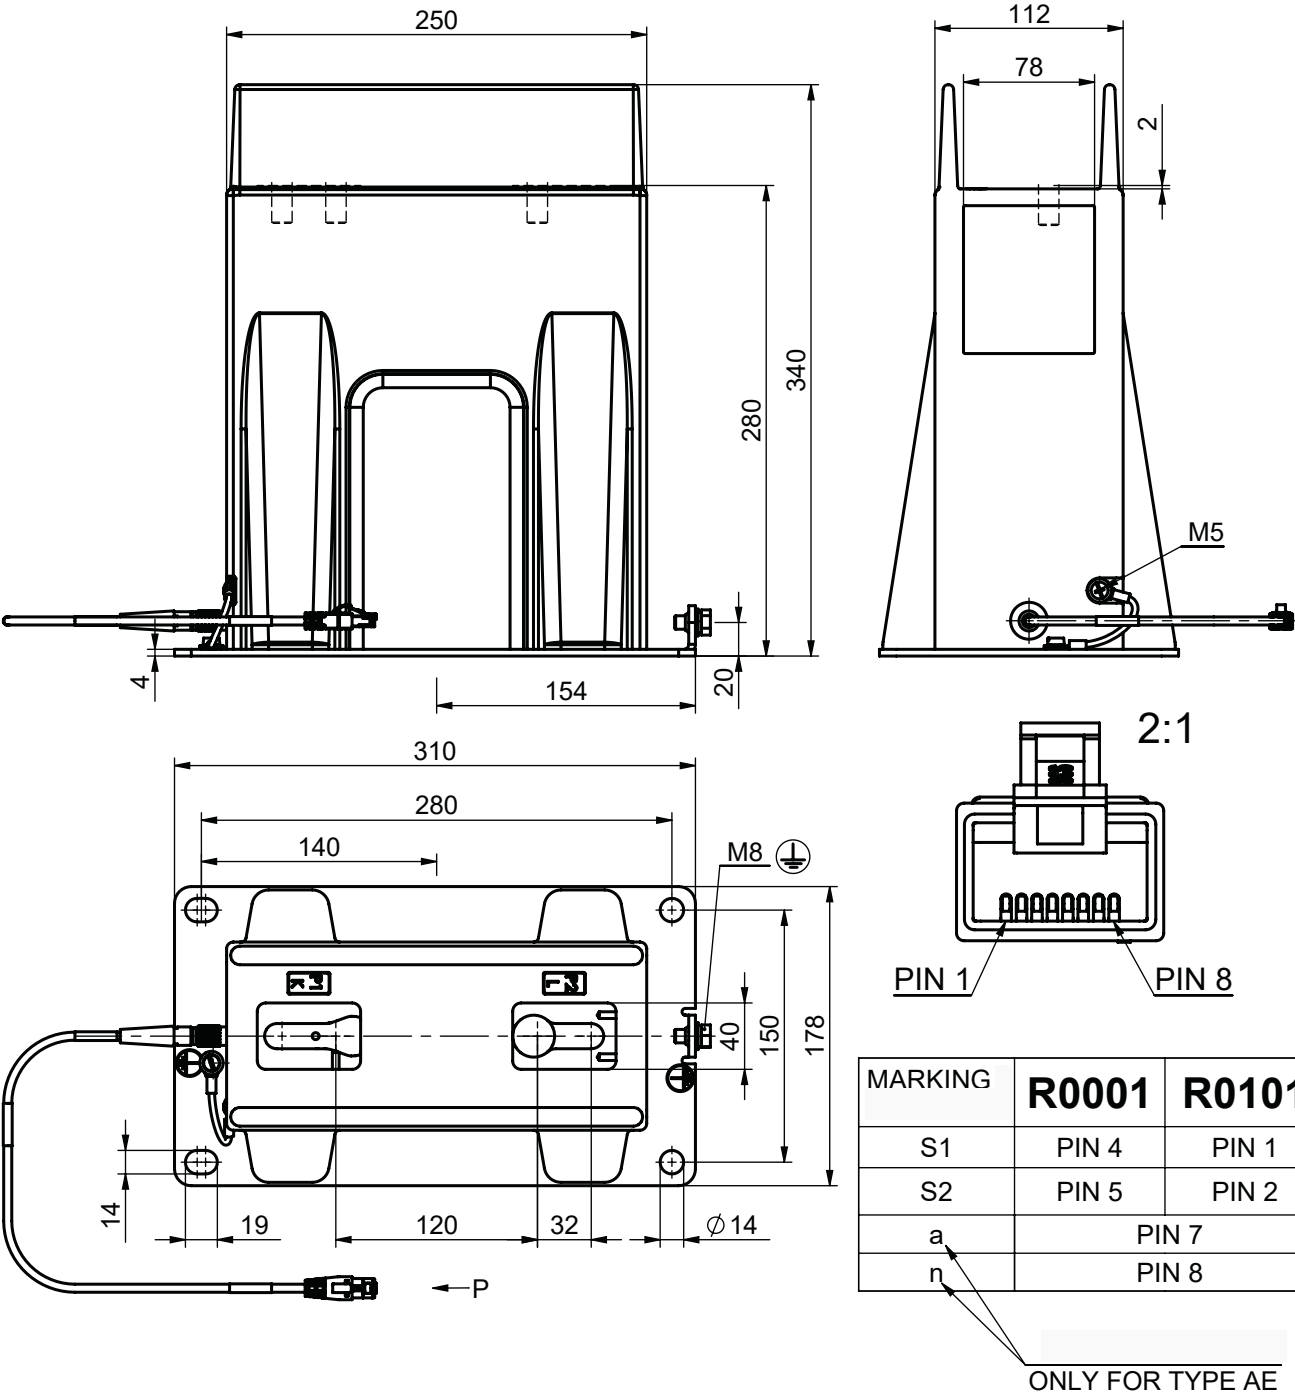



CONTACT US

ABB s.r.o.

ELDS Brno

Videnska 117, 619 00 Brno,
Czech Republic

Tel.: +420 547 152 021

+420 547 152 854

Fax: +420 547 152 626

E-mail: kontakt@cz.abb.com

NOTE

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents - in whole or in parts - is forbidden without prior written consent of ABB.

Copyright© 2024 ABB
All rights reserved