

UniSec DY800 in accordance with Enel specifications

Installation, service and maintenance instructions for 24 kV prefabricated assemblies with arc-proof metal enclosures and multi-function apparatus

For your safety!	3
1. Packing and transport	4
2. Checking on receipt	5
3. Storage	6
4. Handling	7
5. Description	8
5.1 Rating and overall dimensions	8
5.2 Construction characteristics	10
5.3 Reference Standards	11
5.4 Interlocks	11
6. Instructions for the operating sequence of all UniSec DY800 cubicles	13
7. Voltage and phase correspondence indicator	14
7.1 Voltage indicator	14
7.2 Phase correspondence check	14
8. Installation	15
8.1 General information	15
8.2 Normal installation conditions	15
8.3 Installation room	15
8.4 Fumes overpressure exhaust stack	17
8.5 Foundations and fixing bed	18
8.6 Joining and fastening the cubicles	18
8.7 Connections	21
9. Cable tests	23
10. Putting into service	24
11. Routine inspections	26
11.1 General information	26
11.2 Inspection schedule	26



For your safety!

- Make sure that the installation room (spaces, divisions and ambient) is suitable for the electrical apparatus.
- Check that all the installation, putting into service and maintenance operations are carried out by qualified personnel with suitable knowledge of the apparatus.
- Make sure that all the installation, service and maintenance operations comply with the standards and laws so as to ensure that the installations are constructed in accordance with the rules of good workmanship and safety in the work place. The personnel who access the switchgear must possess PES or PEI qualification in accordance with IEC EN50110 standards.
- Strictly comply with the indications in this instruction manual.
- Check that the rated performance of the apparatus is not exceeded during service.
- Pay special attention to the notes indicated in the manual by the following symbol:



- Check that the personnel operating the apparatus have this instruction manual to hand as well as the necessary information for correct intervention.

Responsible behaviour safeguards your own and others' safety! Please consult us if further details if required.

Foreword

The instructions in this manual refer to UniSec standardized MV switchgear.

Please read the manual carefully to ensure that the product is used correctly.

Besides this manual, it is always necessary to consult the latest technical documentation (electric circuit and wiring diagrams, tables with overall dimensions, foundation project, etc.), especially regarding any variants requested in relation to the standard configurations.

Only use original spare parts for maintenance operations.

1. Packing and transport



Strictly comply with the pictograms and instructions on the packs.

The cubicles are packed in accordance with the instructions in technical specification Enel DY 1135.

Each cubicle is protected by a plastic cover to prevent water from infiltrating if it rains when the loading and unloading operations are performed and to keep the dust off during storage.

The cubicles are placed on wooden pallets and fixed in place with four bolts, one per corner.

The loading platform of the vehicle that transports the cubicles must be no more than 1.5 m from the ground so that the overall height is 4 m maximum.

The loading platform must have a non-slip surface with a high coefficient of friction.

The assemblies must be arranged cross-wise and back to back on the platform with suitable material in between them so as to prevent them from touching and pressing against each other.

Frame members must be arranged on the platform so as to space out the units and prevent them from shifting in either the longitudinal or cross-wise directions.

The units must be fastened to the structure of the vehicle with ropes so as to avoid damage and prevent them from tipping over when the transport vehicle is driven round bends or is sharply braked.

The vehicle must also be covered with a tarpaulin.

2. Checking on receipt

The cubicles must be unloaded from the transport vehicle with the utmost care, as described in chap. 4.


Upon receipt, immediately check the condition of the pack, that the apparatus is undamaged and that the data on the nameplate (see figure) correspond to the information in the order confirmation and shipping note.

If damage or discrepancies are discovered, immediately inform ABB (either directly, or through your representative or supplier) and the haulage contractor that delivered the goods.

The cubicles are supplied solely with the accessories specified at the time of order and validated in the order confirmation.

The following items are to be found inside the cubicles:

- this instruction manual;
- a packet containing screws, nuts and busbar washers, etc. for joining the cubicles;
- the shipping documents.

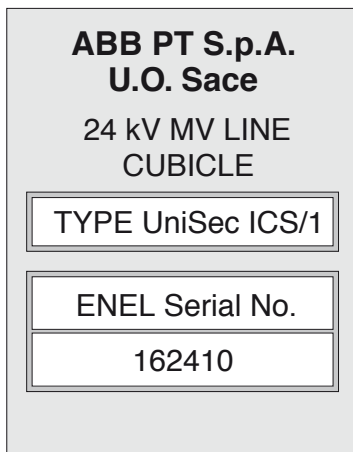

Example of the name plate affixed outside the pack

3. Storage

UniSec switchgear must be stored in a dry, dust-free place with a non-corrosive atmosphere at a temperature between $-25\text{ }^{\circ}\text{C}$ and $+70\text{ }^{\circ}\text{C}$, with 95% relative humidity or less and without condensation.

Please consult us if different requirements are involved.

4. Handling




- Make sure that the insulating parts of the apparatus are not damaged when the cubicles are handled.
- Before proceeding with any operation, always make sure that the springs of the operating mechanism are not loaded and that the apparatus is in the open position.
- Keep the cubicles in the vertical position when using a lift truck for handling purposes.


UniSec switchgear is normally placed on a wooden pallet and fastened with four bolts, one per corner.

For handling purposes, the switchgear can be lifted by a crane using ropes with snap hooks conforming to the safety standards, inserted through the eyebolts on the top of the units, or with a fork lift truck. In this case, the forks must be inserted at the sides where the cubicle is joined, for improved stability during the handling operations.

Lifting with a crane

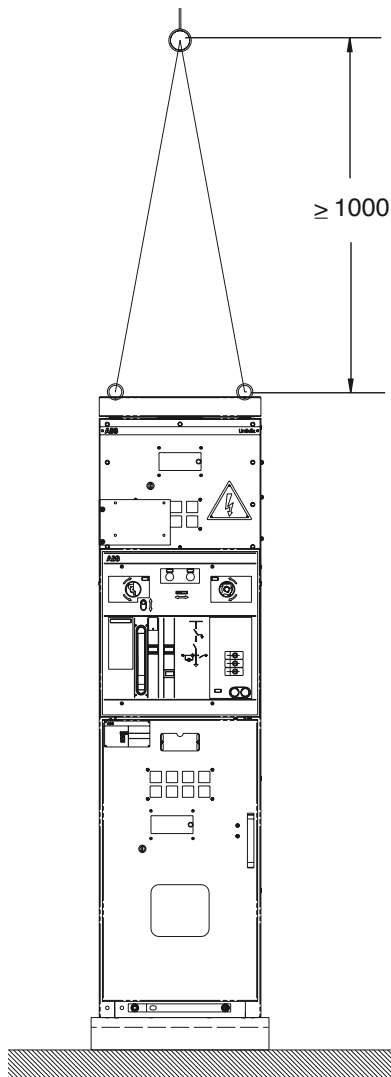

Handling with a lift truck

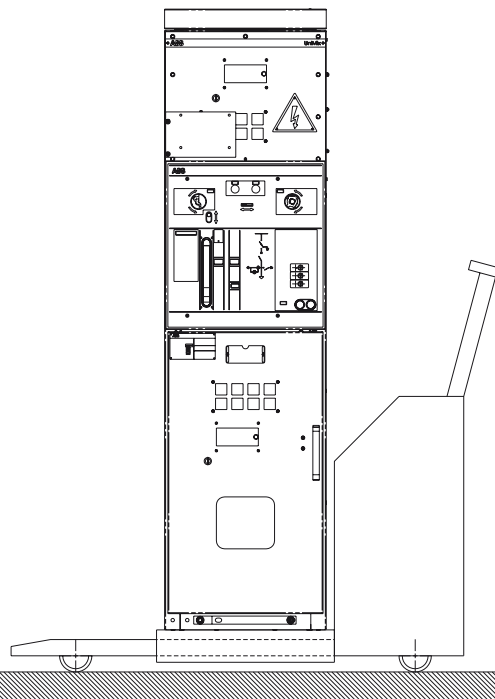

5. Description

5.1 Rating and overall dimensions



UniSec switchgear must be stored in a dry, dust-free place with a non-corrosive atmosphere at a temperature between -25 °C and +70 °C, with 95% relative humidity or less and

without condensation.

Please consult us if different requirements are involved.

Cubicle	
Maximum insulation voltage	24 kV
Rated insulation level, withstand voltage:	
with lightning impulse to earth and and line-to-line	125 kV
with power-frequency to earth and and line-to-line	50 kV
with power-frequency between the open contacts of the disconnecter	60 kV
Rated frequency	50 Hz
Continuous duty rated current for the busbars	630 A
Admissible short-time withstand current for the busbars and branch lines	16 kA
Admissible short-time peak current value for the busbars and branch lines	40 kA
Rated short-circuit time	1 s
External protection class	IP3X
Internal arc withstand value:	
IAC classification	AF DY800/116/316 – AFL DY800/216
test voltage	24 kV
test current	16 kA
test duration	0.5 s
Multi-function apparatus type HySec – Integrated circuit-breaker	
Rated voltage	24 kV
Rated insulation level, withstand voltage	
Rated lightning impulse withstand voltage	125 kV
Rated frequency	50 Hz
Rated thermal current	630 A
Admissible rated short-time withstand current	16 kA
Electrical life class (ref. IEC 62271-100)	E2
Admissible short-time peak current value	40 kA
Rated short-circuit time	1 s
Rated short-circuit breaking capacity	16 kA
Rated operating sequence	O - 0.3 sec - CO - 30 sec - CO
Mechanical life	10000 operations Class M2
Rated breaking current values:	
circuit mainly active	630 A
vacuum transformer	6.3 A
no-load line	10 A
no-load cable	16 A
capacitor bank	400 A class C2
Integrated three-position disconnecter – Line Side	
Rated insulation level, withstand voltage	
Rated lightning impulse withstand voltage	125 kV
with impulse between the open contacts of the disconnecter	145 kV
Rated current	630 A
Admissible rated short-time withstand current	16 kA
Rated short-time peak current	16 kA
Admissible rated short-circuit time	1 s
Mechanical life	1000 operations Class M0
Electrical life class (ref. IEC 62271-102)	E0
Integrated three-position disconnecter – Earth Side	
Admissible rated short-time withstand current	16 kA
Rated short-time peak current	40 kA
Rated short-circuit making capacity	40 kA
Admissible rated short-circuit time	1 s
Mechanical life	1000 operations Class M0
Electrical life class (ref. IEC 62271-102)	E1

Overall dimensions

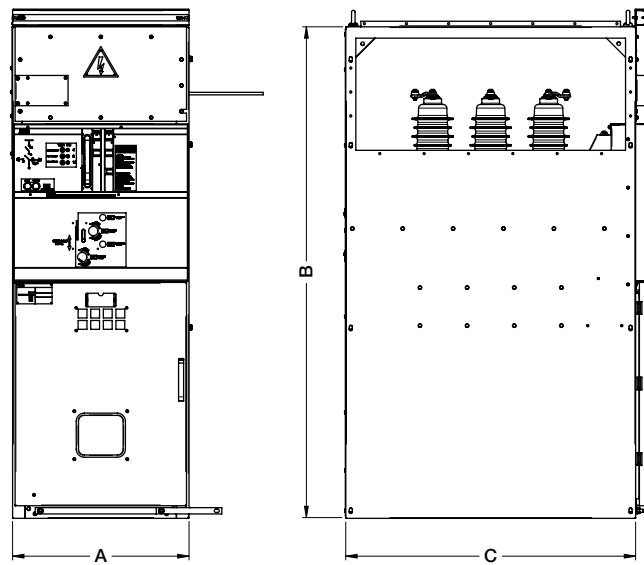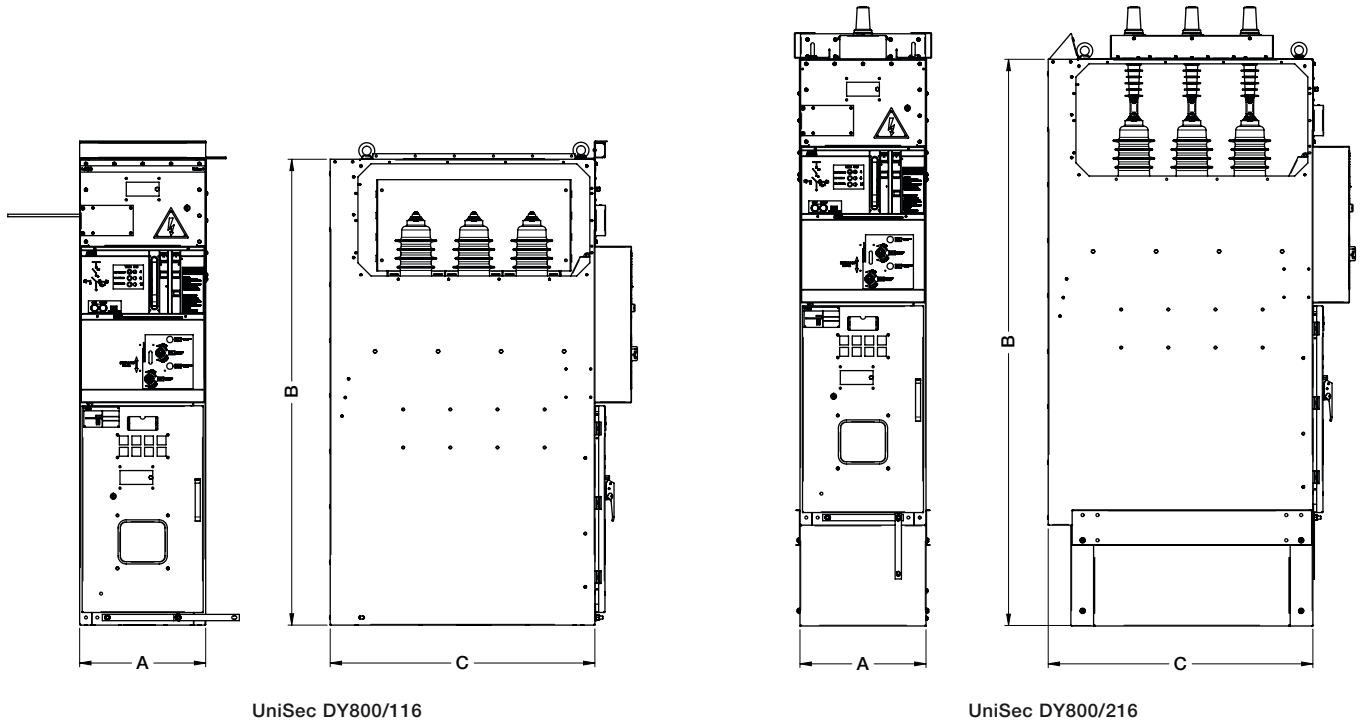

	Dimensions (mm)				Weights (Kg)
	A	B	C	D	
UniSec DY800/116	500	1850	1050	145	330
UniSec DY800/216	500	2250	1050	145	380
UniSec DY800/316	700	1950	1150	50	375

5.2 Construction characteristics

5.2.1 Cubicles

UniSec DY800 switchgear is internal arc-proof and suitable for secondary distribution requirements.

UniSec DY800 switchgear uses a multi-function apparatus with vacuum circuit-breaker and SF₆ insulated 3-position disconnector (line, isolated and earth).

The new integrated apparatus is made of two materials: the top part, where the vacuum interrupters are housed, is made of epoxy resin so as to guarantee the required degree of insulation while the bottom part is in steel, thereby providing metallic segregation and earthing between the busbar compartment and cable compartment. This guarantees maximum safety for the operators when work is performed in the line compartment, even when the main busbars are energized.

Thanks to this technical solution, panel classification is LSC2A-PM, in accordance with IEC 62271-200.


All the live parts of the integrated apparatus are SF₆ insulated and this guarantees a higher level of protection over time against strongly aggressive outdoor environments.

The new technology featured by the integrated apparatus possesses the following advantages:

- it is the only disconnector apparatus with 3 positions and circuit-breaker
- small size
- low amount of SF₆ used for insulation
- ease of use.

All the cubicles are internal arc-proof in accordance with the provisions established by standard IEC 62271-200. The IAC classification of the various types, restricted to authorized persons alone (class A), complies with the 5 criteria established by the standard. The 3 types of UniSec DY800 cubicles are classified in the following way:

- AF on the front side for UniSec units DY800/1 and DY800/3
- AFL on the front side and on the two sides for UniSec DY800/2 units.

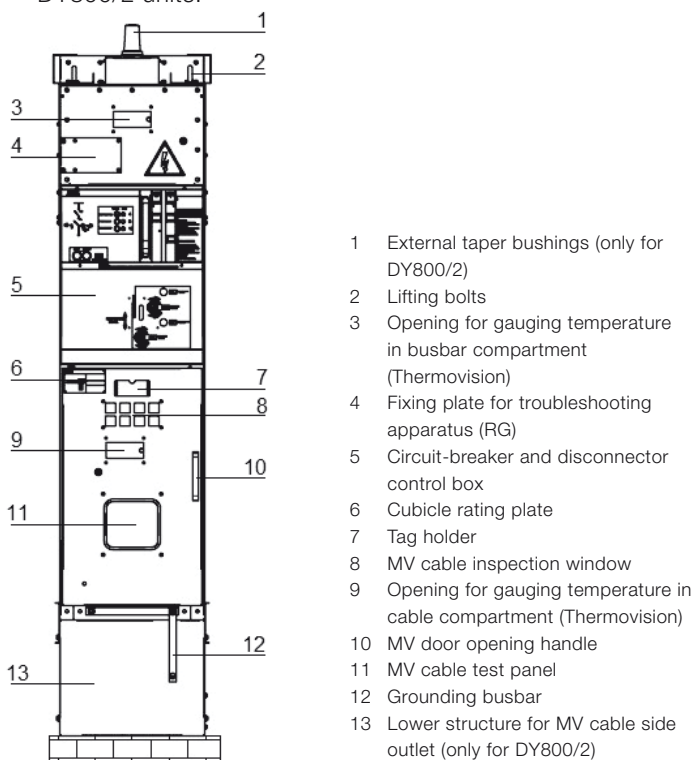

The internal arc-proof characteristic is guaranteed with the panels assembled, the doors closed and the screws tightened

5.2.2 Protection classes


UniSec switchgear is generally supplied with the following protection classes:

- IP2X protection class inside the switchgear with the door open
- IP3X protection class for the external enclosure.

5.2.3 Main components

All three UniSec DY800 cubicles use the same, previously described, multi-function apparatus comprising the following functional components:

5.2.3.1 3-position disconnector (line, isolated, earth)

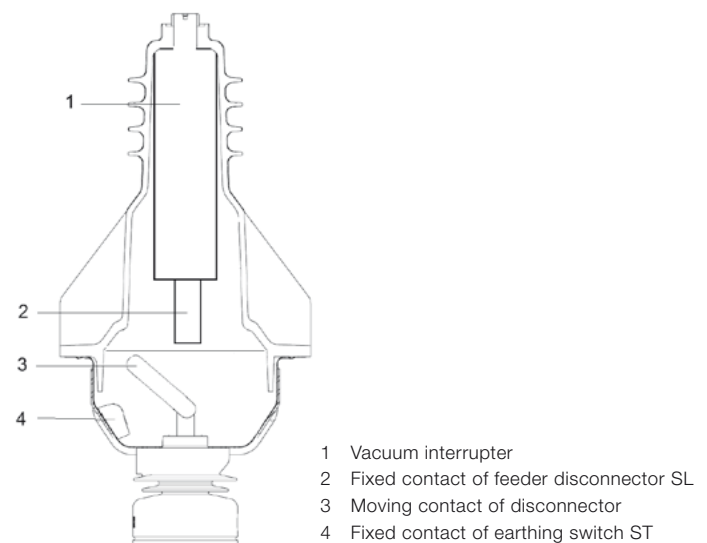

- 1 Vacuum interrupter
- 2 Fixed contact of feeder disconnector SL
- 3 Moving contact of disconnector
- 4 Fixed contact of earthing switch ST

It is an SF₆ insulated disconnector; in the open position, the moving contacts guarantee that the isolated position is maintained.

In the line closed position, the moving contacts fit into the fixed upper contacts installed in the lower part of the circuit-breaker's vacuum interrupter.

In the closed earthed position, the moving contacts fit into the fixed lower contacts in the metal structure.

5.2.4 Characteristic of the 3-position disconnector operating mechanism

The disconnector is equipped with a three-position stored energy operating mechanism operated by a dedicated lever.

5.2.5 Characteristics of the circuit-breaker operating mechanism

The circuit-breaker is equipped with a three-pole operating mechanism with the following circuits and devices:


- a three-pole voltage start-up closing circuit;
- a three-pole voltage start-up opening circuit;
- an anti-pumping device to prevent further closings other than the first when opening occurs during the initial closing request. This device must not be deactivated by functional inhibitions.

Operating energy storage occurs in two ways:

- 1) by means of a DC-powered electric motor with the following characteristics:
 - Rated auxiliary power supply voltage: 24 V DC
 - Maximum power input (excluding inrush) 300 W
 - Spring reloading time max 30 s
- 2) by means of a mechanical device operated in the manual mode by the operator.

The multi-function apparatus has a mechanical lock that prevents the three-position disconnector from moving when the circuit-breaker is closed.

With the circuit-breaker closed and with the electric circuit of the operating power restoration motor disconnected, the energy stored by the system described above must be able to allow the circuit-breaker to accomplish the operating sequence: O - 0.3 sec - CO.

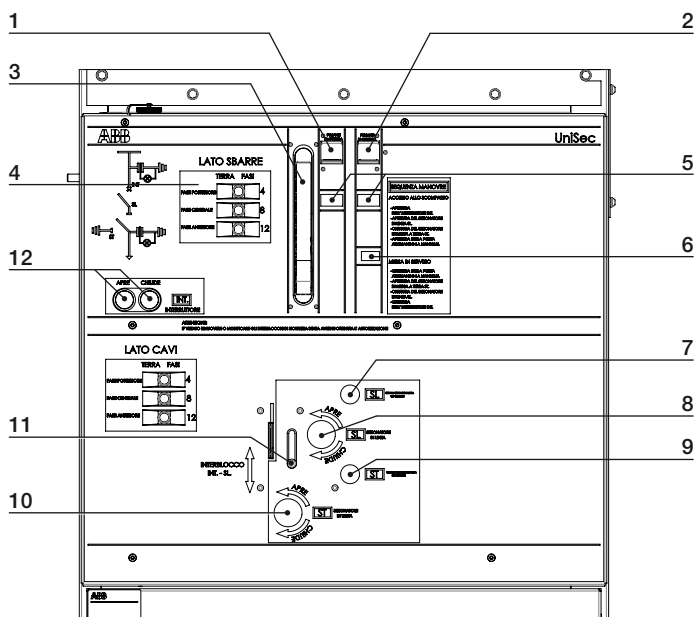

- 1 Mechanical opening push-button
- 2 Mechanical closing push-button
- 3 Circuit-breaker spring loading lever
- 4 Voltage detectors
- 5 Circuit-breaker state
- 6 Circuit-breaker operation counter
- 7 SL position state
- 8 SL switching seat
- 9 ST position state
- 10 ST switching seat
- 11 Circuit-breaker - Disconnector interlock
- 12 Electrical push-buttons of circuit-breaker

The connections to the remote control extension unit, the type of connector and the pinout conform to DY1050 specifications. The opening and closing remote controls and the remote state signals refer to the circuit-breaker.

The opening (green) and closing (red) push-buttons are installed on the front of the cubicle, where the state indicators of the circuit-breaker are also displayed.

The opening and closing push-buttons are protected against being accidentally pressed and are equipped with labels indicating their relative function.

The rapid auto-reclosing cycle O - 0.3 - CO is not required in the absence of voltage.

5.3 Reference Standards

DY800	Technical Specification Enel and indicated references
IEC EN 60447	Human-Machine Interface. Operating principles
IEC EN 60529	Protection class of enclosures. Classification
IEC EN 62271-200	Metal-enclosed factory-built assembly for voltage values ranging from 1 to 52 kV
IEC EN 62271-100	Alternating current circuit-breakers with voltage values from 1 kV to 52 kV
IEC EN 62271-102	Disconnectors and earthing switches for voltage values exceeding 1000 V
IEC EN 62271-1	Common specifications for high voltage switchgear and controlgear

5.4 Interlocks



- The operations can be performed by applying a moment of force (< 200 Nm). If the operations are obstructed, do not force the mechanical interlocks and check that the operating sequence is correct.
- The locks are sized to withstand a maximum 400 Nm operating moment of force without permanent deformation or breakage occurring.

Mechanical and electrical locks are used in the cubicles.

The mechanical locks include:

- forcing locks
- inhibiting locks
- safety locks (padlocks/keys).

The electric locks feature micro-switches that either make or break an electrical circuit.

The interlocks on UniSec DY800 units perform the following functions:

- 1) It must only be possible to operate feeder disconnector SL and earthing switch ST with the circuit-breaker in the open position. This condition is achieved with an interlock of the mechanical type.
- 2) Earthing switch ST must only be able to close with feeder disconnector SL in the open position and the moving contacts locked. This condition is achieved with an interlock of the mechanical type.
- 3) It must only be possible to electrically operate the circuit-breaker when the lever is not inserted into any lever seat and in the presence of the following conditions:
 - feeder disconnector SL in the closed position and earthing switch ST in the open position, both with moving contacts locked at end stop
 - feeder disconnector SL in the open position and earthing switch ST in the closed position, both with moving contacts locked at end stop. This interlock is created electrically by cutting off the electrical controls of circuit-breaker I.

- 4) It must only be possible to open the cubicle door in conditions of safety, i.e. with feeder disconnecter SL open and earthing switch ST closed. This condition is obtained with a padlockable interlock of the mechanical type.

5.4.1 Interlock between feeder disconnecter SL and earthing switch ST

This is a mechanical lock created by the reciprocal rotation of the two operating shafts, which prevents the operating lever from being inserted into the corresponding lever seat if the conditions are not correct.

Earthing switch ST can only be closed if feeder disconnecter SL is open.

Feeder disconnecter SL can only be closed if earthing switch ST is open.

5.4.2 Interlocks between the door and earthing switch ST

This is a mechanical lock, one of the forcing type that prevents the door from opening if the earthing switch is open, and the other of the inhibiting type that prevents the operating lever from being inserted into the lever seat of the earthing switch, closed when the door is open.

Inversely (inhibiting lock), the earthing switch cannot be opened unless the door is closed and locked with the handle.

5.4.3 Interlock between the lever seat of feeder disconnecter SL and the opening and closing controls of circuit-breaker I

This is an electrical lock that inhibits the electrical controls of circuit-breaker I when the operating lever is in the lever seat of feeder disconnecter SL. Insertion of the operating lever acts on a micro-switch which cuts off the power supplied to the control circuits of circuit-breaker I.

5.4.4 Interlock between the lever seat of earthing switch ST and the opening and closing controls of circuit-breaker I

This is an electrical lock that inhibits the electrical controls of circuit-breaker I when the operating lever is in the lever seat of earthing switch ST.

Insertion of the operating lever acts on a micro-switch which cuts off the power supplied to the control circuits of circuit-breaker I.

5.4.5 Interlock between feeder disconnecter SL and circuit-breaker I

This is a mechanical lock of the inhibiting type that prevents the operating lever of feeder disconnecter SL from being inserted into its seat if circuit-breaker I is closed.

5.4.6 Electrical interlock between feeder disconnecter SL and circuit-breaker I

This is an electric lock that prevents circuit-breaker I from closing when feeder disconnecter SL is in the open position (the circuit-breaker can always be closed in the mechanical mode). The position of the shaft of feeder disconnecter SL acts on a micro-switch which cuts off the power supplied to the closing coil of the circuit-breaker, thereby preventing it from functioning.

5.4.7 Electrical interlock between earthing switch ST and circuit-breaker I

This is an electric lock that prevents circuit-breaker I from closing when earthing switch ST is in the open position (the circuit-breaker can always be closed in the mechanical mode).

The position of the shaft of earthing switch ST acts on a micro-switch which cuts off the power supplied to the closing coil of the circuit-breaker, thereby preventing it from functioning.

5.4.8 Door lock for thermovision

This is a key lock which is not part of the supply and which only allows authorized persons to open the door.

5.4.9 Padlock on the lever seat of earthing switch ST


This system allows a padlock to be fitted onto the operating shaft of earthing switch ST. When the padlock is in place, the operating lever cannot fit into the seat and earthing switch ST cannot be opened.

6. Instructions for the operating sequence of all UniSec DY800 cubicles



- Only use the supplied panic operating lever.
- Once started, all the operations must be completed and the lever removed from its operating seat.
- The operations must be performed by applying <math><200\text{ Nm}</math> operating moment of force. If they are obstructed, do not force the mechanical interlocks and check that the operating sequence is correct.
- The locks are sized to withstand a maximum 400 Nm operating moment of force without permanent deformation or breakage occurring.
- Before opening the door, always check the position of feeder disconnecter SL and earthing switch ST by means of the mechanical signals and through the window.
- The procedure for accessing the busbar compartment is at the charge of those who run the installation because it depends on the relative circuit diagram.

- Check to make sure that the indicator (5) confirms that opening has occurred by displaying the letter O in black on a white background in the relative window.
- 2) Open feeder disconnecter SL
 - Move the interlock (11) between feeder disconnecter SL and circuit-breaker I in the upward direction.
 - Fully insert the operating lever into the seat (8) of feeder disconnecter SL.
 - Turn the operating lever counter-clockwise until the operation has been completed.
 - Remove the operating lever.
 - Check to make sure that the indicator (7) confirms that opening has occurred by displaying the letter A in black on a white background and check that the voltage signalling lamps are off.
 - 3) Close earthing switch ST
 - Move the interlock (11) between the disconnecter and circuit-breaker I in the upward direction. Fully insert the operating lever into its seat (10) in earthing switch ST.
 - Turn the operating lever clockwise until the operation has been completed.
 - Remove the operating lever.
 - Check to make sure that the indicator (9) confirms that closing has occurred by displaying the letter C in black on a yellow background.
 - 4) Open the door by pulling the handle up.

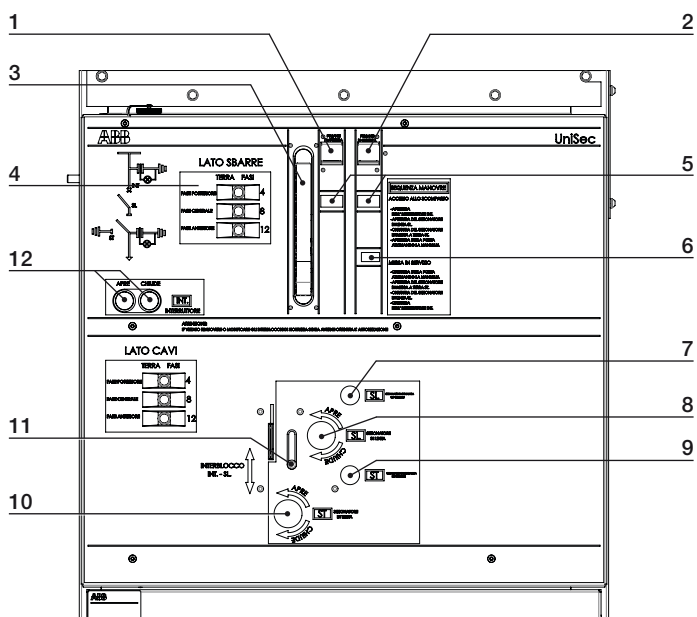

- | | |
|--|---|
| 1 Mechanical opening push-button | 7 SL position state |
| 2 Mechanical closing push-button | 8 SL switching seat |
| 3 Circuit-breaker spring loading lever | 9 ST position state |
| 4 Voltage detectors | 10 ST switching seat |
| 5 Circuit-breaker state | 11 Circuit-breaker - Disconnecter interlock |
| 6 Circuit-breaker operation counter | 12 Electrical push-buttons of circuit-breaker |

Access to the cubicle

- 1) Open circuit-breaker I
 - Press green opening push-button (1) or press green opening push-button (12) (electrical).

Putting into service

- 1) Shut the door by pushing the handle down.
- 2) Open earthing switch ST
 - Move the interlock (11) between the disconnecter and circuit-breaker I in the upward direction and fully insert the operating lever into its seat (10) in earthing switch ST.
 - Turn the operating lever counter-clockwise until the operation has been completed.
 - Remove the operating lever.
 - Check to make sure that the indicator (9) confirms that opening has occurred by displaying the letter A in black on a grey background.
- 3) Close feeder disconnecter SL
 - Move the interlock (11) between the disconnecter and circuit-breaker I in the upward direction.
 - Fully insert the operating lever into the seat (8) of feeder disconnecter SL.
 - Turn the operating lever clockwise until the operation has been completed.
 - Remove the operating lever.
 - Check to make sure that the indicator (7) confirms that closing has occurred by displaying the letter C in black on a red background.
- 4) Close circuit-breaker I
 - Press red closing push-button (2) or press red closing push-button (12) (electrical).
 - Check to make sure that the indicator (5) confirms that closing has occurred by displaying the letter I in black on a white background in the relative window.

7. Voltage and phase correspondence indicator

7.1 Voltage indicator

These devices conform to the indications in the Enel DY 811 and DY 1811 specifications. They are installed in UniSec DY800 cubicles and signal the presence-absence of voltage in the MV lines of secondary substations.

UniSec DY800 panels are equipped with a voltage indicator powered by a capacitive coupling situated in the lower insulator of the cable compartment. The device is indicated on the mimic plate as "CABLE SIDE". A voltage indicator powered by a capacitive insulator situated in the busbar compartment and indicated on the mimic plate as "BUSBAR SIDE" is also supplied.

The signals are displayed by three neon lamps (3) in the indicators (2).

Make sure that the cable compartment is not live and that the earthing switch is closed before accessing the base of the detector (1), where the shielded cables are connected.

The indicators (2) can be connected and disconnected in the base (1) when the cubicle is live.

Make sure that the enclosure of the indicator is earthed while the indicators are being connected and for as long as they remain in that position.





When the indicator is disconnected, a circuit-breaker per phase ensures that the source from the M.V. system is earthed.

Correspondence between the cubicle phases and the cells (5-6-7) in the base of the detector (1) is as follows:

- the bushing (5) of the upper lamp is connected to the rear capacitive post insulator, phase on the bottom of the cubicle;
- the bushing (6) of the central lamp is connected to the central capacitive post insulator, central phase of the cubicle;
- the bushing (7) of the lower lamp is connected to the front capacitive post insulator, phase on the door side of the cubicle.

7.2 Phase correspondence check

Consult the instruction manual supplied with the apparatus for a description of the operating method.

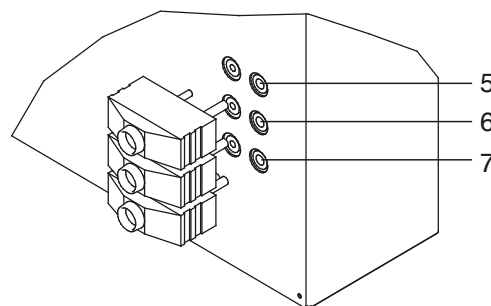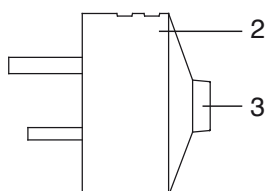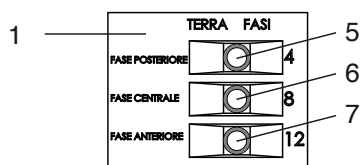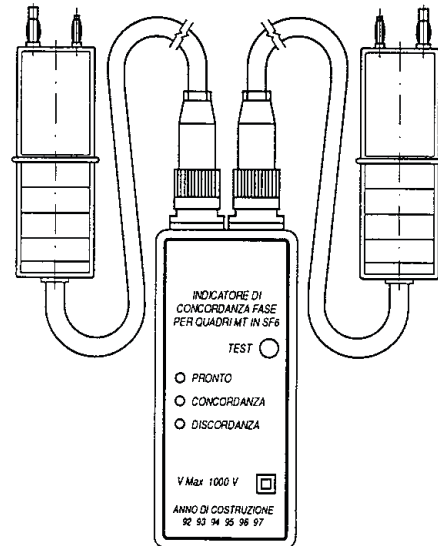

Indicator plug-in

8. Installation

8.1 General information



- Installation must be performed by our personnel or by the customer's personnel so long as they possess detailed knowledge about the apparatus.
- Correct installation is of prime importance. The manufacturer's instructions must be carefully studied and followed.
- It is good practice to wear gloves for handling the components during installation.
- Make sure that circuit-breaker I and feeder disconnecter ST are open and that the springs of the operating mechanism are unloaded before removing the cover of the this latter.
- Do not walk on the switchgear. Keep away from the area overlooking the fumes exhaust stacks and do not install apparatus in that area.

8.3 Installation room



- The zone where gas is exhausted from the room must be studied when the installation is designed.
- The utmost attention must be paid to the overpressure that may be created inside the substations.
- The area over the fumes exhaust stacks situated in the rear part of the cubicles must be free from all obstruction. Comply with the indicated distances from the ceiling and walls.

8.2 Normal installation conditions

Maximum ambient air temperature: +40 °C

Minimum ambient air temperature: -15 °C


Relative humidity: < 95% without condensation

Altitude: < 1000

Comply with the indications in the product standards if other installation conditions are involved. Please consult us for special installation requirements.

The areas through which power conductors or auxiliary circuit conductors are routed must be protected against the access of animals, as this could lead to damage or disservice.


DY800/116

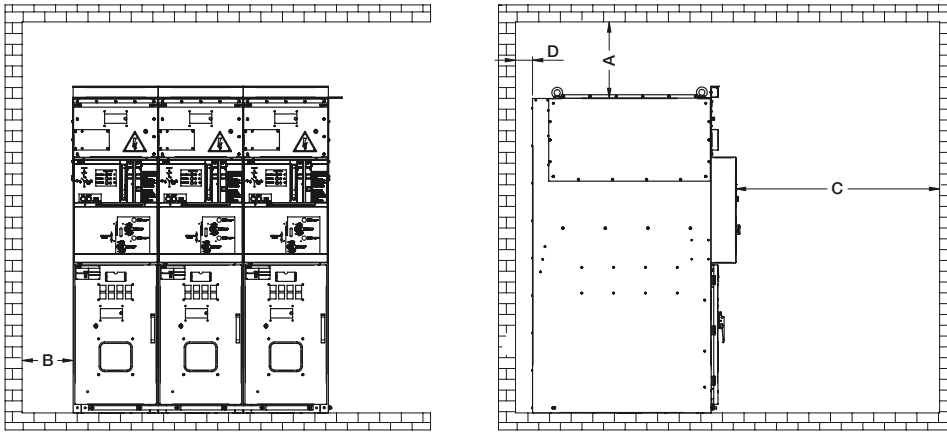

A [mm]	B [mm]	C [mm]	D [mm]
≥ 450	≤ 300	≥ 1200 ⁽¹⁾	≥ 100

⁽¹⁾ Dimension C represents the space required to withdraw the cubicle


DY800/216

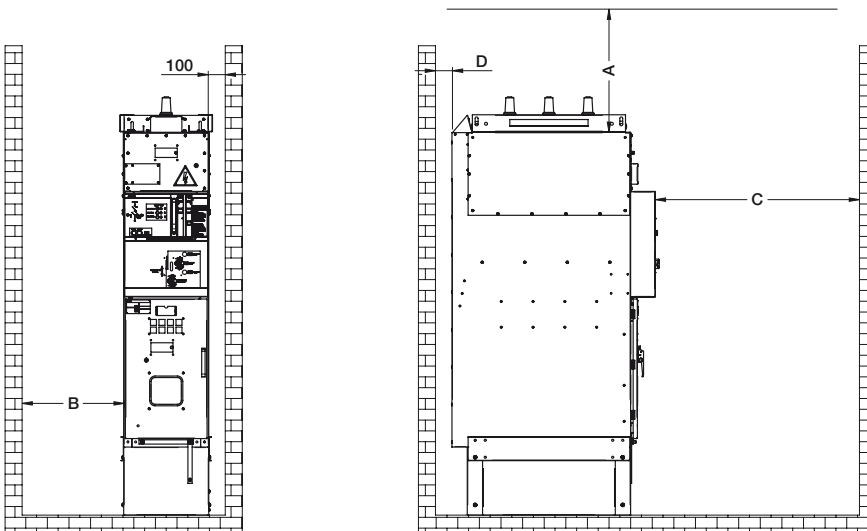

A [mm]	B [mm]	C [mm]	D [mm]
-	-	≥ 1200 ⁽¹⁾	≥ 100

⁽¹⁾ Dimension C represents the space required to withdraw the cubicle

DY800/316

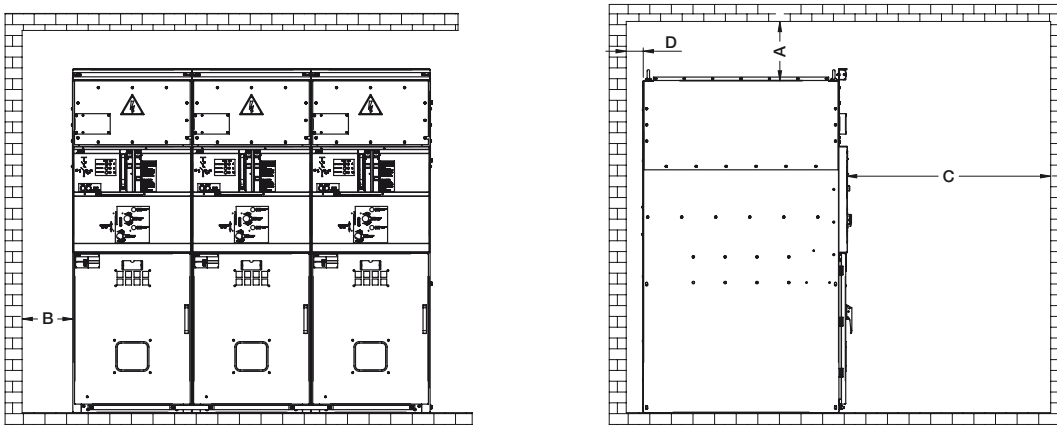

A [mm]	B [mm]	C [mm]	D [mm]
≥ 350	≤ 300	≥ 1200 ⁽¹⁾	≥ 100

⁽¹⁾ Dimension C represents the space required to withdraw the cubicle

8.4 Fumes overpressure exhaust stack



- Do not touch the exhaust vents of the fumes exhaust stack when the switchgear is live.
- Do not install apparatus in the area where fumes are exhausted.
- Do not walk on the switchgear and keep away from the area over it when the switchgear is live.

The possibility of an electric arc occurring inside the cubicle is very remote.

If it should occur, proceed as described below to eliminate the fumes:

UniSec DY800/116 and 216

Arc in the busbar duct

- open the flap (1) to allow the fumes to flow into the stack (2);
- the cable compartment flap (3) remains closed;
- fumes escape from the exhaust vent of the stack (4).

Arc in the cable compartment

- open the flap (3) to allow the fumes to flow into the stack (2);
- flap (1) remains closed;
- fumes escape from the exhaust vent of the stack (4).



UniSec DY800

Arc in the busbar duct

- open the flap (5) to allow the fumes to flow into the hollow space at the rear (6);
- flap (7) remains closed.

Arc in the cable zone

- open the flap (7) to allow the fumes to flow into the hollow space at the rear (6);
- flap (5) remains closed.

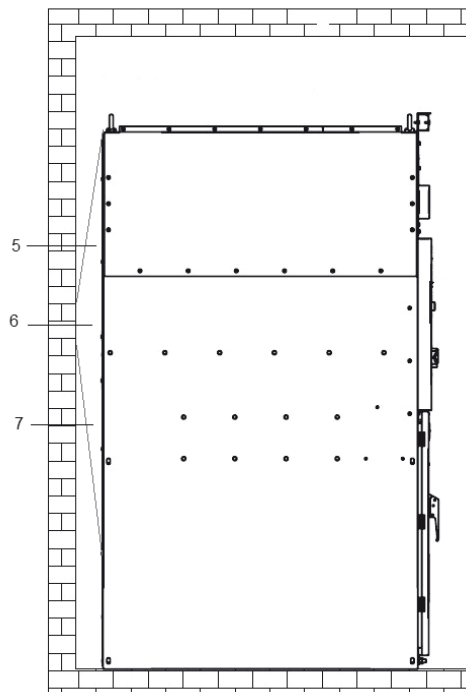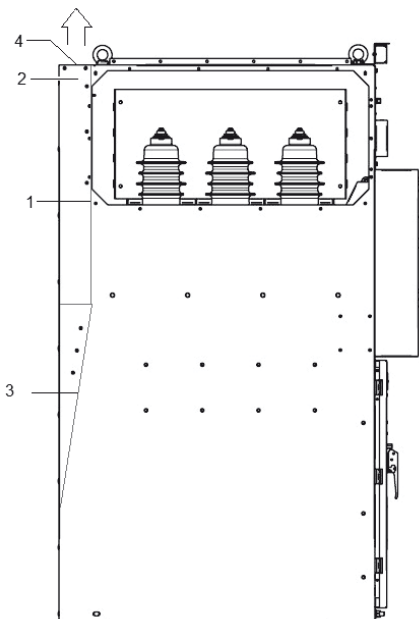

8.5 Foundations and fixing bed

The cubicles are normally pre-engineered for connection of the medium voltage circuit from the bottom.



The front part of the roof of UniSec cubicles has a duct for routing the auxiliary circuit cables.

Make the relative routing holes under each cubicle before they are installed. The foundation layout is shown in the figure.

The switchgear can be fastened straight to the floor by inserting expansion plugs into the fixing holes.

The fixing surface must be horizontal and well levelled, with 2 x 1000 flatness tolerance.

Holes in the floor for fixing the cubicles

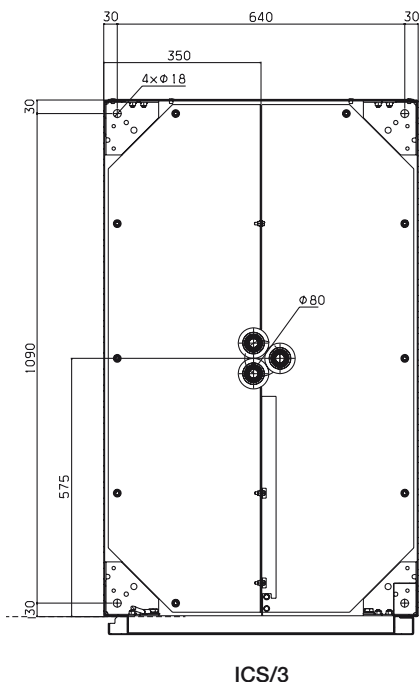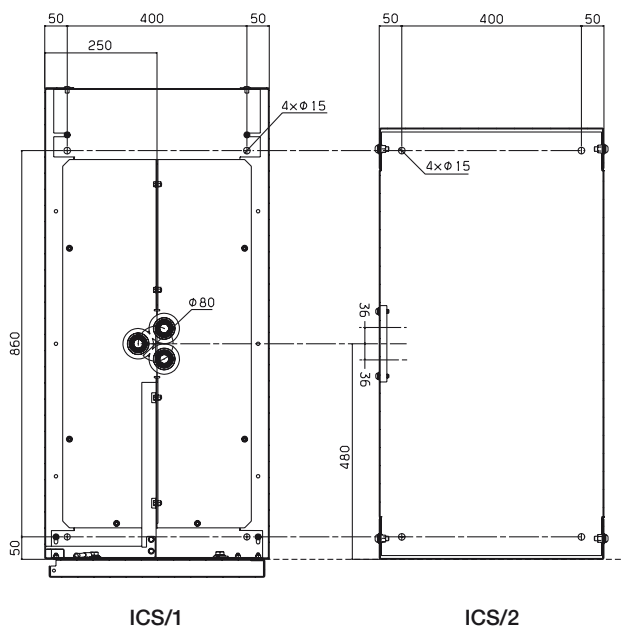

8.6 Joining and fastening the cubicles


Make sure that the floor is flat before joining the cubicles.

The cubicles must be joined in the following way:

- unscrew the screws (2) and eyebolts (3) from the roofs of the cubicles;
- position the first cubicle on a level with the holes in the floor;
- fit the fastening bolts into the floor and screw them in but without fully tightening them;
- move the second cubicle close to the first so that their sides touch each other;
- fit the M4 screws into the holes marked X and fully tighten the bolts in the adjacent cubicle;
- fit the fastening screw into the slot (1) and into the adjacent cubicle, then fully tighten the bolt;



Repeat these operations for the successive cubicles and after they have been joined together, fix the cubicles to the floor and fully tighten the screws.

Make sure that the sides of the cubicles are right against each other and that there are no gaps on the front towards the bus-bar compartment (5).

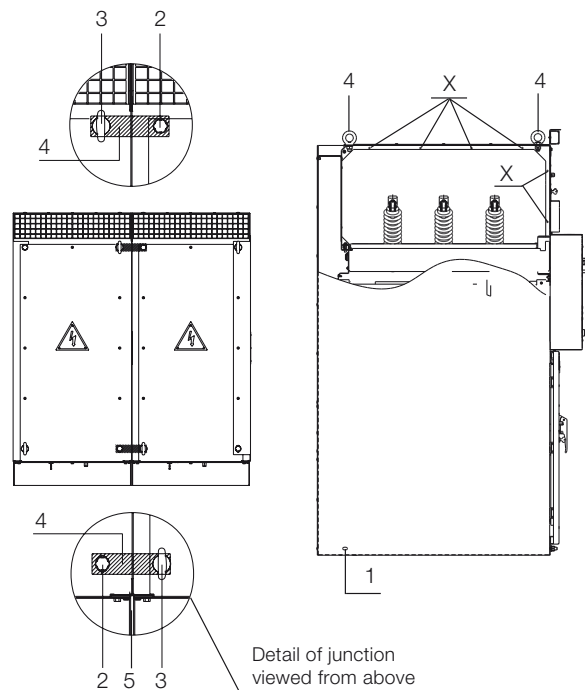

Front panel that closes the busbar compartment

To fasten the panels, fit all the screws marked X into the holes and fully tighten them.

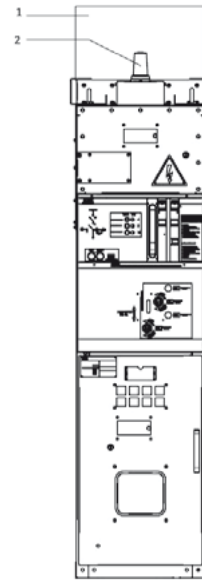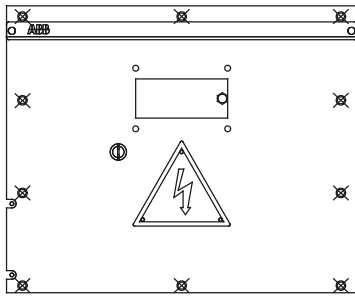



How to fasten DY800/216 cubicles

When the UniSec DY800/216 unit arrives, the base (1) is fixed to the roof in an overturned position. Comply with the following instructions to install the unit in a raised substation:

- unbolt the base (1) from the roof. Lift it with a crane using belts and, taking care to prevent the upper bushings (2) from being damaged, place it on the ground and turn it upside down;
- make sure that the floor of the raised substation is horizontal and well levelled with 2/1000 maximum flatness (2 mm with respect to a square meter);
- place the base in the substation 20 mm from the rh wall and 190 mm from the rear wall and mark the positions of the holes;
- drill the floor, insert 4 expansion plugs and fix the base in place. Make sure that the cable outlet (2) in the base is on the left;


If the unit must be positioned in the lh corner of the substation, turn the base through 180° and fix it at the same distances as the lh wall:

- remove the unit from the pallet and take it into the substation. Make sure that the upper bushings (3) are not damaged when the unit passes through the substation door and place it on top of the base (see detail A). Fasten it with the screws removed when the base was disassembled from the roof;
- set the bracket (4) (see detail B) back on the roof, on the right or left. Move it near to the wall and mark the positions of the holes. Drill the wall, insert 2 expansion plugs and fix the bracket against the wall. Lock the bracket in place by tightening the eyebolt and M16 screw;
- set the earthing busbar (5) in the vertical position and fix it to the base with the supplied M12 screw and washer. After having inserted the internal tapering terminals (6) into the upper bushings (3), the bracket holes can be used to lock the cables with straps or clamps before they curve upwards.

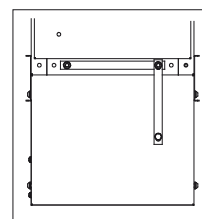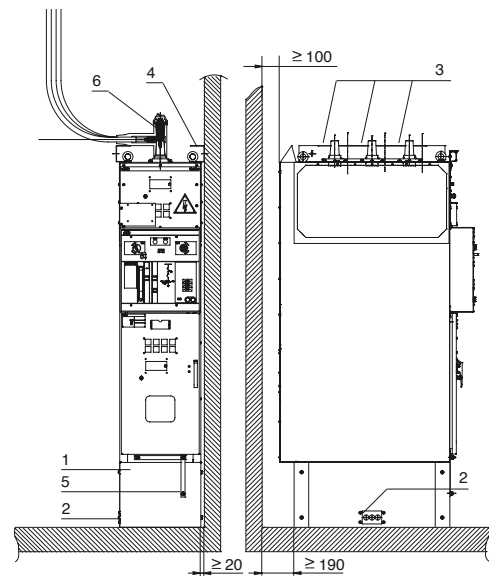


Detail A

View from above

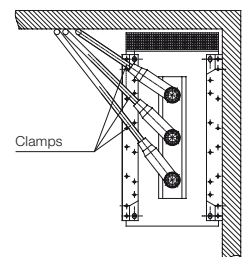

Clamps

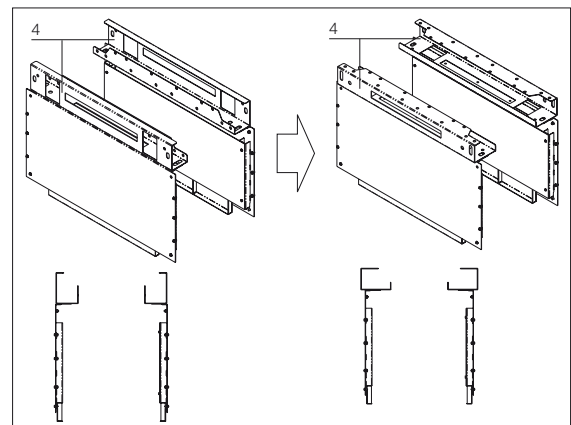


Detail B

Panel assembly sequence


Comply with the numbered sequence in the figures below to assemble the panels.

UniSec DY800/116 panel


End panel

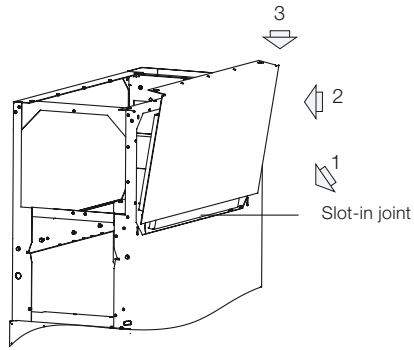


End panel fixing points

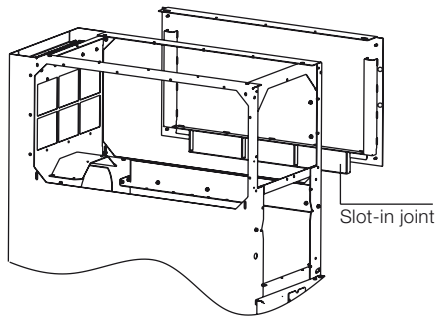

Upper cover panel

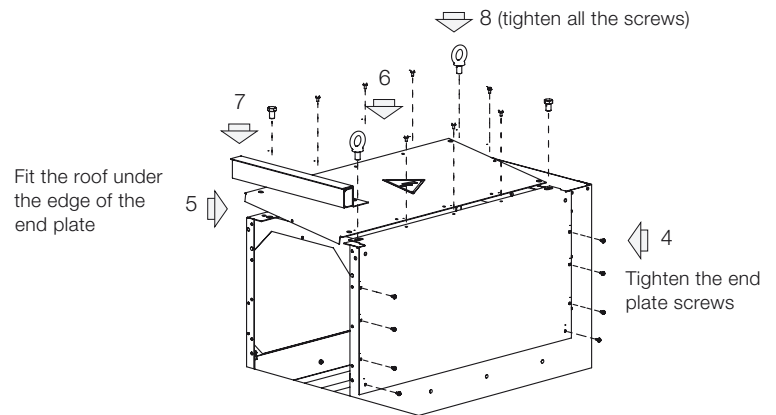

Front panel



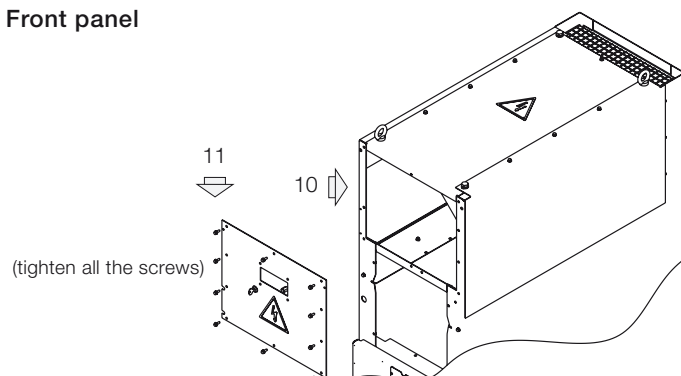


8.7 Connections

General warnings

Make sure that the fixed couplings of the switchgear and the connections (cable terminals, busbar connections) are clean and free from any deformation caused by shocks received during transport or storage. Eliminate all traces of oxidation with a fine file or emery cloth.

UniSec DY800/316 panel

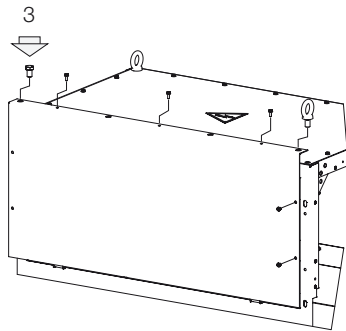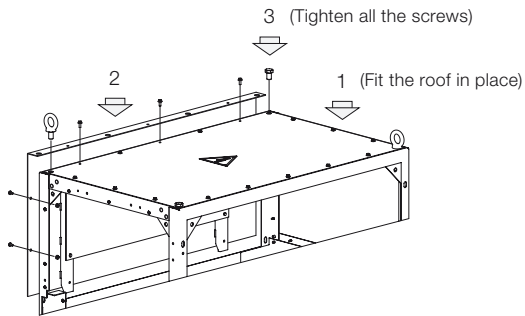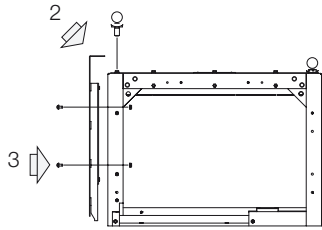


8.7.1 Power circuit

Main busbars for coupled UniSec DY800 units with mixed cubicles. Make sure that the contact zone of the busbars and bearing insulators is perfectly clean and degreased.

Assemble all the busbars as indicated in the figure, by placing them on the contact zone of the insulator. Tighten all the screws by hand and then tighten them with a torque wrench. Apply max. 33 Nm tightening torque.


Tightening torque max 33 Nm

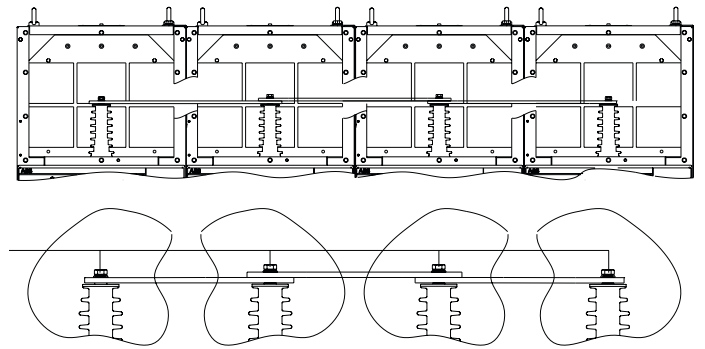

Main busbars for joined UniSec DY800/316 units with open-type cubicles

Make sure that the contact zone of the busbars and bearing insulators is perfectly clean and degreased.

Fix the busbars as shown in the figure.

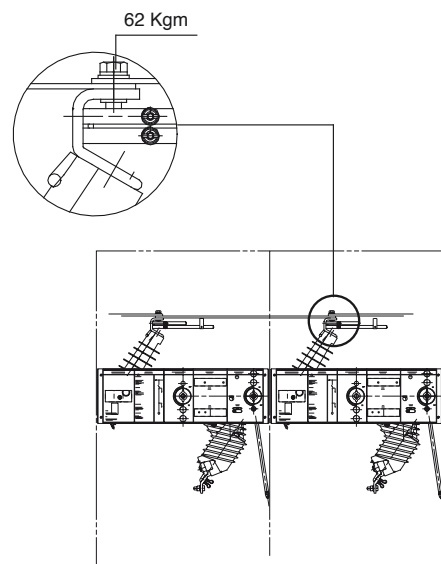

8.7.2 Earthing busbars


The earthing busbar is routed longitudinally along the lower part of the switchgear. There are copper alloy bolts at its ends for connecting to the earthing network of the installation.

The screws and bolts must be tightened to the prescribed tightening torque value (28 Nm) so as to prevent vibrations during operation from working them loose.

The earth conductor must be sized to withstand the forecast maximum earth fault current. Generally speaking, the section of the earth conductor must not be less than that of the earthing busbar of the switchgear. All cubicles are normally equipped with an earthing busbar whose section guarantees $> 200 \text{ A/mm}^2$ current density.

The earthing busbar junction must be made on a level with the points in which the switchgear cubicles join together. Remove any traces of oxidation from the contact surface of the busbars beforehand, using emery cloth.

Lock the earthing busbar junction in place with its screws, flat and spring washers and with the nut and its respective washer. Fix the busbars as shown in the figure.

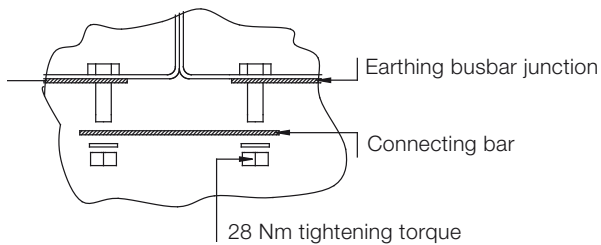

8.7.3 Connection of the auxiliary circuits

There are auxiliary circuits in all UniSec cubicles.

The wiring inside the switchgear is installed in the factory. The conductors are routed from a fixed connector on the switchgear panel.


The external connection between the motor-operated control and the telecontrol extension unit is made with multicore cable equipped with flying connectors.

The figure below illustrates the route inside the cubicle of the cables that connect the current transformers, the toroidal transformer for homopolar protection and the RG apparatus.

Fixed connector on the cubicle



External multicore connection cable



Connector for remote control extension unit

Cubicle connector

9. Cable tests



- Before proceeding, ensure that the part of the installation in which the work must be performed is in a safe condition.
- Connection of cables for test purposes (applied voltage and troubleshooting) alters the characteristics of the switchgear. Those who do this must ensure compliance with the correct procedures in order to guarantee safe conditions for the workers.
- Obligatory conditions when performing voltage tests on the cables or troubleshooting:
 - earthing switch ST must be open
 - feeder disconnector SL must be open (isolated position)
 - the circuit-breaker must be open.

NOTE: The isolating distance is not guaranteed with feeder disconnector SL in the closed position and the circuit-breaker open.

The maximum voltage applicable in the point in which the cables connect to the switchgear for the insulation test or locating faults in the cables, is 50 kV DC.

The tests must be performed with the door closed, by routing the cables from the front shutter on the door.

Check compliance with the safety distances from live parts, taking into account the value of the test voltage applied.

10. Putting into service





- Only use the supplied panic operating lever.
- All the operations for putting into service must be carried out by our personnel or by the customer's sufficiently qualified personnel with detailed knowledge of the apparatus and installation.
- If the operations are obstructed, do not force the mechanical interlocks and check that the operating sequence is correct.
- Before opening the door, always check the position of the feeder disconnect and earthing switch by means of the mechanical signals and through the window.
- Only energize the switchgear with the apparatus open and the doors closed.
- Do not put the equipment into service if the test result is negative and consult us if necessary.

Perform the operations in the check list in the following table before putting the switchgear into service.

After the operations described above have terminated, make sure that everything has been restored to its original conditions.

Inspections prior to putting into service

Inspected part	Operations	Notes
Cubicles	<p>Visually check inside and outside the cubicle to make sure that there is no evident damage. Remove any foreign bodies (e.g. tools, test connections inadvertently left in place after installation).</p> <p>Carefully clean the insulating parts. Remove all traces of moisture and dust with a clean, dry cloth.</p> <p>Make sure that all the screws have been properly tightened.</p> <p>Check that all end plates and those included in the configuration have been installed correctly.</p> <p>Make sure that all panels for protection against accidental contact have been installed correctly.</p> <p>Check that the interlocks function correctly and that the keys (if any) are correctly joined with a welded ring if these are required for the interlocks.</p> <p>Check that the mechanical operating mechanisms can be operated by applying a ≤ 200 Nm moment of force.</p> <p>Check the mechanical signals and through the window to make sure that the apparatus is positioned properly.</p> <p> The force interlocks withstand 400 Nm maximum moment of force.</p>	
Power circuit connections	Make sure that the connections are well tightened.	
Earthing busbar and relative connections	Check tightness and continuity.	Check earthing efficiency in accordance with the accident-prevention Regulations
Insulation	<p>Measure the insulation resistance of the power circuits (line-to-line and line-to-earth) with a 2500 V Megger and the insulation resistance of the auxiliary circuits with a 500 V Megger.</p> <p>The values gauged for each cubicle must be at least 1000 MΩ for the power circuits and over 2 MΩ for the auxiliary circuits.</p> <p>The insulation resistance must remain constant over time, even after voltage tests have been performed.</p> <p>The applied voltage test is performed in the factory. After installation, it is not required by the CEI 17-6 Standards. If the user considers it necessary, it must be performed at a value equal to 80% of the value indicated in point 7.1. of Standard IEC 62271-1 and only in alternating current. Keep the MV cables disconnected during the test.</p>	<p>The value of the insulation resistance can be affected by the ambient conditions.</p> <p>Temporary preheaters are required if the low insulation resistance value is due to humidity in the environment. Disconnect the MV cables when measuring.</p> <p>Example: – 24 kV rated voltage of switchgear – Required test voltage 50 kV for approx. 1 min (performed in factory) – Test voltage after installation $0.8 \times 50 = 40$ kV for 1 min.</p>
Circuit-breaker, feeder disconnector, earthing switch and operating mechanism	Carry out several operations on each apparatus to make sure that this latter and the interlocks operate correctly.	Make sure that the apparatus and locks function correctly (see sect. 5.4 - sect. 6.0 - sect. 12.3)
Auxiliary circuits	Check that the spring loading motor and opening and closing coils function correctly.	



The inspections are only acceptable if all the listed tests have terminated with a positive result.

11. Routine inspections



- The routine inspections must be performed by our personnel or by the customer's personnel so long as they are sufficiently qualified and possess detailed knowledge about the apparatus.
- Before proceeding with any operation, always make sure that the apparatus is in the open position with the springs unloaded.
- Before opening the door, always check the position of the feeder disconnecter and earthing switch by means of the mechanical signals.
- The apparatus is guaranteed to be maintenance-free for the first 36 months from delivery.

11.1 General information

During normal service, the switchgear is maintenance-free. Any interventions required, basically depend on the severity of the service conditions, i.e. on various different factors such as the frequency of the operations, the interrupted current values, the relative power factor and the installation site.

For precautionary reasons, an inspection schedule is given in the table in the following section, along with the frequency with which the equipment must be checked.

It is advisable to comply with the indications in the table for the first interventions.

Optimal time limits for carrying out successive operations can be established on the basis of the results obtained during the routine inspections.

It is advisable to record all the operations performed in detail on a maintenance card and service book, along with the date, description of the fault and reference data allowing the device to be identified (see chap. 2).

Refer to article 10 of standard IEC 62271-1 if further details are required.

Do not hesitate to call us if problems arise.

It is always a good idea to inspect the apparatus (screw and bolt tightness - abnormal heating, etc.) a few months after it has been put into service.

The following table gives the indicative frequencies with which inspections should be made.

11.2 Inspection schedule


Part liable to inspection	Intervals	Operation required
1 Perform a few mechanical closing and opening operations.	3 years.	Make sure that the operations and transmission levers function correctly. The apparatus must operate regularly without stopping in intermediate positions and the applied torque must not exceed 200 Nm.
2 Visual examination of the insulating parts.	3 years, or depending on the degree of pollution in the environment.	The insulating parts must be free from any built-up dust, dirt, cracks, traces of surface discharges or damage. Remove the dust and dirt with a vacuum cleaner and clean, dry cloths.
3 Auxiliary contacts	5 years.	Make sure that operation and the signals are correct.
4 Auxiliary circuit conductors	5 years.	Check whether any of the wiring fasteners are slack or broken and make sure that the connections are well tightened.
5 Interlocks	5 years.	Make sure that the devices functions correctly (sect. 5.4 - 6.0 - 12.3).
6 Measurement of the insulation resistance	5 years.	See sect. 10 (table).
7 Operating mechanism	3 years.	Check that the operating mechanism is clean.

Do not put the apparatus into service if the test result is negative and call us if necessary.



Do not put the apparatus into service if the test result is negative and call us if necessary.

For further details please contact:

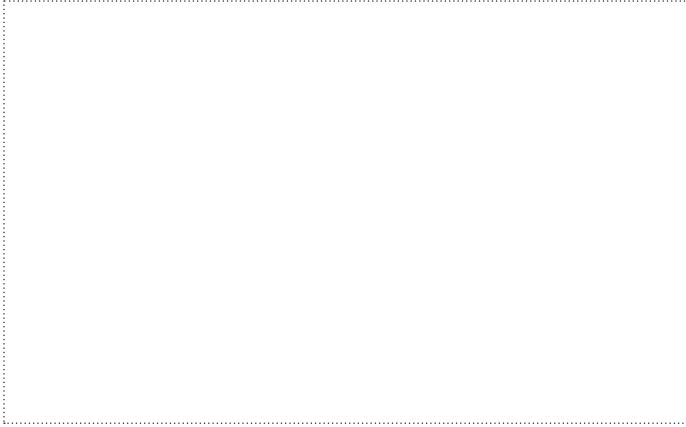

Your sales contact: www.abb.com/contacts

More product information: www.abb.com/productguide

The data and illustrations are not binding. We reserve the right to modify the contents of this document following technical and product developments.

© Copyright 2013 ABB.
All rights reserved.