


NOTES:

1. Prior to any installation in a classified hazardous location, verify installation methods by the Control Drawing referenced on the product's name tag.
2. To access termination board, remove Power I/O Junction Box front cover.

Hazardous Area

Non-Hazardous Area

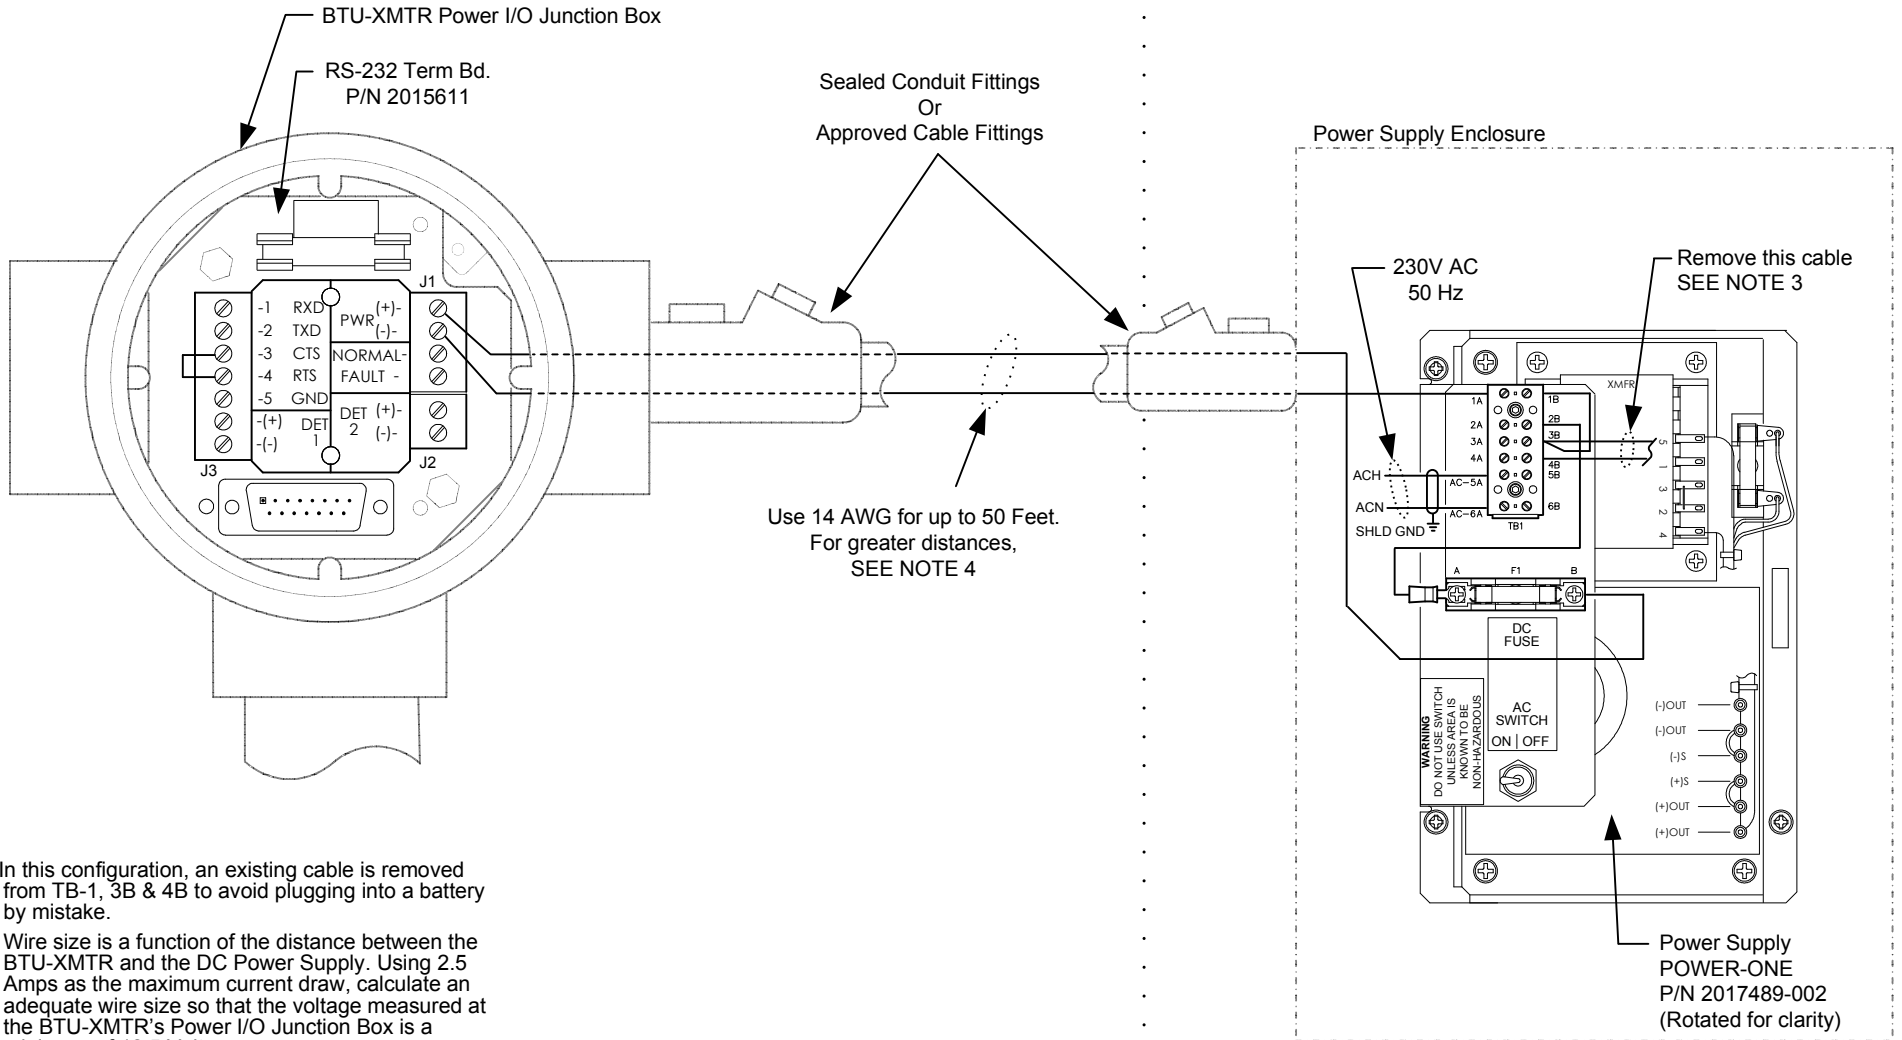

3. In this configuration, an existing cable is removed from TB-1, 3B & 4B to avoid plugging into a battery by mistake.
4. Wire size is a function of the distance between the BTU-XMTR and the DC Power Supply. Using 2.5 Amps as the maximum current draw, calculate an adequate wire size so that the voltage measured at the BTU-XMTR's Power I/O Junction Box is a minimum of 12.5 Volts.

REF: N/A

	TOTALFLOW	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
	Products	L17592	UD	BTU 8000\8100 TO POWER-ONE 230V AC POWER SUPPLY (INCLUDES ATEX)	2102288	AA	1 OF 1