


QUICK REFERENCE GUIDE


COMMANDER SR250A and SR250B Recorders – this guide contains procedures for replacing the pen capsule, loading a roll chart and using the front panel keys. An overview of basic Operator functions is also included.

Full installation, operating and programming procedures, together with a comprehensive index, are provided in the User Guide for each instrument.

REPLACING THE PEN CAPSULE

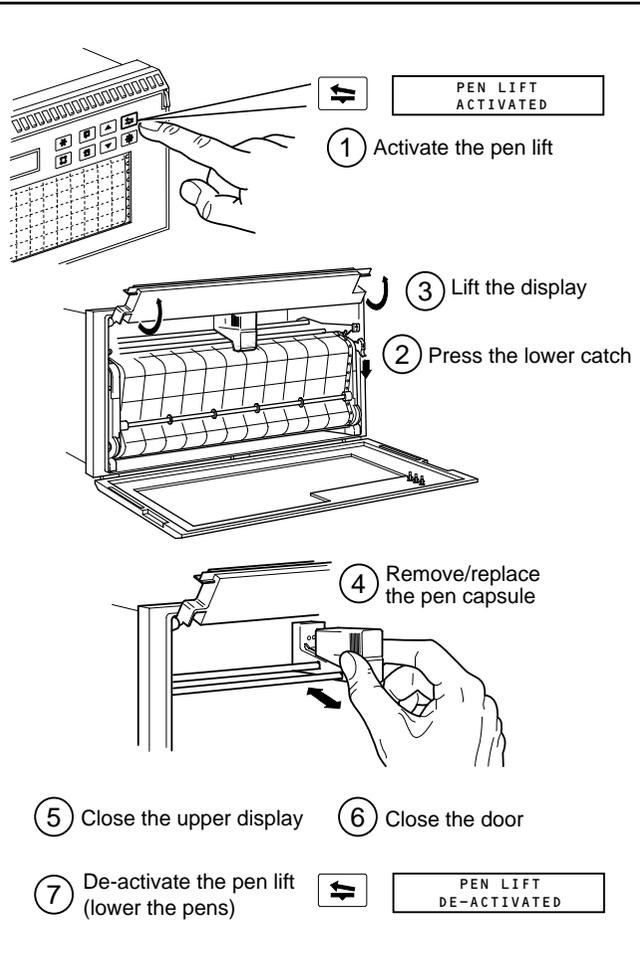


DISPLAYS AND KEYS

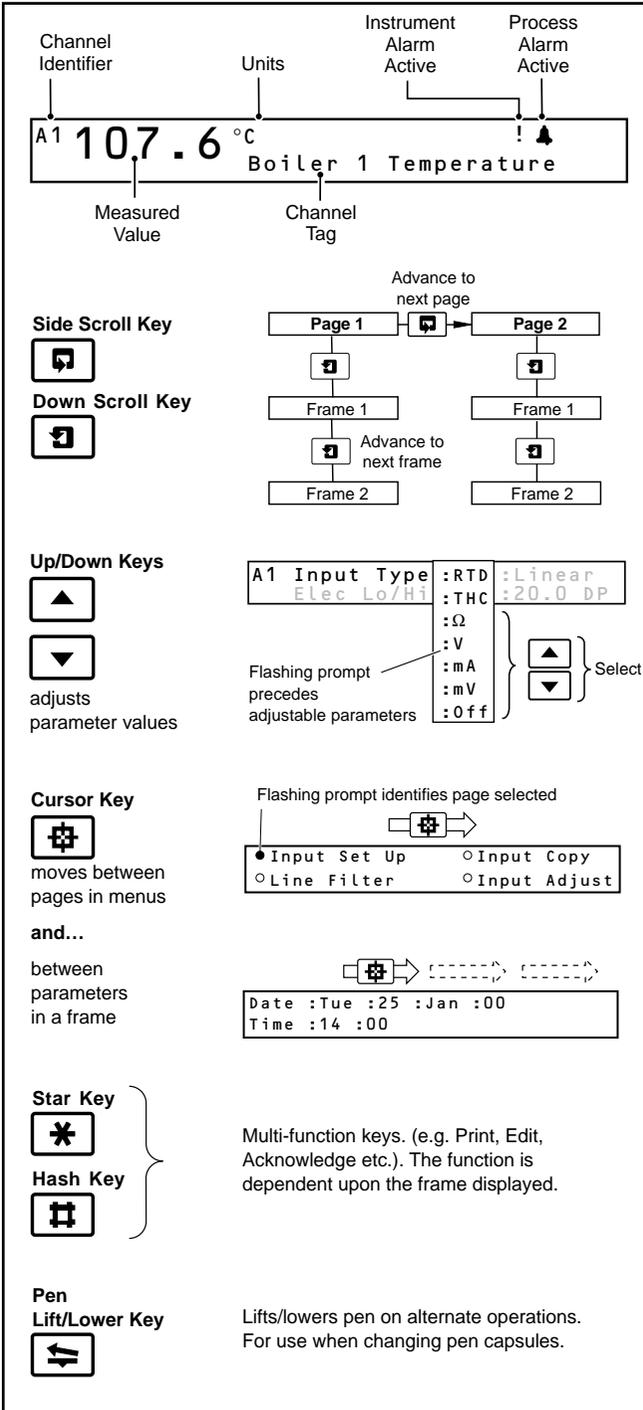


OPERATOR FUNCTIONS


Acknowledging Alarms

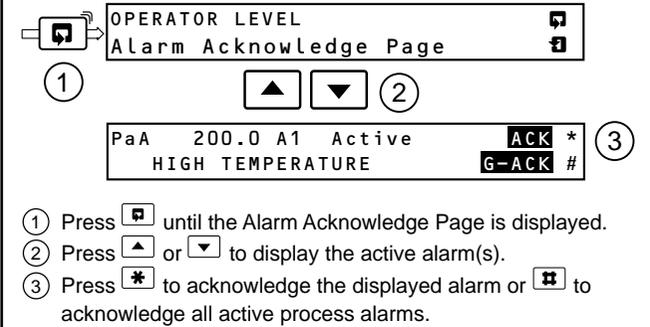

Printing/Editing the Operator Message

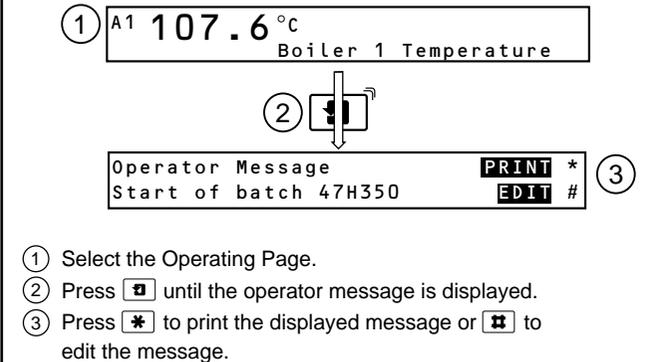

Selecting the Chart Speed

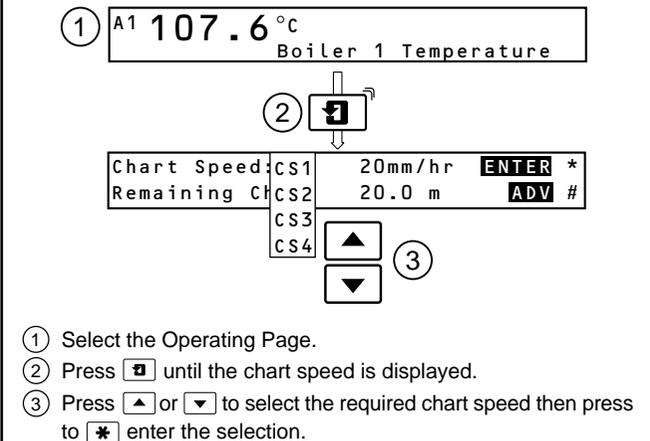

LOADING A NEW ROLL CHART



Note.

- Chart rewinding is operator-initiated and takes place with the chart cassette still in the instrument.
- The chart rewinds at high speed. **DO NOT** stop the chart until the rewind procedure is complete (this takes approximately 4 minutes for a 25m chart).

- 1 Press until the **Security Access Page** is displayed.
- 2 Enter the access code for the **Load Chart Page** (the default is 0).
- 3 Press to access the **Chart Page**.
- 4 Press to access the 'Start Chart Reload ?' frame.
- 5 Select 'Yes' using the and keys.
- 6 Press to rewind the chart.
- 7 If required, following automatic rewind, press and hold until all the remaining chart has rewound onto the removable spool.

OPERATING PAGES

(Channel Displays, Date & Time)

000.0

Security Access Code : 1234
SR250/2000 Iss 1

OPERATOR LEVEL
Chart Page



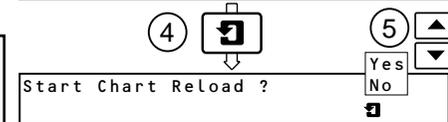


CHART REWINDING PAUSE *
25% Complete STOP #

Rewind Complete
(frame advances automatically)

REWIND COMPLETE MORE *
LOAD :25m CHART

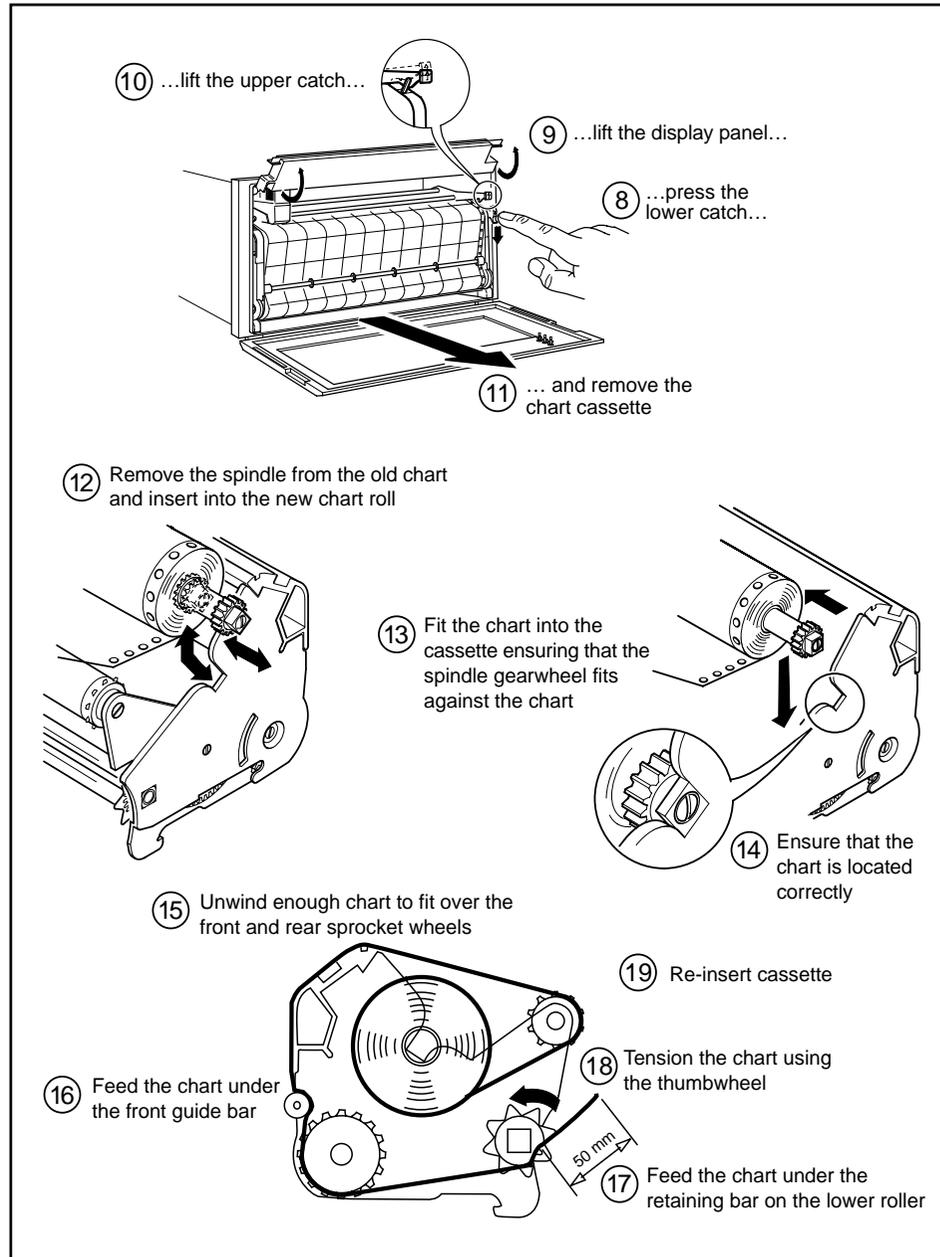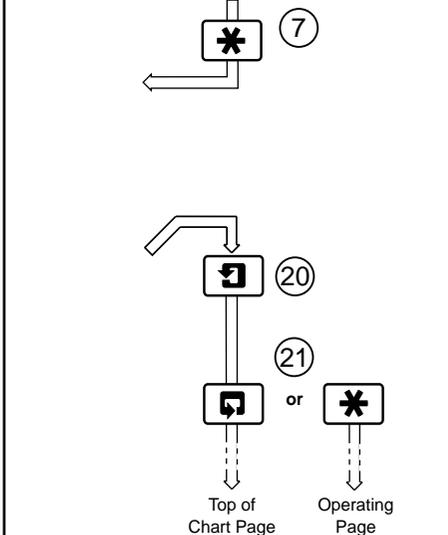

- 20 Press to restart recording.
- 21 Press to return to the **Operating Page** or to return to the top of the **Chart Page**.

The Company's policy is one of continuous product improvement and the right is reserved to modify the information contained herein without notice.

© ABB 2002

Printed in the UK (09.02)

ABB

ABB Limited
Howard Road, St. Neots
Cambridgeshire, PE19 3EU
UK
Tel: +44 (0)1480 475 321
Fax: +44 (0)1480 217 948

ABB Inc.
125 E. County Line Road
Warminster, PA 18974
USA
Tel: +1 215-674-6000
Fax: +1 215-674-7183

ABB has Sales & Customer
Support expertise in
over 100 countries
worldwide

www.abb.com

IM/SR250-Q Issue 2