

# 9T58K0000G24


## 332A1500AAG24

### TYPICAL INSTALLATION INSTRUCTIONS FOR 9T58K0000G24 FUSE-HOLDER KITS

FUSE-HOLDER KIT 9T58K0000G24 IS A UNIVERSAL DESIGN INTENDED TO FIT ALL ENCAPSULATED TYPE IP TRANSFORMERS. FIELD INSTALLATION OF THIS KIT DOES NOT AFFECT UL LISTING OF THE UNIT.

**IMPORTANT: LOCK OFF ALL POWER TO THIS TRANSFORMER BEFORE INSTALLING THE FUSE-HOLDER KIT OR SERIOUS ELECTRICAL SHOCK MAY RESULT. IF YOU ARE UNSURE OF THE CORRECT CONNECTIONS TO BE MADE, CONTACT AN ABB FRANCHISED DISTRIBUTOR FOR ASSISTANCE.**

332A1089AAP009

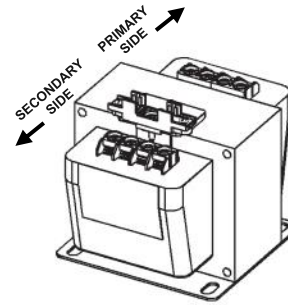

ORIENT THE FUSE-HOLDER SO THAT IT WILL BE LOCATED ON THE SECONDARY SIDE OF THE TRANSFORMER. (SEE STEP 2 FOR ACTUAL ASSEMBLY)

### STEP 1

# 9T58K0000G24


## 332A1500AAG24

### TYPICAL INSTALLATION INSTRUCTIONS FOR 9T58K0000G24 FUSE-HOLDER KITS

FUSE-HOLDER KIT 9T58K0000G24 IS A UNIVERSAL DESIGN INTENDED TO FIT ALL ENCAPSULATED TYPE IP TRANSFORMERS. FIELD INSTALLATION OF THIS KIT DOES NOT AFFECT UL LISTING OF THE UNIT.

**IMPORTANT: LOCK OFF ALL POWER TO THIS TRANSFORMER BEFORE INSTALLING THE FUSE-HOLDER KIT OR SERIOUS ELECTRICAL SHOCK MAY RESULT. IF YOU ARE UNSURE OF THE CORRECT CONNECTIONS TO BE MADE, CONTACT AN ABB FRANCHISED DISTRIBUTOR FOR ASSISTANCE.**

332A1089AAP009

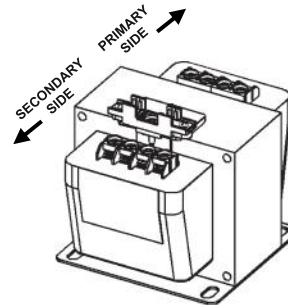

ORIENT THE FUSE-HOLDER SO THAT IT WILL BE LOCATED ON THE SECONDARY SIDE OF THE TRANSFORMER. (SEE STEP 2 FOR ACTUAL ASSEMBLY)

### STEP 1

# 9T58K0000G24


## 332A1500AAG24

### TYPICAL INSTALLATION INSTRUCTIONS FOR 9T58K0000G24 FUSE-HOLDER KITS

FUSE-HOLDER KIT 9T58K0000G24 IS A UNIVERSAL DESIGN INTENDED TO FIT ALL ENCAPSULATED TYPE IP TRANSFORMERS. FIELD INSTALLATION OF THIS KIT DOES NOT AFFECT UL LISTING OF THE UNIT.


**IMPORTANT: LOCK OFF ALL POWER TO THIS TRANSFORMER BEFORE INSTALLING THE FUSE-HOLDER KIT OR SERIOUS ELECTRICAL SHOCK MAY RESULT. IF YOU ARE UNSURE OF THE CORRECT CONNECTIONS TO BE MADE, CONTACT AN ABB FRANCHISED DISTRIBUTOR FOR ASSISTANCE.**

332A1089AAP009

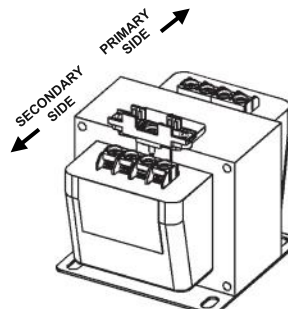

ORIENT THE FUSE-HOLDER SO THAT IT WILL BE LOCATED ON THE SECONDARY SIDE OF THE TRANSFORMER. (SEE STEP 2 FOR ACTUAL ASSEMBLY)


### STEP 1

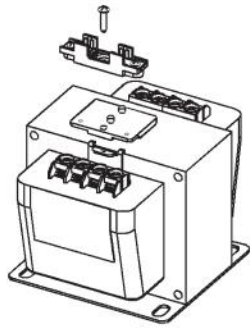

USE THE #6 SCREW PROVIDED TO MOUNT THE FUSE-HOLDER DIRECTLY ON TOP OF THE TRANSFORMER. THE SCREW WILL GO THRU THE FUSE-HOLDER, THRU THE MOUNTING BRACKET AND INTO THE TRANSFORMER MOUNTING TAB.

### STEP 2

### FUSE-HOLDER CONNECTIONS

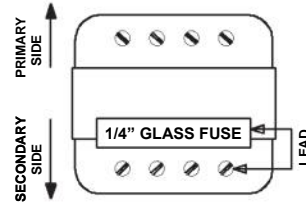


CONNECT THE LEAD PROVIDED TO ONE SIDE OF THE FUSE-HOLDER AND TO THE SECONDARY SIDE OF THE TRANSFORMER.

NOTE: FOR SERIES MULTIPLE PRIMARIES OR SECONDARIES, MAKE THE APPROPRIATE INTER CONNECTION(S) (I.E. SERIES OR MULTIPLE) AS USUAL.

CAUTION: ADDITIONAL SECONDARY FUSES WILL BE REQUIRED IF THERE IS MORE THAN ONE UNGROUNDED CONDUCTOR IN THE CIRCUIT (PER NEC 240 -20)


### STEP 3

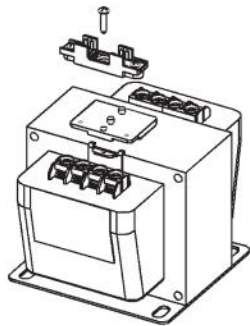

USE THE #6 SCREW PROVIDED TO MOUNT THE FUSE-HOLDER DIRECTLY ON TOP OF THE TRANSFORMER. THE SCREW WILL GO THRU THE FUSE-HOLDER, THRU THE MOUNTING BRACKET AND INTO THE TRANSFORMER MOUNTING TAB.

### STEP 2

### FUSE-HOLDER CONNECTIONS

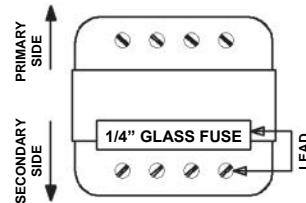


CONNECT THE LEAD PROVIDED TO ONE SIDE OF THE FUSE-HOLDER AND TO THE SECONDARY SIDE OF THE TRANSFORMER.

NOTE: FOR SERIES MULTIPLE PRIMARIES OR SECONDARIES, MAKE THE APPROPRIATE INTER CONNECTION(S) (I.E. SERIES OR MULTIPLE) AS USUAL.

CAUTION: ADDITIONAL SECONDARY FUSES WILL BE REQUIRED IF THERE IS MORE THAN ONE UNGROUNDED CONDUCTOR IN THE CIRCUIT (PER NEC 240 -20)


### STEP 3

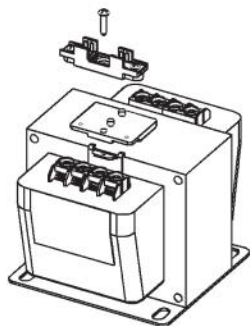

USE THE #6 SCREW PROVIDED TO MOUNT THE FUSE-HOLDER DIRECTLY ON TOP OF THE TRANSFORMER. THE SCREW WILL GO THRU THE FUSE-HOLDER, THRU THE MOUNTING BRACKET AND INTO THE TRANSFORMER MOUNTING TAB.

### STEP 2

### FUSE-HOLDER CONNECTIONS

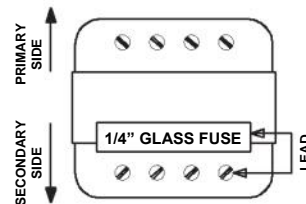

CONNECT THE LEAD PROVIDED TO ONE SIDE OF THE FUSE-HOLDER AND TO THE SECONDARY SIDE OF THE TRANSFORMER.

NOTE: FOR SERIES MULTIPLE PRIMARIES OR SECONDARIES, MAKE THE APPROPRIATE INTER CONNECTION(S) (I.E. SERIES OR MULTIPLE) AS USUAL.

CAUTION: ADDITIONAL SECONDARY FUSES WILL BE REQUIRED IF THERE IS MORE THAN ONE UNGROUNDED CONDUCTOR IN THE CIRCUIT (PER NEC 240 -20)

### STEP 3