

9T58K0000G48


332A1500AAG48

TYPICAL INSTALLATION INSTRUCTIONS FOR 9T58K0000G48 FUSE-HOLDER KITS

FUSE-HOLDER KIT 9T58K0000G48 IS A UNIVERSAL DESIGN INTENDED TO FIT ALL ENCAPSULATED TYPE IP TRANSFORMERS. FIELD INSTALLATION OF THIS KIT DOES NOT AFFECT UL LISTING OF THE UNIT.


IMPORTANT: LOCK OFF ALL POWER TO THIS TRANSFORMER BEFORE INSTALLING THE FUSE-HOLDER KIT OR SERIOUS ELECTRICAL SHOCK MAY RESULT. IF YOU ARE UNSURE OF THE CORRECT CONNECTIONS TO BE MADE, CONTACT AN ABB FRANCHISED DISTRIBUTOR FOR ASSISTANCE.

332A1089AAP010

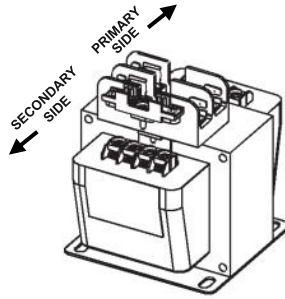

ORIENT THE FUSE-HOLDER SO THAT IT WILL BE LOCATED ON THE SECONDARY SIDE OF THE TRANSFORMER. (SEE STEP 2 FOR ACTUAL ASSEMBLY)

STEP 1

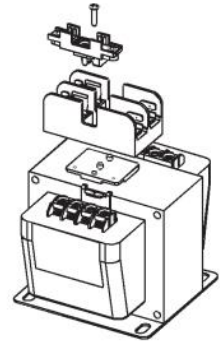

USE THE #6 SCREW PROVIDED TO MOUNT THE FUSE-HOLDER DIRECTLY ON TOP OF THE TRANSFORMER. THE SCREW WILL GO THRU THE SMALL FUSE-HOLDER BRACKET, THRU THE LARGE FUSE-HOLDER, THRU THE MOUNTING BRACKET AND INTO THE TRANSFORMER MOUNTING TAB.

STEP 2

9T58K0000G48


332A1500AAG48

TYPICAL INSTALLATION INSTRUCTIONS FOR 9T58K0000G48 FUSE-HOLDER KITS

FUSE-HOLDER KIT 9T58K0000G48 IS A UNIVERSAL DESIGN INTENDED TO FIT ALL ENCAPSULATED TYPE IP TRANSFORMERS. FIELD INSTALLATION OF THIS KIT DOES NOT AFFECT UL LISTING OF THE UNIT.


IMPORTANT: LOCK OFF ALL POWER TO THIS TRANSFORMER BEFORE INSTALLING THE FUSE-HOLDER KIT OR SERIOUS ELECTRICAL SHOCK MAY RESULT. IF YOU ARE UNSURE OF THE CORRECT CONNECTIONS TO BE MADE, CONTACT AN ABB FRANCHISED DISTRIBUTOR FOR ASSISTANCE.

332A1089AAP010

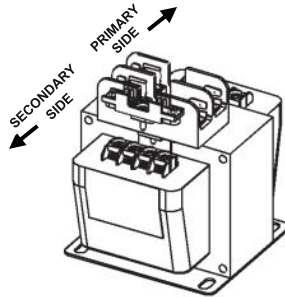

ORIENT THE FUSE-HOLDER SO THAT IT WILL BE LOCATED ON THE SECONDARY SIDE OF THE TRANSFORMER. (SEE STEP 2 FOR ACTUAL ASSEMBLY)

STEP 1

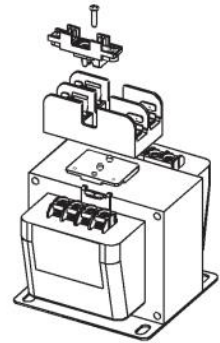

USE THE #6 SCREW PROVIDED TO MOUNT THE FUSE-HOLDER DIRECTLY ON TOP OF THE TRANSFORMER. THE SCREW WILL GO THRU THE SMALL FUSE-HOLDER BRACKET, THRU THE LARGE FUSE-HOLDER, THRU THE MOUNTING BRACKET AND INTO THE TRANSFORMER MOUNTING TAB.

STEP 2

9T58K0000G48


332A1500AAG48

TYPICAL INSTALLATION INSTRUCTIONS FOR 9T58K0000G48 FUSE-HOLDER KITS

FUSE-HOLDER KIT 9T58K0000G48 IS A UNIVERSAL DESIGN INTENDED TO FIT ALL ENCAPSULATED TYPE IP TRANSFORMERS. FIELD INSTALLATION OF THIS KIT DOES NOT AFFECT UL LISTING OF THE UNIT.


IMPORTANT: LOCK OFF ALL POWER TO THIS TRANSFORMER BEFORE INSTALLING THE FUSE-HOLDER KIT OR SERIOUS ELECTRICAL SHOCK MAY RESULT. IF YOU ARE UNSURE OF THE CORRECT CONNECTIONS TO BE MADE, CONTACT AN ABB FRANCHISED DISTRIBUTOR FOR ASSISTANCE.

332A1089AAP010

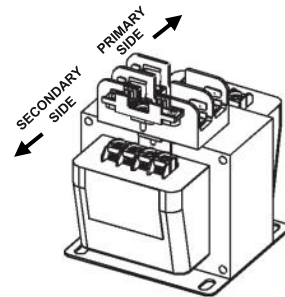

ORIENT THE FUSE-HOLDER SO THAT IT WILL BE LOCATED ON THE SECONDARY SIDE OF THE TRANSFORMER. (SEE STEP 2 FOR ACTUAL ASSEMBLY)

STEP 1

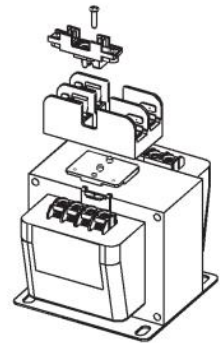

USE THE #6 SCREW PROVIDED TO MOUNT THE FUSE-HOLDER DIRECTLY ON TOP OF THE TRANSFORMER. THE SCREW WILL GO THRU THE SMALL FUSE-HOLDER BRACKET, THRU THE LARGE FUSE-HOLDER, THRU THE MOUNTING BRACKET AND INTO THE TRANSFORMER MOUNTING TAB.

STEP 2

