

COM600 series 5.1

HMI Configuration Manual

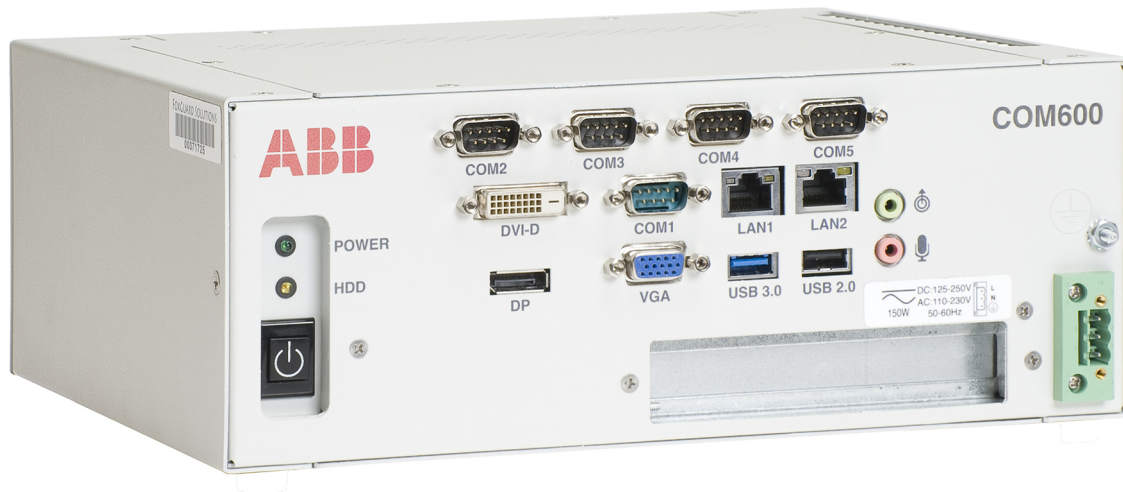

Contents:

1. About this manual	5
1.1. Copyright	5
1.2. Disclaimer	5
1.3. Conformity	6
1.4. Trademarks	6
1.5. General information	6
1.6. Document conventions	6
1.7. Use of symbols	7
1.8. Terminology	8
1.9. Abbreviations	9
1.10. Related documents	9
1.11. Document revisions	10
2. Introduction	11
2.1. General information about the COM600 series	11
2.2. COM600 product series variants and rationale	11
2.3. Overview of COM600	12
2.4. Predefined user account	12
3. Configuration	13
3.1. About this section	13
3.2. Operating system access permissions using local browser	13
3.3. Prerequisites	13
3.4. Creating substation structure and communication structure	14
3.4.1. Creating substation and communication structures with SCL descriptions or connectivity packages	14
3.4.2. Creating substation structure manually	14
3.4.3. Adding Gateway object	15
3.4.4. Adding Substation	16
3.4.5. Adding voltage level object	17
3.4.6. Adding bay object	17
3.4.7. Adding busbar object	18
3.5. Single Line Diagram	18
3.5.1. Using the SLD Editor	18
3.5.2. Multiple SLD views	31
3.6. Data connection	37
3.6.1. General information about Data connection	37
3.6.2. Settings	39
3.7. Measurement page configuration	39
3.8. Document Library	40
3.9. Substation Summary Table configuration tool	41
3.10. Alarm and event handling	42
3.10.1. General information about alarm and event objects	42
3.10.2. Creating event definitions	42

3.10.3.	Configuring event definitions	43
3.10.4.	Connecting alarm or event objects to data objects	44
3.10.5.	Configuring event type filters	44
3.11.	Data Historian	45
3.12.	Customizing IED parameter settings	46
3.13.	Disturbance data upload	50
3.14.	Project-specific localization	50
4.	Appendix 1	53
4.1.	Single Line Diagram symbols	53
5.	Appendix 2	57
5.1.	SAB600 Toolbar	57
6.	Appendix 3	58
6.1.	Logical nodes and primary objects	58
Index	63

1. About this manual

1.1. Copyright

This document and parts thereof must not be reproduced or copied without written permission from ABB, and the contents thereof must not be imparted to a third party, nor used for any unauthorized purpose.

The software or hardware described in this document is furnished under a license and may be used, copied, or disclosed only in accordance with the terms of such license.

Warranty

Please inquire about the terms of warranty from your nearest ABB representative.

<http://www.abb.com/substationautomation>

1.2. Disclaimer

The data, examples and diagrams in this manual are included solely for the concept or product description and are not to be deemed as a statement of guaranteed properties. All persons responsible for applying the equipment addressed in this manual must satisfy themselves that each intended application is suitable and acceptable, including that any applicable safety or other operational requirements are complied with. In particular, any risks in applications where a system failure and/ or product failure would create a risk for harm to property or persons (including but not limited to personal injuries or death) shall be the sole responsibility of the person or entity applying the equipment, and those so responsible are hereby requested to ensure that all measures are taken to exclude or mitigate such risks.

This product is designed to be connected and to communicate information and data via a network interface, which should be connected to a secure network. It is sole responsibility of person or entity responsible for network administration to ensure a secure connection to the network and to establish and maintain any appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of anti virus programs, etc) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. ABB is not liable for damages and/or losses related to such security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information.

This document has been carefully checked by ABB but deviations cannot be completely ruled out. In case any errors are detected, the reader is kindly requested to notify the manufacturer. Other than under explicit contractual commitments, in no event shall ABB

be responsible or liable for any loss or damage resulting from the use of this manual or the application of the equipment.

1.3. **Conformity**

This product complies with the directive of the Council of the European Communities on the approximation of the laws of the Member States relating to electromagnetic compatibility (EMC Directive 2004/108/EC) and concerning electrical equipment for use within specified voltage limits (Low-voltage directive 2006/95/EC). This conformity is the result of tests conducted by ABB in accordance with the product standards EN 50263 and EN 60255-26 for the EMC directive, and with the product standards EN 60255-1 and EN 60255-27 for the low voltage directive. The product is designed in accordance with the international standards of the IEC 60255 series.

1.4. **Trademarks**

ABB is a registered trademark of ABB Group. All other brand or product names mentioned in this document may be trademarks or registered trademarks of their respective holders.

1.5. **General information**

This manual provides thorough information on Grid Automation Controller COM600 (later referred to as COM600) Web Human Machine Interface (WebHMI) and the central concepts related to it. Information in this manual is intended for operators performing configurations using the WebHMI.

1.6. **Document conventions**

The following conventions are used for the presentation of material:

- The words in names of screen elements (for example, the title in the title bar of a window, the label for a field of a dialog box) are initially capitalized.
- Capital letters are used for the name of a keyboard key if it is labeled on the keyboard. For example, press the ENTER key.
- Lowercase letters are used for the name of a keyboard key that is not labeled on the keyboard. For example, the space bar, comma key, and so on.
- Press CTRL+C indicates that you must hold down the CTRL key while pressing the C key (to copy a selected object in this case).
- Press ESC E C indicates that you press and release each key in sequence (to copy a selected object in this case).
- The names of push and toggle buttons are boldfaced. For example, click **OK**.
- The names of menus and menu items are boldfaced. For example, the **File** menu.

- The following convention is used for menu operations: **MenuName > MenuItem > CascadedMenuItem**. For example: select **File > New > Type**.
- The **Start** menu name always refers to the **Start** menu on the Windows taskbar.
- System prompts/messages and user responses/input are shown in the Courier font. For example, if you enter a value out of range, the following message is displayed:

`Entered value is not valid. The value must be 0 - 30 .`

- You can be asked to enter the string MIF349 in a field. The string is shown as follows in the procedure:

MIF349

- Variables are shown using lowercase letters:

sequence name

1.7. Use of symbols

This publication includes warning, caution, and information icons that point out safety-related conditions or other important information. It also includes tip icons to point out useful information to the reader. The corresponding icons should be interpreted as follows.



The electrical warning icon indicates the presence of a hazard which could result in electrical shock.



The warning icon indicates the presence of a hazard which could result in personal injury.



The caution icon indicates important information or warning related to the concept discussed in the text. It may indicate the presence of a hazard which could result in corruption of software or damage to equipment or property.



The information icon alerts the reader to relevant facts and conditions.



The tip icon indicates advice on, for example, how to design your project or how to use a certain function.

1.8. Terminology

Term	Description
Alarm	An abnormal state of a condition.
Alarms and Events; AE	An OPC service for providing information about alarms and events to OPC clients.
COM600 Series; COM600	COM600 as a generic name for COM600S IEC and COM600F ANSI products
Data Access; DA	An OPC service for providing information about process data to OPC clients.
Data Object; DO	Part of a logical node object representing specific information, for example, status, or measurement. From an object-oriented point of view, a data object is an instance of a class data object. DOs are normally used as transaction objects; that is, they are data structures.
Data Set	The data set is the content basis for reporting and logging. The data set contains references to the data and data attribute values.
Device	A physical device that behaves as its own communication node in the network, for example, protection relay.
Event	Change of process data or an OPC internal value. Normally, an event consists of value, quality, and timestamp.
Intelligent Electronic Device	A physical IEC 61850 device that behaves as its own communication node in the IEC 61850 protocol.
Logical Device; LD	Representation of a group of functions. Each function is defined as a logical node. A physical device consists of one or several LDs.
Logical Node; LN	The smallest part of a function that exchanges data. An LN is an object defined by its data and methods.
OPC	Series of standards specifications aiming at open connectivity in industrial automation and the enterprise systems that support industry.
OPC item	Representation of a connection to the data source within the OPC server. An OPC item is identified by a string <object path>:<property name>. Associated with each OPC item are Value, Quality, and Time Stamp.
Property	Named data item.
Report Control Block	The report control block controls the reporting processes for event data as they occur. The reporting process continues as long as the communication is available.

1.9. Abbreviations

Abbreviation	Description
AE	Alarms and Events
DA	Data Access
DO	Data Object
GW	Gateway, component connecting two communication networks together
WebHMI	Web Human Machine Interface
IEC	International Electrotechnical Commission
IED	Intelligent Electronic Device
LAN	Local Area Network
LD	Logical Device
LN	Logical Node
NCC	Network Control Center
OLE	Object Linking and Embedding
OPC	OLE for Process Control
P&C	Protection & Control
PLC	Programmable Logic Controller
POU	Program Organization Unit
RTS	Request To Send
SA	Substation Automation
SCD	Substation Configuration Description
SCL	Substation Configuration Language
SFC	Sequential Function Chart
SLD	Single Line Diagram
XML	eXtended Markup Language

1.10. Related documents

Name of the manual	MRS number
COM600 User's Manual	1MRS756125
COM600 Operator's Manual	1MRS756705
COM600 Data Historian Operator's Manual	1MRS756739
COM600 Sequence Control Configuration Manual	1MRS755001

Name of the manual	MRS number
Master Protocols (Ethernet based) Configuration and Operation Manual	1MRS758689
Master Protocols (Ethernet based) Technical Reference Manual	1MRS758690
Slave Protocols (Ethernet based) Configuration and Operation Manual	1MRS758691
Slave Protocols (Ethernet based) Technical Reference Manual	1MRS758692
DNP 3.0 Serial Master (OPC) User's Manual	1MRS756567
DNP 3.0 Serial Slave (OPC) User's Manual	1MRS755495
IEC 60870-5-101 Slave (OPC) User's Manual	1MRS755382
IEC 60870-5-101 Master (OPC) User's Manual	1MRS756703
IEC 60870-5-103 Master (OPC) User's Manual	1MRS752278
COM600 Logic Processor User's Manual	1MRS756738
Modbus Serial Master (OPC) User's Manual	1MRS756126
Modbus Serial Slave (OPC) User's Manual	1MRS756913

1.11. Document revisions

Document version/date	Product revision	History
A/13.2.2009	3.3	Document created
B/06.11.2009	3.4	Document revised
C/30.6.2011	3.5	Document revised
D/31.5.2012	4.0	Document revised
E/13.3.2015	4.1	Document revised
F/24.5.2017	5.0	Document revised
G/22.3.2018	5.1	Document revised

2. Introduction

2.1. General information about the COM600 series

The COM600 product series are versatile Substation Management Units that help realize smart substation and grid automation solutions in industrial and utility distribution networks.

They get deployed together with protection and control IEDs, substation devices such as RTUs, meters and PLCs in dedicated cabinets and switchgear.

The COM600 product is an all-in-one unit that functions as:

- Communication gateway
- Web Human Machine Interface (WebHMI)
- Automation controller
- Real-time and historical data management unit

The COM600 product series use process information and device data, acquired over Ethernet or serial communication protocol interfaces to execute specific substation functions and applications. Thus, they are critical building blocks to realize substation secondary system solutions and in the process solving diverse customer needs.

2.2. COM600 product series variants and rationale

To facilitate substation and grid automation solutions in IEC and ANSI market areas, a variant-based system similar to Relion® 615 and 620 series is being followed from COM600 5.0 release.

The main reasons for such an approach are the following:

- To ensure all COM600 product series features are advantageously used in end-customer projects in the medium voltage substation automation domain.
- To ensure an optimum feature set to be bundled together to realize specific applications required in IEC and ANSI market areas.
- To ensure a future-proof product approach.

This release then comprises of two variants, based on the primary intent or application are defined as follows:

- COM600S IEC – COM600 for substation automation, analysis and data management (for IEC markets)
 - COM600S IEC is a substation automation, analyzer and data management unit that integrates devices, facilitates operations, manages communication and runs analysis applications pertinent to equipment or operations in utility or industrial distribution substations.
- COM600F ANSI – COM600 as distribution automation controller (for ANSI markets)

- COM600F is a dedicated distribution automation controller unit that runs distributed grid and feeder applications for ANSI power networks and inherits all core features of the COM600 series.

2.3. Overview of COM600

COM600 provides gateway functions for mapping signals between protection and control IEDs in industrial or utility substations and higher-level systems. It further includes an optional WebHMI that provides data and information from the substation to the users.

COM600 gathers data from protection and control IEDs and from process devices using different communication protocols. The supported protocols can be combined freely in one station computer, limited only by the number of hardware interfaces and the license. COM600 uses web technology to display data to different users in a professional and user-friendly manner. The web technology is further used to transfer information to a network control center (NCC) or distributed control system (DCS).

COM600 benefits from the potential of the IEC 61850 standard by using the IEC 61850-6 substation configuration language (SCL) and IEC 61850 -7 communications modeling regardless of protocol used. As the IEC 61850 data modeling is used for all communication protocols the gateway cross-reference is done in the same way regardless of the protocol, for example IEC 61850-8-1 or DNP3. '

With the optional WebHMI, COM600 can be used for efficient substation visualization, monitoring, and control. The supported browsers are Microsoft Internet Explorer, Mozilla Firefox® and Google Chrome. Measured values from process devices are displayed on the WebHMI. Single-line diagrams can be used to view any available measured values from the process devices.

2.4. Predefined user account

The predefined **COM600** user account also works as a WebHMI administrator user account. It's not possible to modify it in any way from the WebHMI though. It cannot be deleted, it's not possible to change its user group and its password must always be changed from SAB600.

3. Configuration

3.1. About this section

This section describes the configuration tasks for WebHMI.

3.2. Operating system access permissions using local browser

When using COM600 browser locally in the COM600 computer, it can be specified whether the browser locks down the access to the operating system functions for non-administrator users.

The C:\Program Files\COM610 GW SW\WebBrowser folder in the COM600 computer contains a `config.ini` file, which has an option called `useLockedMode`. By default it is set to value 0, which means that no locking is done. When set to 1, the access to operating system functions is disabled from non-administrator users.

3.3. Prerequisites

Before you start configuring the WebHMI, pay attention to the following:

1. Prepare the communication structure as instructed in COM600 User's Manual.
2. Make sure that you have the necessary connectivity packages or SCL description files that can help you in the configuration process.
3. Outline the Single Line Diagram structure you want to create for your system.

Use the Management function to update the COM600 communication configuration at least once before you start the substation configuration. If you do not update the configuration, the statuses of objects in WebHMI Single Line Diagram can be bad or uncertain.

To fix the statuses of objects in Single Line Diagram:

1. Save the substation configuration.
2. Update the COM600 configuration with the Management function by changing any property in SLD Editor and by clicking **Apply**.
3. Update the COM600 configuration again using with the Management function.

3.4. Creating substation structure and communication structure

3.4.1. Creating substation and communication structures with SCL descriptions or connectivity packages

To create the substation and communication structures with SCL descriptions or connectivity packages:

1. Create Substation and Voltage level objects to the substation structure.
2. Create the OPC Server and communication channel objects to the communication structure.
3. Create the IED object below the communication channel and use either the connectivity package or IED SCL description file to populate automatically the structure below the IED. The substation structure is automatically populated with primary apparatus objects described in the connectivity package or SCL descriptions. You may be prompted to give some information to guide the process, for example choose a voltage level or give a bay name.
4. Repeat step 3 for each IED.
5. Fine-tune the SLD layout (assign colors, specify incoming/outgoing feeders, and so on) by modifying or adding objects. Additionally you might need to create busbar connections, see 3.4.2, Creating substation structure manually .
6. Download the configuration to the COM600 computer.

3.4.2. Creating substation structure manually

The following is an overview of creating a substation structure manually. For a more detailed description, see 3.4.3, Adding Gateway object, 3.4.4, Adding Substation, 3.4.5, Adding voltage level object, 3.4.6, Adding bay object and 3.4.7, Adding busbar object.



Before you can create a substation structure, you have to create a communication structure with OPC Server and communication channel objects, IEDs, Logical Devices, Logical Nodes and Data objects.

To create the substation structure manually:

1. Create Gateway, Substation and Voltage level objects to the substation structure.
2. Add bays and busbars, and design their layout using the SLD Editor. Connect your substation structure objects to communication structure (logical nodes) using the data connection function, see 3.6.1, General information about Data connection .




If the configurations of the bays are similar, you can copy the bay object and the data it contains. This way you do not have to add each bay separately to the substation structure.

3. Design your voltage level layout by connecting busbars and bays and relocating them with the SLD Editor. Open the SLD Editor by right-clicking the voltage level object.
4. Design your substation layout by connecting possible transformer windings between voltage levels. Relocate voltage levels with the SLD Editor. Open the SLD Editor by right-clicking the substation.
5. Fine-tune SLD settings, for example fonts and colors, see 3.6.2, Settings .

3.4.3. Adding Gateway object

To link the Gateway object to the substation structure:

1. Select the Gateway object in the Communication structure.
2. Copy the Gateway object by selecting **Edit > Copy** or by right-clicking the object and selecting **Copy**.
3. Open the Substation structure.
4. Select the project name and right-click it.
5. Select **Paste Link**, see Figure 3.4.3-1.
6. Modify the Gateway properties if necessary.

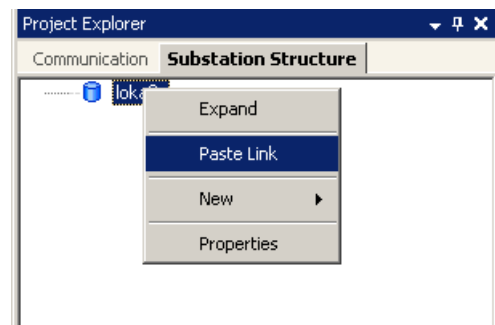

linkGW.bmp

Figure 3.4.3-1 Linking a Gateway object

The object properties for the Gateway are presented in Table 3.4.3-1.

Table 3.4.3-1 Object properties for Gateway

Property/Parameter	Vale or Value range/Default	Description
Basic		

Property/Parameter	Vale or Value range/Default	Description
COM600 Audio Alarm	True False Default: True	Defines if local audio alarm is enabled in COM600 hardware.
COM600 Version	Default: 3.3	Version of COM600.
Event File Path	Default: none	Defines the path where event list log is store.
Event List Capacity	0...65535 Default: 1000	Defines the capacity of Event List in WebHMI.
Station/remote IP Address		Defines which WebHMI client IP addresses are reserved for local use inside station. This information is used for the station/remote switch handling. E.g. "192.168.7."
Watch Dog Enabled	True False Default: True	Defines if Watch Dog is enabled.
Web Client Audio Alarm	True False Default: True	Defines if audio alarm is enabled for the WebHMI clients.
External Watchdog		
Command OPC Item Path		The full path of the command OPC item. E.g. "ABB.SPA_OPC_DA_Server.Instance1.SPASChannel\SPA-COM\SACO16D2B\LD1\LLN0\Wd\ctlVal".
Command Write Interval	0...65535 Default: 5	The interval in seconds that determines how often the command is executed.
Command Write Value	0...65535 Default: 1	The value that is written to the command OPC item.
DCOM		
IP Address		IP address of COM600 computer.

3.4.4. Adding Substation

After the Gateway object has been successfully added, you can continue building the object tree by adding substation objects.

To add a substation object:

1. Select the Gateway object and right-click it.
2. Add a substation object by selecting **New > Functional > Substation**.
3. Rename the new object. The names of the substation objects have to be unique.
4. Modify substation properties if necessary.



You can define only one substation per project.

3.4.5. Adding voltage level object

After the substation object has been successfully added, you can continue building the object tree by adding voltage level objects.

To add a voltage level object:

1. Select the substation object and right-click it.
2. Add a voltage level object by selecting **New > Functional > Voltage Level**.
3. Rename the new object. The names of the voltage level objects have to be unique.
4. Modify voltage level properties if necessary.

The object properties for voltage level are presented in Table 3.4.5-1.

Table 3.4.5-1 Object properties for voltage level

Property/Parameter	Vale or Value range/Default	Description
Basic		
Multiplier	Default: kilo	Multiplier
Voltage	20	Nominal voltage.
Library References		
References		Add/delete reference links to files in Document Library.

3.4.6. Adding bay object

After the voltage level object has been successfully added, you can continue building the object tree by adding bay objects.

To add a bay object:

1. Select the voltage level object and right-click it.
2. Add a bay object by selecting **New > Functional > Bay**.
3. Rename the new object. The names of the busbar objects have to be unique.
4. Modify bay properties if necessary.

5. Design the bay layout using SLD editor, see 3.5.1, Using the SLD Editor.
6. Use the data connection function, see 3.6.1, General information about Data connection.

3.4.7. Adding busbar object

After the voltage level object has been successfully added, you can continue building the object tree by adding busbar objects.

To add a busbar object:


1. Select the voltage level object and right-click it.
2. Add a busbar object by selecting **New > Functional > BusBar**.
3. Rename the new object. The names of the busbar objects have to be unique.
4. Modify busbar properties if necessary.
5. Design the busbar layout using SLD editor, see 3.5.1, Using the SLD Editor.

3.5. Single Line Diagram

3.5.1. Using the SLD Editor

To open the SLD Editor, select substation, voltage level, bus, or bay object and right-click them. Then select SLD Editor from the menu. The higher level contains the layout of the lower levels.

With the SLD Editor you can add objects to the Single Line Diagram, modify existing objects, and specify electrical connections. You can also fine-tune the layout of the diagram and add and modify descriptive texts. You can drag and drop symbols needed in the SLD from the symbol library. Click **Preview** to preview the layout of the diagram. The supported browsers are Microsoft Internet Explorer, Mozilla Firefox, and Google Chrome.

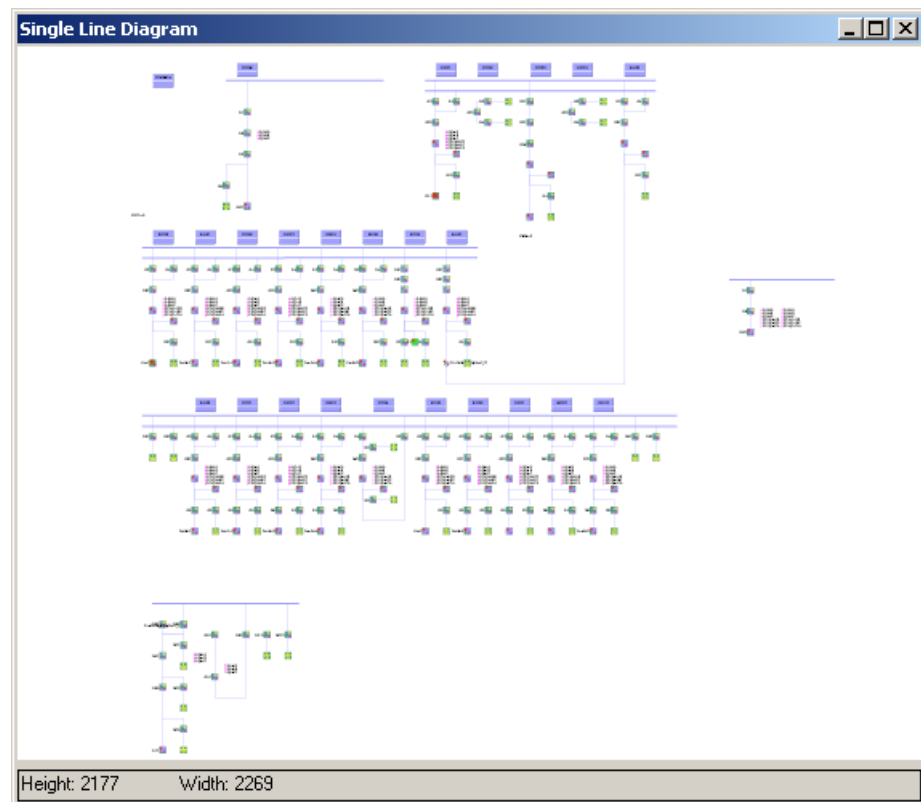

SLDPreview.bmp

Figure 3.5.1-1 SLD Editor preview

To open the SLD Editor Tool:


1. Click the Substation structure tab.
 2. Select the Bay or the Busbar object.
 3. Right-click on the Bay or the Busbar object and select **SLD Editor**.
- or
- From the main toolbar, select **Tools > SLD Editor**.

Creating a diagram with the SLD Editor

To create a diagram with the SLD Editor:

1. In the Symbols view, click the tabs to view the different sets of symbols, see Figure 3.5.1-2.
2. Click a symbol you want to use and drag it with the mouse to the Single Line Diagram view.
3. Place Connectivity Nodes between switches and transformers that will be connected.
4. Select the Direct Link tool from the SLD toolbar. Link the symbols together by clicking first the start and then the end point of a connection.

Symbols can be graphically grouped by drawing a rectangle border around them by selecting the **Rectangle** button. This feature is only a visual aid and does not affect the functionality of the SLD.

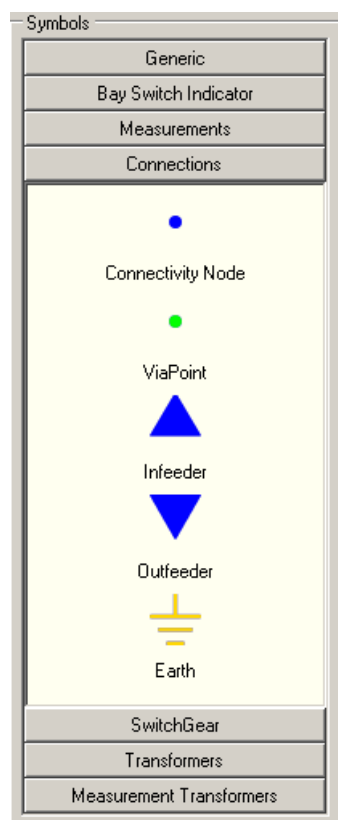

SLD_symbols.bmp

Figure 3.5.1-2 SLD symbols

Bay SLD

To create a bay SLD:

1. Add primary objects (Switchgear objects, measurement transformers, and power transformers).
2. Rename the primary object using the name property in the property grid. This name is used in WebHMI for the object.
3. Add primary Connection objects (for example, feeders, earth symbols).
4. Add Connectivity Nodes.
 - Switchgears are connected to each other with a connectivity node.
 - Feeder objects are connected to switchgear objects with a connectivity node.
 - Transformer objects are connected to switchgear objects with a connectivity node.



Do not add connectivity nodes to the connection between the busbar and the bay switchgears.



Do not add connectivity nodes between the earth symbol and the switchgear object (disconnecter).




To connect a power transformer to another bay, create a connectivity node in the target bay (not in the bay where the power transformer is located).



Default relative sizes of the symbols can be configured using the Settings tool of the Gateway object. Default values can be overridden for individual symbol instances with the Relative Size property of the symbol instance. This makes it possible to have individual sizes for symbols in the SLD.

5. Add Via points, if you want the line to follow a certain route.
6. Connect objects
 - Activate the Direct Link tool from the tool bar.
 - Link two objects together by selecting their link points.

Additionally you can add for example a Bay Switch indicator, annotations, and measurement text boxes.

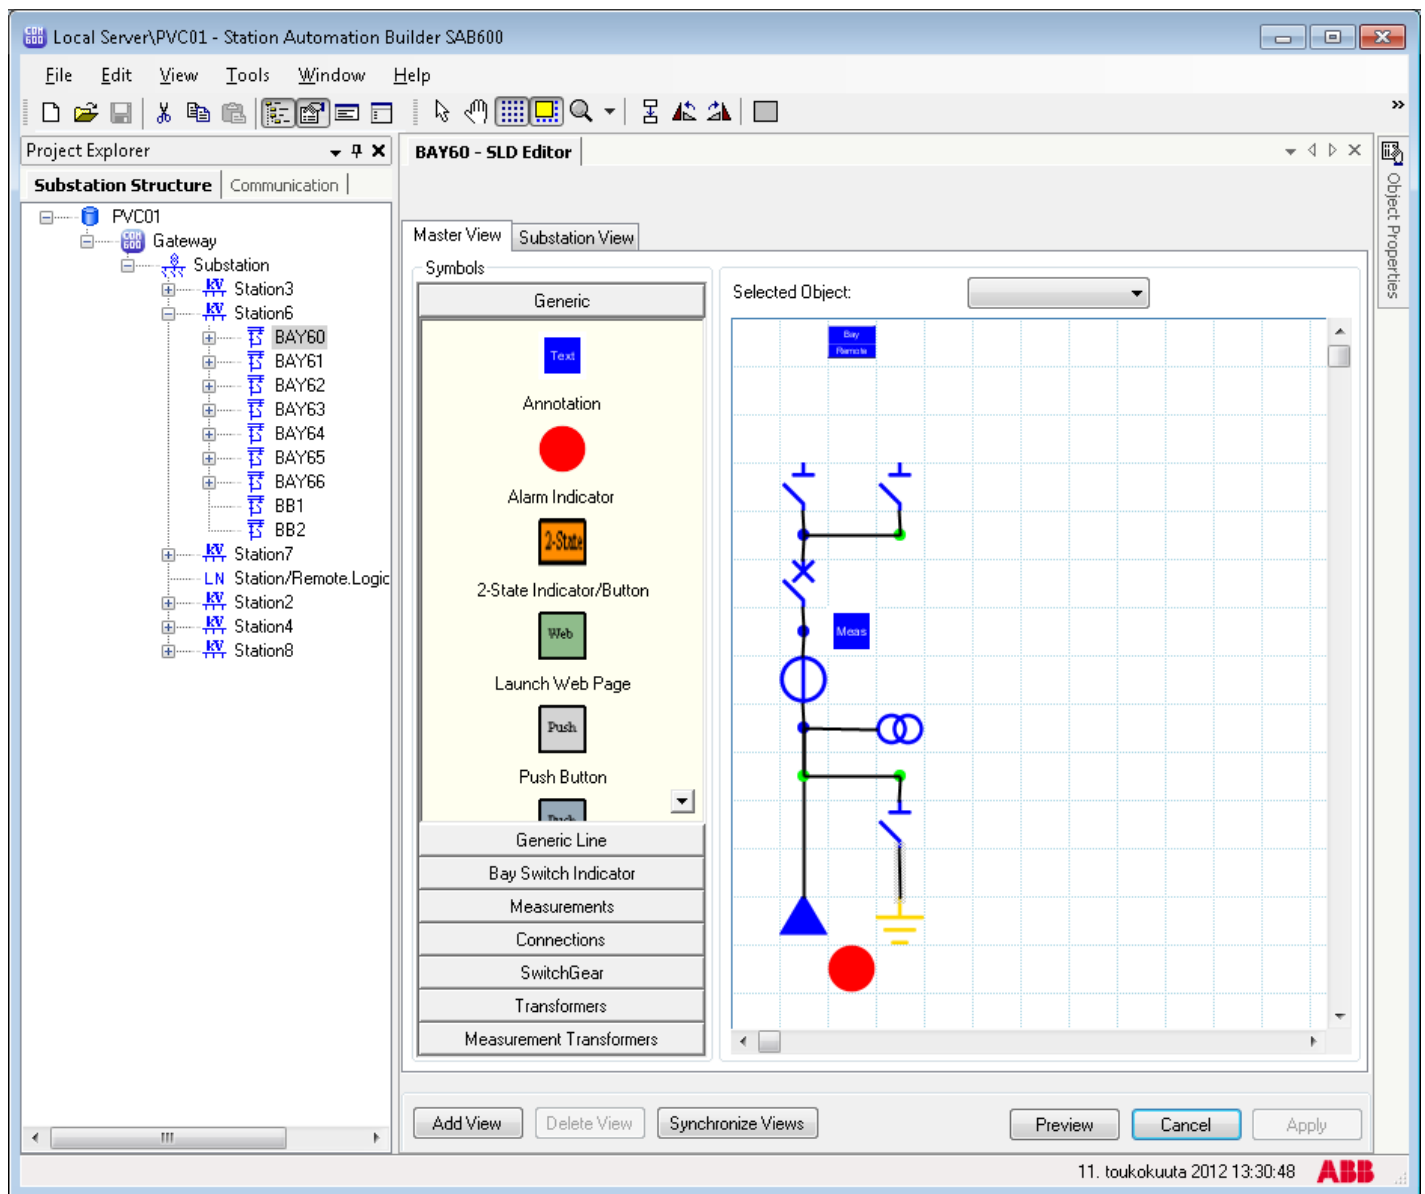

Bay_SLD.png

Figure 3.5.1-3 The Bay SLD view

Measurement text box configuration




To configure the Measurement text box, use the Data Connect function to connect the measurement logical nodes from the communication structure to the bay.

To configure the Measurement text box:

1. Right-click the object and select Configure Measurement function from the menu.
2. Using the configuration dialog, select the measurements to be shown in WebHMI.



If the IED does not provide a unit for the measurement, it is possible to specify the unit here.

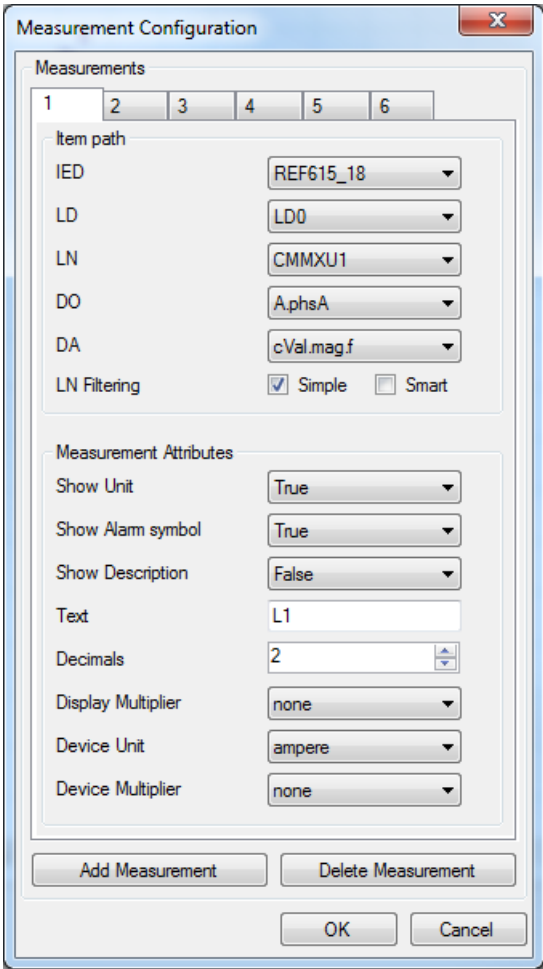

The image shows the 'Measurement Configuration' dialog box. It has a title bar with a close button. Inside, there's a 'Measurements' section with a tabbed interface (tabs 1-6, tab 1 is active). Under 'Item path', there are dropdown menus for IED (REF615_18), LD (LD0), LN (CMMXU1), DO (A.phsA), and DA (cVal.mag.f). There's a checkbox for 'LN Filtering' with 'Simple' selected. Below is the 'Measurement Attributes' section with dropdowns for 'Show Unit' (True), 'Show Alarm symbol' (True), 'Show Description' (False), a 'Text' field (L1), a 'Decimals' spinner (2), 'Display Multiplier' (none), 'Device Unit' (ampere), and 'Device Multiplier' (none). At the bottom are 'Add Measurement', 'Delete Measurement', 'OK', and 'Cancel' buttons.

Measurement_configuration.png

Figure 3.5.1-4 The Measurement Configuration dialog

Button configuration



To configure buttons, use the Data Connect function to connect the measurement logical nodes from the communication structure to the bay.

You can configure the following buttons:

- **2-State Indicator/Button** is a button with two states: on (or pressed) and off (otherwise). Optionally, you can click it to change the button to the opposite state. The **2-State Indicator/Button** can be used, for example, to change IED's autoreclosing mode or tap changer auto/manual mode.
 - It's possible to use this button type to control DPC data objects. In this case it's not necessary to configure any off and on values.
 - Using the button in the indication-only mode with DPS data objects is also supported. In this case the "On" value should be configured as "DPS" to enable DPS semantics for the value, i.e. "Off" = 1, "On" = 2 and all other values are invalid. Normally the configured "On" value decides the on state and all other values are used for the off state.
 - If a button using a DPC or DPS data object is updated with an invalid value, then the button state will be neither on nor off, instead an invalid state will be displayed.
- **Push Button** is a button that can only be clicked and has no state. Each time the you click the button, it sends a command to the process. The **Push Button** can be used, for example, to trigger a disturbance recording.
- **Push Button With Value** is a variation of a Push Button. It allows the command value to be specified manually each time instead of using a pre-configured command value like Push Button. The **Push Button With Value** can be used to send an integer or a float value to a certain data object. An optional indication will be used to retrieve the current value to the command value input field of the opened control dialog.
- **Multiple State Button** is a button that has multiple states (at least two). Each state needs to be configured. You can configure optional color and text for each state. The **Multiple State Button** can be used, for example, to show the status of a sequence step or health of an IED.


Bay Switch Indicator configuration



To configure the Bay Switch Indicator, use the Data Connect function to connect the logical node containing the Loc information (LLN0) from the communication structure to the bay.

To configure the Bay Switch Indicator:

1. Right-click the object and select **Configure Bay Switch Indicator** from the menu.
2. Using the configuration dialog, select the source for the local remote switch indication (for example LLN0.Loc.stVal) to be used in WebHMI.

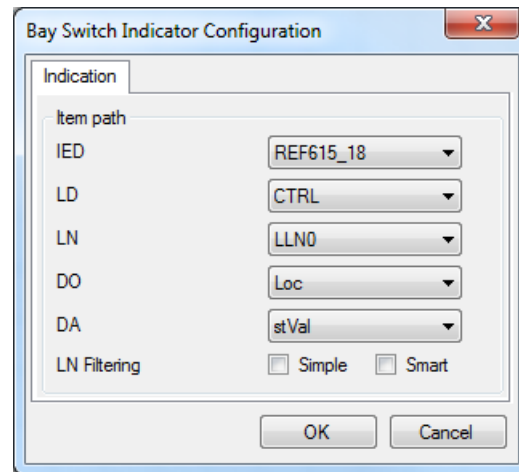

Bay_Switch_Indicator_configuration.png


Figure 3.5.1-5 The Bay Switch Indicator configuration dialog

Busbar SLD

To create a busbar SLD:

1. Add Busbar start and end objects (only one start and end point is allowed).
2. Add a Connectivity Node (one connectivity node is enough to connect all bays to this busbar).
3. Connect the objects.
 - Activate the Direct Link tool from the tool bar.
 - Two objects linked together by selecting their link points.

You can adjust the size of busbar in the bay and voltage level views as well as the busbar view. You can also add annotations.

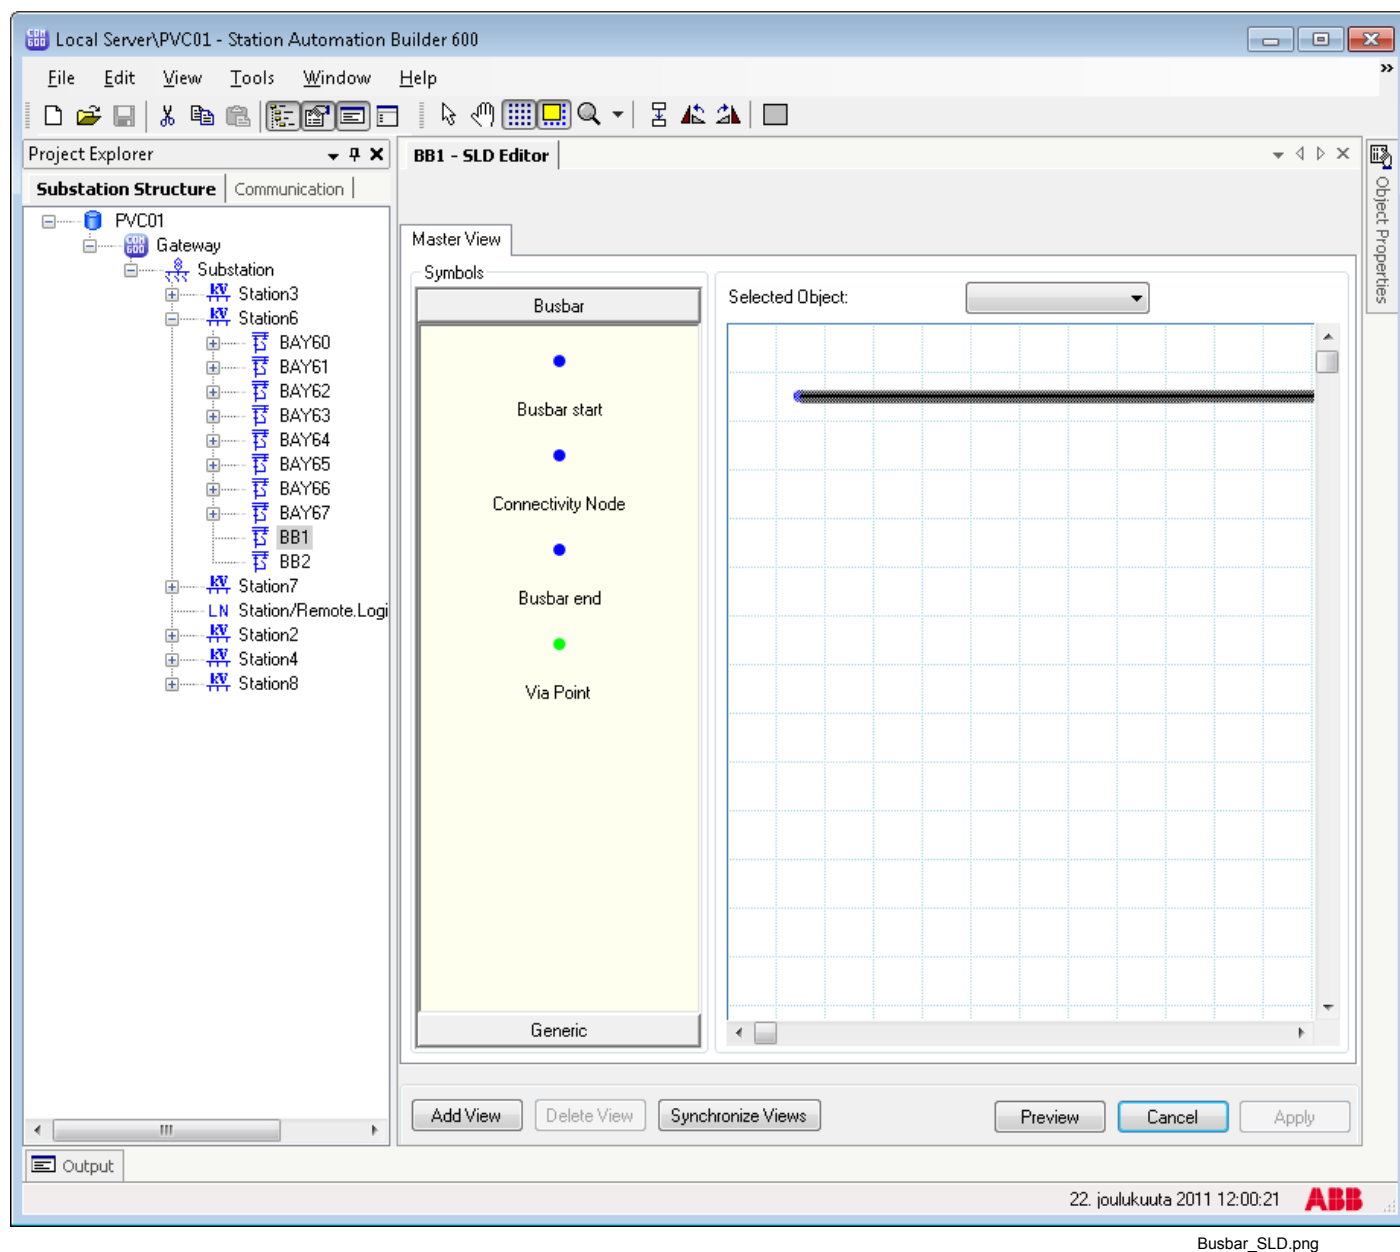

Busbar_SLD.png

Figure 3.5.1-6 The Busbar SLD view

Busbar Coloring

Busbar Coloring is automatically configured when the SLD is drawn. Connecting switchgear objects together specifies their electrical connections, which is used during runtime to calculate the proper coloring. **Settings** tool in the substation gateway object has tab page for the Busbar coloring, where, for example, the used colors can be modified.

The value of the voltage property on the voltage level object is used for the voltage level based busbar coloring mode.


Configuring the powered state for incoming feeder and generator

1. Select the IFL or GEN object in the SLD editor.
2. Right-click it, and select **Configure Powered Rule** from the menu.

There are three different rules for detecting the powered state. Configure at least one of the following three rules so that the busbar coloring works correctly.

- A measurement value must be greater than the configured value.
- A data object value is equal to the configured value.
- A data object value is unequal to the configured value.

If the result of all configured rules is true, the object is considered as powered by the busbar coloring logic.

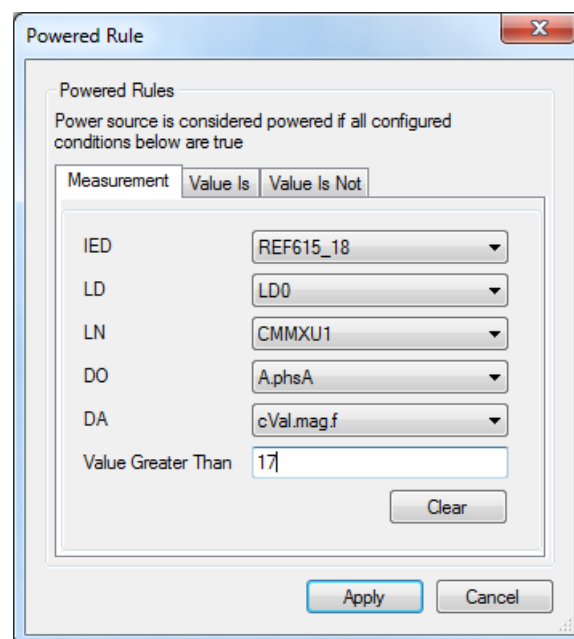

sldPoweredRule.png

Figure 3.5.1-7 The Powered rule dialog

Voltage level SLD

To create a voltage level SLD:

1. Drag the bays to correct locations in the SLD (name of the selected bay can be seen in the property grid).

2. Connect bays to busbars. Select a bay, right-click it and select **Connect to a Busbar** from the menu.
3. In the configuration dialog, select the corresponding switchgear and the busbar object to connect them.
4. If you need to connect a bay to another directly, select a bay, right-click it, and select **Connect to a Bay**.
By doing this the bays will be connected via regular line.



The SLD Editor shows the lines between the bays and the busbar connected to the same point in the busbar. However, the lines are drawn to separate locations in WebHMI.

5. If you want to fine-tune the SLD Editor layout for the connection lines, you can add a StopAt object from menu of the line. Move the StopAt point to the correct location in the busbar.

You can also add annotations.

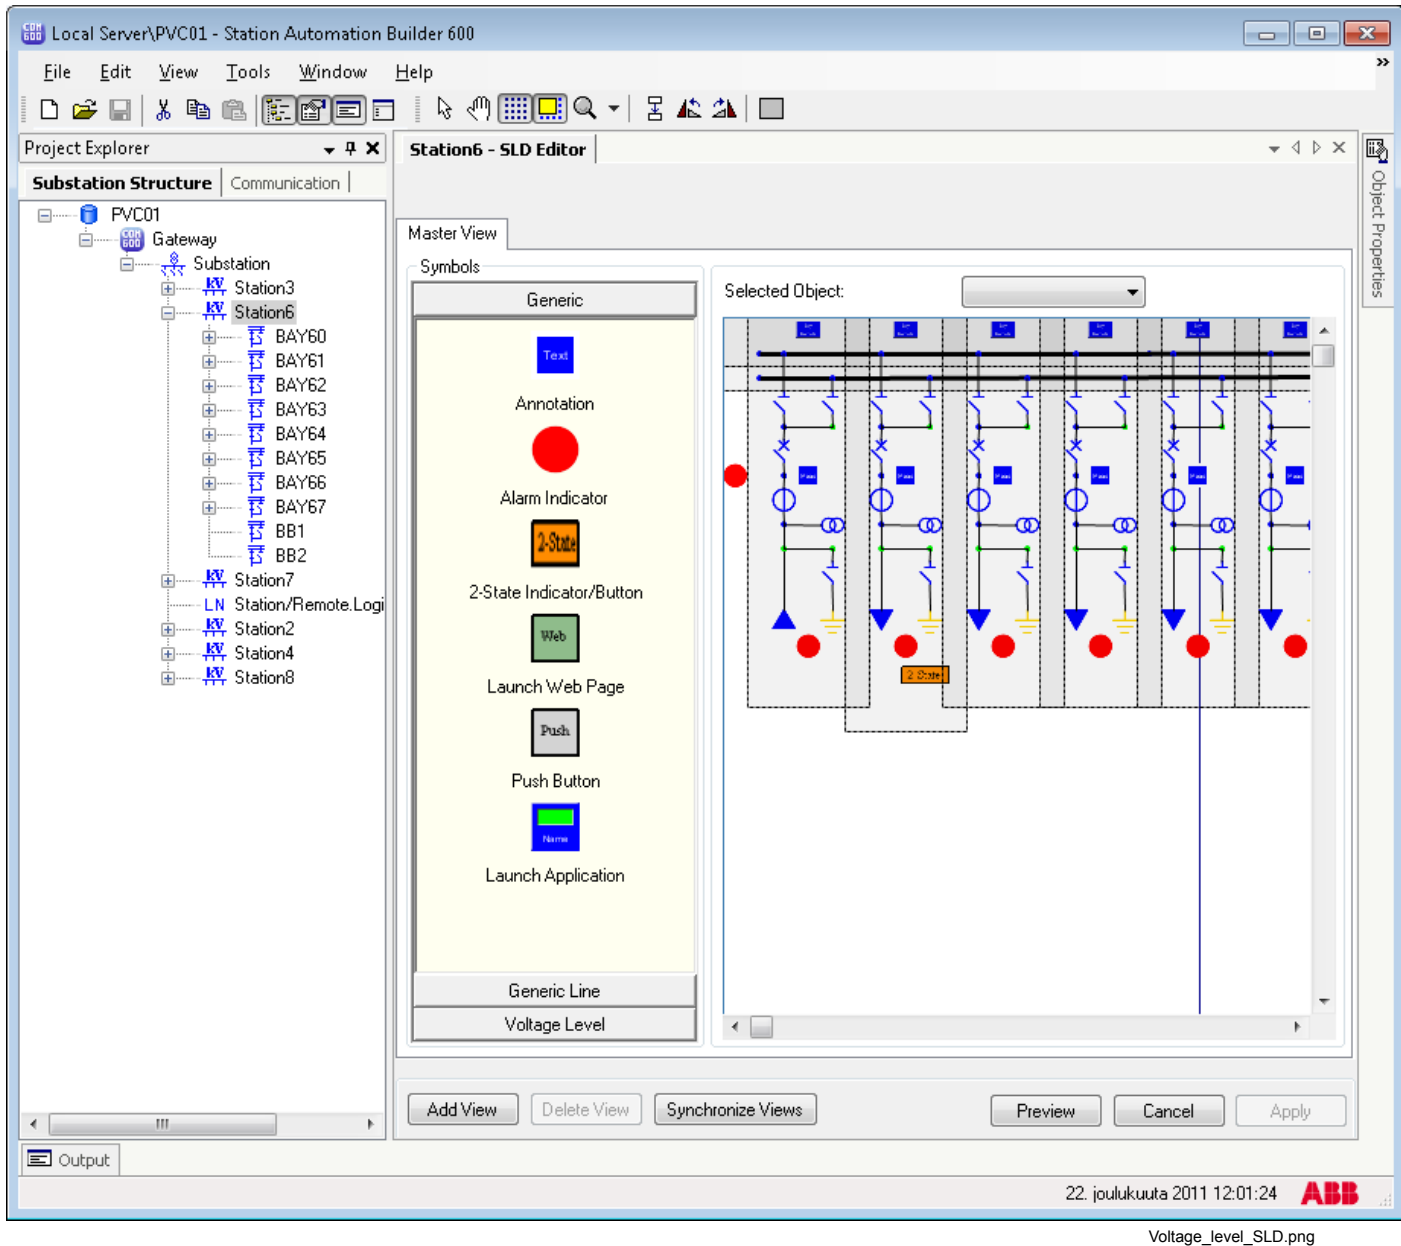


Figure 3.5.1-8 The voltage level SLD view

Substation SLD


To create a substation SLD:

1. If you have more than one voltage level object, drag the objects to correct locations in the SLD.

2. Voltage levels are connected to each other via a power transformer. Select a voltage level containing the transformer, right-click it and select **Connect Winding** to a bay function from the menu.
3. Using the configuration dialog, you can select winding and the target bay/connectivity node.
4. Add Station switch indicator (local/remote) Configuration.



To configure the Station Switch Indicator, use the Data Connect function to connect the logical node containing the information (SPS CDC) from the communication structure to the substation.

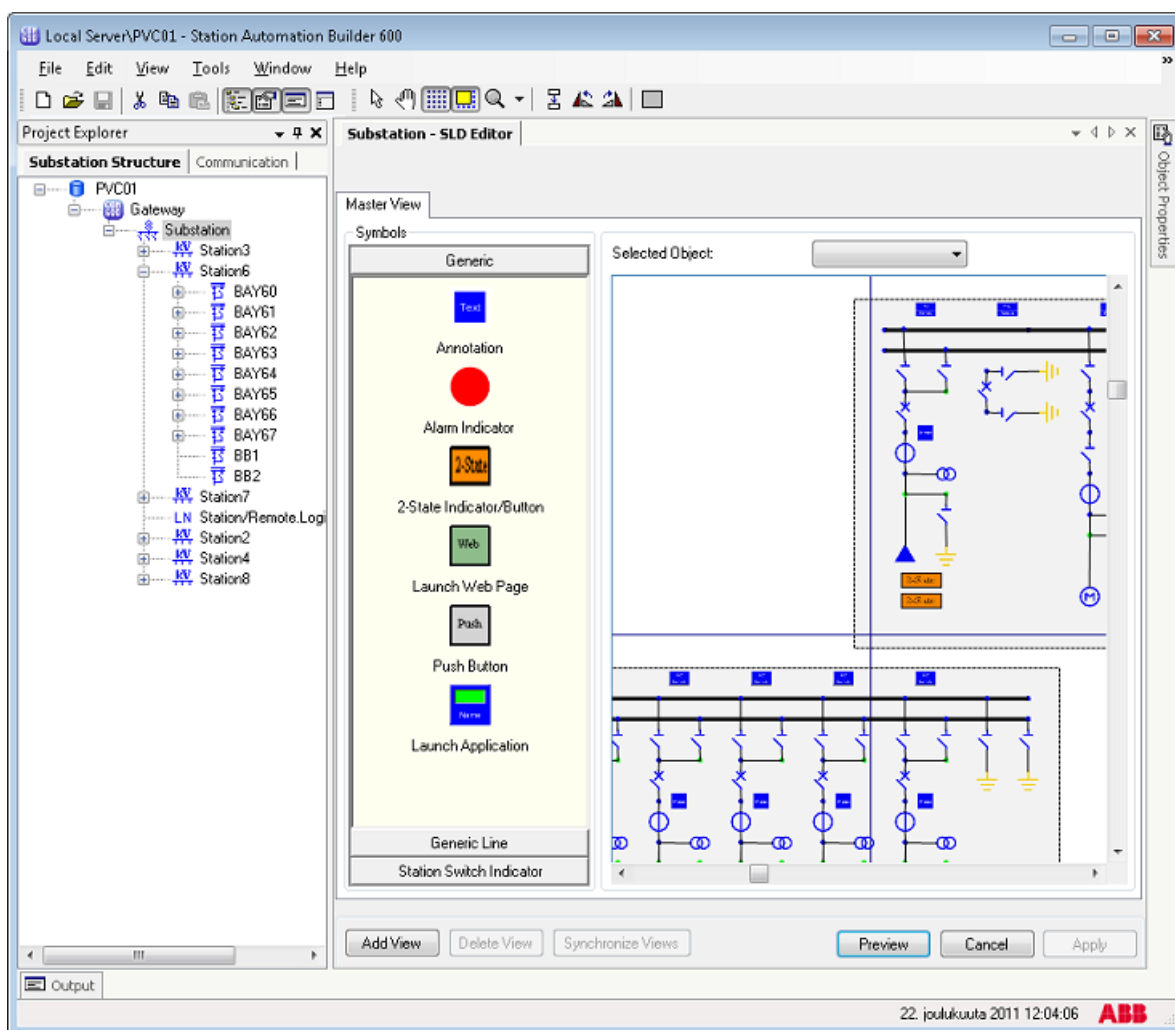

SLD_Editor.png

Figure 3.5.1-9 Substation SLD view

3.5.2. Multiple SLD views

COM600 WebHMI supports customized SLD views for substation, voltage level and bay objects. By default, the different SLD views are based on the same master SLD configuration, **Master View**.

Additionally, it is possible to create a bay-specific **Bay View**, for example, to give more detailed information about the bay. The **Bay View** overrides the **Master View** when the SLD is opened from the bay object in WebHMI. The substation and voltage level SLDs always show the bay SLD as in the **Master View** configuration.

The different views can be modified on each level and the modifications affect only the selected view. However, modifications on the **Master View** affect all other views. Extension objects, such as different types of buttons, are view-specific and can only be modified in the current view.


Master View

The **Master View** configuration is used for all views by default, when a customized **Substation View** or **Bay View** has not been configured. The **Master View** must always contain all the primary substation elements required in all views. Primary substation elements are conducting equipment, power transformers and connectivity nodes. Busbar coloring is based on the **Master View**.

Substation View (optional)

The **Substation View** can be used to override the substation SLD in the **Master View**. The **Substation View** contains substation and substation extension elements that are shown in the substation SLD in COM600 WebHMI. With the **Substation View** configuration it is possible to hide unnecessary elements from all levels.

- **Substation View** configured on a substation object specifies which voltage levels are shown on the substation SLD.
- **Substation View** configured on a voltage level object specifies which bays are shown for that voltage level on the substation SLD.
- **Substation View** configured on a bay object specifies which conducting equipment is shown for that bay on the substation SLD.

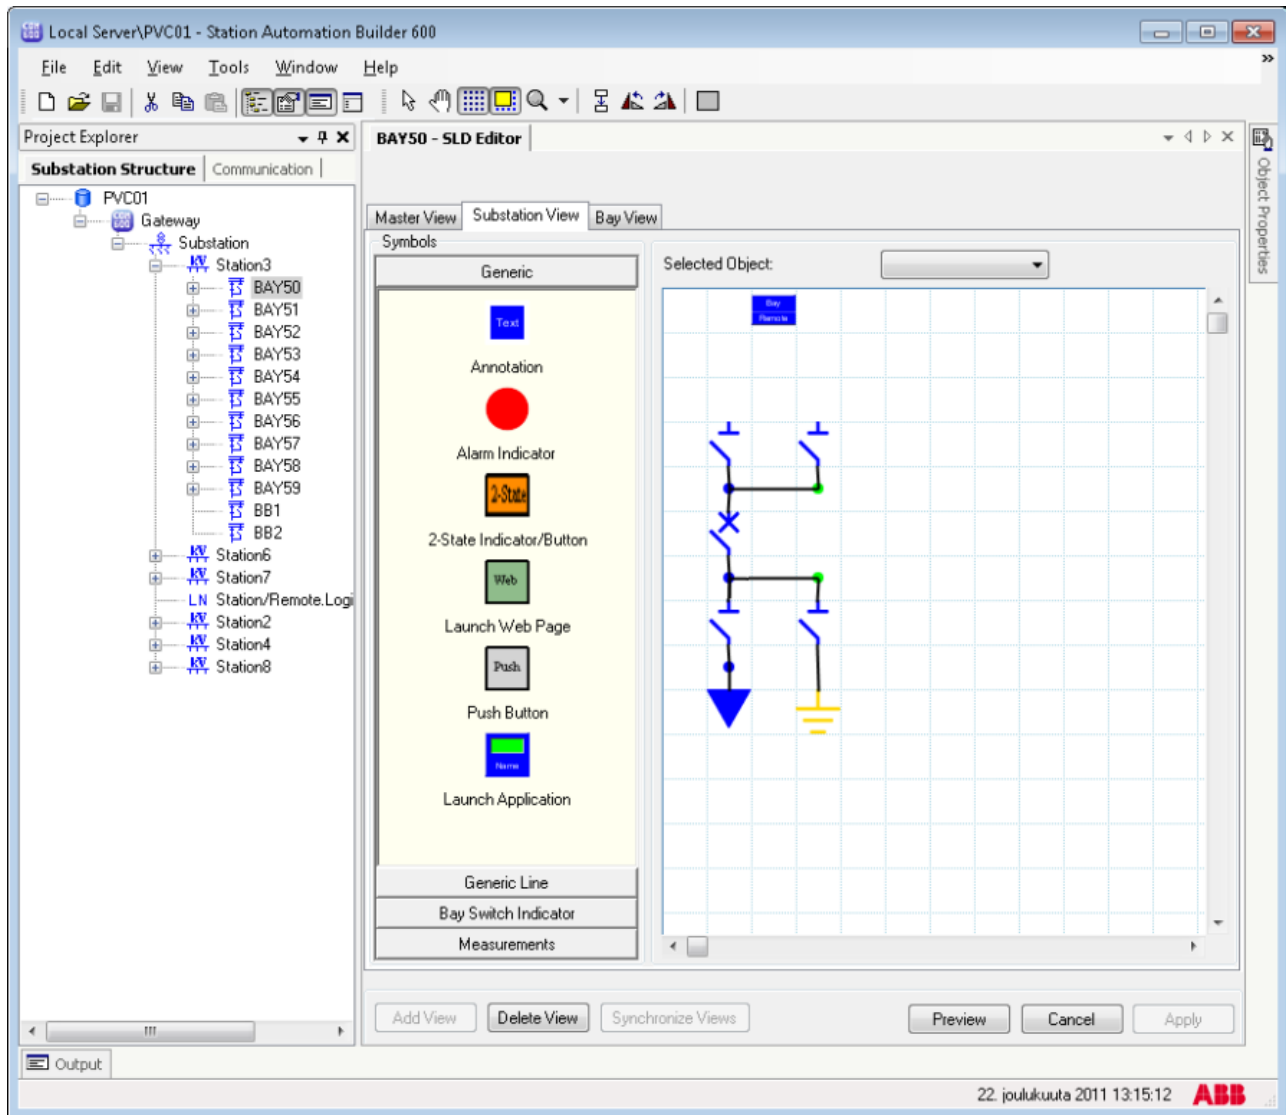


newsstationViewFromBayLevel.png

Figure 3.5.2-1 An example of a Substation View

Bay View (optional)

The **Bay View** can be used to override the bay SLD in the **Master View**. The **Bay View** contains substation and substation extension objects. The substation extension objects can be added to each view and they are bound to the view they are created on.

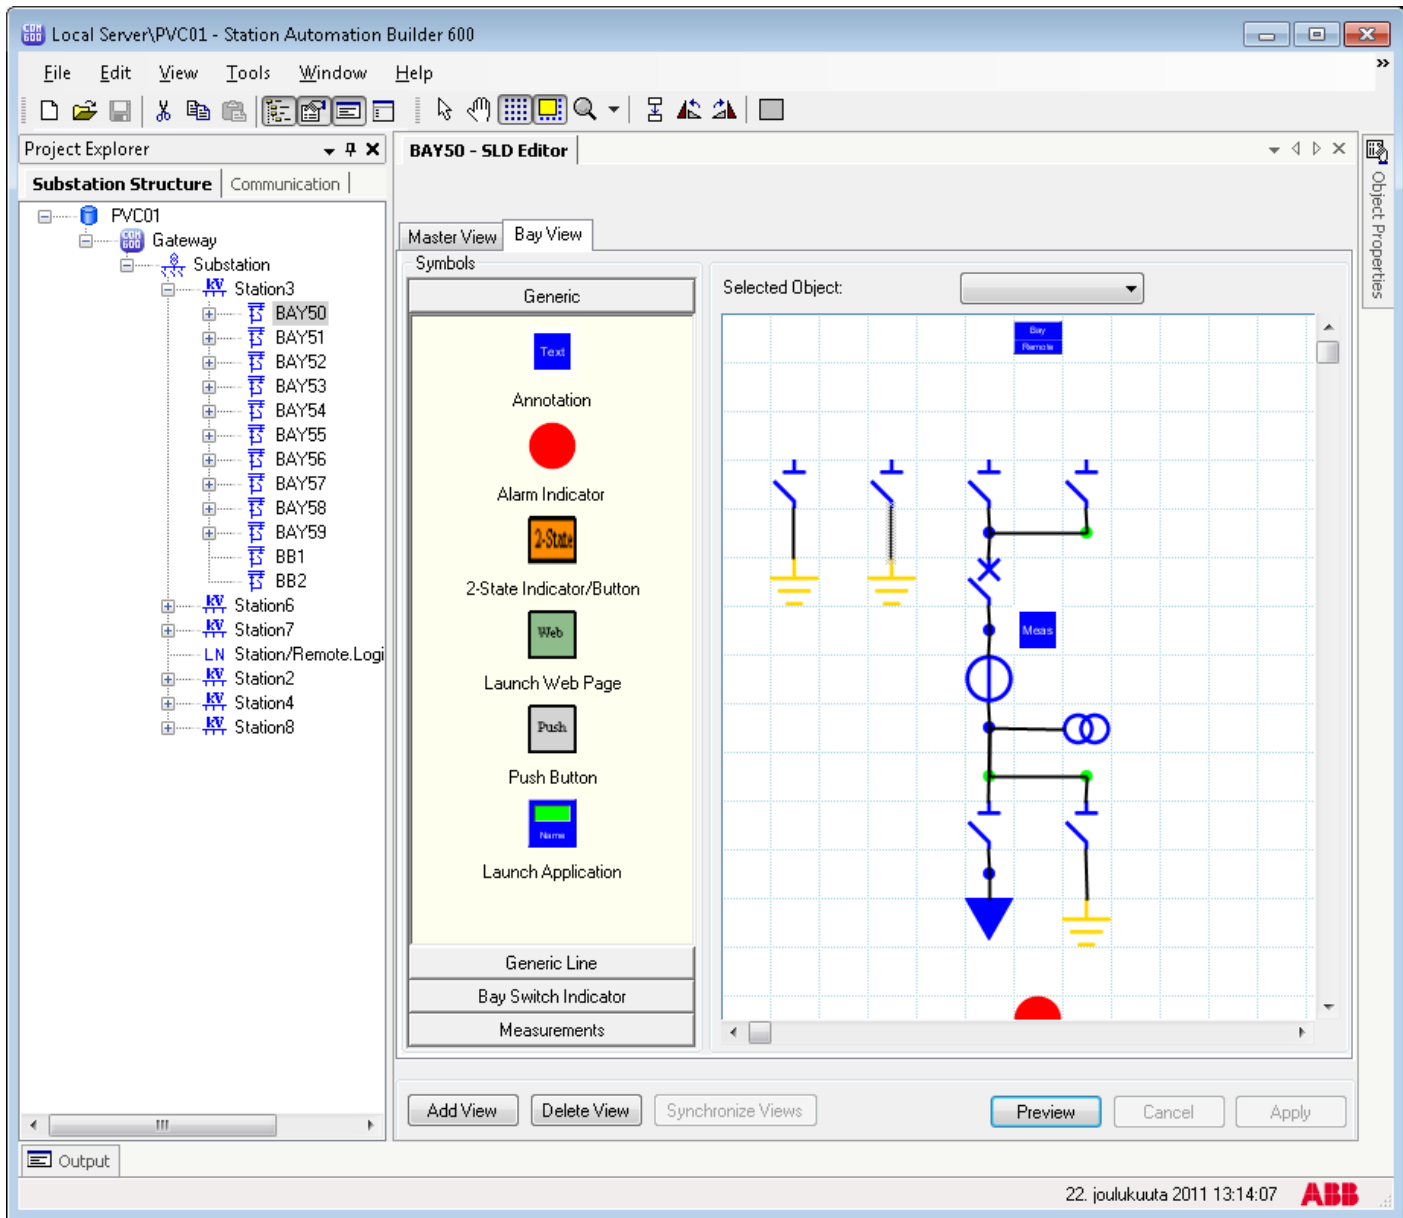

bayViewCreated.png

Figure 3.5.2-2 An example of a Bay View

Depending on the level, you can create the following views:

- On a bay level, you can create one **Bay View** and one **Substation View**.

- On a voltage level, you can create one **Substation View**.
- On a substation level, you can create one **Substation View**. If a **Substation View** has already been created for a particular substation or its child objects, it will be reused for the whole substation section on each level.



If the **Bay View** has not been explicitly defined in SAB, WebHMI will generate it on-demand when the operator opens the **Bay View**. If the **Substation View** with the bay has been defined, the on-demand **Bay View** is generated based on that. If the **Substation View** does not contain the bay, the **Bay View** is generated based on the **Master View**.

Custom Views (optional)

In addition to the **Substation** and **Bay Views** it is also possible to create any number of **Custom Views** for the Substation, Voltage Level and Bay objects.

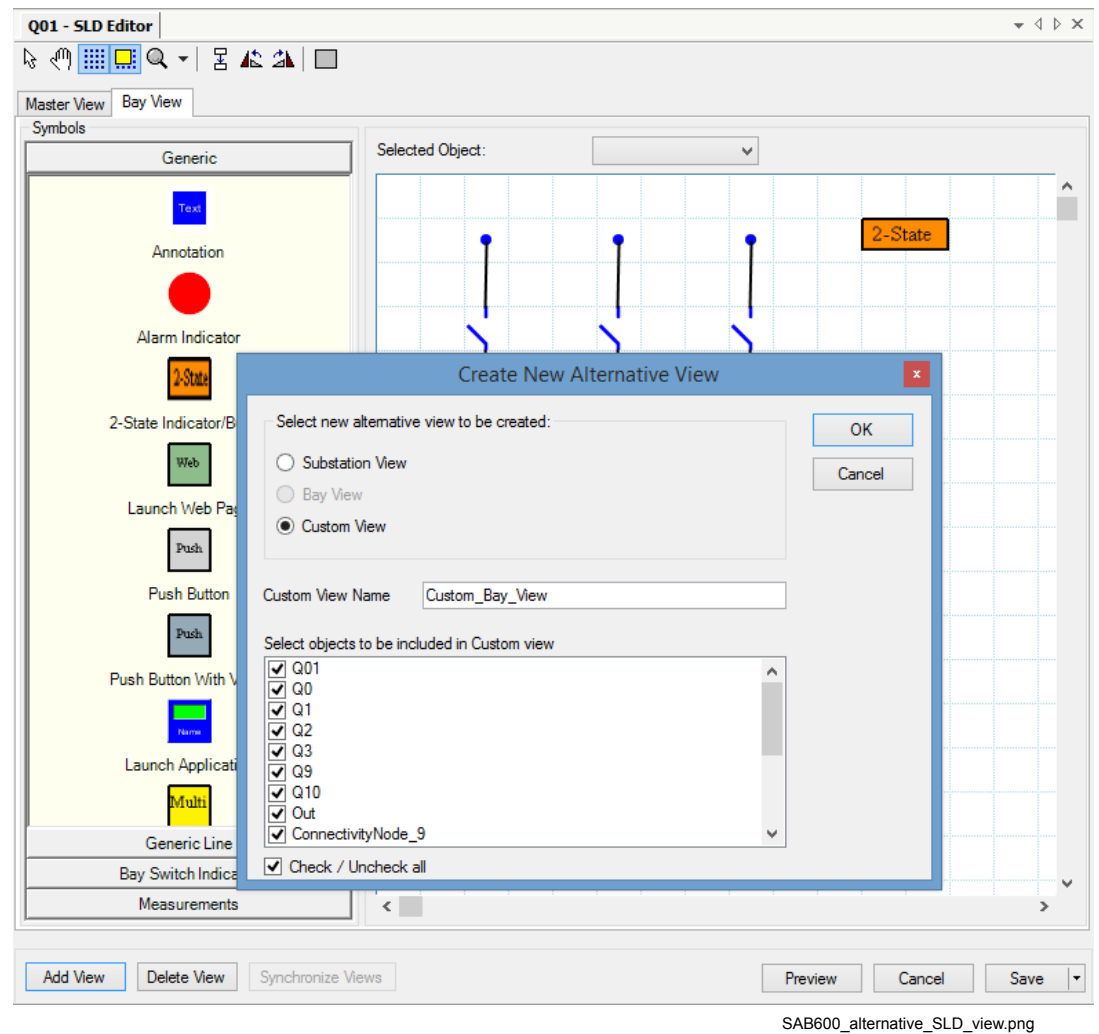


Figure 3.5.2-3 The Custom Views dialog

Custom Views are named and will appear as additional tree nodes under the object they belong to in the WebHMI substation tree. To open a **Custom View**, just select the corresponding node in the tree.


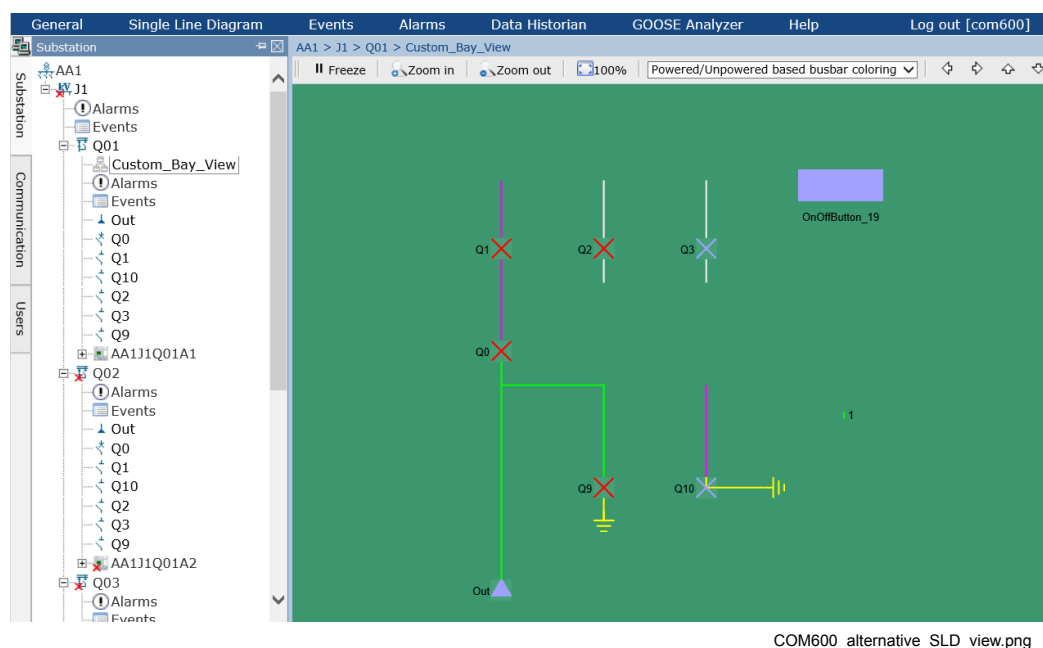


Figure 3.5.2-4 An example of a Custom View

The purpose of **Custom Views** is mainly to allow splitting up large views into multiple smaller views that are more manageable for the WebHMI users.

Synchronizing views

The **Synchronize Views** functionality can be used to re-introduce removed symbols to the views. It can be also used to remove objects from the views.

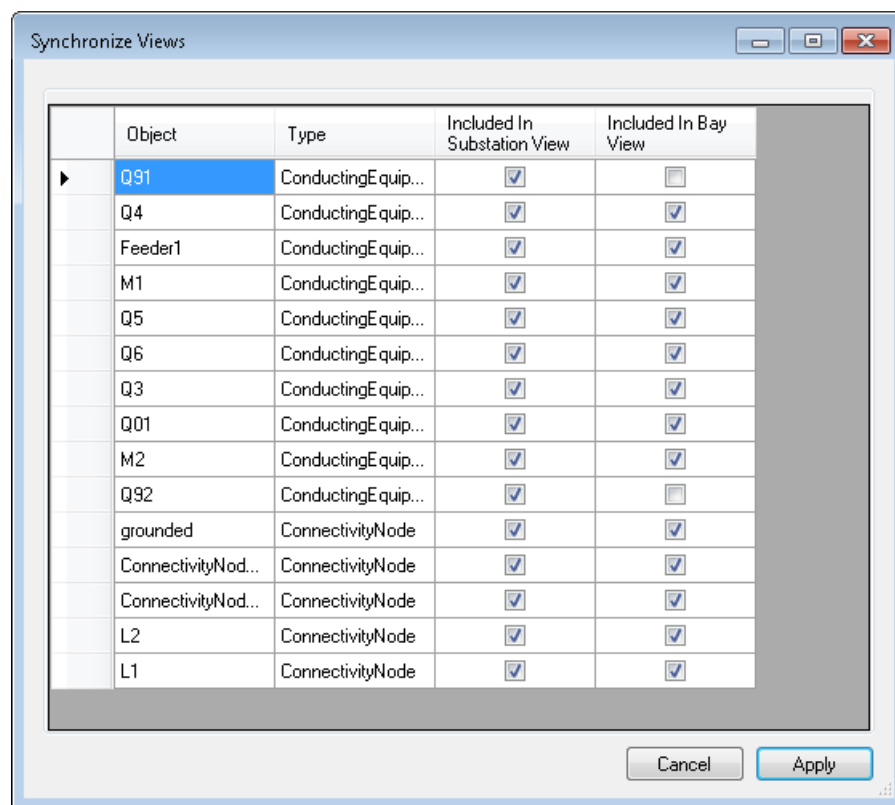

synchViews.png

Figure 3.5.2-5 The Synchronize Views dialog

The **Synchronize Views** dialog shows all common objects for the selected bay, voltage level or substation object. A column is shown for each created view. By selecting and clearing the check boxes, you can decide which objects are shown in different views.

3.6. Data connection

3.6.1. General information about Data connection

The Data Connection function is used to connect the substation structure objects to the communication structure. Process data values based on the communication structure objects are used to update the symbol states in WebHMI. It is also used to get object descriptions based on the substation structure names to the alarm and event lists.




Any data object that has event class defined in the communication structure, must be linked to the substation structure to get the proper description to the alarm and event.

Before you can use the Data connection function, create the communication structure, see 3.4.1, Creating substation and communication structures with SCL descriptions or connectivity packages.

To connect the substation structure objects to the communication structure:

1. In the Substation structure select a Substation, Bay, or Voltage level object and right-click it. Select **Data Connection** to open the Data connection function.
The objects in the substation structure are shown on the left side of the Data connection window. The logical nodes that can be attached to the objects are shown on the right side of the Data connection window.
2. Click a substation structure object on the left side of the Data connection window.
The logical nodes that can be attached to the objects are listed in the structure on the right side of the window.
3. Double-click the logical node to attach/detach it to the correct substation structure object.
4. Click **OK** to save the changes.

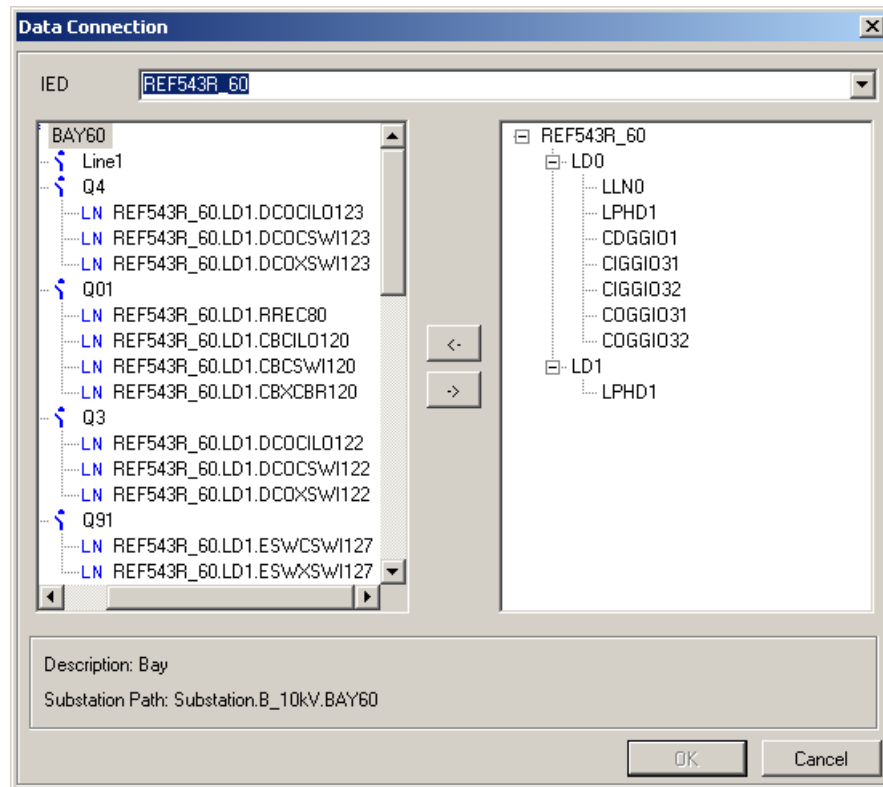

Data_connection.bmp

Figure 3.6.1-1 The Data connection window

3.6.2. Settings

You can define SLD settings in the **Settings** dialog. To open the **Settings** dialog, right-click the **Gateway** object and select **Settings**.

The Settings dialog contains the following tabs:

- **Generic:** You can define general settings, for example the symbol set (ANSI or IEC) and element size.
- **Alarm Settings:** You can define color settings and appearance for the alarms.
- **Measurement Status:** You can define color settings for different alarm levels.
- **Default Colors:** You can modify the default colors of devices.
- **Fonts:** You can modify the font definitions.
- **Measurement Precisions:** You can adjust the precision settings of the measurements.
- **Bus Bar Coloring:** You can define busbar colors and busbar settings.
- **Name Display:** You can define name display settings. These settings define how and if name is displayed next to the symbol.
- **Resource Text Sets:** You can modify measurement, quality, or local/remote resource texts. Measurement texts affect the Measurements page of WebHMI. Quality texts affect Alarm and Event Lists in WebHMI. Local/Remote texts are displayed with the Bay and Station Indicator.

3.7. Measurement page configuration

The Measurement Page Configuration Tool can be started from the bay, voltage level, or substation object in the Substation structure. The tool has two tabs: **Measurement Page** and **Options**. The configurable properties for the measurements are shown in Table 3.7-1.

In the Measurement Page Configuration Tool you can:

- browse all measurements objects.
- select / deselect measurements to the current measurement page and move the selected measurements up or down in the measurement page.
- exclude unimportant measurement data objects from the measurement page.
- export the selected measurements as a re-usable template.
- select measurements according to a specified measurement template.
- save the current measurement page configuration.

Table 3.7-1 Properties for measurement configuration

Property	Description
Selected	Select if signal is visible in the measurement view.
Source	Item path from IED to data attribute.
Description	If defined, overrides the description from the IED configuration.
Show Unit	Defines whether the unit is shown.
Decimals	Defines the amount of decimals shown.


Property	Description
Display Multiplier	Defines the multiplier for the measurement.
Device Unit	Overrides the unit which the IED is sending.
Device Multiplier	Overrides the multiplier which the IED is sending.

3.8. Document Library

The **Document Library** allows you can maintain a library of documents associated with the SCL elements.

To add files to the Document Library:


1. Launch the **Document Library** from the gateway object in the substation view. The **Document Library** window opens showing the files available in the library.

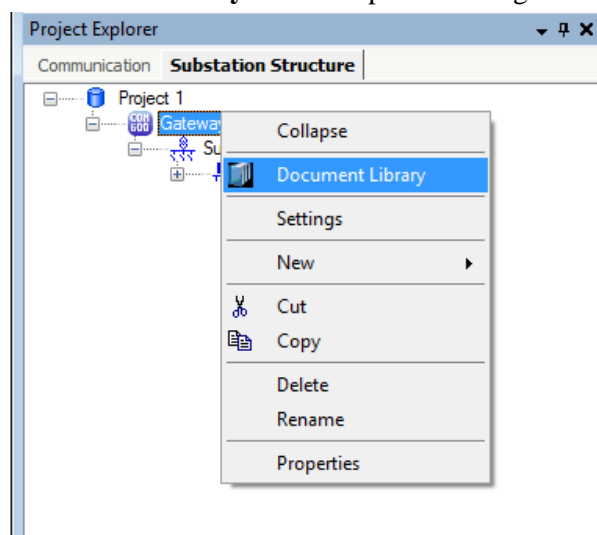

launch_document_library.png

Figure 3.8-1 Launching the Document Library

2. Click **Add file** to add new files to the library.

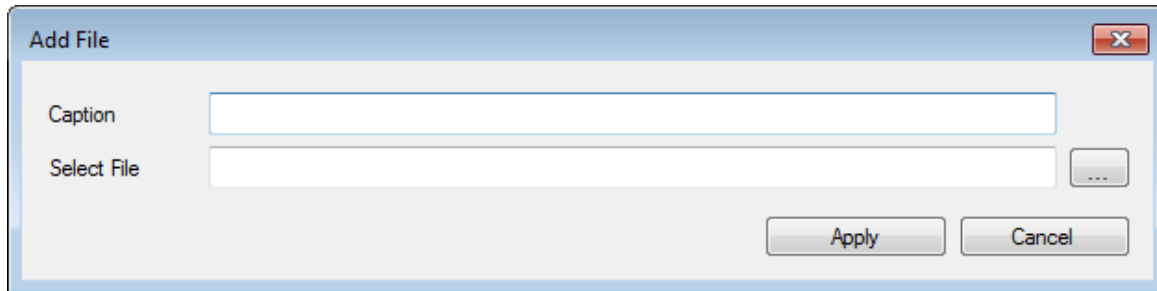

add_files_to_library.png

Figure 3.8-2 Adding files to the Document Library

3. Select a file to be added to the library, add a caption for the selected file, and click **Apply**.

Editing Document Library references

You can add or remove references to documents in the **Document Library**.

To add/remove document references:

1. In the substation view, open the object properties window of the object you want to add references to.
2. Click the **References** property to edit references to the documents in the **Document Library**.

3.9. Substation Summary Table configuration tool

The substation Summary Table configuration tool can be started from the substation and bay object in the substation structure.

In the Summary Table configuration tool you can:

- Create, delete, and rename pages which act as a logical container for different tables.
- Create or delete tables on each page.
- Manipulate tables by adding or removing rows or columns and re-positioning them.
- Bind cells to a data source for a dynamic status display.
- Save existing tables as templates for later use.


3.10. Alarm and event handling

3.10.1. General information about alarm and event objects

Alarm and event objects define the types of events and alarms that are generated and the alarm and event messages displayed in WebHMI. It is possible to create new alarm and event definitions (see 3.10.2, Creating event definitions) and configure existing alarm and event definitions (see 3.10.3, Configuring event definitions) and .

The communication structure contains the following event groups:

- Process Event Definitions
- Communication Diagnostic Event Definitions
- Common Event Settings

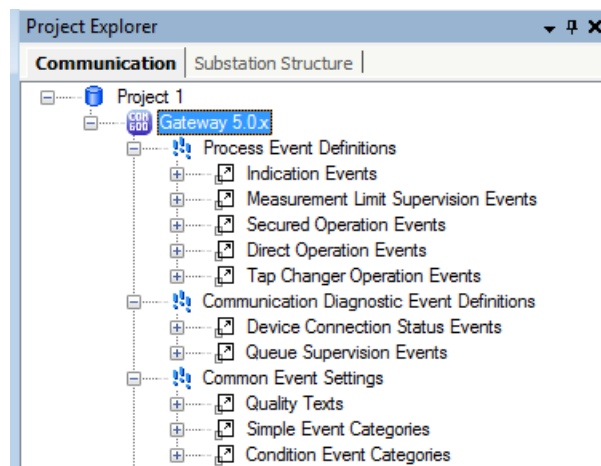

event_classes.bmp

Figure 3.10.1-1 Event groups

3.10.2. Creating event definitions

To create event classes:

1. Right-click the Events group in SAB600, see Figure 3.10.2-1.
2. Select **New -> Event classes**.
3. Select the event class you want to add.
4. The new event class appears in the Process Definitions below the selected event group. Enter a unique name for the event class by right-clicking it and selecting **Rename**. The new event class can be configured and connected to a data object.

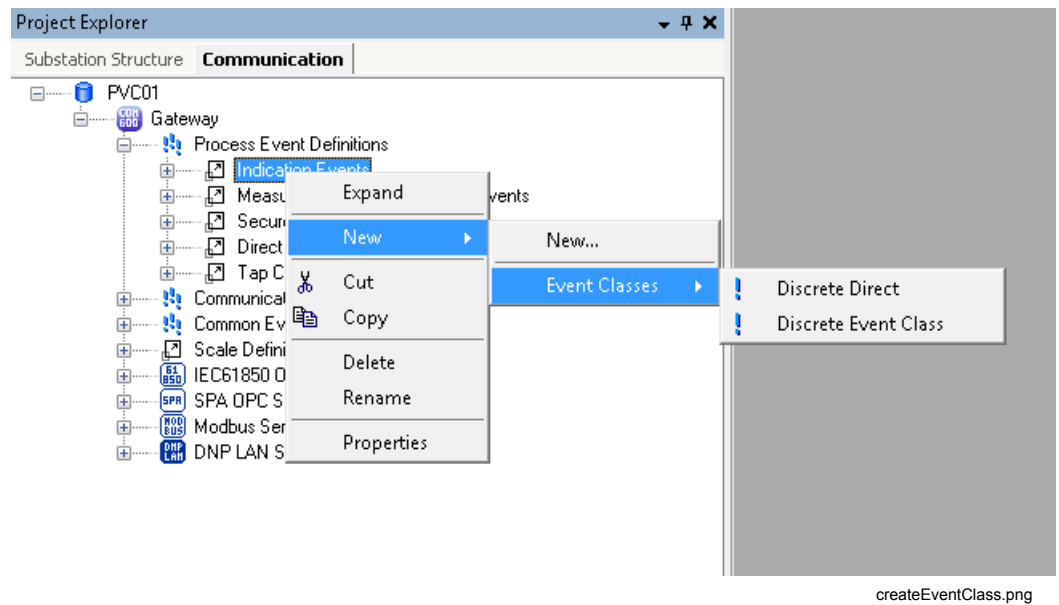


Figure 3.10.2-1 An example of creating event classes


3.10.3. Configuring event definitions

You can configure event definitions in SAB600. Event definitions specify the type of events that are created for WebHMI event and alarm lists. You can specify whether an event appears only on the event list, on both event and alarm lists, or whether it is displayed at all. You can also add event texts for the events and specify whether alarms must be acknowledged by the user.

Event definitions are linked to data objects by configuring the event properties available for data objects. When importing IED configurations from connectivity packages or IED SCL description files, event definitions are linked to data objects by default. For example switch position data object CSWIX.Pos is linked by default to switch position event definition. The default linking rules are specified in a DOParamsDefaults.xml file located in the \Program files\ABB\COM600\bin\Tools\SCLImport in the computer where SAB600 is installed.

To configure event definitions:

1. Select the event you want to configure in the object tree.
2. The object properties appear now in the Object Properties window, see Figure 3.10.3-1.
3. You can assign the event with parameter values.

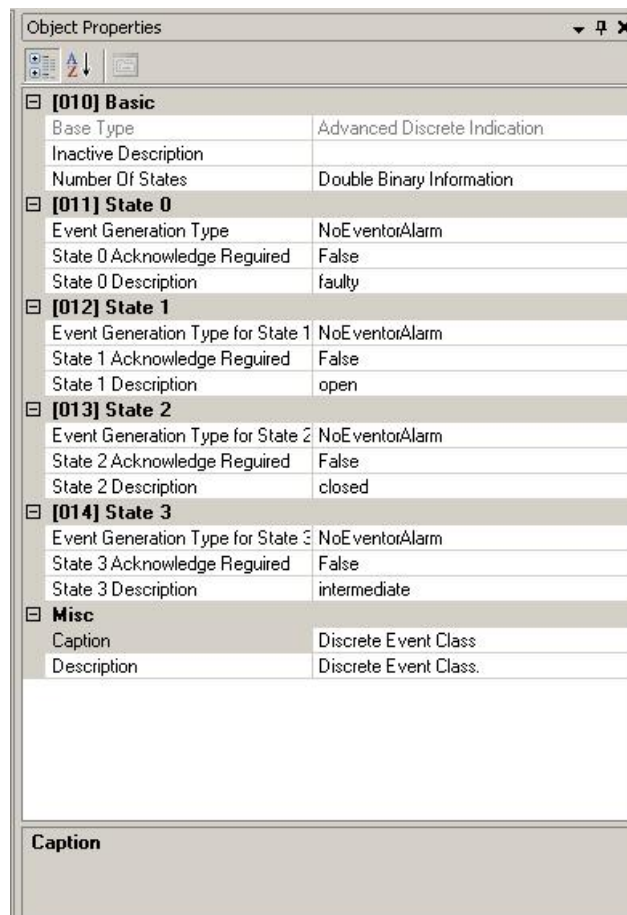

EventDefObjProp.jpg

Figure 3.10.3-1 An example of object properties of events

3.10.4. Connecting alarm or event objects to data objects

Data objects are connected to event classes by selecting the used event class from the properties of the data object. Depending on the data class, the object can have an event class property both for indication and control events or only one of them. These properties define the event classes that are used with the data object.


3.10.5. Configuring event type filters

The Event Type Filter configuration tool allows you to create event type filters that are displayed as additional columns, see Figure 3.10.5-1.

To create event type filters:

1. Right-click the Gateway object in the Communication structure and select **Event Type Filter**.
2. Click **Add Filter**.

3. Enter a name for the filter column and click **Add**.
4. To save the configuration to the Gateway object property, click **Apply**.
To remove filter types, open a context menu on any of the created columns and select **Delete**.

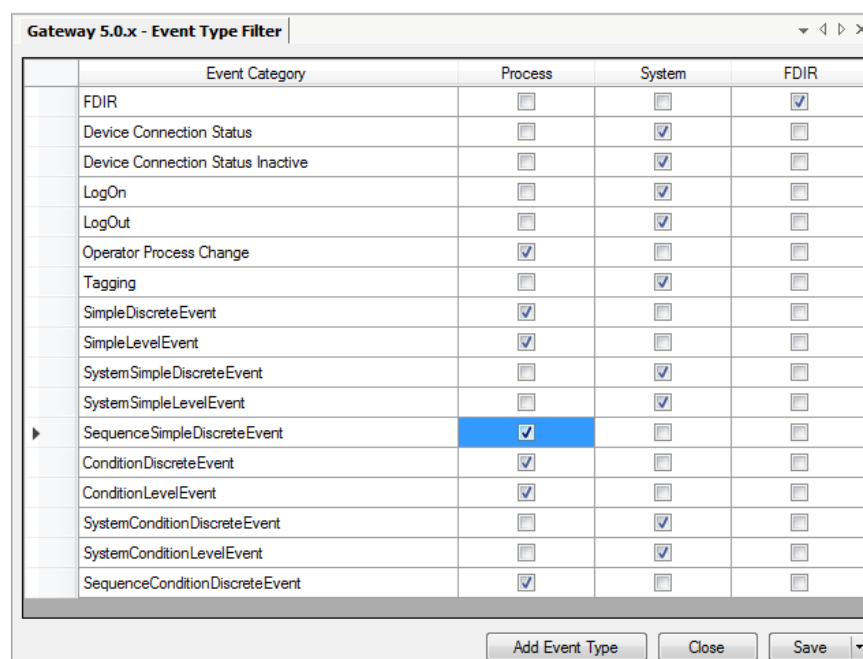

Event_Type_Filter.png

Figure 3.10.5-1 An example of filters in the Event Type Filter configuration tool

3.11. Data Historian

The COM600 data historian is a real-time database designed and optimized for process information management and extensive history recording. The data historian is based on ABB's cpmPlus Knowledge Manager software. It combines the benefits of an easy-to-use real-time database with industrial reliability, performance, and real-time functionality to provide an excellent platform for process information management.

The data historian can be used for accurate process performance monitoring by following process and equipment performance calculations with real-time and history values. Better understanding of the process behaviour by joining time-based process measurements with production and maintenance events helps the user to understand the process dynamics. It further provides required information for learning how to keep the process running. High performance and reliability, together with maintenance-free operation, provide a solid platform for trending.

The optional data historian functionality offers means of storing, analyzing and presenting process data.



HMI_Data_Historian_menu.bmp

Figure 3.11-1 Data Historian menu item shown in WebHMI

For more information about configuring the data historian, see section Configuring Data historian in COM600 User's Manual. For information about the actual usage of data historian information, see COM600 Data Historian Operator's Manual.

3.12.

Customizing IED parameter settings

To have the parameters of an IED added automatically to the selections list, the connectivity package for the IED that supports the parameter information must be installed.

With the Parameter Selection tool of SAB600, you can select the parameters that are shown in the Parameter Setting view in WebHMI. This option helps you to create a user-friendly view for WebHMI.

Selecting parameters

To select parameters:

1. Click the Communication tab on the left.
2. Right-click the IED object and select **Parameter Filtering Tool**. A Parameter Filtering view opens. All the logical nodes the device contains are displayed on the left side of the Parameter Filtering view.
3. Click a logical node to view all the possible parameters.

- 4. Select the check box of the parameters you want to be displayed in the Parameter Setting view of WebHMI, see Figure 3.12-1. To select all parameters, click **Select All**. To unselect all parameters, click **Deselect All**.
- 5. Click **Apply** to save the selected parameters.

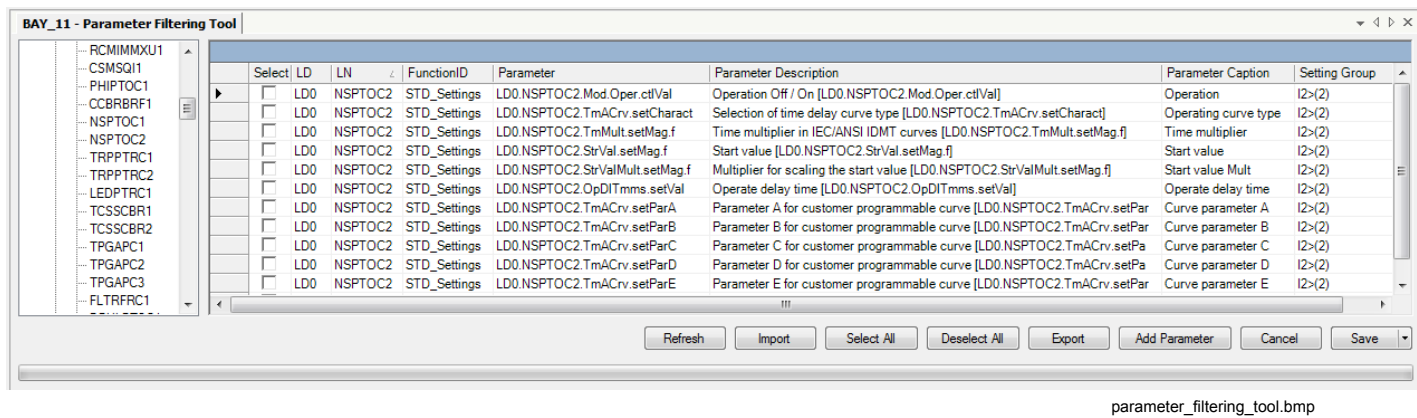


Figure 3.12-1 Parameter Filtering Tool

Adding new parameters

You can add a new parameter to the Parameter Filtering view. If no connectivity package is available or the connectivity package does not contain a specific parameter for your needs, you can add new parameters using the Add Parameter Form.

To add a new parameter:

- 1. Click **Add Parameter** in the Parameter Filtering view. The **Add Parameter Form** window opens, see Figure 3.12-2.
In the **Add Parameter Form** window you can fill in the information on the parameter you want to add or select a suitable option from a drop-down list.
- 2. After you have added all necessary information, click **Apply** to add the parameter to the Parameter Filtering view.

Add_parameter_form.bmp

Figure 3.12-2 The Add Parameter Form window



If a parameter row has been selected in the Parameter Filtering view, the **Add Parameter** button opens the selected parameter. The changes are made to the selected parameter.

When using SPA parametrisation, the **Parameter** field in the tool specifies the used SPA parameter (for example 052S002). The syntax is [SPA Channel][SPA Data Category][SPA Data Number].

When using IEC 61850 parametrisation, the **Parameter** field in the tool specifies the used IEC 61850 Data (for example LD0.PHIPTOC1.StrValMult.setMag.f). The syntax is [Logical Device].[Logical Node].[Data Object].[Data Attribute].

Adding new parameters for Modbus IEDs

If a connectivity package is not available for Modbus IEDs, the parameters can be added manually. When Parameter Filtering Tool is launched from Modbus IED on SAB600 for the first time, there are no configured parameters in Parameter Filtering Tool. You can add new parameters using the **Add Parameter Form** window.

To add a new parameter:

1. Click **Add Parameter** in the Parameter Filtering view. The **Add Parameter Form** window opens, see Figure 3.12-3.
2. In the **Add Parameter Form** window, fill in the information of the parameter.

- For the Modbus IED Read only parameter, specify only the parameter address.
 - For Write and Read And Write parameter, in addition to the parameter address, you may need to specify the password address and value, if the password is enabled in the IED. You may also need to specify the execute address and confirm address, if required by the IED.
3. After you have added all the necessary information, click **Apply** to add the parameter to the **Parameter Filtering** view.

Add Parameter for Modbus IED.bmp

Figure 3.12-3 Adding a parameter for Modbus IED

Exporting parameters


You can export the information of the selected parameters to an Excel or XML file.



You can import the XML file back to the tool for other IEDs, but you cannot import the parameters back to the tool from the Excel file.

To export the parameter selection:

1. Select the parameters you want to export.
2. Click **Export**. Select the file type (Excel or XML).
3. Select the folder where you want to export the file and click **Save**.

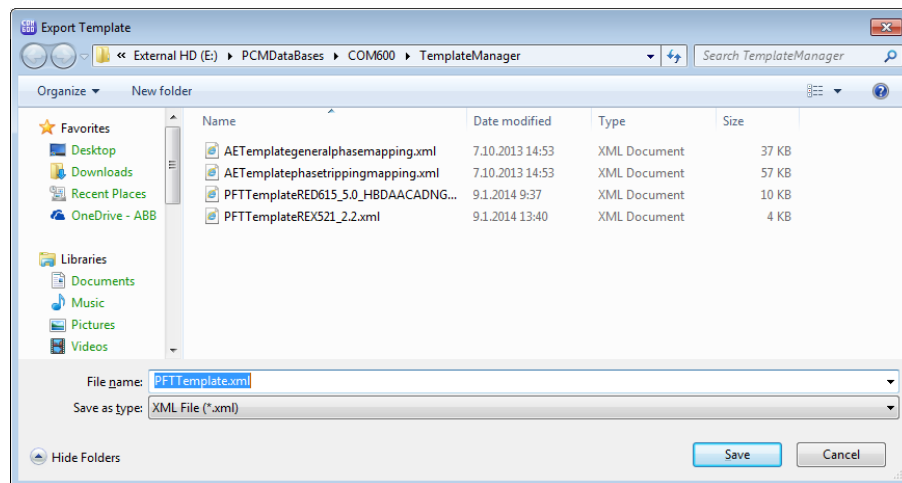

Export.bmp

Figure 3.12-4 Exporting XML file

Importing parameters

With the Import function it is possible to import an existing Parameter Filtering Tool configuration for example from another computer. An XML file created with the Parameter Filtering Tool can be imported into another device or project using this tool.

3.13. Disturbance data upload

The basic support for the disturbance data upload (data upload and conversion to COMTRADE format) is implemented to each OPC Server. Protocol and device-specific differences are hidden from the OPC client. The files are stored temporarily to the COM600 computer, where they can be transferred further using for example ftp. COM600 has a possibility to activate the disturbance data upload from the IED and to receive the file into the computer where WebHMI is run.

If the IED and the OPC server used for communication support disturbance data upload, the properties for configuring the function can be found from the corresponding OPC server user's manual, see 1.10, Related documents.

3.14. Project-specific localization

With SAB600 you can modify the project-specific texts that are displayed in WebHMI. Static WebHMI texts, for example menus and headers, can be translated by the local ABB. For more information on localization, contact your local ABB representative.

To localize objects in the substation structure or communication tree:

1. Select the object you want to modify.

2. Right-click the object and select **Rename**.
3. Modify the name of the object.

To localize object properties:

1. Select the object you want to modify in the Substation or Communication structure.
2. Right-click the object and select **Properties**. The **Object properties** window opens.
3. Modify the text properties of the object.

COM600 – Custom logo in WebHMI

It's possible to define a custom logo that will be displayed on the COM600 WebHMI.

This is done by adding an image file named "logo.*" to the folder "C:\Program Files\COM610 GW SW\WebHMI\custom_logo" on the COM600.


The logo file should be an image file type that can be displayed in web browsers, e.g. PNG, GIF or JPG. Usually a PNG file will work best as it is then possible to have a transparent background so that the logo image appears in a seamless way when displayed with the WebHMI.

The custom logo image will be displayed in the center of the WebHMI header. It should be sized appropriately so that it fits - images too large will be clipped. The width of the header varies depending on the browser window width and the height is currently always 54 pixels.

If several files named "logo.*" are added to the folder, the first one found will be used.

After adding the logo file to the folder, simply open or refresh the WebHMI in the web browser to see how the logo appears there.

Example:

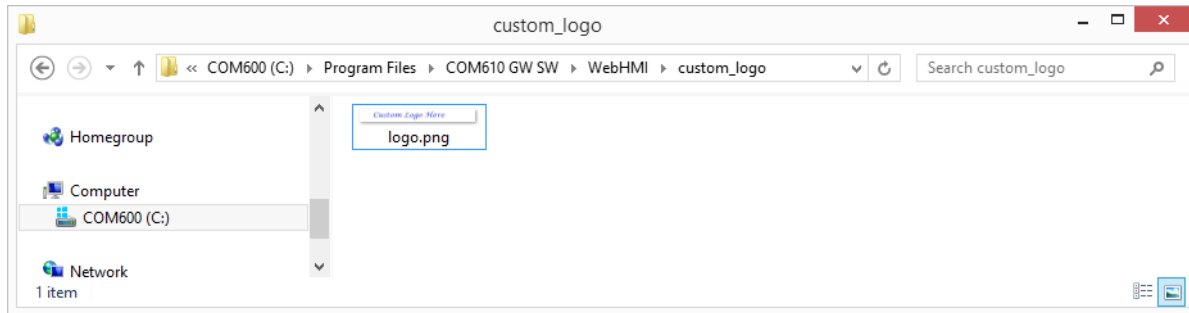

COM600_Custom_logo_adding.png

Figure 3.14-1 COM600 custom logo

















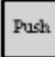






COM600_Custom_logo.png






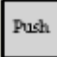

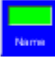



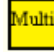


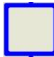







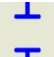




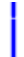




















Figure 3.14-2 COM600_Custom_logo

Appendix 1

Single Line Diagram symbols














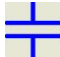

























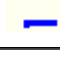
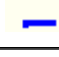
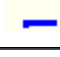



Table A1-1 Single Line Diagram symbols

Description	ANSI representation	IEC representation	ANSI2 representation	Remarks
Annotation				
Alarm Indicator				Alarm indicator in a branch of the substation. Use at any level in the structure to indicate alarms generally, or a specific alarm. The indicator is not visible in the web view when there are no active alarms.
Two State Switch				Binary indicator (on/off, auto-automatic/manual, X/not-X, and so on). It can also be used to send a command.
Launch Web Page				<p>Hyperlink to external information source, such as a web page or a local file on COM600.</p> <p>Files should be stored under C:\Program Files\COM600 GW SW\WebHMI\UserDocs\. The total size of the files should not exceed 100 MB. Link syntax for local files is: http://<COM600 IP address>/HMI/UserDocs/<file-name></p>
Push Button				Use to send a single command to one target.
Application Launch				Use to launch an application external to COM600
Measurement Text Box				

Description	ANSI representation	IEC representation	ANSI2 representation	Remarks
Multiple State Button				Button with multiple states (at least 2). Each state has to be configured. For each state optional color and text can be configured. This button can be used e.g to show the status of sequence step or health of an IED.
ViaPoint				
Connectivity Node				
Circuit breaker – Intermediate position				
Circuit breaker – Open position				
Circuit breaker – Closed position				
Circuit breaker – Bad (faulty) position				
Disconnecter – Intermediate position				
Disconnecter – Open position				
Disconnecter – Closed position				
Disconnecter – Bad (faulty) position				
Truck – Intermediate position				
Truck – Open position				
Truck – Closed position				
Truck – Bad (faulty) position				
Three State Switch (Left, earthed)				

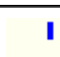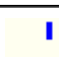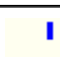


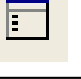








Description	ANSI representation	IEC representation	ANSI2 representation	Remarks
Three State Switch (Right, earthed)				
Load breaker – Intermediate position				
Load breaker – Open position				
Load breaker – Closed position				
Load breaker – Bad (faulty) position				
Contactor – Intermediate position				
Contactor – Open position				
Contactor – Closed position				
Contactor – Bad (faulty) position				
Power Transformer with two Windings and no Tap Changer				Primary winding: on top. Secondary winding: below. All composing elements exist as individual symbols.
Power Transformer with two Windings and Tap Changer				Primary winding: on top. Secondary winding: below. All composing elements exist as individual symbols.
Power Transformer with three Windings and no Tap Changer				Primary winding: on top. Secondary winding: below left. Tertiary winding: below right. All composing elements exist as individual symbols.
Power Transformer with three Windings and Tap Changer				Primary winding: on top. Secondary winding: below left. Tertiary winding: below right. All composing elements exist as individual symbols.
Voltage Transformer (measurement)				
Current Transformer (measurement)				

HMI Configuration Manual

Description	ANSI representation	IEC representation	ANSI2 representation	Remarks
Capacitor				
Reactor				
Generator				
Motor				
In-feeder				
Out-feeder				
Earth symbol				
Bay Switch Indicator				
Station Switch Indicator				
Display Voltage				
Five State Switch Left Earthed				
Five State Switch Right Earthed				
Power Cable				
Gas Insulated Line				
Power Overhead Line				

Appendix 2

SAB600 Toolbar

Symbol	Description
	Displays the Substation and Communication Structure in the Project Explorer window.
	Displays the Object Properties window.
	Displays the messages in the Output window.
	Displays a list of the object types.
	Selects an object in the SLD Editor window.
	Enables navigation of the SLD Editor window using a mouse.
	Displays a grid view in the SLD Editor window.
	Zooms in/out the SLD Editor window.
	Opens the direct link tool.
	Rotates the selected objects left in the SLD Editor window.
	Rotates the selected objects right in the SLD Editor window.
	Used to draw rectangles around grouped objects

Appendix 3

Logical nodes and primary objects

Logical nodes can be connected to primary objects according to the following table. If no specific function is written in the Comment column, the connection is used for displaying the substation structure based on identification for the events and alarms.

Table A3-1 Logical node classes and primary objects

Primary object	LN Class	Mandatory	Comment
Substation			
	LLN0		Loc data used for station/remote switch state
	SIMG		
	CALH		
	M*		
	G*		
	Q*		
Voltage Level			
	SIMG		
	CALH		
	M*		
	G*		
	Q*		
Bay			
	LLN0		Loc data used for bay local/remote switch state
	LPHD		
	SIMG		
	SARC		
	SIML		
	SPDC		
	CALH		
	M*		
	P*		
	R*		

Primary object	LN Class	Mandatory	Comment
	G*		
	T*		
	Q*		
Circuit Breaker (CBR)			
	XCBR		
	CSWI	Mandatory	Pos data used for switch device position and control.
	RREC		
	RSYN		Rel data used for synchronism-check status in control dialogs.
	CILO		EnaOpn and EnaCls data used for interlocking status in control dialogs.
	PTRC		
	SIML		
	CALH		
	G*		
Disconnecter (DIS)			
	XSWI		
	CSWI	Mandatory	Pos data used for switch device position and control.
	RREC		
	RSYN		Rel data used for synchronism-check status in control dialogs.
	CILO		EnaOpn and EnaCls data used for interlocking status in control dialogs.
	PTRC		
	SIML		
	CALH		
	G*		
Voltage Transformer (VTR)			
	TVTR		

HMI Configuration Manual

Primary object	LN Class	Mandatory	Comment
	CALH		
	G*		
Current Transformer (CTR)			
	TCTR		
	SARC SPDC CALH		
	G*		
	Q*		
Power Overhead Line (LIN)			
	ZLIN		
	CALH		
	G*		
Rotating Reactive Component (RRC)			
	ZRRC		
	CALH		
	G		
Surge Arrestor (SAR)			
	ZSAR		
	CALH		
	G		
Thyristor controlled frequency converter (TCF)			
	ZTCF		
	CALH		
	G		
Thyristor controlled reactive component (TCR)			
	ZTCR		
	CALH		
	G*		

Primary object	LN Class	Mandatory	Comment
Power Transformer Winding (PTW)			
	G*		
Incoming Feeder Line (IFL)			Powered rules for the Incoming Feeder Line can be configured in the SLD editor. See 3.5.1 Configuring the powered state for incoming feeder and generator.
	CALH		
	G*		
	Q*		
Generator (GEN)			Powered rules for the Generator can be configured in the SLD editor. See 3.5.1 Configuring the powered state for incoming feeder and generator.
	ZGEN		
	G*		
Capacitor Bank (CAP)			
	ZCAP		CapDs and DschBlk data used for Capacitor Bank status in control dialogues.
	G*		

Index

A

access permissions	13
adding	
bay	17
busbar	18
Gateway	15
substation	16
voltage level	17
alarm and event objects	
general	42
alarm objects	44

B

bay	
adding	17
bay SLD	20
bay switch indicator	
configuration	24
Bay View	33
busbar	
adding	18
busbar SLD	25
button configuration	24

C

configuration prerequisites	13
connectivity packages	14
creating	
substation structure	14
Custom Views	34

D

Data connection	37
Data Historian	45
disturbance data upload	50
Document Library	40

E

event definitions	
configuring	43

creating	42
event objects	
links	44

G

Gateway	
adding	15
object properties	15

L

localization	
substation structure	50

M

Master View	31
Measurement text box	
configuration	23

O

object properties	
Gateway	15
voltage level	17

P

Parameter Filtering Tool	46
parameter settings	
customizing	46

S

SCL descriptions	14
Single Line Diagram	
multiple views	31
symbols	53
SLD Editor	
using	18
SLD views	
Bay View	33
Custom Views	34
Master View	31
Substation View	31
synchronizing views	36
substation	
adding	16

summary table	41
substation SLD	29
substation structure	
creating	14
Substation View	31

V

voltage level	
adding	17
object properties	17
voltage level SLD	27



ABB Distribution Solutions
Distribution Automation

P.O. Box 699
FI-65101 Vaasa, Finland
Phone: +358 10 22 11

ABB Distribution Automation

4300 Coral Ridge Drive
Coral Springs, Florida 33065
Phone: +1 954 752 6700

www.abb.com/mediumvoltage
www.abb.com/substationautomation