



Relion® 615 series

Transformer Protection and Control RET615 IEC 60870-5-103 Point List Manual

Power and productivity
for a better world™

ABB



Document ID: 1MRS756941
Issued: 2014-05-16
Revision: C
Product version: 4.1

© Copyright 2014 ABB. All rights reserved

Copyright

This document and parts thereof must not be reproduced or copied without written permission from ABB, and the contents thereof must not be imparted to a third party, nor used for any unauthorized purpose.

The software or hardware described in this document is furnished under a license and may be used, copied, or disclosed only in accordance with the terms of such license.

Trademarks

ABB and Relion are registered trademarks of the ABB Group. All other brand or product names mentioned in this document may be trademarks or registered trademarks of their respective holders.

Warranty

Please inquire about the terms of warranty from your nearest ABB representative.

ABB

Nanjing SAC Power Grid Automation Co., Ltd.

No. 11 Phoenix Road, Jiangning Development Zone

211100 Nanjing

China

Telephone: +86 25 51183000

Faxsimile: +86 25 51183883

Customer hotline: 4008876268

<http://www.abb.com/substationautomation>

Disclaimer

The data, examples and diagrams in this manual are included solely for the concept or product description and are not to be deemed as a statement of guaranteed properties. All persons responsible for applying the equipment addressed in this manual must satisfy themselves that each intended application is suitable and acceptable, including that any applicable safety or other operational requirements are complied with. In particular, any risks in applications where a system failure and/or product failure would create a risk for harm to property or persons (including but not limited to personal injuries or death) shall be the sole responsibility of the person or entity applying the equipment, and those so responsible are hereby requested to ensure that all measures are taken to exclude or mitigate such risks.

This product has been designed to be connected and communicate data and information via a network interface which should be connected to a secure network. It is the sole responsibility of the person or entity responsible for network administration to ensure a secure connection to the network and to take the necessary measures (such as, but not limited to, installation of firewalls, application of authentication measures, encryption of data, installation of anti virus programs, etc.) to protect the product and the network, its system and interface included, against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. ABB is not liable for any such damages and/or losses.

This document has been carefully checked by ABB but deviations cannot be completely ruled out. In case any errors are detected, the reader is kindly requested to notify the manufacturer. Other than under explicit contractual commitments, in no event shall ABB be responsible or liable for any loss or damage resulting from the use of this manual or the application of the equipment.

Conformity

This product complies with the directive of the Council of the European Communities on the approximation of the laws of the Member States relating to electromagnetic compatibility (EMC Directive 2004/108/EC) and concerning electrical equipment for use within specified voltage limits (Low-voltage directive 2006/95/EC). This conformity is the result of tests conducted by ABB in accordance with the product standards EN 50263 and EN 60255-26 for the EMC directive, and with the product standards EN 60255-1 and EN 60255-27 for the low voltage directive. The product is designed in accordance with the international standards of the IEC 60255 series.

Table of contents

Section 1	Introduction.....	3
	This manual.....	3
	Intended audience.....	3
	Product documentation.....	4
	Product documentation set.....	4
	Document revision history.....	4
	Related documentation.....	5
	Symbols and conventions.....	5
	Symbols.....	5
	Document conventions.....	5
	Functions, codes and symbols.....	6
Section 2	IEC 60870-5-103 data mappings.....	9
	Overview.....	9
	Point list for RET615 Ver.4.1 TC01-08, TC51, TC52.....	11
Section 3	Interoperability profile for 615 series IEC 60870-5-103.....	27
	Physical layer.....	27
	Electrical interface.....	27
	Optical interface.....	27
	Transmission speed.....	27
	Link layer.....	27
	Application layer.....	28
	Transmission mode for application data.....	28
	COMMON ADDRESS of ASDU.....	28
	Selection of standard information numbers in monitor direction.....	28
	System functions in monitor directions.....	28
	Status indications in monitor direction.....	28
	Supervision indications in monitor direction.....	29
	Earth fault indications in monitor direction.....	29
	Fault indications in monitor direction.....	29
	Auto-reclosure indications in monitor direction.....	30
	Measurands in monitor direction.....	31
	Generic functions in monitor direction.....	31
	Selection of standard information numbers in control direction.....	31
	System functions in control direction.....	31
	Generic functions in monitor direction.....	31

Table of contents

Basic application functions.....	32
Miscellaneous.....	32
Section 4 Glossary.....	33

Section 1 Introduction

1.1 This manual

The point list manual describes the outlook and properties of the data points specific to the IED. The manual should be used in conjunction with the corresponding communication protocol manual.

1.2 Intended audience

This manual addresses the communication system engineer or system integrator responsible for pre-engineering and engineering for communication setup in a substation from an IED perspective.

The system engineer or system integrator must have a basic knowledge of communication in protection and control systems and thorough knowledge of the specific communication protocol.

1.3 Product documentation

1.3.1 Product documentation set

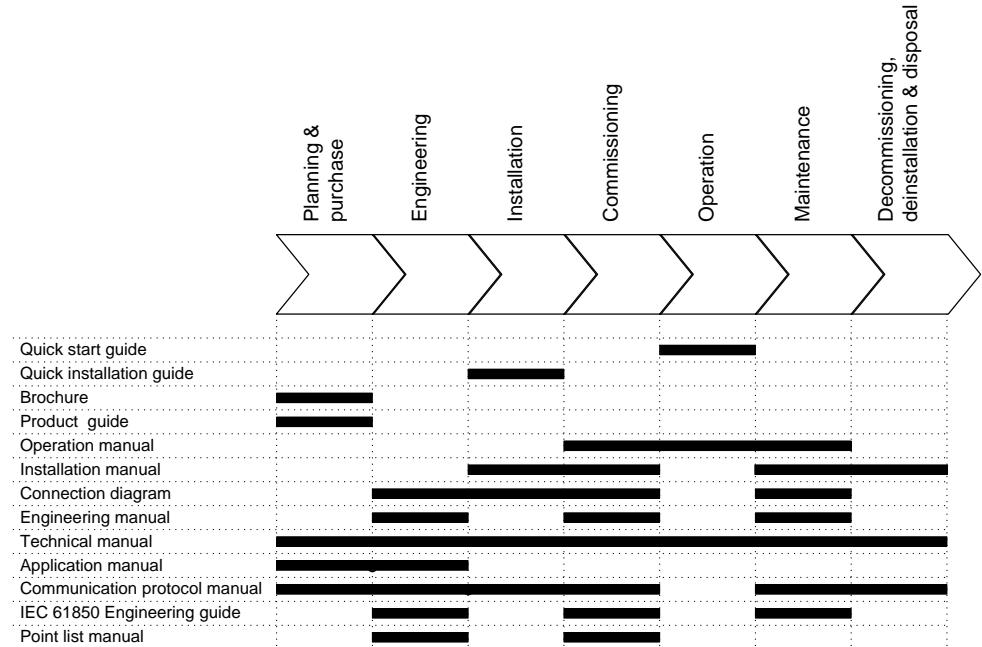


Figure 1: The intended use of documents during the product life cycle



Product series- and product-specific manuals can be downloaded from the ABB Website <http://www.abb.com/relion>.

1.3.2 Document revision history

Document revision/date	Product version	History
A/2009-09-29	2.0	First release
B/2010-07-02	3.0	Content updated
C/2014-05-16	4.1	Content updated to correspond to the product version



Download the latest documents from the ABB web site
<http://www.abb.com/substationautomation>.

1.3.3

Related documentation

Name of the document	Document ID
IEC 60870-5-103 Communication Protocol Manual	1MRS756710

1.4

Symbols and conventions

1.4.1

Symbols



The caution icon indicates important information or warning related to the concept discussed in the text. It might indicate the presence of a hazard which could result in corruption of software or damage to equipment or property.



The information icon alerts the reader of important facts and conditions.



The tip icon indicates advice on, for example, how to design your project or how to use a certain function.

Although warning hazards are related to personal injury, it is necessary to understand that under certain operational conditions, operation of damaged equipment may result in degraded process performance leading to personal injury or death. Therefore, comply fully with all warning and caution notices.

1.4.2

Document conventions

A particular convention may not be used in this manual.

- Abbreviations and acronyms are spelled out in the glossary. The glossary also contains definitions of important terms.
- Push button navigation in the LHMI menu structure is presented by using the push button icons.
To navigate between the options, use and .
- Menu paths are presented in bold.
Select **Main menu/Settings**.
- LHMI messages are shown in Courier font.
To save the changes in non-volatile memory, select **Yes** and press .
- Parameter names are shown in italics.
The function can be enabled and disabled with the *Operation* setting.
- Parameter values are indicated with quotation marks.

-
- The corresponding parameter values are "On" and "Off".
- IED input/output messages and monitored data names are shown in Courier font. When the function starts, the START output is set to TRUE.
 - This document assumes that the parameter setting visibility is "Advanced".

1.4.3

Functions, codes and symbols

Table 1: RET615 functions, codes and symbols

Function	IEC 61850	IEC 60617	IEC-ANSI
Protection			
Three-phase non-directional overcurrent protection, low stage, instance 1	PHLPTOC1	3I> (1)	51P-1 (1)
Three-phase non-directional overcurrent protection, low stage, instance 2	PHLPTOC2	3I> (2)	51P-1 (2)
Three-phase non-directional overcurrent protection, high stage, instance 1	PHHPTOC1	3I>> (1)	51P-2 (1)
Three-phase non-directional overcurrent protection, high stage, instance 2	PHHPTOC2	3I>> (2)	51P-2 (2)
Three-phase non-directional overcurrent protection, instantaneous stage, instance 1	PHIPTOC1	3I>>> (1)	50P/51P (1)
Three-phase non-directional overcurrent protection, instantaneous stage, instance 2	PHIPTOC2	3I>>> (2)	50P/51P (2)
Non-directional earth-fault protection, low stage, instance 1	EFLPTOC1	Io> (1)	51N-1 (1)
Non-directional earth-fault protection, low stage, instance 2	EFLPTOC2	Io> (2)	51N-1 (2)
Non-directional earth-fault protection, high stage, instance 1	EFHPTOC1	Io>> (1)	51N-2 (1)
Non-directional earth-fault protection, high stage, instance 2	EFHPTOC2	Io>> (2)	51N-2 (2)
Negative-sequence overcurrent protection, instance 1	NSPTOC1	I2> (1)	46 (1)
Negative-sequence overcurrent protection, instance 2	NSPTOC2	I2> (2)	46 (2)
Negative-sequence overcurrent protection, instance 3	NSPTOC3	I2> (3)	46 (3)
Negative-sequence overcurrent protection, instance 4	NSPTOC4	I2> (4)	46 (4)
Residual overvoltage protection, instance 1	ROVPTOV1	Uo> (1)	59G (1)
Residual overvoltage protection, instance 2	ROVPTOV2	Uo> (2)	59G (2)
Three-phase undervoltage protection, instance 1	PHPTUV1	3U< (1)	27 (1)
Three-phase undervoltage protection, instance 2	PHPTUV2	3U< (2)	27 (2)
Three-phase overvoltage protection, instance 1	PHPTOV1	3U> (1)	59 (1)
Three-phase overvoltage protection, instance 2	PHPTOV2	3U> (2)	59 (2)
Table continues on next page			

Function	IEC 61850	IEC 60617	IEC-ANSI
Positive-sequence undervoltage protection, instance 1	PSPTUV1	U1< (1)	47U+ (1)
Positive-sequence undervoltage protection, instance 2	PSPTUV2	U1< (2)	47U+ (2)
Negative-sequence overvoltage protection, instance 1	NSPTOV1	U2> (1)	47O- (1)
Negative-sequence overvoltage protection, instance 2	NSPTOV2	U2> (2)	47O- (2)
Three-phase thermal overload protection for power transformers, two time constants	T2PTTR1	3lth>T	49T
Stabilized and instantaneous differential protection for 2W –transformers	TR2PTDF1	3dI>T	87T
Numerical stabilized low impedance restricted earth-fault protection	LREFPNDF1	dloLo>	87NL
High impedance based restricted earth-fault protection	HREFPDIF1	dloHi>	87NH
Circuit breaker failure protection	CCBRBRF1	3I>/Io>BF	51BF/51NBF
Master trip, instance 1	TRPPTRC1	Master Trip (1)	94/86 (1)
Master trip, instance 2	TRPPTRC2	Master Trip (2)	94/86 (2)
Arc protection, instance 1	ARCSARC1	ARC (1)	50L/50NL (1)
Arc protection, instance 2	ARCSARC2	ARC (2)	50L/50NL (2)
Arc protection, instance 3	ARCSARC3	ARC (3)	50L/50NL (3)
Multi-purpose protection, instance 1 ¹⁾	MAPGAPC1	MAP (1)	MAP (1)
Multi-purpose protection, instance 2 ¹⁾	MAPGAPC2	MAP (2)	MAP (2)
Multi-purpose protection, instance 3 ¹⁾	MAPGAPC3	MAP (3)	MAP (3)
Multi-purpose protection, instance 4 ¹⁾	MAPGAPC4	MAP (4)	MAP (4)
Multi-purpose protection, instance 5 ¹⁾	MAPGAPC5	MAP (5)	MAP (5)
Multi-purpose protection, instance 6 ¹⁾	MAPGAPC6	MAP (6)	MAP (6)
Control			
Circuit-breaker control	CBXCBR1	I <-> O CB	I <-> O CB
Disconnecter control, instance 1	DCXSWI1	I <-> O DCC (1)	I <-> O DCC (1)
Disconnecter control, instance 2	DCXSWI2	I <-> O DCC (2)	I <-> O DCC (2)
Earthing switch control	ESXSWI1	I <-> O ESC	I <-> O ESC
Disconnecter position indication, instance 1	DCSXSWI1	I <-> O DC (1)	I <-> O DC (1)
Disconnecter position indication, instance 2	DCSXSWI2	I <-> O DC (2)	I <-> O DC (2)
Disconnecter position indication, instance 3	DCSXSWI3	I <-> O DC (3)	I <-> O DC (3)
Earthing switch indication, instance 1	ESSXSWI1	I <-> O ES (1)	I <-> O ES (1)
Earthing switch indication, instance 2	ESSXSWI2	I <-> O ES (2)	I <-> O ES (2)
Tap changer position indication	TPOSSLTC1	TPOS M	84M
Condition monitoring			
Circuit-breaker condition monitoring	SSCBR1	CBCM	CBCM
Trip circuit supervision, instance 1	TCSSCBR1	TCS (1)	TCM (1)
Table continues on next page			

Function	IEC 61850	IEC 60617	IEC-ANSI
Trip circuit supervision, instance 2	TCSSCBR2	TCS (2)	TCM (2)
Fuse failure supervision	SEQRFUF1	FUSEF	60
Runtime counter for machines and devices	MDSOPT1	OPTS	OPTM
Measurement			
Disturbance recorder	RDRE1	-	-
Three-phase current measurement, instance 1	CMMXU1	3I	3I
Three-phase current measurement, instance 2	CMMXU2	3I(B)	3I(B)
Sequence current measurement, instance 1	CSMSQI1	I1, I2, I0	I1, I2, I0
Sequence current measurement, instance 2	CSMSQ2	I1I(B), I2I(B), I0I(B)	I1I(B), I2I(B), I0I(B)
Residual current measurement, instance 1	RESCMMXU1	Io	In
Residual current measurement, instance 2	RESCMMXU2	Io(B)	In(B)
Three-phase voltage measurement	VMMXU1	3U	3U
Residual voltage measurement	RESVMMXU1	Uo	Vn
Sequence voltage measurement	VSMSQI1	U1, U2, U0	U1, U2, U0
Three-phase power and energy measurement	PEMMXU1	P, E	P, E
RTD/mA measurement	XRGGIO130	X130 (RTD)	X130 (RTD)

- 1) Multi-purpose protection is used for example for RTD/mA based protection.

Section 2

IEC 60870-5-103 data mappings

2.1

Overview

These tables show the default point definitions. The user is able to freely remap all these data. In that case PCM600 can provide an updated point list export of the new outlook.

Indications and controls table columns

IEC 61850 name	Internal signal that is mapped to the IEC 60870-5-103 point. Expressed in the form 'Logical Device.Logical Node.Data Object.Data Attribute'.
AFL-Common SA name	AFL name of the corresponding data signal.
Description	Signal description.
DPI value	Value description. DPI value 10 means ON and value 01 means OFF.
FUN	Default Function Type definition for the point. Observe that Function Type 0 means that FUN in practice contains the given Device Function Type. The user-definable Function Type definition is set to the same FUN value as default.
INF	Default Information Number definition for the point. The user-definable Information Number definition is set to the same INF value as default.
InUse	1 means that the point is taken in use as default, and 0 that the point is not in use as default.
ASDU	ASDU point type. 1 and 2 are indications in monitoring direction. 20 means that the point is controllable.
GI	Default setting for General Interrogation. 1 means ON, 0 means OFF.
Coding	IEC 60870-5-103 DPI value coding. 1 means that the point shows OFF (01) and ON (10) values only. 2 means that the point shows values Intermediate (00), OFF (01), ON (10) and Error (11).

Class 2 data table columns

Index	Value position within the Class2 frame.
IEC 61850 name	Internal signal that is mapped to the IEC 60870-5-103 point.
Description	Signal description.
Default scale	Value that corresponds to the maximum IEC 60870-5-103 measurand value 1.

Table continues on next page

Frame No6	Shows if the value is present in Class2 frame 6.
Frame No7	Shows if the value is present in Class2 frame 7.
Comment	Additional information.

2.2

Point list for RET615 Ver.4.1 TC01-08, TC51, TC52

Section 2

IEC 60870-5-103 data mappings

1MRS756941 C

Table 2: *Indications and controls*

IEC 61850 name	AFL-Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
Device function type - standard data									
LD0.LLN0.LEDRs1.ctlvAl	-	LED reset	10=Reset indications and alarm LEDs	0	19	1	20	0	1
LD0.LLN0.Beh.stVal (Test mode)	-	Test mode	10=Test mode ON, 01=Test mode OFF	0	21	1	1	1	1
LD0.I3CGGIO1.ActSG.ctlvAl	-	Parameter setting group 1	10=Setting group 1 in use	0	23	1	1,20	1	1
LD0.I3CGGIO1.ActSG.ctlvAl	-	Parameter setting group 2	10=Setting group 2 in use	0	24	1	1,20	1	1
LD0.I3CGGIO1.ActSG.ctlvAl	-	Parameter setting group 3	10=Setting group 3 in use	0	25	1	1,20	1	1
LD0.I3CGGIO1.ActSG.ctlvAl	-	Parameter setting group 4	10=Setting group 4 in use	0	26	1	1,20	1	1
LD0.I3CGGIO1.ActSG.ctlvAl	-	Parameter setting group 5	10=Setting group 5 in use	0	27	1	1,20	1	1
LD0.I3CGGIO1.ActSG.ctlvAl	-	Parameter setting group 6	10=Setting group 6 in use	0	28	1	1,20	1	1
LD0.TCSSCBR1.CiAlm.stVal	TCSSCBR1.ALARM	Trip circuit 1 alarm	10=TCS1 alarm	0	36	1	1	1	1
LD0.LEDPTRC1.Op.general	-	Global operate	10=Operate (LEDPTRC)	0	68	1	2	0	1
LD0.LEDPTRC1.Str.general	-	Global start	10=Start (LEDPTRC)	0	84	1	2	1	1
Device function type - private data									
LD0.TRPPTRC1.Op.general	-	TRPPTRC1 input signal	10=Input signal ON	10	1	1	2	0	1
LD0.TRPPTRC1.Tr.general	-	TRPPTRC1 trip output signal	10=Trip output signal ON	10	2	1	2	0	1
LD0.TRPPTRC2.Op.general	-	TRPPTRC2 input signal	10=Input signal ON	10	3	1	2	0	1
LD0.TRPPTRC2.Tr.general	-	TRPPTRC2 trip output signal	10=Trip output signal ON	10	4	1	2	0	1
CTRL.LLN0.Loc.stVal	-	Local/Remote state	10=Local, 01=Remote	10	10	1	1	1	1
CTRL.LLN0.LocRem.stVal	Station	Station state	10=Station ON, 01=OFF	10	11	1	1	1	1
LD0.LLN0.LEDRs2.ctlvAl	-	Reset alarm LEDs	10=Reset alarm LEDs only	10	21	1	20	0	1
LD0.TCSSCBR2.CiAlm.stVal	TCSSCBR2.ALARM	Trip circuit 2 alarm	10=TCS2 alarm	10	36	1	1	1	1
DR.RDRE1.RcdTrg.ctlvAl	-	Trig DR recording	10=External DR trig	10	41	1	20	0	1
DR.RDRE1.MemCir.ctlvAl	-	Clear DR memory	10=Clear memory	10	42	1	20	0	1
LD0.CMSTA1.ReqRs.stVal	-	Reset CMN/XU1 max.demands	10=Reset max values	10	45	1	20	0	1
LD0.CMSTA2.ReqRs.stVal	-	Reset CMN/XU2 max.demands	10=Reset max values	10	46	1	20	0	1
LD0.LEDPTRC1.Str.phsA	-	Global start- phsA	10=Start phsA	10	61	0	2	1	1
LD0.LEDPTRC1.Str.phsB	-	Global start- phsB	10=Start phsB	10	62	0	2	1	1
LD0.LEDPTRC1.Str.phsC	-	Global start- phsC	10=Start phsC	10	63	0	2	1	1
LD0.LEDPTRC1.Op.phsA	-	Global operate -phsA	10=Operate phsA	10	65	0	2	0	1
LD0.LEDPTRC1.Op.phsB	-	Global operate -phsB	10=Operate phsB	10	66	0	2	0	1
LD0.LEDPTRC1.Op.phsC	-	Global operate -phsC	10=Operate phsC	10	67	0	2	0	1
LD0.LLN0.SetSel.stVal	-	Parameter setting rights reserved	10=Reserved	10	80	1	1	0	1
LD0.LLN0.SetChg.stVal	-	Parameter settings changed	10=Changed	10	81	1	1	0	1
Multipurpose inputs									
LD0.MVGAPC1.Q1.stVal	-	MVGAPC1 input 1 signal	10=Input ON, 01=OFF	11	1	0	1	1	1
LD0.MVGAPC1.Q2.stVal	-	MVGAPC1 input 2 signal	10=Input ON, 01=OFF	11	2	0	1	1	1

Table continues on next page

IEC 61850 name	AFL-Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
LDO.MVGAPC1.Q3.stVal	-	MVGAPC1 input 3 signal	10=Input ON, 01=OFF	11	3	0	1	1	1
LDO.MVGAPC1.Q4.stVal	-	MVGAPC1 input 4 signal	10=Input ON, 01=OFF	11	4	0	1	1	1
LDO.MVGAPC1.Q5.stVal	-	MVGAPC1 input 5 signal	10=Input ON, 01=OFF	11	5	0	1	1	1
LDO.MVGAPC1.Q6.stVal	-	MVGAPC1 input 6 signal	10=Input ON, 01=OFF	11	6	0	1	1	1
LDO.MVGAPC1.Q7.stVal	-	MVGAPC1 input 7 signal	10=Input ON, 01=OFF	11	7	0	1	1	1
LDO.MVGAPC1.Q8.stVal	-	MVGAPC1 input 8 signal	10=Input ON, 01=OFF	11	8	0	1	1	1
LDO.MVGAPC2.Q1.stVal	-	MVGAPC2 input 1 signal	10=Input ON, 01=OFF	11	11	0	1	1	1
LDO.MVGAPC2.Q2.stVal	-	MVGAPC2 input 2 signal	10=Input ON, 01=OFF	11	12	0	1	1	1
LDO.MVGAPC2.Q3.stVal	-	MVGAPC2 input 3 signal	10=Input ON, 01=OFF	11	13	0	1	1	1
LDO.MVGAPC2.Q4.stVal	-	MVGAPC2 input 4 signal	10=Input ON, 01=OFF	11	14	0	1	1	1
LDO.MVGAPC2.Q5.stVal	-	MVGAPC2 input 5 signal	10=Input ON, 01=OFF	11	15	0	1	1	1
LDO.MVGAPC2.Q6.stVal	-	MVGAPC2 input 6 signal	10=Input ON, 01=OFF	11	16	0	1	1	1
LDO.MVGAPC2.Q7.stVal	-	MVGAPC2 input 7 signal	10=Input ON, 01=OFF	11	17	0	1	1	1
LDO.MVGAPC2.Q8.stVal	-	MVGAPC2 input 8 signal	10=Input ON, 01=OFF	11	18	0	1	1	1
SRGAPC1, flip-flop reset control									
LDO.SRGAPC1.Rs1.ctVal	-	Reset SRGAPC1 flip-flop 1	10=Reset	11	101	1	20	0	1
LDO.SRGAPC1.Rs2.ctVal	-	Reset SRGAPC1 flip-flop 2	10=Reset	11	102	1	20	0	1
LDO.SRGAPC1.Rs3.ctVal	-	Reset SRGAPC1 flip-flop 3	10=Reset	11	103	1	20	0	1
LDO.SRGAPC1.Rs4.ctVal	-	Reset SRGAPC1 flip-flop 4	10=Reset	11	104	1	20	0	1
LDO.SRGAPC1.Rs5.ctVal	-	Reset SRGAPC1 flip-flop 5	10=Reset	11	105	1	20	0	1
LDO.SRGAPC1.Rs6.ctVal	-	Reset SRGAPC1 flip-flop 6	10=Reset	11	106	1	20	0	1
LDO.SRGAPC1.Rs7.ctVal	-	Reset SRGAPC1 flip-flop 7	10=Reset	11	107	1	20	0	1
LDO.SRGAPC1.Rs8.ctVal	-	Reset SRGAPC1 flip-flop 8	10=Reset	11	108	1	20	0	1
SRGAPC2, flip-flop reset control									
LDO.SRGAPC2.Rs1.ctVal	-	Reset SRGAPC2 flip-flop 1	10=Reset	11	111	1	20	0	1
LDO.SRGAPC2.Rs2.ctVal	-	Reset SRGAPC2 flip-flop 2	10=Reset	11	112	1	20	0	1
LDO.SRGAPC2.Rs3.ctVal	-	Reset SRGAPC2 flip-flop 3	10=Reset	11	113	1	20	0	1
LDO.SRGAPC2.Rs4.ctVal	-	Reset SRGAPC2 flip-flop 4	10=Reset	11	114	1	20	0	1
LDO.SRGAPC2.Rs5.ctVal	-	Reset SRGAPC2 flip-flop 5	10=Reset	11	115	1	20	0	1
LDO.SRGAPC2.Rs6.ctVal	-	Reset SRGAPC2 flip-flop 6	10=Reset	11	116	1	20	0	1
LDO.SRGAPC2.Rs7.ctVal	-	Reset SRGAPC2 flip-flop 7	10=Reset	11	117	1	20	0	1
LDO.SRGAPC2.Rs8.ctVal	-	Reset SRGAPC2 flip-flop 8	10=Reset	11	118	1	20	0	1
Multipurpose binary outputs									
LDO.SPCGGI01.SPCS01.Oper.ctVal	-	Output control 1	10=On/Off	11	141	1	20	0	1
LDO.SPCGGI01.SPCS02.Oper.ctVal	-	Output control 2	10=On/Off	11	142	1	20	0	1
LDO.SPCGGI01.SPCS03.Oper.ctVal	-	Output control 3	10=On/Off	11	143	1	20	0	1
LDO.SPCGGI01.SPCS04.Oper.ctVal	-	Output control 4	10=On/Off	11	144	1	20	0	1
LDO.SPCGGI01.SPCS05.Oper.ctVal	-	Output control 5	10=On/Off	11	145	1	20	0	1
LDO.SPCGGI01.SPCS06.Oper.ctVal	-	Output control 6	10=On/Off	11	146	1	20	0	1

Table continues on next page

Section 2

IEC 60870-5-103 data mappings

1MRS756941 C

IEC 61850 name	AFL-Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
LDO.SPCGGIO1.SPCS07.Oper.ctrvAl	-	Output control 7	10/01=On/Off	11	147	1	20	0	1
LDO.SPCGGIO1.SPCS08.Oper.ctrvAl	-	Output control 8	10/01=On/Off	11	148	1	20	0	1
LDO.SPCGGIO1.SPCS09.Oper.ctrvAl	-	Output control 9	10/01=On/Off	11	149	1	20	0	1
LDO.SPCGGIO1.SPCS10.Oper.ctrvAl	-	Output control 10	10/01=On/Off	11	150	1	20	0	1
LDO.SPCGGIO1.SPCS11.Oper.ctrvAl	-	Output control 11	10/01=On/Off	11	151	1	20	0	1
LDO.SPCGGIO1.SPCS12.Oper.ctrvAl	-	Output control 12	10/01=On/Off	11	152	1	20	0	1
LDO.SPCGGIO1.SPCS13.Oper.ctrvAl	-	Output control 13	10/01=On/Off	11	153	1	20	0	1
LDO.SPCGGIO1.SPCS14.Oper.ctrvAl	-	Output control 14	10/01=On/Off	11	154	1	20	0	1
LDO.SPCGGIO1.SPCS15.Oper.ctrvAl	-	Output control 15	10/01=On/Off	11	155	1	20	0	1
LDO.SPCGGIO1.SPCS16.Oper.ctrvAl	-	Output control 16	10/01=On/Off	11	156	1	20	0	1
LDO.SPCGGIO2.SPCS01.Oper.ctrvAl	-	Output control 1	10/01=On/Off	11	181	1	1,20	0	1
LDO.SPCGGIO2.SPCS02.Oper.ctrvAl	-	Output control 2	10/01=On/Off	11	182	1	1,20	0	1
LDO.SPCGGIO2.SPCS03.Oper.ctrvAl	-	Output control 3	10/01=On/Off	11	183	1	1,20	0	1
LDO.SPCGGIO2.SPCS04.Oper.ctrvAl	-	Output control 4	10/01=On/Off	11	184	1	1,20	0	1
LDO.SPCGGIO2.SPCS05.Oper.ctrvAl	-	Output control 5	10/01=On/Off	11	185	1	1,20	0	1
LDO.SPCGGIO2.SPCS06.Oper.ctrvAl	-	Output control 6	10/01=On/Off	11	186	1	1,20	0	1
LDO.SPCGGIO2.SPCS07.Oper.ctrvAl	-	Output control 7	10/01=On/Off	11	187	1	1,20	0	1
LDO.SPCGGIO2.SPCS08.Oper.ctrvAl	-	Output control 8	10/01=On/Off	11	188	1	1,20	0	1
LDO.SPCGGIO2.SPCS09.Oper.ctrvAl	-	Output control 9	10/01=On/Off	11	189	1	1,20	0	1
LDO.SPCGGIO2.SPCS10.Oper.ctrvAl	-	Output control 10	10/01=On/Off	11	190	1	1,20	0	1
LDO.SPCGGIO2.SPCS11.Oper.ctrvAl	-	Output control 11	10/01=On/Off	11	191	1	1,20	0	1
LDO.SPCGGIO2.SPCS12.Oper.ctrvAl	-	Output control 12	10/01=On/Off	11	192	1	1,20	0	1
LDO.SPCGGIO2.SPCS13.Oper.ctrvAl	-	Output control 13	10/01=On/Off	11	193	1	1,20	0	1
LDO.SPCGGIO2.SPCS14.Oper.ctrvAl	-	Output control 14	10/01=On/Off	11	194	1	1,20	0	1
LDO.SPCGGIO2.SPCS15.Oper.ctrvAl	-	Output control 15	10/01=On/Off	11	195	1	1,20	0	1
LDO.SPCGGIO2.SPCS16.Oper.ctrvAl	-	Output control 16	10/01=On/Off	11	196	1	1,20	0	1
Negative-sequence overcurrent protection (HV side), one stage (1) TC01-TC04, two stages TC52, none in TC51									
LDO.NSPTOC1.Str.general	NSPTOC1.START	Stage1 start	10=Stage1 start	21	84	1	2	1	1
LDO.NSPTOC1.Op.general	NSPTOC1.OPERATE	Stage1 operate	10=Stage1 operate	21	90	1	2	0	1
LDO.NSPTOC3.Str.general	NSPTOC3.START	Stage3 start	10=Stage3 start	21	96	1	2	1	1
LDO.NSPTOC3.Op.general	NSPTOC3.OPERATE	Stage3 operate	10=Stage3 operate	21	98	1	2	0	1
Negative-sequence overcurrent protection (LV side), one stage (2) TC01-TC04, two stages TC52, none in TC51									
LDO.NSPTOC2.Op.general	NSPTOC2.START	Stage2 operate	10=Stage2 operate	21	91	1	2	0	1
LDO.NSPTOC2.Str.general	NSPTOC2.OPERATE	Stage2 start	10=Stage2 start	21	94	1	2	1	1
LDO.NSPTOC4.Op.general	NSPTOC4.START	Stage4 operate	10=Stage4 operate	21	97	1	2	1	1
LDO.NSPTOC4.Str.general	NSPTOC4.OPERATE	Stage4 start	10=Stage4 start	21	99	1	2	0	1
Fuse failure protection (1 stage)									
LDO.SEQRUFUF1.Str.general	SEQRUFUF1.FUSEEF_U	General start	10=General Start	22	84	1	2	1	1
LDO.SEQRUFUF1.Str3Ph.general	SEQRUFUF1.FUSEEF_3PH	3 phase start	10=3 phase start	22	94	1	2	1	1

Table continues on next page

IEC 61850 name	AFL-Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
Current circuit failure protection, HV side, TC51,TC52									
LDO.CCRDIF1.AIm.stVal	CCRDF1.FAIL	Current circuit failure alarm	10 = Alarm		23	1	1	1	1
LDO.CCRDIF1.Op.general	CCRDF1.ALARM	Current circuit failure operate	10 = Operate		23	90	1	2	0
LDO.TPOSSLTC1.ValWT.posVal	TPOSSLTC1.TAP_POS	Tap position	-64...63		25	20	1	4	1
Multipurpose analog protection functions (6 stages)									
LDO.MAPGAPC1.Str.general	MAPGAPC1.START	Stage 1 Start	10 = Stage1 start		27	151	0	1	0
LDO.MAPGAPC1.Op.general	MAPGAPC1.OPERATE	Stage 1 Operate	10 = Stage1 operate		27	152	0	1	0
LDO.MAPGAPC2.Str.general	MAPGAPC2.START	Stage 2 Start	10 = Stage2 start		27	153	0	1	0
LDO.MAPGAPC2.Op.general	MAPGAPC2.OPERATE	Stage 2 Operate	10 = Stage2 operate		27	154	0	1	0
LDO.MAPGAPC3.Str.general	MAPGAPC3.START	Stage 3 Start	10 = Stage3 start		27	155	0	1	0
LDO.MAPGAPC3.Op.general	MAPGAPC3.OPERATE	Stage 3 Operate	10 = Stage3 operate		27	156	0	1	0
LDO.MAPGAPC4.Str.general	MAPGAPC4.START	Stage 4 start	10=Start		27	157	0	1	0
LDO.MAPGAPC4.Op.general	MAPGAPC4.OPERATE	Stage 4 operate	10=Start		27	158	0	1	0
LDO.MAPGAPC5.Str.general	MAPGAPC5.START	Stage 5 start	10=Start		27	159	0	1	0
LDO.MAPGAPC5.Op.general	MAPGAPC5.OPERATE	Stage 5 operate	10=Start		27	160	0	1	0
LDO.MAPGAPC6.Str.general	MAPGAPC6.START	Stage 6 start	10=Start		27	161	0	1	0
LDO.MAPGAPC6.Op.general	MAPGAPC6.OPERATE	Stage 6 operate	10=Start		27	162	0	1	0
XRGGO130/Warning									
LDO.XRGGO130.Wrn.stVal	XRGGO130.WARNING	XRGGO130 Warning	10 = Warning		27	201	0	1	0
LDO.XRGGO130.Alm.stVal	XRGGO130.ALARM	XRGGO130 Alarm	10 = Alarm		27	202	0	1	0
Phase overvoltage protection (2 stages), variants TC05-08,TC52									
LDO.PHPTOV2.Str.phsA	-	Stage 2 Start[phsA]	10=Stage 2 phsA start		40	54	0	2	1
LDO.PHPTOV2.Str.phsB	-	Stage 2 Start[phsB]	10=Stage 2 phsB start		40	55	0	2	1
LDO.PHPTOV2.Str.phsC	-	Stage 2 Start[phsC]	10=Stage 2 phsC start		40	56	0	2	1
LDO.PHPTOV1.Str.phsA	-	Stage 1 Start[phsA]	10=Stage 1 phsA start		40	64	0	2	1
LDO.PHPTOV1.Str.phsB	-	Stage 1 Start[phsB]	10=Stage 1 phsB start		40	65	0	2	1
LDO.PHPTOV1.Str.phsC	-	Stage 1 Start[phsC]	10=Stage 1 phsC start		40	66	0	2	1
LDO.PHPTOV1.Str.general	PHPTOV1.START	Stage 1 Start[general]	10=Stage 1 start		40	84	1	2	1
LDO.PHPTOV1.Op.general	PHPTOV1.OPERATE	Stage 1 Operate[general]	10=Stage 1 operate		40	90	1	2	0
LDO.PHPTOV2.Op.general	PHPTOV2.OPERATE	Stage 2 Operate[general]	10=Stage 2 operate		40	91	1	2	0
LDO.PHPTOV2.Str.general	PHPTOV2.START	Stage 2 Start[general]	10=Stage 2 start		40	94	1	2	1
Phase undervoltage protection (2 stages), variants TC05-08,TC52									
LDO.PHPTUV2.Str.phsA	-	Stage 2 Start[phsA]	10=Stage 2 phsA start		41	54	0	2	1
LDO.PHPTUV2.Str.phsB	-	Stage 2 Start[phsB]	10=Stage 2 phsB start		41	55	0	2	1
LDO.PHPTUV2.Str.phsC	-	Stage 2 Start[phsC]	10=Stage 2 phsC start		41	56	0	2	1
LDO.PHPTUV1.Str.phsA	-	Stage 1 Start[phsA]	10=Stage 1 phsA start		41	64	0	2	1
LDO.PHPTUV1.Str.phsB	-	Stage 1 Start[phsB]	10=Stage 1 phsB start		41	65	0	2	1
LDO.PHPTUV1.Str.phsC	-	Stage 1 Start[phsC]	10=Stage 1 phsC start		41	66	0	2	1

Table continues on next page

Section 2

IEC 60870-5-103 data mappings

1MRS756941 C

IEC 61850 name	AFL+Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
LDO.PHPTUV1.Str-general	PHPTUV1.START	Stage 1 Start[general]	10=Stage 1 start	41	84	1	2	1	1
LDO.PHPTUV1.Op.general	PHPTUV1.OPERATE	Stage 1 Operate[general]	10=Stage 1 operate	41	90	1	2	0	1
LDO.PHPTUV2.Op.general	PHPTUV2.OPERATE	Stage 2 Operate[general]	10=Stage 2 operate	41	91	1	2	0	1
LDO.PHPTUV2.Str-general	PHPTUV2.START	Stage 2 Start[general]	10=Stage 2 start	41	94	1	2	1	1
Positive sequence undervoltage protection (2 stages), variants TC05-08,TC52									
LDO.PSPTUV1.Str.general	START	Stage 1 start	10=Start	42	84	1	2	1	1
LDO.PSPTUV1.Op.general	OPERATE	Stage 1 operate	10=Operate	42	90	1	2	0	1
LDO.PSPTUV2.Str.general	START	Stage 2 start	10=Start	42	91	1	2	1	1
LDO.PSPTUV2.Op.general	OPERATE	Stage 2 operate	10=Operate	42	94	1	2	0	1
Negative sequence undervoltage protection (2 stages), variants TC05-08,TC52									
LDO.NSPTOV1.Str.general	ROVPTOV1.START	Stage 1 start	10=Start	43	84	1	2	1	1
LDO.NSPTOV1.Op.general	ROVPTOV1.OPERATE	Stage 1 Operate	10=Operate	43	90	1	2	0	1
LDO.NSPTOV2.Str.general	ROVPTOV2.START	Stage 2 start	10=Start	43	91	1	2	1	1
LDO.NSPTOV2.Op.general	ROVPTOV2.OPERATE	Stage 2 Operate	10=Operate	43	94	1	2	0	1
Residual overvoltage protection (2 stages), variants TC05-08,TC52									
LDO.ROVPTOV1.Str.general	ROVPTOV1.START	Stage 1 Start	10=Stage 1 start	44	84	1	2	1	1
LDO.ROVPTOV1.Op.general	ROVPTOV1.OPERATE	Stage 1 Operate	10=Stage 1 operate	44	90	1	2	0	1
LDO.ROVPTOV2.Str.general	ROVPTOV2.START	Stage 2 Start	10=Stage 2 start	44	91	1	2	0	1
LDO.ROVPTOV2.Op.general	ROVPTOV2.OPERATE	Stage 2 Operate	10=Stage 2 operate	44	94	1	2	1	1
Physical binary I/O signals									
LDO.XGIGO130.Ind1.stVal	X130-Input 1	10=ON, 01=OFF	50	1	0	1	1	1	1
LDO.XGIGO130.Ind2.stVal	X130-Input 2	10=ON, 01=OFF	50	2	0	1	1	1	1
LDO.XGIGO130.Ind3.stVal	X130-Input 3	10=ON, 01=OFF	50	3	0	1	1	1	1
LDO.XGIGO130.Ind4.stVal	X130-Input 4	10=ON, 01=OFF	50	4	0	1	1	1	1
LDO.XGIGO130.Ind5.stVal	X130-Input 5	10=ON, 01=OFF	50	5	0	1	1	1	1
LDO.XGIGO130.Ind6.stVal	X130-Input 6	10=ON, 01=OFF	50	6	0	1	1	1	1
LDO.XGIGO130.SPCSO1.stVal	X130-Output 1	10=ON, 01=OFF	50	101	0	1	1	1	1
LDO.XGIGO130.SPCSO2.stVal	X130-Output 2	10=ON, 01=OFF	50	102	0	1	1	1	1
LDO.XGIGO130.SPCSO3.stVal	X130-Output 3	10=ON, 01=OFF	50	103	0	1	1	1	1
LDO.XGIGO120.Ind1.stVal	-	X120-Input 1	10=ON, 01=OFF	51	1	1	1	1	1
LDO.XGIGO120.Ind2.stVal	-	X120-Input 2	10=ON, 01=OFF	51	2	1	1	1	1
LDO.XGIGO120.Ind3.stVal	-	X120-Input 3	10=ON, 01=OFF	51	3	1	1	1	1
LDO.XGIGO120.Ind4.stVal	-	X120-Input 4	10=ON, 01=OFF	51	4	1	1	1	1
LDO.XGIGO110.Ind1.stVal	X110-Input 1	10=ON, 01=OFF	52	1	1	1	1	1	1
LDO.XGIGO110.Ind2.stVal	X110-Input 2	10=ON, 01=OFF	52	2	1	1	1	1	1
LDO.XGIGO110.Ind3.stVal	X110-Input 3	10=ON, 01=OFF	52	3	1	1	1	1	1
LDO.XGIGO110.Ind4.stVal	X110-Input 4	10=ON, 01=OFF	52	4	1	1	1	1	1
LDO.XGIGO110.Ind5.stVal	X110-Input 5	10=ON, 01=OFF	52	5	1	1	1	1	1
LDO.XGIGO110.Ind6.stVal	X110-Input 6	10=ON, 01=OFF	52	6	1	1	1	1	1

Table continues on next page

IEC 61850 name	AFL-Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
LD0.XGIGIO110.Ind7.stVal	X110-Input 7	10=ON, 01=OFF	52	7	1	1	1	1	1
LD0.XGIGIO110.Ind8.stVal	X110-Input 8	10=ON, 01=OFF	52	8	1	1	1	1	1
LD0.XGIGIO110.SPCSO1.stVal	X110-Output 1	10=ON, 01=OFF	52	101	0	1	1	1	1
LD0.XGIGIO110.SPCSO2.stVal	X110-Output 2	10=ON, 01=OFF	52	102	0	1	1	1	1
LD0.XGIGIO110.SPCSO3.stVal	X110-Output 3	10=ON, 01=OFF	52	103	0	1	1	1	1
LD0.XGIGIO110.SPCSO4.stVal	X110-Output 4	10=ON, 01=OFF	52	104	0	1	1	1	1
LD0.XGIGIO100.SPCSO1.stVal	X100-Output 1	10=ON, 01=OFF	53	101	0	1	1	1	1
LD0.XGIGIO100.SPCSO2.stVal	X100-Output 2	10=ON, 01=OFF	53	102	0	1	1	1	1
LD0.XGIGIO100.SPCSO3.stVal	X100-Output 3	10=ON, 01=OFF	53	103	0	1	1	1	1
LD0.XGIGIO100.SPCSO4.stVal	X100-Output 4	10=ON, 01=OFF	53	104	0	1	1	1	1
LD0.XGIGIO100.SPCSO5.stVal	X100-Output 5	10=ON, 01=OFF	53	105	0	1	1	1	1
LD0.XGIGIO100.SPCSO6.stVal	X100-Output 6	10=ON, 01=OFF	53	106	0	1	1	1	1
Generic operation time supervision									
LD0.MDSOPT1.OptInVm.stVal	MDSOPT1.WARNING	Accum. operation time warning	10=Warning	71	1	1	1	1	1
LD0.MDSOPT1.OptInAlm.stVal	MDSOPT1.ALARM	Accum. operation time alarm	10=Alarm	71	2	1	1	0	1
ARC protection, optional									
LD0.ARCSARC1.FADet.stVal	ARCSARC1.ARC_FLT_DET	Stage1 Fault arc detected	10=Stage1 arc detected	156	211	1	1	0	1
LD0.ARCSARC1.InRemFA.stVal		Stage1 Remote fault arc detected	10=Stage1 Remote arc detected	156	212	1	1	0	1
LD0.ARCPTRC1.Op_general	ARCSARC1.OPERATE	Stage1 Operate	10=Stage1 operate	156	213	1	2	0	1
LD0.ARCSARC2.FADet.stVal	ARCSARC2.ARC_FLT_DET	Stage2 Fault arc detected	10=Stage2 arc detected	156	221	1	1	0	1
LD0.ARCSARC2.InRemFA.stVal		Stage2 Remote fault arc detected	10=Stage2 Remote arc detected	156	222	1	1	0	1
LD0.ARCPTRC2.Op_general	ARCSARC2.OPERATE	Stage2 Operate	10=Stage2 operate	156	223	1	2	0	1
LD0.ARCSARC3.FADet.stVal	ARCSARC3.ARC_FLT_DET	Stage3 Fault arc detected	10=Stage3 arc detected	156	231	1	1	0	1
LD0.ARCSARC3.InRemFA.stVal		Stage3 Remote fault arc detected	10=Stage3 Remote arc detected	156	232	1	1	0	1
LD0.ARCPTRC3.Op_general	ARCSARC3.OPERATE	Stage3 Operate	10=Stage3 operate	156	233	1	2	0	1
Non-directional earth-fault (HV-side), variants TE01,03									
LD0.EFLPTOC1.Str_general	EFLPTOC1.START	High stage start	10=High Stage start	159	84	1	2	1	1
LD0.EFLPTOC1.Op_general	EFLPTOC1.OPERATE	High stage operate	10=High Stage operate	159	90	1	2	0	1
LD0.EFHPTOC1.Str_general	EFHPTOC1.START	High stage start	10=High Stage start	159	96	1	2	1	1
LD0.EFHPTOC1.Op_general	EFHPTOC1.OPERATE	High stage operate	10=High Stage operate	159	98	1	2	0	1
Phase overcurrent protection LV-side (3 stages)									
LD0.PHIPTOC2.Str.phsA	-	Instantaneous stage(2) Start[phsA]	10=Inst.Stage(2) phsA start	162	24	0	2	1	1

Table continues on next page

Section 2

IEC 60870-5-103 data mappings

1MRS756941 C

IEC 61850 name	AFL-Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
LD0.PHPTOC2.Str.phsB	-	Instantaneous stage(2) Start[phsB]	10=Inst.Stage(2) phsB start	162	25	0	2	1	1
LD0.PHPTOC2.Str.phsC	-	Instantaneous stage(2) Start[phsC]	10=Inst.Stage(2) phsC start	162	26	0	2	1	1
LD0.PHPTOC2.Str.phsA	-	Low stage(2) Start[phsA]	10=Low Stage(2) phsA start	162	44	0	2	1	1
LD0.PHPTOC2.Str.phsB	-	Low stage(2) Start[phsB]	10=Low Stage(2) phsB start	162	45	0	2	1	1
LD0.PHPTOC2.Str.phsC	-	Low stage(2) Start[phsC]	10=Low Stage(2) phsC start	162	46	0	2	1	1
LD0.PHPTOC2.Str.phsA	-	Low stage(2) Start[phsA]	10=Low Stage(2) phsA start	162	74	0	2	1	1
LD0.PHPTOC2.Str.phsB	-	Low stage(2) Start[phsB]	10=Low Stage(2) phsB start	162	75	0	2	1	1
LD0.PHPTOC2.Str.phsC	-	Low stage(2) Start[phsC]	10=Low Stage(2) phsC start	162	76	0	2	1	1
LD0.PHPTOC2.Str.general	PHPTOC2.START	Instantaneous stage(2) Start[general]	10=Inst Stage start	162	96	1	2	1	1
LD0.PHPTOC2.Op.general	PHPTOC2.OPERATE	Instantaneous stage(2) Operate[general]	10=Inst Stage operate	162	98	1	2	0	1
LD0.PHPTOC2.Str.general	PHPTOC2.START	Low stage(2) Start[general]	10=Low Stage(2) start	162	100	1	2	1	1
LD0.PHPTOC2.Op.general	PHPTOC2.OPERATE	Low stage(2) Operate[general]	10=Low Stage(2) operate	162	101	1	2	0	1
LD0.PHPTOC2.Str.general	PHPTOC2.START	Instantaneous stage(2) Start[general]	10=Inst Stage(2) start	162	102	1	2	1	1
LD0.PHPTOC2.Op.general	PHPTOC2.OPERATE	Instantaneous stage(2) Operate[general]	10=Inst Stage(2) operate	162	103	1	2	0	1
Phase overcurrent protection HV-side (3 stages)									
LD0.PHPTOC1.Str.phsA	-	Instantaneous stage Start[phsA]	10=Inst.Stage phsA start	162	34	0	2	1	1
LD0.PHPTOC1.Str.phsB	-	Instantaneous stage Start[phsB]	10=Inst.Stage phsB start	162	35	0	2	1	1
LD0.PHPTOC1.Str.phsC	-	Instantaneous stage Start[phsC]	10=Inst.Stage phsC start	162	36	0	2	1	1
LD0.PHPTOC2.Str.phsA	-	High stage Start[phsA]	10=Start	162	44	0	2	1	1
LD0.PHPTOC2.Str.phsB	-	High stage Start[phsB]	10=Start	162	45	0	2	1	1
LD0.PHPTOC2.Str.phsC	-	High stage Start[phsC]	10=Start	162	46	0	2	1	1
LD0.PHPTOC1.Str.phsA	-	Low stage Start[phsA]	10=Low Stage phsA start	162	54	0	2	1	1
LD0.PHPTOC1.Str.phsB	-	Low stage Start[phsB]	10=Low Stage phsB start	162	55	0	2	1	1
LD0.PHPTOC1.Str.phsC	-	Low stage Start[phsC]	10=Low Stage phsC start	162	56	0	2	1	1
LD0.PHPTOC1.Str.phsA	-	Low stage Start[phsA]	10=Low Stage phsA start	162	64	0	2	1	1
LD0.PHPTOC1.Str.phsB	-	Low stage Start[phsB]	10=Low Stage phsB start	162	65	0	2	1	1
LD0.PHPTOC1.Str.phsC	-	Low stage Start[phsC]	10=Low Stage phsC start	162	66	0	2	1	1
LD0.PHPTOC2.Str.phsA	-	Low stage Start[phsA]	10=Start	162	74	0	2	1	1
LD0.PHPTOC2.Str.phsB	-	Low stage Start[phsB]	10=Start	162	75	0	2	1	1
LD0.PHPTOC2.Str.phsC	-	Low stage Start[phsC]	10=Start	162	76	0	2	1	1
LD0.PHPTOC1.Str.general	PHPTOC1.START	Low stage Start[general]	10=Low Stage start	162	84	1	2	1	1
LD0.PHPTOC1.Op.general	PHPTOC1.OPERATE	Low stage Operate[general]	10=Low Stage operate	162	90	1	2	0	1
LD0.PHPTOC1.Op.general	PHPTOC1.OPERATE	Low stage Operate[general]	10=Low Stage operate	162	91	1	2	0	1
LD0.PHPTOC1.Str.general	PHPTOC1.START	Instantaneous stage Start[general]	10=Inst Stage start	162	94	1	2	1	1

Table continues on next page

IEC 61850 name	AFL-Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
LDO.PHPTOC2.Str.general	PHPTOC2.START	High stage Start[general]	10=Start		162	96	1	2	1 1
LDO.PHPTOC1.Str.general	PHPTOC1.START	Instantaneous stage Start[general]	10=Inst Stage start		162	97	1	2	1 1
LDO.PHPTOC2.Op.general	PHPTOC2.OPERATE	High stage Operate[general]	10=Operate		162	98	1	2	0 1
LDO.PHPTOC1.Op.general	PHPTOC1.OPERATE	Instantaneous stage Operate[general]	10=Inst Stage operate		162	99	1	2	0 1
LDO.PHLPTOC2.Str.general	START	Low stage Start-[general]	10=Start		162	100	1	2	1 1
LDO.PHLPTOC2.Op.general	OPERATE	Low stage Operate [general]	10=Operate		162	101	1	2	0 1
		Thermal overload protection (HV-side)							
LDO.T2PTTR1.Str.general	T2PTTR1.START	Thermal start	10=Start		168	104	1	2	1 1
LDO.T2PTTR1.AinThm.general	T2PTTR1.ALARM	Thermal alarm	10=Alarm		168	105	1	2	1 1
LDO.T2PTTR1.Op.general	T2PTTR1.OPERATE	Operate	10=Operate		168	106	1	2	0 1
		Low impedance restricted earth-fault protection, variants TE01,02							
LDO.LREFPDIF1.Str.general	LREFPNDIF1.START	Stage start	10=Stage start		170	84	1	2	1 1
LDO.LREFPDIF1.Op.general	LREFPNDIF1.OPERATE	Stage operate	10=Stage operate		170	91	1	2	0 1
		High impedance restricted earth-fault protection, variants TE03,04							
LDO.HREFPDIF1.Str.general	HREFPDIF1.START	Stage start	10=Stage start		171	84	1	2	1 1
LDO.HREFPDIF1.Op.general	HREFPDIF1.OPERATE	Stage operate	10=Stage operate		171	91	1	2	0 1
		Transformer differential protection							
LDO.TR2PTDF1.Op.general	TR2PTDF1.OPERATE	Stage operate	10=Stage operate		176	91	1	2	0 1
LDO.TR2PTDF1.BLK2HSt.general	TR2PTDF1.BLK2H	2nd harmonic restraint blocking status	10=Blocking		176	150	1	2	1 1
		Phase currents limit supervision (HV-side)							
LDO.CMMXU1.HiAlm.stVal	CMMXU1.HIGH_ALARM	Phase currents High alarm	10=High alarm		210	1	1	1	1 1
LDO.CMMXU1.HiWrn.stVal	CMMXU1.HIGH_WARN	Phase currents High warning	10=High warning		210	2	1	1	1 1
LDO.CMMXU1.Low.stVal	CMMXU1.LOW_WARN	Phase currents Low warning	10=Low warning		210	3	1	1	1 1
LDO.CMMXU1.LoAlm.stVal	CMMXU1.LOW_ALARM	Phase currents Low alarm	10=Low alarm		210	4	1	1	1 1
		Residual current limit supervision (HV-side), variants TE01,03							
LDO.RESCMMXU1.HiAlm.stVal	RESCMMXU1.HIGH_ALARM	Residual current High alarm	10=High alarm		210	11	1	1	1 1
LDO.RESCMMXU1.HiWrn.stVal	RESCMMXU1.HIGH_WARN	Residual current High warning	10=High warning		210	12	1	1	1 1
		Phase currents limit supervision (LV-side)							
LDO.CMMXU2.HiAlm.stVal	CMMXU2.HIGH_ALARM	Phase currents High alarm	10=High alarm		212	1	1	1	1 1
LDO.CMMXU2.HiWrn.stVal	CMMXU2.HIGH_WARN	Phase currents High warning	10=High warning		212	2	1	1	1 1
LDO.CMMXU2.Low.stVal	CMMXU2.LOW_WARN	Phase currents Low warning	10=Low warning		212	3	1	1	1 1
LDO.CMMXU2.LoAlm.stVal	CMMXU2.LOW_ALARM	Phase currents Low alarm	10=Low alarm		212	4	1	1	1 1
		Residual current limit supervision (LV-side), variants TE02,04							
LDO.RESCMMXU2.HiAlm.stVal	RESCMMXU2.HIGH_ALARM	Residual current High alarm	10=High alarm		212	11	1	1	1 1
LDO.RESCMMXU2.HiWrn.stVal	RESCMMXU2.HIGH_WARN	Residual current High warning	10=High warning		212	12	1	1	1 1
		Circuit breaker position and failure protection							
CTRL.CBCILO1.EnaOp.stVal	CBXCBR1.ENA_OPEN	CB open enabled	10=Open enabled		240	21	1	1	1 1

Table continues on next page

Section 2

IEC 60870-5-103 data mappings

1MRS756941 C

IEC 61850 name	AFL=Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
CTRL.CBCILO1.EnaClis.stVal	CBXCBR1.ENA_CLOSE	CB close enabled	10=Close enabled	240	22	1	1	1	1
CTRL.CBXCBR1.BLK_OPEN	CBXCBR1.BLK_OPEN	CB open blocked	10=Open blocked	240	23	1	1	1	1
CTRL.CBXCBR1.BLK_CLOSE	CBXCBR1.BLK_CLOSE	CB close blocked	10=Close blocked	240	24	1	1	1	1
CTRL.CBXCBR1.ITL_BYPASS	CBXCBR1.ITAL_BYPASS	CB interlocking bypass	10=Interlocking bypassed	240	25	0	1	1	1
LD0.CCBRBRF1.Str_general	CCBRBRF1.CB_FAULT_AL	CBFP Start, timer running	10=Start,timer running	240	101	0	2	1	1
LD0.CCBRBRF1.OpEx_general	CCBRBRF1.TRBUT	CBFP Failure, external trip	10=Failure, external trip	240	102	0	2	0	1
LD0.CCBRBRF1.Optn.general	CCBRBRF1.TRRRET	CBFP Operate, internal re-trip	10=Operate, internal re-trip	240	103	0	2	0	1
CTRL.CBCSW1.Pos.stVal	CBXCBR1.POSITION	CB selected	10=Selected	240	120	1	2	1	1
CTRL.CBCSW1.Pos.stVal	CBXCBR1.POSITION	Circuit breaker position	10=Close; 01=Open; 00=Intermediate; 11=Error	240	160	1	1,20	1	2
Circuit breaker condition monitoring									
LD0.SSCBR1.RsAccAPwr.ctlVal	SSCBR1.RST_IPOW	Reset accumulation energy	10=Reset	242	19	1	20	0	1
LD0.SSCBR1.RsCBWear.ctlVal	SSCBR1.RST_CB_WEAR	Reset CB remaining life and op counters	10=Reset	242	20	1	20	0	1
LD0.SSCBR1.RsTrvTm.ctlVal	SSCBR1.RST_TRV_T	Reset CB travelling time alarm	10=Reset	242	21	1	20	0	1
LD0.SSCBR1.RsSprChTm.ctlVal	SSCBR1.RST_SPR_T	Reset CB spring charge time alarm	10=Reset	242	22	1	20	0	1
LD0.SSCBR1.OpnAlm.stVal	SSCBR1.TRV_T_OP_ALM	Open travel time exceeded	10=Open travel time alarm	242	101	0	1	0	1
LD0.SSCBR1.ClsAlm.stVal	SSCBR1.TRV_T_CL_ALM	Close travel time exceeded	10=Close travel time alarm	242	102	0	1	0	1
LD0.SSCBR1.SprChAlm.stVal	SSCBR1.SPR_CHR_ALM	Spring charging time exceeded	10=Spring charging time alarm	242	103	0	1	0	1
LD0.SSCBR1.OpNumAlm.stVal	SSCBR1.OPR_ALM	Num of CB operations alarm	10=CB operations alarm	242	104	0	1	0	1
LD0.SSCBR1.OpNumO.stVal	SSCBR1.OPR_LO	Num of CB operations lockout limit	10=CB operations lockout alarm	242	105	0	1	0	1
LD0.SSCBR1.LonTmAlm.stVal	SSCBR1.MON_ALM	CB 'not operated for long time' alarm	10=CB unactive alarm	242	106	0	1	0	1
LD0.SSCBR1.PresAlm.stVal	SSCBR1.PRES_ALM	Pressure below alarm level	10=Low pressure alarm	242	107	0	1	0	1
LD0.SSCBR1.PresO.stVal	SSCBR1.PRES_LO	Pressure below lockout level	10=Low pressure lockout alarm	242	108	0	1	0	1
LD0.SSCBR1.APwrAlm.stVal	SSCBR1.IPOW_ALM	Acc. currents power (lyt) alarm limit	10=lyt alarm	242	109	0	1	0	1
LD0.SSCBR1.APwrLO.stVal	SSCBR1.IPOW_LO	Acc. currents power (lyt) lockout limit	10=lyt lockout alarm	242	110	0	1	0	1
LD0.SSCBR1.CBLifeAlm.stVal	SSCBR1.CB_LIFE_ALM	Remaining life of CB exceeded alarm	10=CB life alarm	242	111	0	1	0	1
Controllable disconnector 1									
CTRL.DCCIL01.EnaOpn.stVal	ENA_OPEN	Open enabled	10=Enabled	245	21	1	1	1	1
CTRL.DCCIL01.EnaClis.stVal	ENA_CLOSE	Close enabled	10=Enabled	245	22	1	1	1	1
CTRL.DCCIL01.ITL_BYPASS	ITL_BYPASS	Interlocking bypass	10=Bypassed	245	25	1	1	1	1
CTRL.DCXSW1.BlkCpn.stVal	BLK_OPEN	Open blocked	10=Blocked	245	23	1	1	1	1
CTRL.DCXSW1.BlkCcls.stVal	BLK_CLOSE	Close blocked	10=Blocked	245	24	1	1	1	1
CTRL.DCCSW1.strSel.stVal	SELECTED	DC selected	10=Selected	245	120	1	1	1	1
CTRL.DCCSW1.Pos.stVal/ctlVal	POSITION	DC position control	10=1=Close/Open	245	160	1	1,20	1	1
Controllable disconnector 2									

Table continues on next page

IEC 61850 name	AFL-Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
CTRL.DCCIGO2.EnaOpen.stVal	ENA_OPEN	Open enabled	10=Enabled	246	21	1	1	1	1
CTRL.DCCIGO2.EnaCcls.stVal	ENA_CLOSE	Close enabled	10=Enabled	246	22	1	1	1	1
CTRL.DCCIGO2.!!tByPss.stVal	ITL_BYPASS	Interlocking bypass	10=Bypassed	246	25	1	1	1	1
CTRL.DCXSW12.BlkOpen.stVal	BLK_OPEN	Open blocked	10=Blocked	246	23	1	1	1	1
CTRL.DCXSW12.BlkCcls.stVal	BLK_CLOSE	Close blocked	10=Blocked	246	24	1	1	1	1
CTRL.DCCSW12.stSel0.stVal	SELECTED	DC selected	10=Selected	246	120	1	1	1	1
CTRL.DCCSW12.Pos.stVal/c1Val	POSITION	DC pos/control	10/01=Close/Open	246	160	1	1,20	1	1
Controllable earth switch 1									
CTRL.ESCILO1.EnaOpen.stVal	ENA_OPEN	Open enabled	10=Enabled	247	21	1	1	1	1
CTRL.ESCILO1.EnaCcls.stVal	ENA_CLOSE	Close enabled	10=Enabled	247	22	1	1	1	1
CTRL.ESCILO1.!!tByPss.stVal	ITL_BYPASS	Interlocking bypass	10=Bypassed	247	25	1	1	1	1
CTRL.ESXSW11.BlkOpen.stVal	BLK_OPEN	Open blocked	10=Blocked	247	23	1	1	1	1
CTRL.ESXSW11.BlkCcls.stVal	BLK_CLOSE	Close blocked	10=Blocked	247	24	1	1	1	1
CTRL.ESCSW11.stSel0.stVal	SELECTED	DC selected	10=Selected	247	120	1	1	1	1
CTRL.ESCSW11.Pos.stVal/c1Val	POSITION	DC pos/control	10/01=Close/Open	247	160	1	1,20	1	1
Disconnecter positions									
CTRL.DCSXSW1.POS.stVal	DCSXSW1.POSITION	Disconnecter 1 position	10=Close; 01=Open; 00=Intermediate; 11=Error	253	1	1	1	1	2
CTRL.DCSXSW12.POS.stVal	DCSXSW2.POSITION	Disconnecter 2 position	10=Close; 01=Open; 00=Intermediate; 11=Error	253	2	1	1	1	2
CTRL.DCSXSW13.POS.stVal	DCSXSW3.POSITION	Disconnecter 3 position	10=Close; 01=Open; 00=Intermediate; 11=Error	253	3	1	1	1	2
CTRL.ESSXSW1.POS.stVal	ESSXSW1.POSITION	Earth switch position	10=Close; 01=Open; 00=Intermediate; 11=Error	253	11	1	1	1	2
CTRL.ESSXSW12.POS.stVal	ESSXSW2.POSITION	Earth switch 2 pos	10=Close; 01=Open; 00=Intermediate; 11=Error	253	12	1	1	1	2
LHMI LED indications type 1 (2 states)									
LDO.LEDGGIO1.ISCS01.stVal	-	LED 1 state	10=On	253	89	1	1	1	1
LDO.LEDGGIO1.ISCS02.stVal	-	LED 2 state	10=On	253	90	1	1	1	1
LDO.LEDGGIO1.ISCS03.stVal	-	LED 3 state	10=On	253	91	1	1	1	1
LDO.LEDGGIO1.ISCS04.stVal	-	LED 4 state	10=On	253	92	1	1	1	1
LDO.LEDGGIO1.ISCS05.stVal	-	LED 5 state	10=On	253	93	1	1	1	1
LDO.LEDGGIO1.ISCS06.stVal	-	LED 6 state	10=On	253	94	1	1	1	1
LDO.LEDGGIO1.ISCS07.stVal	-	LED 7 state	10=On	253	95	1	1	1	1
LDO.LEDGGIO1.ISCS08.stVal	-	LED 8 state	10=On	253	96	1	1	1	1
LDO.LEDGGIO1.ISCS09.stVal	-	LED 9 state	10=On	253	97	1	1	1	1
LDO.LEDGGIO1.ISCS10.stVal	-	LED 10 state	10=On	253	98	1	1	1	1
LDO.LEDGGIO1.ISCS11.stVal	-	LED 11 state	10=On	253	99	1	1	1	1
LHMI LED indications type 2 (3 states; 1:1 LED state)									
LDO.LEDGGIO1.ISCS01.stVal	-	LED 1 state	00/01/11=LED State	253	119	1	1	1	2
LDO.LEDGGIO1.ISCS02.stVal	-	LED 2 state	00/01/11=LED State	253	120	1	1	1	2

Table continues on next page

Section 2

IEC 60870-5-103 data mappings

1MRS756941 C

IEC 61850 name	AFL-Common SA name	Description	DPI value	FUN	INF	InUse	ASDU	GI	Coding
LDO.LEDGGIO1.ISCSO3.stVal	-	LED 3 state	0001/11=LED State	253	121	1	1	1	2
LDO.LEDGGIO1.ISCSO4.stVal	-	LED 4 state	0001/11=LED State	253	122	1	1	1	2
LDO.LEDGGIO1.ISCSO5.stVal	-	LED 5 state	0001/11=LED State	253	123	1	1	1	2
LDO.LEDGGIO1.ISCSO6.stVal	-	LED 6 state	0001/11=LED State	253	124	1	1	1	2
LDO.LEDGGIO1.ISCSO7.stVal	-	LED 7 state	0001/11=LED State	253	125	1	1	1	2
LDO.LEDGGIO1.ISCSO8.stVal	-	LED 8 state	0001/11=LED State	253	126	1	1	1	2
LDO.LEDGGIO1.ISCSO9.stVal	-	LED 9 state	0001/11=LED State	253	127	1	1	1	2
LDO.LEDGGIO1.ISCSO10.stVal	-	LED 10 state	0001/11=LED State	253	128	1	1	1	2
LDO.LEDGGIO1.ISCSO11.stVal	-	LED 11 state	0001/11=LED State	253	129	1	1	1	2

Table 3: Class 2 PRIVATE measureand frames 6 and 7 for RET615 (TC01..TC04)

Index	IEC 61850 name	Description	Default scale	Frame No6	Frame No7	Comment
1	LD0.CMMXU1.A.phsA.cVal.mag	Phase current A (HV-side)	2.4	x	x	
2	LD0.CMMXU1.A.phsB.cVal.mag	Phase current B (HV-side)	2.4	x	x	
3	LD0.CMMXU1.A.phsC.cVal.mag	Phase current C (HV-side)	2.4	x	x	n.a. in TC02,04
4	LD0.RESCMMXU1.A.res.cVal.mag	Residual current (HV-side)	2.4	x	x	
5	LD0.CMMXU2.A.phsA.cVal.mag	Phase current A (LV-side)	2.4	x	x	
6	LD0.CMMXU2.A.phsB.cVal.mag	Phase current B (LV-side)	2.4	x	x	
7	LD0.CMMXU2.A.phsC.cVal.mag	Phase current C (LV-side)	2.4	x	x	
8	LD0.RESCMMXU2.A.res.cVal.mag	Residual current (LV-side)	2.4	x	x	n.a. in TC01,03
9	LD0.CSMSQ1.SeqAc1.cVal.mag	Positive sequence current (HV-side)	2.4	x	x	
10	LD0.CSMSQ1.SeqA.c2.cVal.mag	Negative sequence current (HV-side)	2.4	x	x	
11	LD0.CSMSQ1.SeqA.c3.cVal.mag	Zero sequence current (HV-side)	2.4	x	x	
12	LD0.T2PTTR1.Tmp.mag	Temperature of protected object	1000	x	x	
13	LD0.CMSTA1.AvAmps1.mag	Phase current A -demand value (HV-side)	2.4	x	x	
14	LD0.CMSTA1.AvAmps2.mag	Phase current B -demand value (HV-side)	2.4	x	x	
15	LD0.CMSTA1.AvAmps3.mag	Phase current C -demand value (HV-side)	2.4	x	x	
16	LD0.CMSTA2.AvAmps1.mag	Phase current A -demand value (LV-side)	2.4	x	x	
17	LD0.CMSTA2.AvAmps2.mag	Phase current B -demand value (LV-side)	2.4	x	x	
18	LD0.CMSTA2.AvAmps3.mag	Phase current C -demand value (LV-side)	2.4	x	x	
19	LD0.TR2PDF1.DifACIC.phsA.cVal.mag	Differential current A	1.2	x	x	
20	LD0.TR2PDF1.DifACIC.phsB.cVal.mag	Differential current B	1.2	x	x	
21	LD0.TR2PDF1.DifACIC.phsC.cVal.mag	Differential current C	1.2	x	x	
22	LD0.TR2PDF1.Rsta.phsA.cVal.mag	Bias current A	1.2	x	x	
23	LD0.TR2PDF1.Rsta.phsB.cVal.mag	Bias current B	1.2	x	x	
24	LD0.TR2PDF1.Rsta.phsC.cVal.mag	Bias current C	1.2	x	x	
unmapped	LD0.XRGGI0130.AnIn1.instMag	RTD input 1	10000	-	-	Optional in all variants
unmapped	LD0.XRGGI0130.AnIn2.instMag	RTD input 2	10000	-	-	Optional in all variants
unmapped	LD0.XRGGI0130.AnIn3.instMag	RTD input 3	10000	-	-	Optional in all variants
unmapped	LD0.XRGGI0130.AnIn4.instMag	RTD input 4	10000	-	-	Optional in all variants
unmapped	LD0.XRGGI0130.AnIn5.instMag	RTD input 5	10000	-	-	Optional in all variants
unmapped	LD0.XRGGI0130.AnIn6.instMag	RTD input 6	10000	-	-	Optional in all variants
unmapped	LD0.XRGGI0130.AnIn7.instMag	RTD input 7	10000	-	-	Optional in all variants
unmapped	LD0.XRGGI0130.AnIn8.instMag	RTD input 8	10000	-	-	Optional in all variants

Section 2

IEC 60870-5-103 data mappings

1MRS756941 C

Table 4: Class 2 PRIVATE measurement frames 6 and 7 for RET615, variants TC05, TC06, TC07, TC08

Index	IEC 61850 name	Description	Default scale	Frame No6	Frame No7	Comment
1	LD0.CMMXU1.A.phsA.cVal.mag	Phase current A (HV-side)	2.4	x	x	
2	LD0.CMMXU1.A.phsB.cVal.mag	Phase current B (HV-side)	2.4	x	x	
3	LD0.CMMXU1.A.phsC.cVal.mag	Phase current C (HV-side)	2.4	x	x	
4	LD0.RESCMMXU1.A.res.cVal.mag	Residual current (HV-side)	2.4	x	x	n.a. in TC06,08
5	LD0.CMMXU2.A.phsA.cVal.mag	Phase current A (LV-side)	2.4	x	x	
6	LD0.CMMXU2.A.phsB.cVal.mag	Phase current B (LV-side)	2.4	x	x	
7	LD0.CMMXU2.A.phsC.cVal.mag	Phase current C (LV-side)	2.4	x	x	
8	LD0.RESCMMXU2.A.res.cVal.mag	Residual current (LV-side)	2.4	x	x	n.a. in TC05,07
9	LD0.VSMSQ1.SeqAc1.cVal.mag	Positive sequence current (HV-side)	2.4	x	x	
10	LD0.VSMSQ1.SeqAc2.cVal.mag	Negative sequence current (HV-side)	2.4	x	x	
11	LD0.CSMSQ1.SeqAc3.cVal.mag	Zero sequence current (HV-side)	2.4	x	x	
12	LD0.T2PTTR1.Tmp.mag	Temperature of protected object	1000	x	x	
13	LD0.VMMXU1.phV.phsA.cVal.mag	Phase-to-ground voltage phase A	2.4	x	x	
14	LD0.VMMXU1.phV.phsB.cVal.mag	Phase-to-ground voltage phase B	2.4	x	x	
15	LD0.VMMXU1.phV.phsC.cVal.mag	Phase-to-ground voltage phase C	2.4	x	x	
16	LD0.VMMXU1.PPV.phsAB.cVal.mag	Phase-to-phase voltage phase AB	2.4	x	x	
17	LD0.VMMXU1.PPV.phsBC.cVal.mag	Phase-to-phase voltage phase BC	2.4	x	x	
18	LD0.VMMXU1.PPV.phsCA.cVal.mag	Phase-to-phase voltage phase CA	2.4	x	x	
19	LD0.RESVMMXU1.PhV.res.instCVa1.mag	Residual voltage	2.4	x	x	
20	LD0.VSMSQ1.SeqAc1.instCVa1.mag	Positive sequence voltage	2.4	x	x	
21	LD0.VSMSQ1.SeqAc2.instCVa1.mag	Negative sequence voltage	2.4	x	x	
22	LD0.VSMSQ1.SeqAc3.instCVa1.mag	Zero sequence voltage	2.4	x	x	
23	LD0.PEMMXU1.TotW.instMag	Active power P	1000	x	x	
24	LD0.PEMMXU1.TotVA.instMag	Reactive power Q	1000	x	x	
25	LD0.PEMMXU1.TotVA.instMag	Apparent power S	1000	x	x	
26	LD0.PEMMXU1.TotPF.instMag	Power factor	1	x	x	
27	LD0.CMSTA1.AvAmps1.mag	Phase current A -demand value (HV-side)	2.4		x	
28	LD0.CMSTA1.AvAmps2.mag	Phase current B -demand value (HV-side)	2.4		x	
29	LD0.CMSTA1.AvAmps3.mag	Phase current C -demand value (HV-side)	2.4		x	
30	LD0.CMSTA2.AvAmps1.mag	Phase current A -demand value (LV-side)	2.4		x	
31	LD0.CMSTA2.AvAmps2.mag	Phase current B -demand value (LV-side)	2.4		x	
32	LD0.CMSTA2.AvAmps3.mag	Phase current C -demand value (LV-side)	2.4		x	
33	LD0.TR2PDF1.DifAC1c.phsA.cVal.mag	Differential current A	1.2		x	
34	LD0.TR2PDF1.DifAC1c.phsB.cVal.mag	Differential current B	1.2		x	
35	LD0.TR2PDF1.DifAC1c.phsC.cVal.mag	Differential current C	1.2		x	
36	LD0.TR2PDF1.Rsta1.phsA.cVal.mag	Bias current A	1.2		x	
37	LD0.TR2PDF1.Rsta1.phsB.cVal.mag	Bias current B	1.2		x	
38	LD0.TR2PDF1.Rsta1.phsC.cVal.mag	Bias current C	1.2		x	

Table 5: Class 2 PRIVATE measureand frames 6 and 7 for RET615 (TC51)

Index	IEC 61850 name	Description	Default scale	Frame No 6	Frame No 7
1	LD0.CMMXU1.A.phsA.cVal.mag	Phase current A (HV-side)	2.4	x	x
2	LD0.CMMXU1.A.phsB.cVal.mag	Phase current B (HV-side)	2.4	x	x
3	LD0.CMMXU1.A.phsC.cVal.mag	Phase current C (HV-side)	2.4	x	x
4	LD0.CMMXU2.A.phsA.cVal.mag	Phase current A (LV-side)	2.4	x	x
5	LD0.CMMXU2.A.phsB.cVal.mag	Phase current B (LV-side)	2.4	x	x
6	LD0.CMMXU2.A.phsC.cVal.mag	Phase current C (LV-side)	2.4	x	x
7	LD0.CSMSQ1.SeqA.c1.cVal.mag	Positive sequence current (HV-side)	2.4	x	x
8	LD0.CSMSQ1.SeqA.c2.cVal.mag	Negative sequence current (HV-side)	2.4	x	x
9	LD0.CSMSQ1.SeqA.c3.cVal.mag	Zero sequence current (HV-side)	2.4	x	x
10	LD0.CSMSQ2.SeqA.c1.cVal.mag	Positive sequence current (LV-side)	2.4	x	x
11	LD0.CSMSQ2.SeqA.c2.cVal.mag	Negative sequence current (LV-side)	2.4	x	x
12	LD0.CSMSQ2.SeqA.c3.cVal.mag	Zero sequence current (LV-side)	2.4	x	x
13	LD0.T2PTTR1.Tmp.mag	Temperature of protected object	1000	x	x
14	LD0.CMSSTA1.AvAmps1.mag	Phase current A -demand value (HV-side)	2.4		x
15	LD0.CMSSTA1.AvAmps2.mag	Phase current B -demand value (HV-side)	2.4		x
16	LD0.CMSSTA1.AvAmps3.mag	Phase current C -demand value (HV-side)	2.4		x
17	LD0.CMSSTA2.AvAmps1.mag	Phase current A -demand value (LV-side)	2.4		x
18	LD0.CMSSTA2.AvAmps2.mag	Phase current B -demand value (LV-side)	2.4		x
19	LD0.CMSSTA2.AvAmps3.mag	Phase current C -demand value (LV-side)	2.4		x
20	LD0.TR2PDIF1.DifACIC.phsA.cVal.mag	Differential current A	1.2		x
21	LD0.TR2PDIF1.DifACIC.phsB.cVal.mag	Differential current B	1.2		x
22	LD0.TR2PDIF1.DifACIC.phsC.cVal.mag	Differential current C	1.2		x
23	LD0.TR2PDIF1.RsIA.phsA.cVal.mag	Bias current A	1.2		x
24	LD0.TR2PDIF1.RsIA.phsB.cVal.mag	Bias current B	1.2		x
25	LD0.TR2PDIF1.RsIA.phsC.cVal.mag	Bias current C	1.2		x
unmapped	LD0.XRGGO130.AnIn4.instMag	RTD input 1	10000	-	-
unmapped	LD0.XRGGO130.AnIn5.instMag	RTD input 2	10000	-	-
unmapped	LD0.XRGGO130.AnIn3.instMag	RTD input 3	10000	-	-
unmapped	LD0.XRGGO130.AnIn4.instMag	RTD input 4	10000	-	-
unmapped	LD0.XRGGO130.AnIn5.instMag	RTD input 5	10000	-	-
unmapped	LD0.XRGGO130.AnIn6.instMag	RTD input 6	10000	-	-
unmapped	LD0.XRGGO130.AnIn7.instMag	RTD input 7	10000	-	-
unmapped	LD0.XRGGO130.AnIn8.instMag	RTD input 8	10000	-	-

Section 2

IEC 60870-5-103 data mappings

1MRS756941 C

Table 6: Class 2 PRIVATE measurement frames 6 and 7 for RET615 (TC52)

Index	IEC 61850 name	Description	Default scale	Frame No6	Frame No7
1	LD0.CMMXU1.A.phsA.cVal.mag	Phase current A (HV-side)	2..4	x	x
2	LD0.CMMXU1.A.phsB.cVal.mag	Phase current B (HV-side)	2..4	x	x
3	LD0.CMMXU1.A.phsC.cVal.mag	Phase current C (HV-side)	2..4	x	x
4	LD0.RESCMXU1.A.res.cVal.mag	Residual current (HV-side)	2..4	x	x
5	LD0.CMMXU2.A.phsA.cVal.mag	Phase current A (LV-side)	2..4	x	x
6	LD0.CMMXU2.A.phsB.cVal.mag	Phase current B (LV-side)	2..4	x	x
7	LD0.CMMXU2.A.phsC.cVal.mag	Phase current C (LV-side)	2..4	x	x
8	LD0.CSMSQ1.SeqA.c1.cVal.mag	Positive sequence current (HV-side)	2..4	x	x
9	LD0.CSMSQ1.SeqA.c2.cVal.mag	Negative sequence current (HV-side)	2..4	x	x
10	LD0.CSMSQ1.SeqA.c3.cVal.mag	Zero sequence current (HV-side)	2..4	x	x
11	LD0.CSMSQ2.SeqA.c1.cVal.mag	Positive sequence current (LV-side)	2..4	x	x
12	LD0.CSMSQ2.SeqA.c2.cVal.mag	Negative sequence current (LV-side)	2..4	x	x
13	LD0.CSMSQ2.SeqA.c3.cVal.mag	Zero sequence current (LV-side)	2..4	x	x
14	LD0.T2PTTR1.Tmp.mag	Temperature of protected object	1000	x	x
15	LD0.VMMXU1.phV.phsA.cVal.mag	Phase-to-ground voltage phase A	2..4	x	x
16	LD0.VMMXU1.phV.phsB.cVal.mag	Phase-to-ground voltage phase B	2..4	x	x
17	LD0.VMMXU1.phV.phsC.cVal.mag	Phase-to-ground voltage phase C	2..4	x	x
18	LD0.VMMXU1.PPV.phsAB.cVal.mag	Phase-to-phase voltage phase AB	2..4	x	x
19	LD0.VMMXU1.PPV.phsBC.cVal.mag	Phase-to-phase voltage phase BC	2..4	x	x
20	LD0.VMMXU1.PPV.phsCA.cVal.mag	Phase-to-phase voltage phase CA	2..4	x	x
21	LD0.RESVMXU1.PhV.res.instCV.al.mag	Residual voltage	2..4	x	x
22	LD0.VSMSQ1.SeqA.c1.instCV.al.mag	Positive sequence voltage	2..4	x	x
23	LD0.VSMSQ1.SeqA.c2.instCV.al.mag	Negative sequence voltage	2..4	x	x
24	LD0.VSMSQ1.SeqA.c3.instCV.al.mag	Zero sequence voltage	2..4	x	x
25	LD0.PEMMXU1.TotVA.instMag	Active power P	1000	x	x
26	LD0.PEMMXU1.TotVA.instMag	Reactive power Q	1000	x	x
27	LD0.PEMMXU1.TotVA.instMag	Apparent power S	1000	x	x
28	LD0.PEMMXU1.TotFF.instMag	Power factor	1	x	x
29	LD0.CMS1A1.AvAmps1.mag	Phase current A -demand value (HV-side)	2..4	x	x
30	LD0.CMS1A1.AvAmps2.mag	Phase current B -demand value (HV-side)	2..4	x	x
31	LD0.CMS1A1.AvAmps3.mag	Phase current C -demand value (HV-side)	2..4	x	x
32	LD0.CMS1A2.AvAmps1.mag	Phase current A -demand value (LV-side)	2..4	x	x
33	LD0.CMS1A2.AvAmps2.mag	Phase current B -demand value (LV-side)	2..4	x	x
34	LD0.CMS1A2.AvAmps3.mag	Phase current C -demand value (LV-side)	2..4	x	x

Section 3

Interoperability profile for 615 series IEC 60870-5-103

3.1

Physical layer

3.1.1

Electrical interface

- EIA RS-485
- Number of loads for one protection equipment

NOTE - EIA RS-485 standard defines unit loads so that 32 of them can be operated on one line.
For detailed information refer to clause 3 of EIA RS-485 standard.

3.1.2

Optical interface

- Glass fibre
- Plastic fibre
- F-SMA type connector
- BFOC/2,5 type connector

3.1.3

Transmission speed

- 9 600 bit/s
- 19 200 bit/s

3.2

Link layer

There are no choices for the link layer.

3.3 Application layer

3.3.1 Transmission mode for application data

Mode 1 (least significant octet first), as defined in 4.10 of IEC 60870-5-4, is used exclusively in this companion standard.

3.3.2 COMMON ADDRESS of ASDU

- One COMMON ADDRESS OF ASDU (identical with station address)
- More than one COMMON ADDRESS OF ASDU

3.3.3 Selection of standard information numbers in monitor direction

3.3.3.1 System functions in monitor directions

INF	Semantics
<input checked="" type="checkbox"/>	<0> End of general interrogation
<input checked="" type="checkbox"/>	<0> Time synchronization
<input checked="" type="checkbox"/>	<2> Reset FCB
<input checked="" type="checkbox"/>	<3> Reset CU
<input checked="" type="checkbox"/>	<4> Start/restart
<input checked="" type="checkbox"/>	<5> Power on

3.3.3.2 Status indications in monitor direction

INF	Semantics
<input checked="" type="checkbox"/>	<16> Auto-recloser active 1
<input type="checkbox"/>	<17> Teleprotection active
<input type="checkbox"/>	<18> Protection active
<input type="checkbox"/>	<19> LED reset
<input type="checkbox"/>	<20> Monitor direction blocked
<input checked="" type="checkbox"/>	<21> Test mode
<input type="checkbox"/>	<22> Local parameter setting
<input checked="" type="checkbox"/>	<23> Characteristic 1
<input checked="" type="checkbox"/>	<24> Characteristic 2
<input checked="" type="checkbox"/>	<25> Characteristic 3
<input checked="" type="checkbox"/>	<26> Characteristic 4

Table continues on next page

- <27> Auxiliary input 1
- <28> Auxiliary input 2
- <29> Auxiliary input 3
- <30> Auxiliary input 4

Note <27>...<30>: Depending on Binary I/O options and application usage there may be additional auxiliary inputs available in the IED. As default, all "raw" binary input data are mapped to private data. It is possible for user to re-map these additional inputs into standard <27>...<30> 'Auxiliary Inputs', if wanted.

3.3.3.3

Supervision indications in monitor direction

INF	Semantics
<input type="checkbox"/> <32>	Measurand supervision I
<input type="checkbox"/> <33>	Measurand supervision V
<input type="checkbox"/> <35>	Phase sequence supervision
<input checked="" type="checkbox"/> <36>	Trip circuit supervision
<input type="checkbox"/> <37>	I>> back-up operation
<input type="checkbox"/> <38>	VT fuse failure
<input type="checkbox"/> <39>	Teleprotection disturbed
<input type="checkbox"/> <46>	Group warning
<input type="checkbox"/> <47>	Group alarm

Note <32>, <33> and <38>: IED current and voltage measurement supervision signals and alarms are found in private data definitions. Semantics of these signals are more complex in 615 series than what is defined by the IEC 60870-5-103 standard.

3.3.3.4

Earth fault indications in monitor direction

INF	Semantics
<input type="checkbox"/> <48>	Earth fault L ₁
<input type="checkbox"/> <49>	Earth fault L ₂
<input type="checkbox"/> <50>	Earth fault L ₃
<input type="checkbox"/> <51>	Earth fault forward, for example line
<input type="checkbox"/> <52>	Earth fault reverse, for example busbar

Note: In 615 series there exist different functions (and signals) for non-directional or directional earth fault protection. Function- and stage-dependent start/pickup signals are found in private data locations.

3.3.3.5

Fault indications in monitor direction

INF	Semantics
<input type="checkbox"/> <64>	Start /pickup L ₁
<input type="checkbox"/> <65>	Start /pickup L ₂

Table continues on next page

-
- <66> Start /pick-up L₃
 - <67> Start /pick-up N
 - <68> General trip
 - <69> Trip L₁
 - <70> Trip L₂
 - <71> Trip L₃
 - <72> Trip I>> (back-up operation)
 - <73> Fault location X in ohms
 - <74> Fault forward/line
 - <75> Fault reverse/busbar
 - <76> Teleprotection signal transmitted
 - <77> Teleprotection signal received
 - <78> Zone 1
 - <79> Zone 2
 - <80> Zone 3
 - <81> Zone 4
 - <82> Zone 5
 - <83> Zone 6
 - <84> General start/pick-up
 - <85> Breaker failure
 - <86> Trip measuring system L₁
 - <87> Trip measuring system L₂
 - <88> Trip measuring system L₃
 - <89> Trip measuring system E
 - <90> Trip I>
 - <91> Trip I>>
 - <92> Trip IN>
 - <93> Trip IN>>

Note: Function-specific fault signals are as default mapped to private data locations in 615 series IEDs.

3.3.3.6

Auto-reclosure indications in monitor direction

INF	Semantics
<input checked="" type="checkbox"/>	<128> CB 'on' by AR
<input type="checkbox"/>	<129> CB 'on' by long-time AR
<input checked="" type="checkbox"/>	<130> AR blocked

Note <129>: Terms 'short-' or 'long-time' AR are not directly usable in 615 series. The AR functionality in the IED performs AR shots (1..5) that are user configurable. See private AR data definitions. Depending on user AR configuration it is possible to re-map some private data into standard data, if wanted.

3.3.3.7

Measurands in monitor direction

INF	Semantics
<input checked="" type="checkbox"/>	<144> Measurand I
<input checked="" type="checkbox"/>	<145> Measurands I, V
<input checked="" type="checkbox"/>	<146> Measurands I, V, P, Q
<input checked="" type="checkbox"/>	<147> Measurands I_N , V_{EN}
<input checked="" type="checkbox"/>	<148> Measurands $I_{L1,2,3}$, $V_{L1,2,3}$, P, Q, f

3.3.3.8

Generic functions in monitor direction

INF	Semantics
<input type="checkbox"/>	<240> Read headings of all defined groups
<input type="checkbox"/>	<241> Read values or attributes of all entries of one group
<input type="checkbox"/>	<243> Read directory of a single entry
<input type="checkbox"/>	<244> Read value or attribute of a single entry
<input type="checkbox"/>	<245> End of general interrogation of generic data
<input type="checkbox"/>	<249> Write entry with confirmation
<input type="checkbox"/>	<250> Write entry with execution
<input type="checkbox"/>	<251> Write entry aborted

3.3.4

Selection of standard information numbers in control direction

3.3.4.1

System functions in control direction

INF	Semantics
<input checked="" type="checkbox"/>	<0> Initiation of general interrogation
<input checked="" type="checkbox"/>	<0> Time synchronization

3.3.4.2

Generic functions in monitor direction

INF	Semantics
<input type="checkbox"/>	<240> Read headings of all defined groups
<input type="checkbox"/>	<241> Read values or attributes of all entries of one group
<input type="checkbox"/>	<243> Read directory of a single entry
<input type="checkbox"/>	<244> Read value or attribute of a single entry
<input type="checkbox"/>	<245> End of general interrogation of generic data
<input type="checkbox"/>	<249> Write entry with confirmation
<input type="checkbox"/>	<250> Write entry with execution
<input type="checkbox"/>	<251> Write entry aborted

3.3.5 Basic application functions

- Test mode
- Blocking of monitor direction
- Disturbance data
- Generic services
- Private data

3.3.6 Miscellaneous

Measurands are transmitted as Class2 data using ASDU 3 or ASDU 9. The default MVAL scalings in 615 series devices is 2.4. User can freely reprogram the MVAL for each separate measurand.

Measurand	Max. MVAL = rated value times	
	1.2 or	2.4
Current L ₁	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Current L ₂	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Current L ₃	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Voltage L _{1-E}	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Voltage L _{2-E}	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Voltage L _{3-E}	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Active power P	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Reactive power Q	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Frequency f	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Voltage L ₁ - L ₂	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

The IED contains additional private Class2 frames, including private measurands. User can freely select between standard or private Class2 frames.

Section 4 Glossary

AFL	Application function block library
ASDU	Application-layer service data unit
DPI	Double-point information
DR	Disturbance recorder
EMC	Electromagnetic compatibility
FUN	Function type
GI	General interrogation
I/O	Input/output
IEC	International Electrotechnical Commission
IEC 60870-5-103	1. Communication standard for protective equipment 2. A serial master/slave protocol for point-to-point communication
IEC 61850	International standard for substation communication and modeling
IED	Intelligent electronic device
INF	Information number
LED	Light-emitting diode
LHMI	Local human-machine interface
PCM600	Protection and Control IED Manager
TCS	Trip-circuit supervision

Contact us

ABB

**Nanjing SAC Power Grid Automation
Co., Ltd.**

No. 11 Phoenix Road, Jiangning
Development Zone
211100 Nanjing, China

Phone +86 25 51183000
Fax +86 25 51183883

www.abb.com/substationautomation