

SR100B – Quick Reference Guide

Welcome to the SR100B

This quick reference guide contains loading procedures for roll and fanfold charts, an overview of display/key functions and a basic index for the SR100B User Guide.

Full installation, operating and programming procedures together with a comprehensive index are provided in the User Guide.

Accessories 1

Alarms

- Acknowledging 13, 23
- Configuring 22
- Hysteresis 22
- Message Printing 25
- Operator Page Messages 12
- Process 13, 22
- Source 22
- Status 13
- Trip Level 22
- Type 22

Analog Inputs

- Channel Tag 9, 11, 18
- Conditioning 19
- Configuration 16 to 19
- Connections 34, 35
- Copying 19
- Fault Detection 18
- Isolation 35
- Linearizer Type 17
- Links 37
- Offset Adjustment 21
- Range 17, 18
- Scaling 20
- Span Adjustment 21
- Type 17, 37

Chart

- Configuration 24
- Easy View 12, 26
- Length 11, 26
- Loading 4 to 7
- Printout 9
- Rewind 4
- Set Length 26
- Speed 4, 6, 9, 11, 24, 25
- Time Line 4, 6, 26
- Type Select 25

Configuration

- Alarms 22
- Analog Inputs 16
- Chart 24
- Relay Outputs 29

Connections 34 to 37

Date/time 11

Dimensions 31

Easy View 26

Electrical Connections 34

Error Messages 12

Fault-finding 38

Inputs

– see *Analog Inputs*

Language Selection 30

Links 37

Mounting 32

Operator Messages 12

Operating Page 10, 11

Paper Length 11, 26

Passwords 14, 15

Pen

Fitting 8

Lift 26

Print Speed 25

Real-time Clock 30

Relay Outputs

Connections 36, 37

Security Access

– see *Passwords*

Siting 31

Software Version 14

Spares 39

Start-up Displays 10


Text Printing 25

Thermocouple 17


Time Line Advance 4, 6, 26




LOADING A NEW ROLL CHART

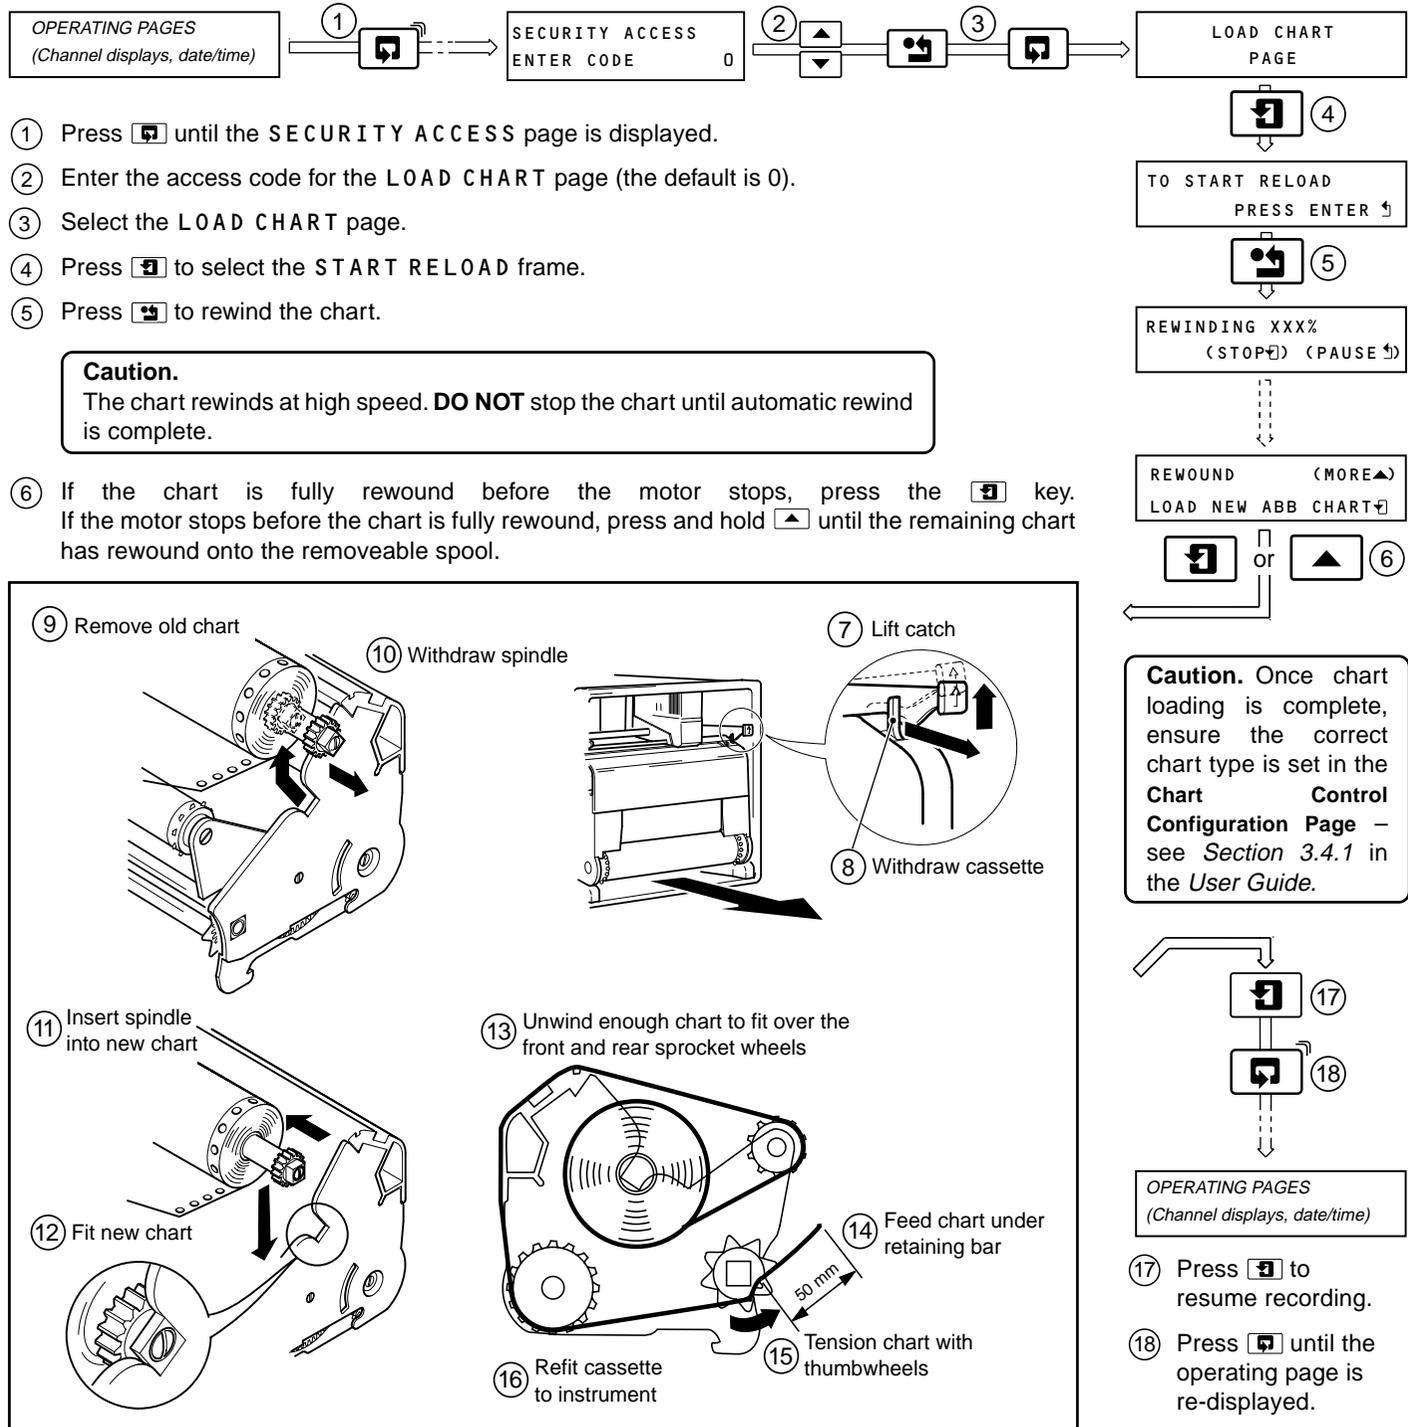

DISPLAYS AND KEYS

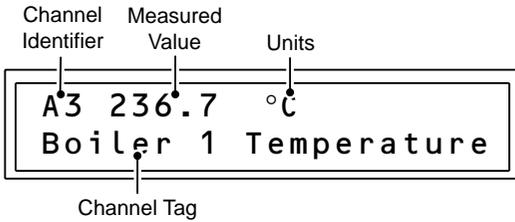


Raise and Lower



Used for adjusting parameters or text messages.

Sideways Scroll

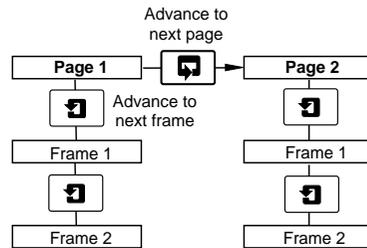

Down Scroll



Enter



Used to confirm selections/adjustments.

Pen Lift



Lifts and lowers the pen on successive operations.

The Company's policy is one of continuous product improvement and the right is reserved to modify the information contained herein without notice.

© ABB 2004

Printed in UK (08.04)



ABB Limited
Howard Road, St. Neots
Cambridgeshire, PE19 3EU
UK
Tel: +44 (0)1480 475321
Fax: +44 (0)1480 217948



ABB Inc.
125 E. County Line Road
Warminster, PA 18974
USA
Tel: +1 215 674 6000
Fax: +1 215 674 7183

ABB has Sales & Customer
Support expertise in
over 100 countries
worldwide


www.abb.com

IM/SR100B-Q Issue 2

LOADING A NEW FAN-FOLD CHART

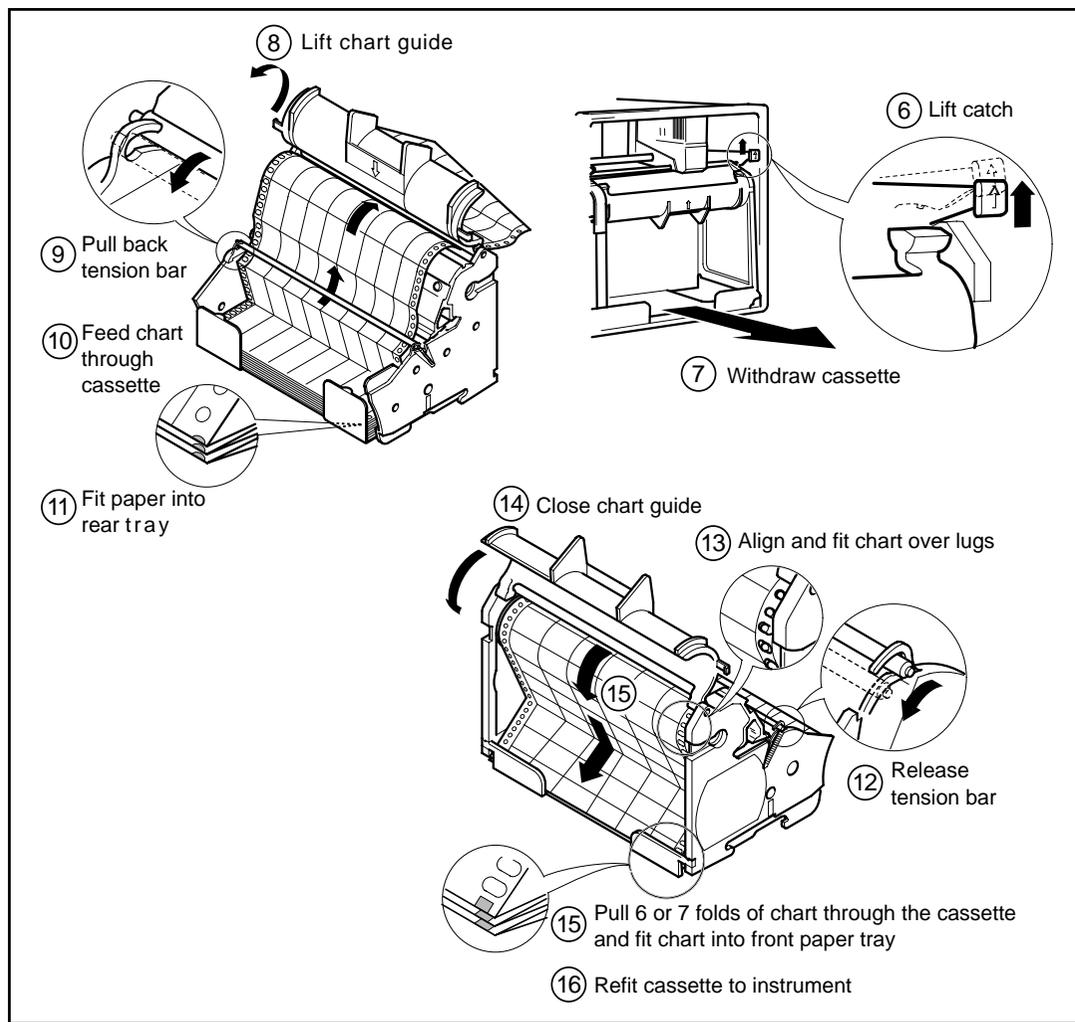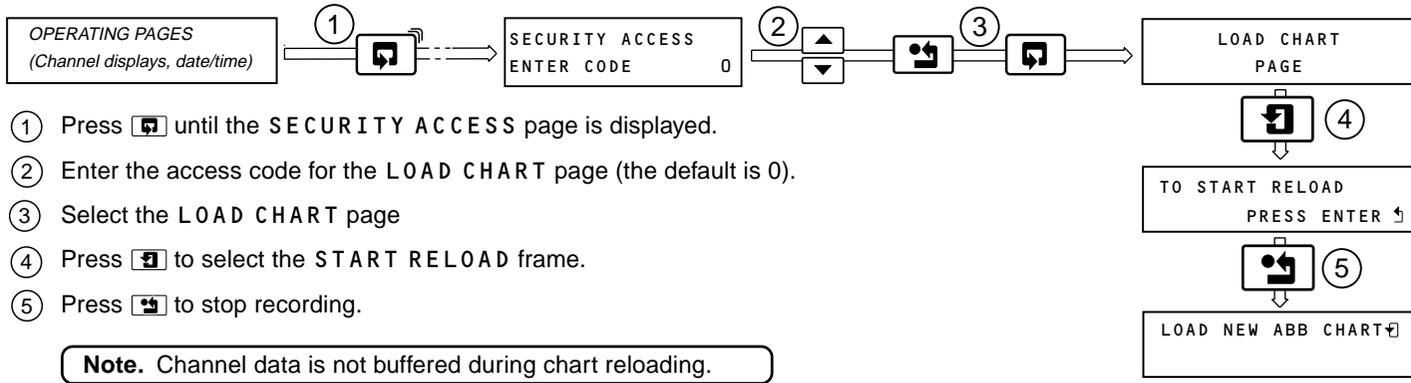

Caution. Once chart loading is complete, ensure the correct chart type is set in the **Chart Control Configuration Page** – see Section 3.4.1 in the User Guide.

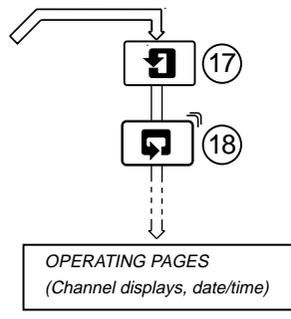

17 Press [Start Reload] to resume recording.
18 Press [Security Access] until the operating page is re-displayed.