REM 610
Motor Protection Relay

Technical Reference Manual



Contents

1. Introduction 6
1.1. About this manual 6
1.2. The use of the relay 6
1.3. Features 6
1.4. Guarantee 8
1.5. Revision history 8
2. Safety information 9
3. Instructions 10
3.1. Application 10
3.2. Requirements 10
3.3. Configuration 10
4. Technical description 14
4.1. Functional description 14
4.1.1. Product functions 14
4.1.1.1. Schema of product functions 14
4.1.1.2. Protection functions 14
4.1.1.3. Inputs 15
4.1.1.4. Outputs 15
4.1.1.5. Emergency start 15
4.1.1.6. Restart inhibit 15
4.1.1.7. Motor start up 16
4.1.1.8. Rated current of the protected unit 16
4.1.1.9. Disturbance recorder 17
4.1.1.10.HMI 17
4.1.1.11.Non-volatile memory 17
4.1.1.12.Self-supervision 17
4.1.1.13.Time synchronization 18
4.1.2. Measurements 19
4.1.3. Configuration 20
4.1.4. Protection 22
4.1.4.1. Block diagram 22
4.1.4.2. Thermal overload protection 22
4.1.4.3. Start-up supervision 29
4.1.4.4. Short-circuit protection 30
4.1.4.5. Undercurrent protection 31
4.1.4.6. Earth-fault protection 31
4.1.4.7. Unbalance protection 32

©Copyright 2005 ABB Oy, Distribution Automation, Vaasa, FINLAND

4.1.4.8. Phase reversal protection 33
4.1.4.9. Cumulative start-up time counter 34
4.1.4.10. Circuit-breaker failure protection 34
4.1.4.11. Temperature protection (optional) 35
4.1.4.12. Settings 39
4.1.4.13. Technical data on protection functions 50
4.1.5. Trip-circuit supervision 53
4.1.6. Indicator LEDs and operation indication messages 55
4.1.7. Motor running time counter 55
4.1.8. Monitoring of demand values 56
4.1.9. Commissioning tests 56
4.1.10. Disturbance recorder 56
4.1.10.1. Function 56
4.1.10.2. Disturbance recorder data 57
4.1.10.3. Control and indication of disturbance recorder status 58
4.1.10.4. Triggering 58
4.1.10.5. Settings and unloading 58
4.1.10.6. Event code of the disturbance recorder 58
4.1.11. Recorded data of the last events 59
4.1.12. Communication ports 61
4.1.13. IEC 60870-5-103 remote communication protocol 62
4.1.14. Modbus remote communication protocol 65
4.1.14.1. Protocol overview 65
4.1.14.2. Profile of Modbus REM 610 66
4.1.15. SPA bus communication protocol parameters 78
4.1.15.1. Event codes 92
4.1.16. Self-supervision (IRF) system 96
4.1.16.1. Self-supervision of the RTD module 97
4.1.17. Relay parameterization 98
4.2. Design description 98
4.2.1. Input/output connections 98
4.2.2. Serial communication connections 103
4.2.3. Technical data 107

5. Setting calculations and application examples 112

5.1. Setting calculations 112
5.1.1. Protected unit scaling factor 112
5.1.2. Thermal overload protection 112
5.1.2.1. Selecting weighting factor p 113
5.1.2.2. Safe stall time for hot starts 115
5.1.2.3. Checking the set safe stall time for cold starts 118

5.1.2.4. Checking the set safe stall time for a single start 119
5.1.2.5. Restart inhibit level, θ_i 119
5.1.2.6. Prior alarm level, θ_a 119
5.1.2.7. Time constant multiplier, K_c 119
5.1.3. Start-up supervision 119
5.1.3.1. Start-up supervision based on thermal stress calculation 119
5.1.3.2. Checking the need for speed switch 120
5.1.4. Cumulative start-up time counter 120
5.1.5. Short-circuit protection 121
5.1.6. Unbalance and phase reversal protection 121
5.1.6.1. Selecting the start value for stage I_2> 121
5.1.6.2. Selecting the time constant, K_2 121
5.1.6.3. Connection with two phase current transformers 122
5.1.7. Earth-fault protection 122
5.1.7.1. Stabilizing virtual earth-fault currents 123
5.1.7.2. Increasing the sensitivity of the earth-fault protection 123
5.1.8. Circuit-breaker failure protection 123
5.1.9. Temperature protection (optional) 123
5.2. Application examples 124
5.2.1. Protecting a circuit-breaker controlled motor 124
5.2.2. Protecting a motor at an ambient temperature other than 40°C 125
5.2.3. Protecting a contactor controlled motor 126
5.2.4. Protecting non-rotating objects 127
5.2.5. Earth-fault protection in an isolated or a compensated network 127
5.2.6. Earth-fault protection in a solidly earthed network 127

6. Ordering information 129

7. Revision history of REM 610 131

7.1. Revision identification 131
7.2. Changes and additions to the earlier released revision A 131

8. References 132

9. Abbreviations 133

10.Check lists 135

1. Introduction

1.1. About this manual

This manual provides thorough information on the protection relay REM 610 Revision B and its applications, focusing on giving a technical description of the relay. For more information about earlier revisions, refer to section Revision history.

Refer to the Operator's Manual for instructions on how to use the Human-Machine Interface (HMI) of the relay, also known as the Man-Machine Interface (MMI), and to the Installation Manual for installation of the relay.

1.2. The use of the relay

REM 610 is a versatile multifunction protection relay mainly designed to protect motors in a wide range of motor applications.

REM 610 is based on a microprocessor environment. A self-supervision system continuously monitors the operation of the relay.

The HMI includes a Liquid Crystal Display (LCD) which makes the local use of the relay safe and easy.

Local control of the relay via serial communication can be carried out with a computer connected to the front communication port. Remote control can be carried out via the rear connector connected to the control and monitoring system through the serial communication bus.

1.3. Features

- Three-phase thermal overload protection
- Three-phase motor start-up supervision based on thermal stress calculation with speed switch blocking ability
- Three-phase overcurrent protection with definite-time characteristic and speed switch blocking ability
- Three-phase short-circuit protection with instantaneous or definite-time characteristic
- Three-phase undercurrent (loss of load) protection with definite-time characteristic
- Non-directional earth-fault protection with definite-time characteristic
- Three-phase unbalance protection based on the negative-phase-sequence current with inverse definite minimum time characteristic
- Phase reversal protection based on the negative-phase-sequence current
- Cumulative start-up time counter with restart inhibit function
- Circuit-breaker failure protection
- Temperature protection stages with definite-time characteristic
- Emergency start function
- Optional RTD module
  - with six measuring inputs
  - supports PTC thermistors and various RTD sensors

  - three additional galvanically isolated digital inputs
- Disturbance recorder
  - recording time up to 80 seconds
  - triggering by one or several internal or digital input signals
  - records four analogue channels and up to eight user-selectable digital channels
  - adjustable sampling rate
- Non-volatile memory for
  - up to 100 event codes with time stamp
  - setting values
  - disturbance recorder data
  - recorded data of the five last events with time stamp
  - number of starts for protection stages
  - operation indication messages and LEDs showing the status at the moment of power failure
- Battery back-up for real-time clock
- Battery charge supervision
- Four accurate current inputs
- Two galvanically isolated digital inputs and three additional digital inputs on the optional RTD module
- Time synchronization via a digital input
- All settings can be modified with a PC
- HMI with an alphanumeric LCD and manoeuvring buttons
  - eight programmable LEDs
- Detachable plug-in unit
- Three normally open power output contacts
- Trip-circuit supervision
- Two change-over signal output contacts
- Output contact functions freely configurable for desired operation
- Optical front communication connection: wirelessly or via cable
- Optional rear communication module with plastic fibre-optic, combined fibre-optic (plastic and glass) or RS-485 connection for system communication using the SPA-bus, IEC 60870-5-103 or Modbus (RTU and ASCII) communication protocol
- Continuous self-supervision of electronics and software. At an internal relay fault, all protection stages and outputs will be blocked.
- User-selectable rated frequency 50/60 Hz
- User-selectable password protection for the HMI
- Display of primary current values
- Demand values
- Multi-language support

1.4. Guarantee

Please inquire about the terms of guarantee of your nearest ABB representative.

1.5. Revision history

Version	Date	Remarks
A2	26.10.2004	Front page picture and front view figures updated.
B	02.03.2005	Sections 1.1., 1.3., 3.3., 4.1.1.8., 4.1.4.4., 4.1.4.6., 4.1.4.10., 4.1.4.12., 4.1.5., 4.1.12., 4.1.14.2., 4.1.15.1., 4.1.16., 4.2.2., 5.1.8. and 6. changed.
		Figures 3.3.-1...-3, 4.1.3.-1 and 4.1.4.1.-1, 4.1.14.2.-2, 4.2.1.-1, 5.1.6.3.-1 and 6.-1...-2 changed.
		Tables 4.1.4.12-2, 4.1.4.12-7...-13, 4.1.4.12-15, 4.1.4.13-1, 4.1.4.13-3, 4.1.4.13-10, 4.1.13-1, 4.1.14.1-2, 4.1.14.2-5...-6, 4.1.15-1, 4.1.15-7, 4.1.15-9, 4.1.15.1-1, 4.1.15.1-7, 4.1.16-1...-2, 4.2.1-1, 4.2.3-2, 4.2.3-5, 4.2.3-12, 4.2.3-14 and 10.-1...-3 changed.
		Tables 4.1.4.13-11, 4.1.14.2-7...-9, 4.2.2-3...-5, 6.-1 and 10.-4 new.
		Sections 1.5., 4.1.1.13. and 7. new.
		Figure 4.2.2.-2 new.

2. Safety information

	Dangerous voltages can occur on the connectors, even though the auxiliary voltage has been disconnected.
	National and local electrical safety regulations must always be followed.
	The device contains components which are sensitive to electrostatic discharge. Unnecessary touching of electronic components must therefore be avoided.
	The frame of the device has to be carefully earthed.
	Only a competent electrician is allowed to carry out the electrical installation.
	Non-observance can result in death, personal injury or substantial property damage.
	Breaking the sealing tape on the upper handle of the device will result in loss of warranty and proper operation will no longer be guaranteed.
	When the plug-in unit has been detached from the case, do not touch the inside of the case. The relay case internals may contain high voltage potential and touching these may cause personal injury.

3. Instructions

3.1. Application

REM 610 is a versatile multifunction protection relay mainly designed for protection of standard medium and large MV asynchronous motors in a wide range of motor applications. It handles fault conditions during motor start up, normal run, idling, and cooling down at standstill, e.g. in pump, fan, mill or crusher applications.

The large number of integrated protection functions makes REM 610 a complete protection against motor damage. The relay can be used with both circuit-breaker controlled and contactor controlled drives.

REM 610 can equally well be used to protect, for instance, feeder cables and power transformers which require thermal overload protection and, for instance, single-, two- or three-phase overcurrent or non-directional earth-fault protection.

3.2. Requirements

To secure correct and safe operation of the relay, preventive maintenance is recommended to be performed every five years when REM 610 is operating under the specified conditions; see below and section Technical data.

When being used for real-time clock or recorded data functions, the battery should be changed every five years.

Environmental conditions

- Recommended temperature range (continuous) -10...+55°C
- Limit temperature range (short-term) -40...+70°C
- Temperature influence on the operation accuracy of the protection relay within the specified service temperature range 0.1%/°C
- Transport and storage temperature range -40...+85°C

3.3. Configuration

Setting and connection examples

The appropriate configuration of the output contact matrix enables the use of the signals from the protection stages as contact functions. The start signals can be used for blocking co-operating protection relays and signalling.

Fig. 3.3.-1 and Fig. 3.3.-2 represent REM 610 with the default configuration: all trip signals are routed to trip the circuit breaker. In Fig. 3.3.-1 the residual current is measured via a core-balance current transformer and in
Fig. 3.3.-2 via a summation connection of the phase current transformers.

Fig. 3.3.-3 represents REM610 connected to a contactor controlled motor with the trips routed to trip the contactor.

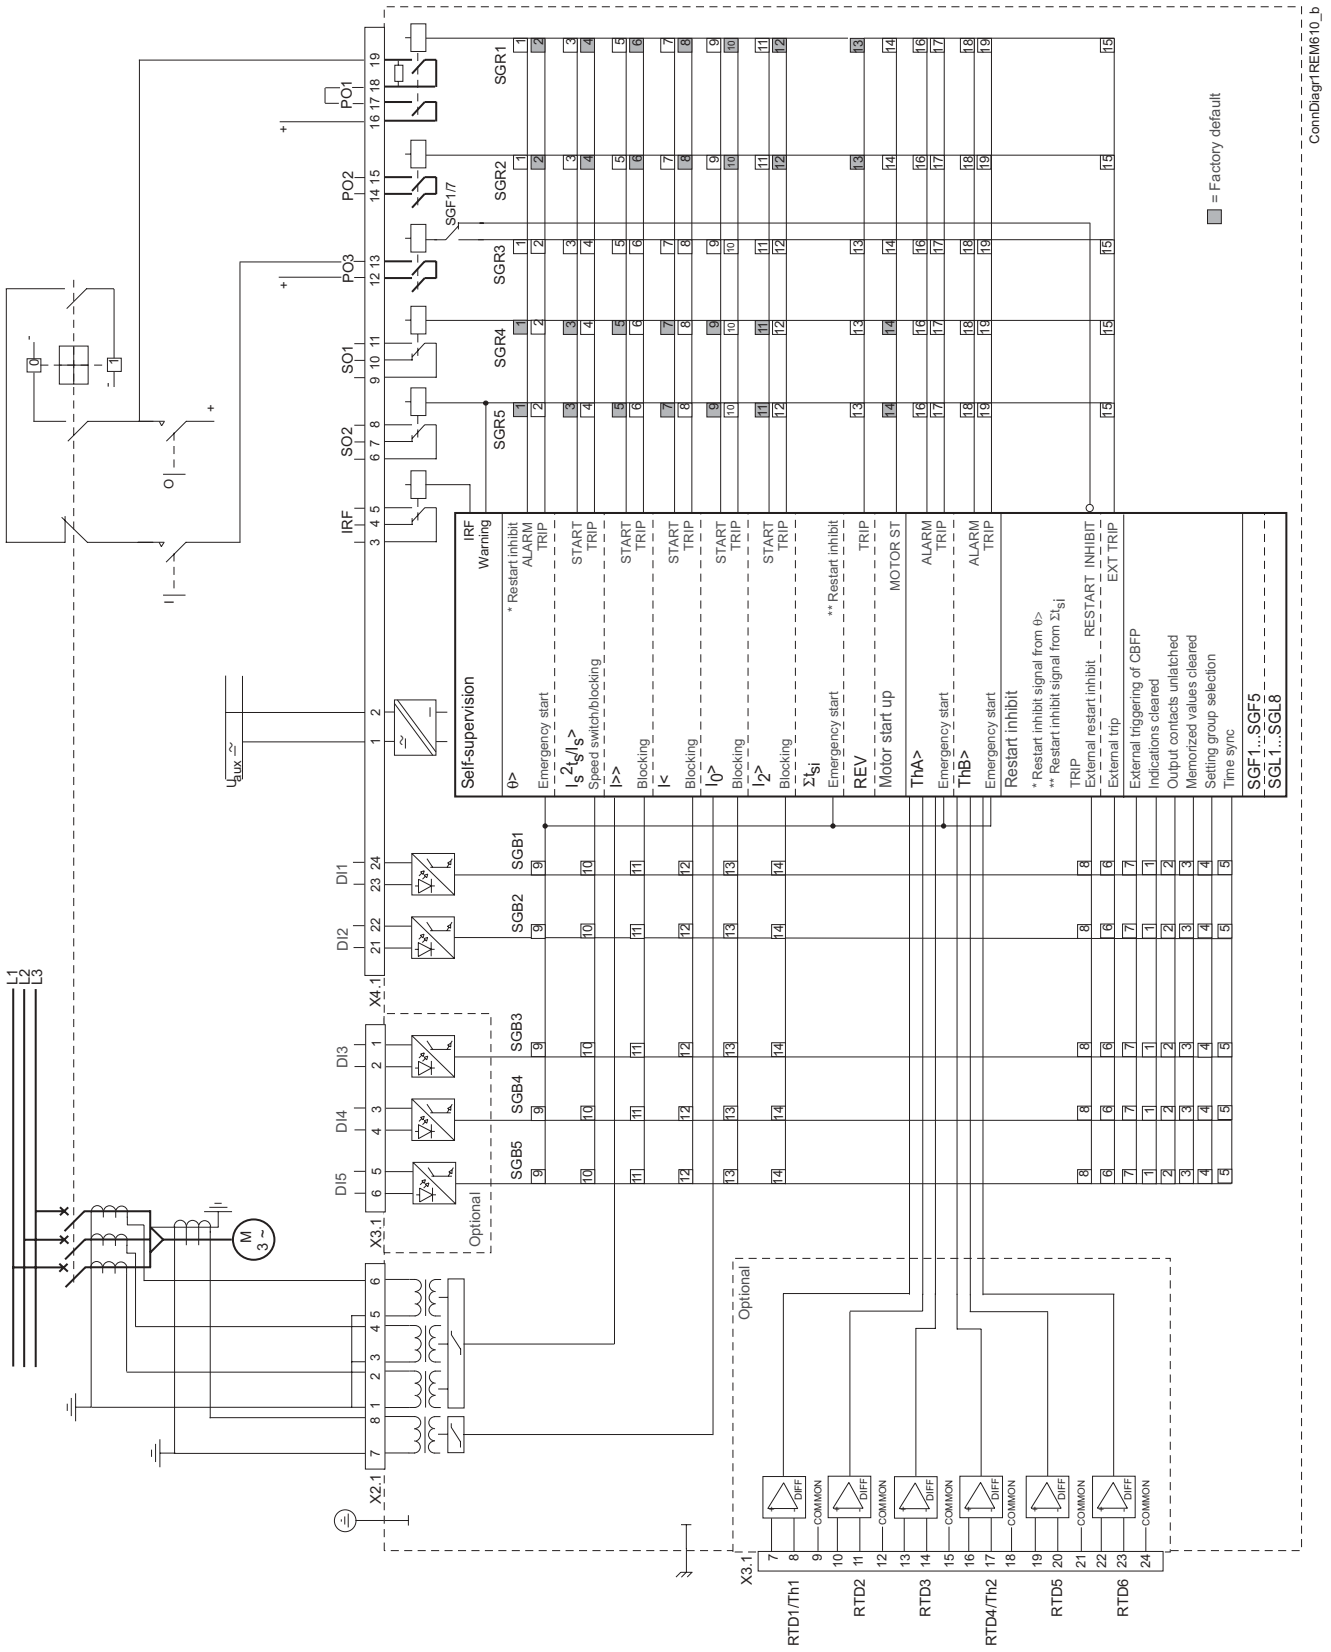


Fig. 3.3.-1 Connection diagram, example 1

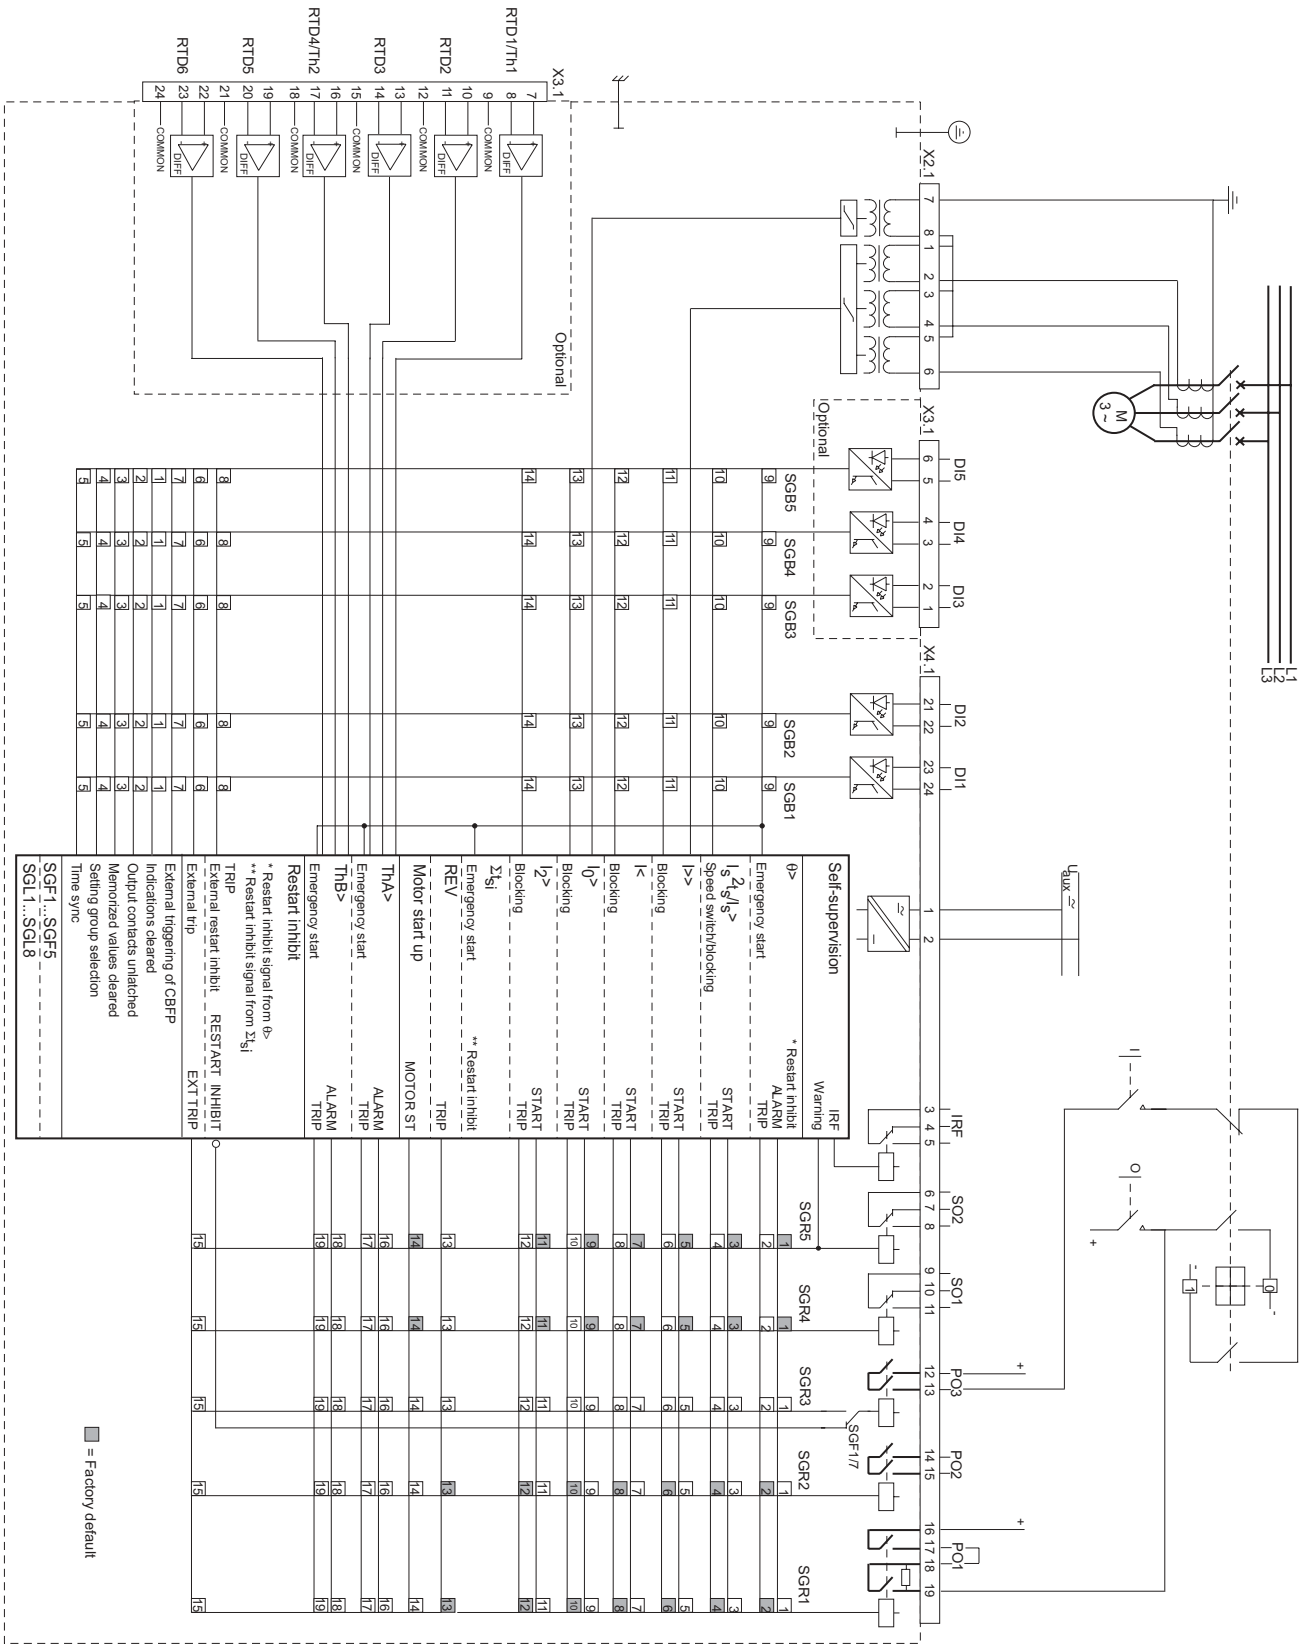


Fig. 3.3.-2 Connection diagram, example 2

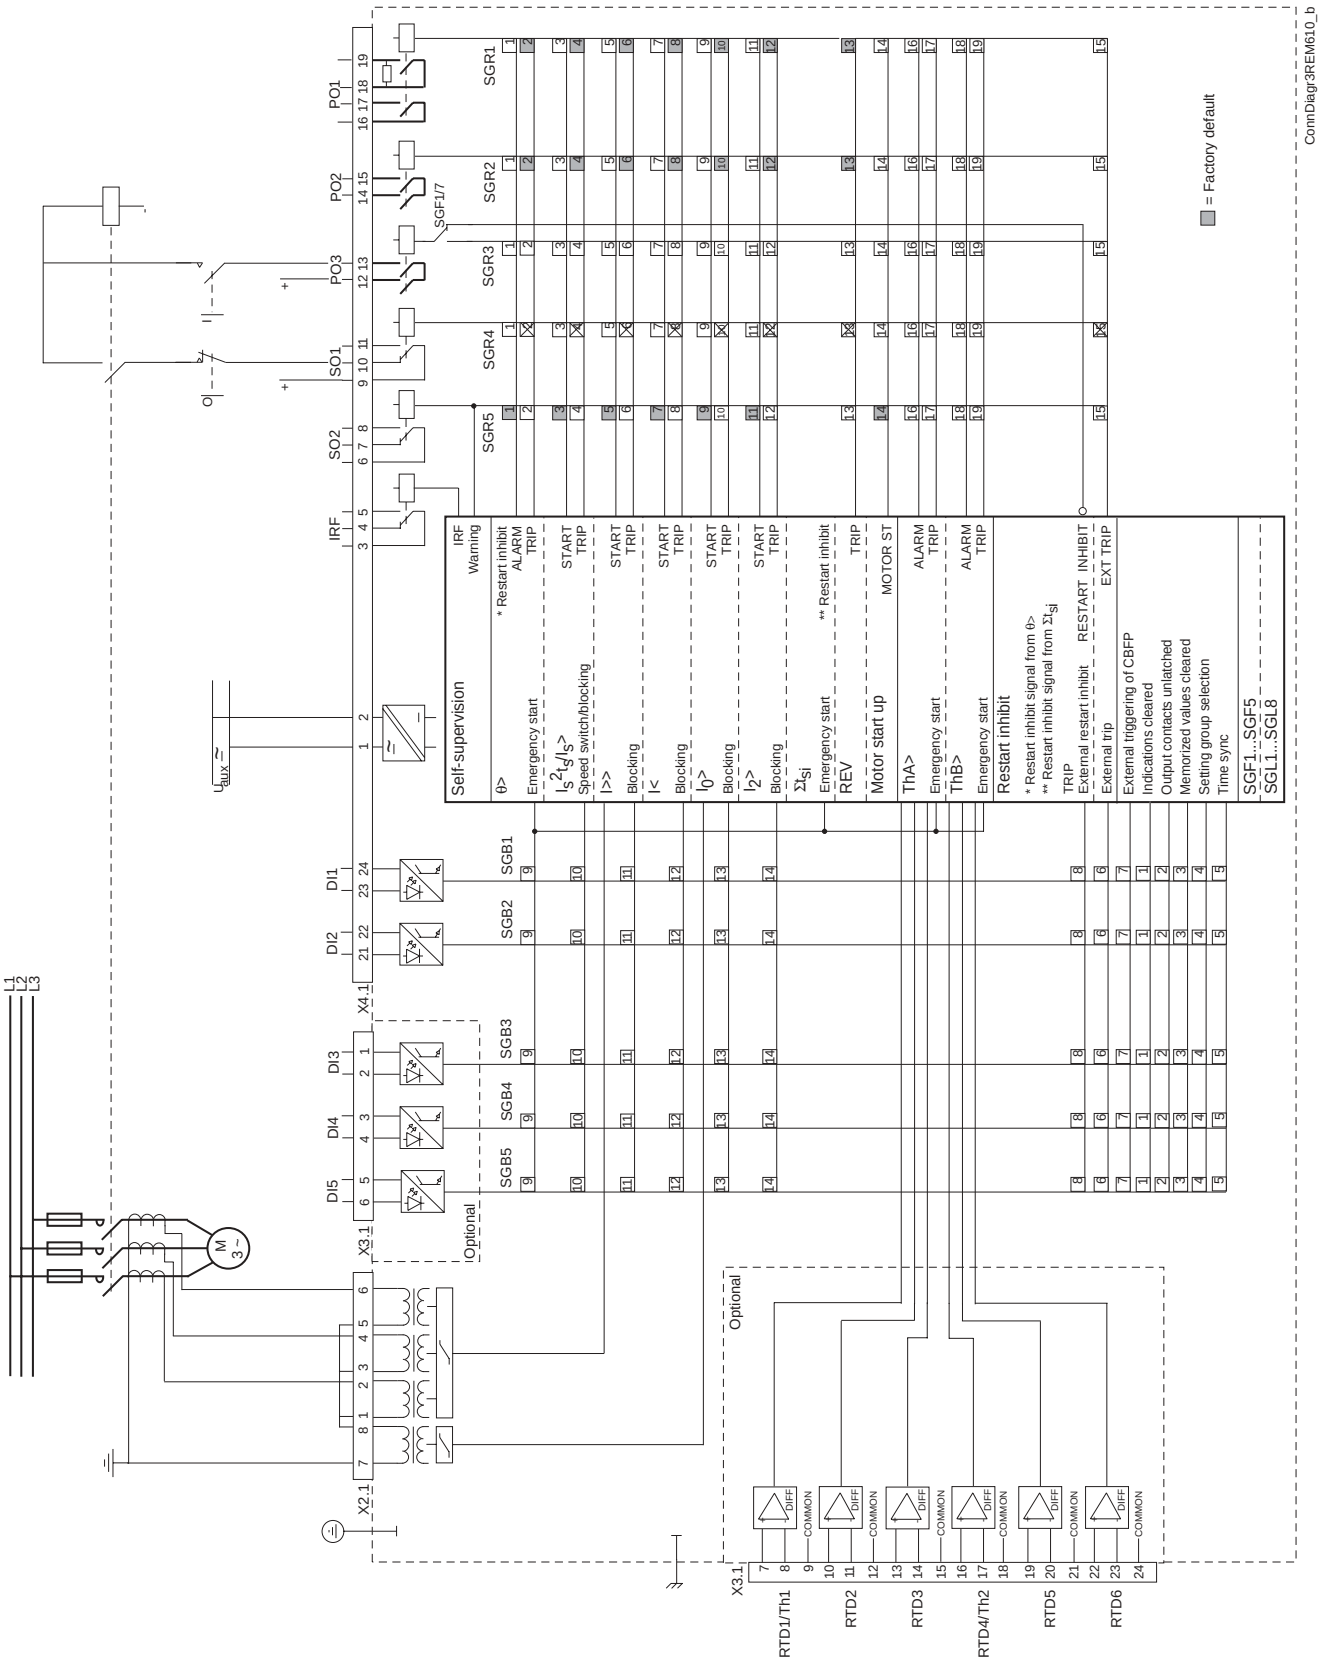


Fig. 3.3.-3 Connection diagram, example 3

4. Technical description

4.1. Functional description

4.1.1. Product functions

4.1.1.1. Schema of product functions

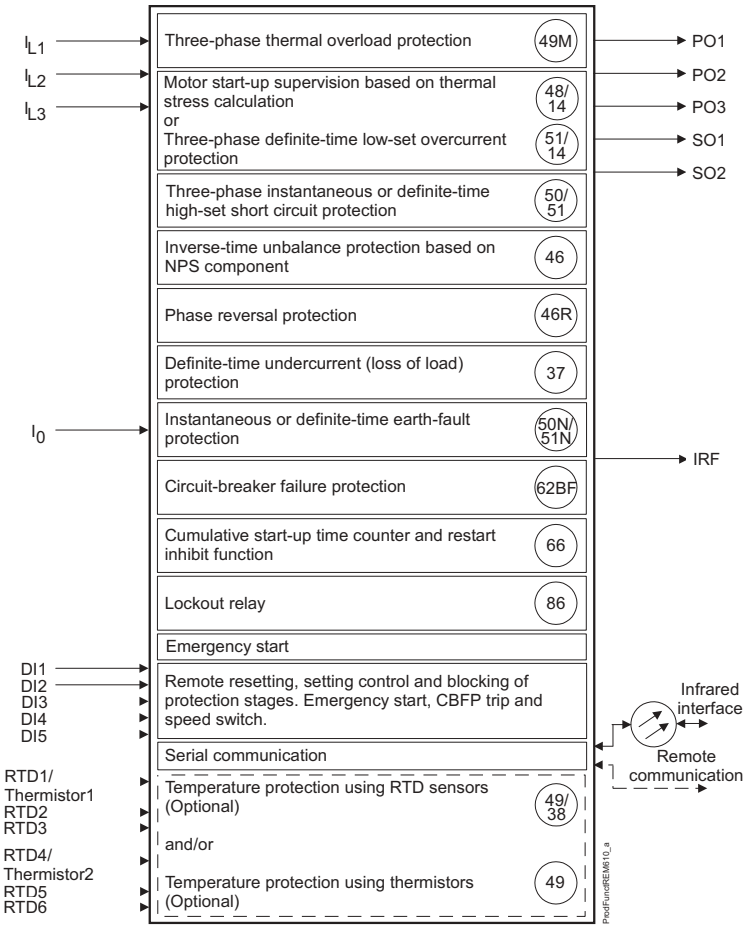


Fig. 4.1.1.1.-1 Product functions

4.1.1.2. Protection functions

Refer to sections:

- 4.1.4.2. Thermal overload protection
- 4.1.4.3. Start-up supervision
- 4.1.4.4. Short-circuit protection
- 4.1.4.5. Undercurrent protection
- 4.1.4.6. Earth-fault protection
- 4.1.4.7. Unbalance protection
- 4.1.4.8. Phase reversal protection
- 4.1.4.9. Cumulative start-up time counter

- 4.1.4.10. Circuit-breaker failure protection
- 4.1.4.11. Temperature protection (optional)

4.1.1.3. Inputs

REM 610 includes four energizing inputs, two digital inputs and three optional digital inputs controlled by an external voltage. Three of the energizing inputs are for the phase currents and one for the earth-fault current. For details, refer to section Input/output connections and tables 4.1.4.12-7, 4.2.1-1 and 4.2.1-5. The functions of the digital inputs are determined with the SGB switches.

4.1.1.4. Outputs

REM 610 is provided with three power outputs (PO1, PO2 and PO3) and two signal outputs (SO1 and SO2). Switchgroups SGR1...5 are used for routing internal signals from the protection stages, the motor start-up signal and the external trip signal to the desired signal or power output. The minimum pulse length can be configured to be 40 or 80 ms and the power outputs can all be configured to be latched.

4.1.1.5. Emergency start

The emergency start function allows motor start ups although the restart inhibit has been activated. The function is activated in SGB1...5. The emergency start will be activated when the selected digital input is energized and will remain active for ten minutes. On the rising edge of the emergency start signal

- the calculated thermal level will be set slightly below the restart inhibit level to allow at least one motor start up
- the value of the register of the cumulative start-up time counter will be set slightly below the set restart inhibit value to allow at least one motor start up
- the set trip values of temperature stages ThA> and ThB> will be increased by 10 per cent
- the external restart inhibit signal will be ignored.

The set trip values of stages ThA> and ThB> will be increased by ten per cent and the external restart inhibit signal ignored for as long as the emergency start is activated. A new emergency start cannot be made until the emergency start signal has been reset and the emergency start time of ten minutes has expired.

Activation of the emergency start signal will generate an event code, which cannot be masked out from the event reporting.

4.1.1.6. Restart inhibit

The restart inhibit signal is used to inhibit motor start ups when the motor is overheated, for instance. The restart inhibit signal is routed to PO3 by default, but can be deselected in SGF1. The signal will be activated when any of the following conditions exists:

- the trip signal from any protection stage is active
- the restart inhibit signal from the thermal protection stage is active
- the restart inhibit signal from stage Σt_{si} is active
- the external restart inhibit signal is active

The estimated time to the next possible motor start up, i.e. when the restart inhibit signal is reset, can be accessed either via the HMI or the SPA bus.

Note!

If the restart inhibit function has been activated (SGF1/7=0), SGR3 will be overridden.

4.1.1.7. Motor start up

A motor start-up situation is defined by means of the phase currents as follows:

- Motor start up begins (the motor start-up signal is activated) when the maximum phase current rises from a value below 0.12 x I_n, i.e. the motor is at standstill, to a value above 1.5 x I_n within less than 60 ms.
- Motor start up ends (the motor start-up signal is reset) when all phase currents fall below 1.25 x I_n and remain below for at least 200 ms.

The start-up time of the latest motor start up can be accessed via the HMI and read with SPA parameter V3.

The motor start-up signal is routed to the output contacts with the switches of switchgroups SGR1...SGR5.

Note!

All operation indications on the LCD will be cleared when a motor start up begins.

4.1.1.8. Rated current of the protected unit

A scaling factor, PU scale, can be set for the phase currents. This will allow differences between the rated current of the protected unit and that of the energizing input. Consequently, the rated current of the relay can be set to equal the full load current (FLC) of the motor.

The current settings of the protection functions are related to the scaled rated current, I_n. The measured currents are presented either as primary values or as multiples of the scaled rated current. The current values in the recorded data are presented as multiples of the rated current.

Note!

The scaling factor affects the operation accuracy of the protection functions, with the exception of the earth-fault protection. The stated operation accuracy for each protection function only applies when the scaling factor is 1.

Note!

If the PU scale is set to 0.5, the maximum measured rated current (FLC) is 25 x I_n.

Note!

The PU scale does not affect the earth fault current, I_0.

4.1.1.9. Disturbance recorder

REM 610 includes an internal disturbance recorder which records the momentary measured values, or the RMS curves of the measured signals, and up to eight user-selectable digital signals: the digital input signals and the internal signals from the protection stages. Any digital signal can be set to trigger the recorder on either the falling or rising edge.

4.1.1.10. HMI

The HMI of REM 610 is equipped with six push-buttons, an alphanumeric 2x16 characters' LCD, eight programmable indicator LEDs, three indicator LEDs with fixed functionality, and an indicator LED for front communication. The push-buttons are used for navigating in the menu structure and for adjusting setting values.

An HMI password can be set to protect all user-changeable values from being changed by an unauthorised person. The HMI password will remain inactive and will thus not be required for altering parameter values until the default HMI password has been replaced. Entering the HMI password successfully can be selected to generate an event code. This feature can be used to indicate interaction activities via the local HMI. For further information on the HMI, refer to the Operator's Manual.

4.1.1.11. Non-volatile memory

REM 610 can be configured to store various data in a non-volatile memory, which will retain its data also in case of loss of auxiliary voltage (provided that the battery has been inserted and is charged). Operation indication messages and LEDs, the number of motor start ups, disturbance recorder data, event codes and recorded data can all be configured to be stored in the non-volatile memory whereas setting values will always be stored in the EEPROM.

4.1.1.12. Self-supervision

The self-supervision system of REM 610 manages run-time fault situations and informs the user about an existing fault.

When the self-supervision system detects a permanent internal relay fault (IRF), which will prevent relay operation, the green indicator LED (ready) will start to blink. At the same time the self-supervision alarm relay (also referred to as the IRF relay), which is normally picked up, will drop off and a fault code will appear on the LCD. The fault code is numerical and identifies the fault type.

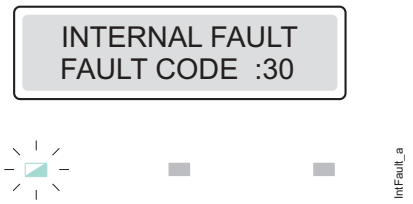


Fig. 4.1.1.12.-1 Permanent IRF

IRF codes can indicate:

- no response on the output contact test
- faulty program, work or parameter memory
- internal reference voltage error

In case of a warning, the relay will continue to operate with full or reduced functionality and the green indicator LED (ready) will remain lit as during normal operation. A fault indication message (see Fig. 4.1.1.12.-2), with a possible fault code (see Fig. 4.1.1.12.-3), will appear on the LCD indicating the type of fault.

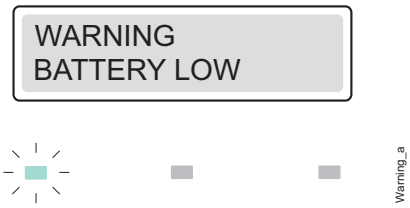


Fig. 4.1.1.12.-2 Warning with text message

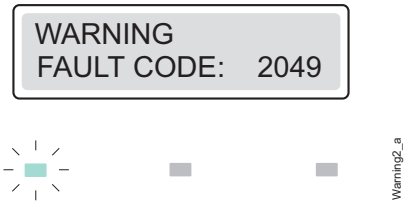


Fig. 4.1.1.12.-3 Warning with numeric code

For fault codes, refer to section Self-supervision (IRF) system.

4.1.1.13. Time synchronization

Time synchronization of the relay's real-time clock can be realized in two different ways: via serial communication using a communication protocol or via a digital input.

When time synchronization is realized via serial communication, the time is written directly to the relay's real-time clock.

Any digital input can be configured for time synchronization and used for either minute-pulse or second-pulse synchronization. The synchronization pulse is automatically selected and depends on the time range within which the pulse occurs.

If the synchronization pulse differs more than +/- 0.05 seconds for second-pulse or +/- 2 seconds for minute-pulse synchronization, the synchronization pulse will be rejected.

Time synchronization is always triggered on the rising edge of the digital input signal. The typical accuracy achievable with time synchronization via a digital input is +2.5...-2.5 milliseconds for second-pulse and +5...-5 milliseconds for minute-pulse synchronization.

The time must be set once, either via serial communication or manually via the HMI. When the time is set via serial communication and minute-pulse synchronization is used, only year-month-day-hour-minute is written to the relay's real-time clock, and

when second-pulse synchronization is used, only year-month-day-hour-minute-second. The relay's real-time clock will be rounded to the nearest whole second or minute, depending on whether second- or minute-pulse synchronization is used. When the time is set via the HMI, the entire time is written to the relay's real-time clock.

Note!

The pulse length of the digital input signal does not affect time synchronization.

Note!

If time synchronization messages are received from a communication protocol as well, they have to be synchronized within +/- 0.5 minutes at minute-pulse or +/- 0.5 seconds at second-pulse synchronization. Otherwise, the relay's real-time clock will make sudden minute or second jumps in either direction.

If it is possible that synchronization messages from the communication protocol are delayed more than 0.5 seconds, minute-pulse synchronization must be used.

4.1.2. Measurements

The table below presents the measured values which can be accessed through the HMI.

Table 4.1.2-1 Measured values

Indicator	Description
L1	Current measured on phase I_{L1}
L2	Current measured on phase I_{L2}
L3	Current measured on phase I_{L3}
I_0	Measured earth-fault current
I_2	Calculated NPS current
θ	Thermal level
Start time	Start-up time of the latest motor start up
Σt_s	Cumulative start-up time counter
Rest.inh.	Time to next possible motor start up
Running time	Motor running time
Max IL_s	Maximum phase current during motor start up
Max IL	Maximum phase current after motor start up
Max I_0	Maximum earth-fault current after motor start up
Min IL	Minimum phase current after motor start up
Min I_0	Minimum earth-fault current after motor start up
I_{1_min}	One-minute demand value
I_{n_min}	Demand value during the specified time range
Max I	Maximum one-minute demand value during the specified time range
RTD1	Temperature from RTD1 [1)]
RTD2	Temperature from RTD2 [1)]
RTD3	Temperature from RTD3 [1)]
RTD4	Temperature from RTD4 [1)]

Table 4.1.2-1 Measured values

Indicator	Description
RTD5	Temperature from RTD5 [1)]
RTD6	Temperature from RTD6 [1)]
Th1	Thermistor1, resistance value [1)]
Th2	Thermistor2, resistance value [1)]

[1)] Optional

4.1.3. Configuration

Fig. 4.1.3.-1 illustrates how the internal and digital input signals can be configured to obtain the required protection functionality.

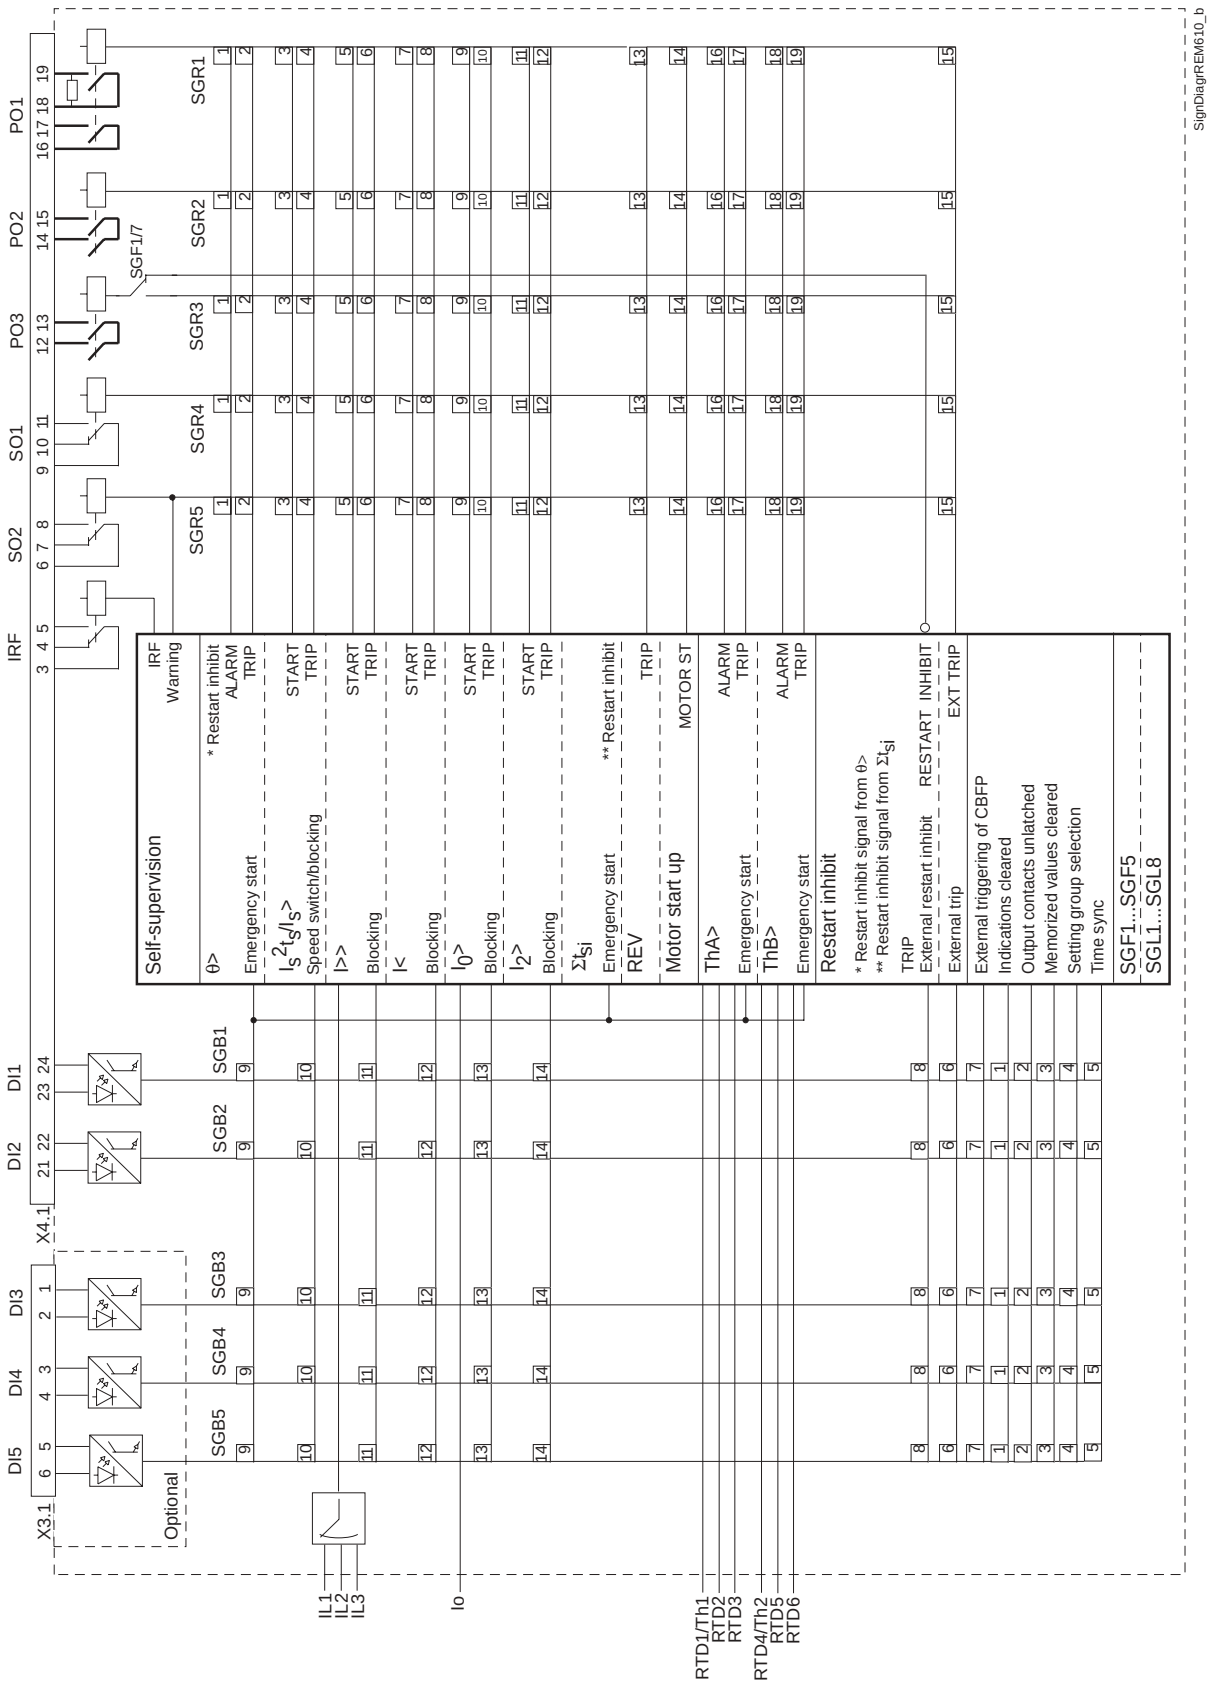


Fig. 4.1.3.-1 Signal diagram

The functions of the relay are selected with the switches of switchgroups SGF, SGB, SGR and SGL. The checksums of the switchgroups are found under SETTINGS in the HMI menu. The functions of the switches are explained in detail in the corresponding SG_ tables.

4.1.4. Protection

4.1.4.1. Block diagram

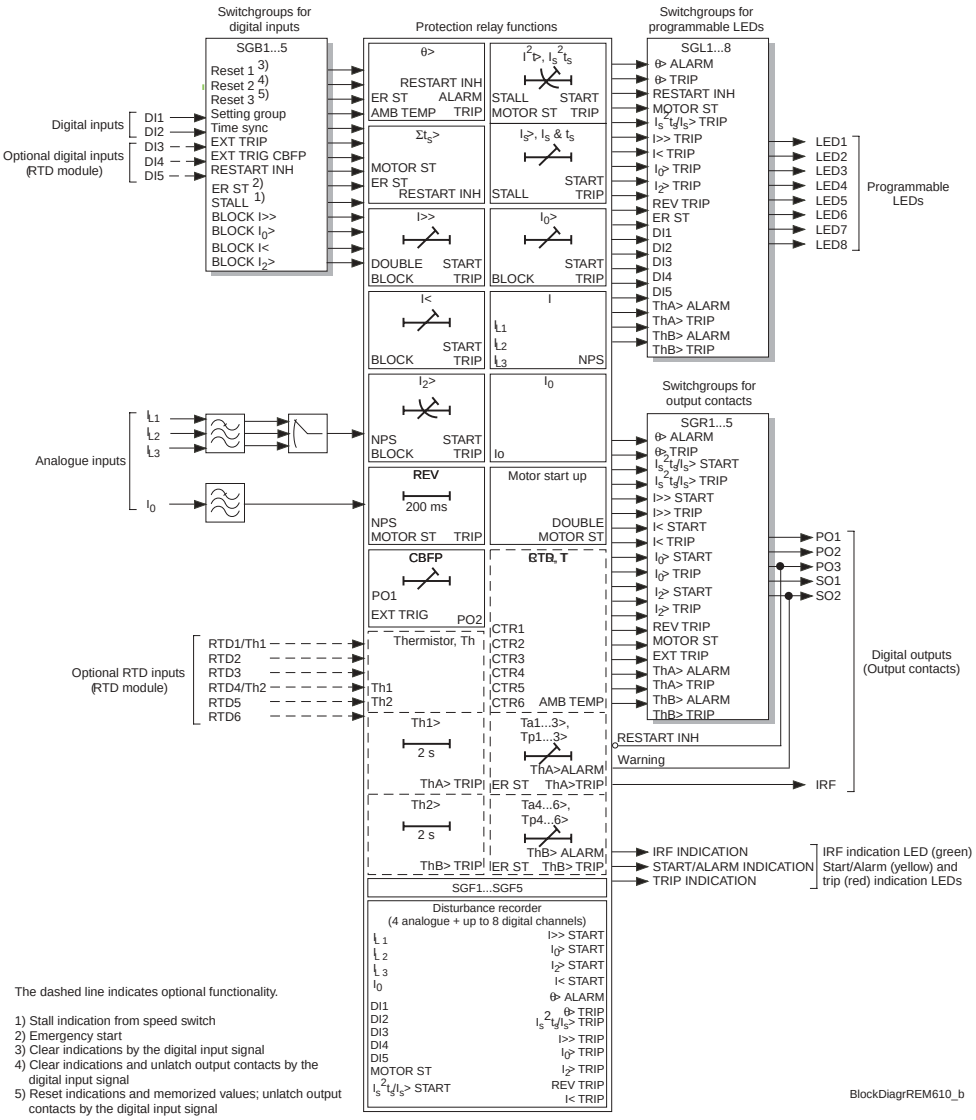


Fig. 4.1.4.1.-1 Block diagram

4.1.4.2. Thermal overload protection

The thermal overload protection detects short- and long-term overloads under varying load conditions. The heating up of the motor follows an exponential curve, the levelled-out value of which is determined by the squared value of the load current.

The full load current of the motor is defined by means of the protected unit scaling factor and determines the thermal trip level of stage θ>, θ_t. The set safe stall time, t_{6x}, determines the operate time of the stage for a load current of 6 x FLC without prior load.

If the RTD module has been installed, RTD6 can be selected to measure the ambient temperature. The selection is made in SGF4. However, if RTD6 is not used for measuring the ambient temperature or if the RTD module has not been installed, the thermal protection will use the set ambient temperature, T_{amb}.

The ambient temperature is used to determine the internal FLC. The table below shows how the internal FLC is modified.

Table 4.1.4.2-1 Modification of internal FLC

Ambient temperature	Internal FLC
<+20°C	FLC x 1.09
20...<40°C	FLC x (1.18 - T_{amb} x 0.09/20)
40°C	FLC
>40...65°C	FLC x (1 - [(T_{amb} - 40)/100])
>+65°C	FLC x 0.75

There are two thermal curves, one which characterizes short- and long-time overloads and which is used for tripping and another which is used for monitoring the thermal condition of the motor. Weighting factor p determines the ratio of the thermal increase of the two curves. For direct-on-line started motors with hot spot tendencies, the weighting factor is typically set to 50 per cent. When protecting objects without hot spot tendencies, e.g. motors started with soft starters, and cables, the weighting factor is set to 100 per cent.

When one or several phase currents exceed the internal FLC by more than five per cent, the whole thermal capacity of the motor will be used after a time determined by the internal FLC, the set safe stall time and the prior load of the motor. When the thermal level (influenced by the thermal history of the motor) exceeds the set prior alarm level, θ_a>, the stage will generate an alarm signal, and when the thermal level exceeds the set thermal restart inhibit level, θ_i>, the stage will generate a restart inhibit signal. The time to the next possible motor start up can be read with SPA parameter V52 or via the HMI. When the thermal level exceeds the trip level, θ_t>, the stage will generate a trip signal. For operate times, see Fig. 4.1.4.2.-1...Fig. 4.1.4.2.-4.

The thermal protection operates differently depending on the value of weighting factor p. For instance, if p is set to 50 per cent, the thermal protection will consider the hot spot tendencies of the motor and distinguish between short-time thermal stress and long-time thermal history. After a short period of thermal stress, e.g. a motor start up, the thermal level will start to decrease quite sharply, simulating the levelling out of the hot spots. As a consequence, the probability that successive start ups will be allowed increases.

If p is set to 100 per cent, the thermal level will decrease slowly after a heavy load condition. This makes the protection suitable for applications where no hot spots are expected.

The reduced ability of the motor to cool down during standstill is taken into account by setting the cooling time constant to be longer than the heating time constant. The time constant multiplier, K_c, is the ratio of the cooling time and the heating time constant and determines the cooling rate of the motor at standstill.

At power up, the thermal level will be set to approximately 70 per cent of the thermal capacity of the motor. This will ensure that the stage will trip within a safe time span. Under a low-load condition, the calculated thermal level will slowly approach the thermal level of the motor.

Note!

At a low prior alarm level, connecting the auxiliary supply to the relay will cause a thermal alarm due to the initialization of the thermal level to 70 per cent. The thermal level can be reset via the HMI during power up.

Note!

The thermal level can be reset or changed via serial communication, which will generate an event code.

Note!

On the rising edge of the emergency start signal the thermal level will be set below the thermal restart inhibit level. This will allow at least one motor start up even though the thermal level has exceeded the restart inhibit level.

Note!

When stage θ> starts during motor start up, neither a start signal nor an event code will be generated.

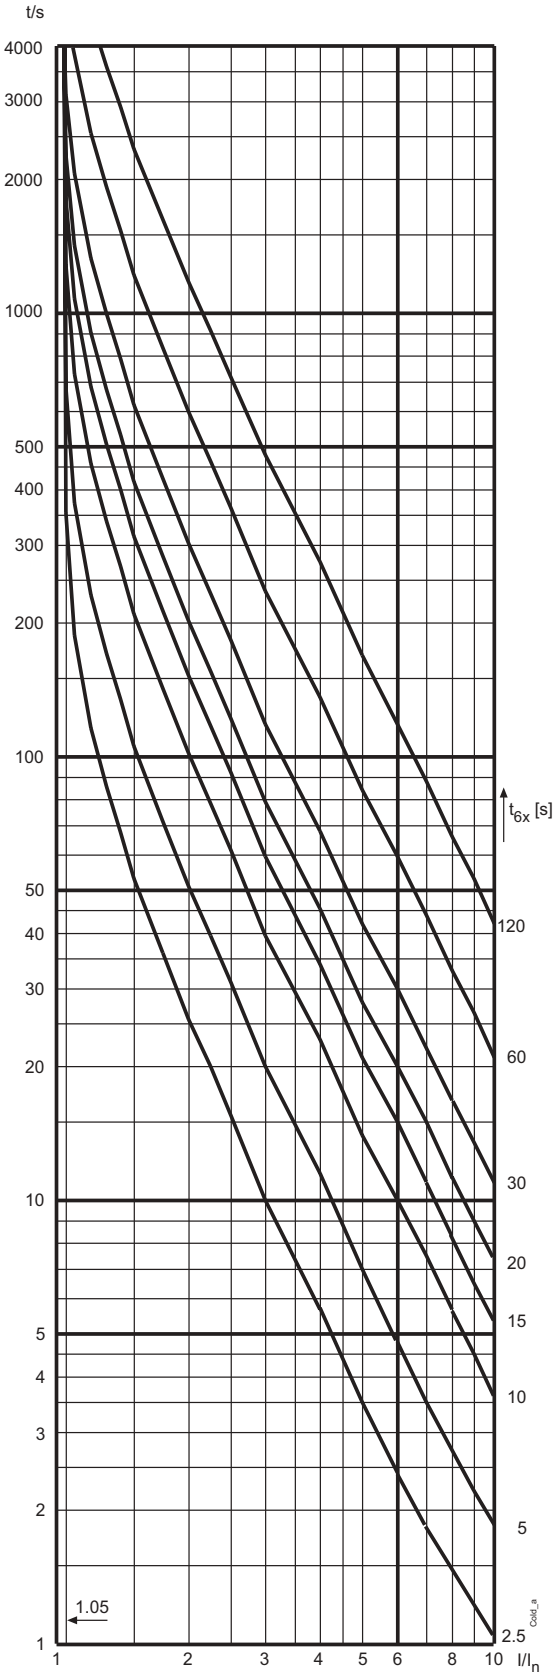


Fig. 4.1.4.2.-1 Trip curves when no prior load and p=20...100%

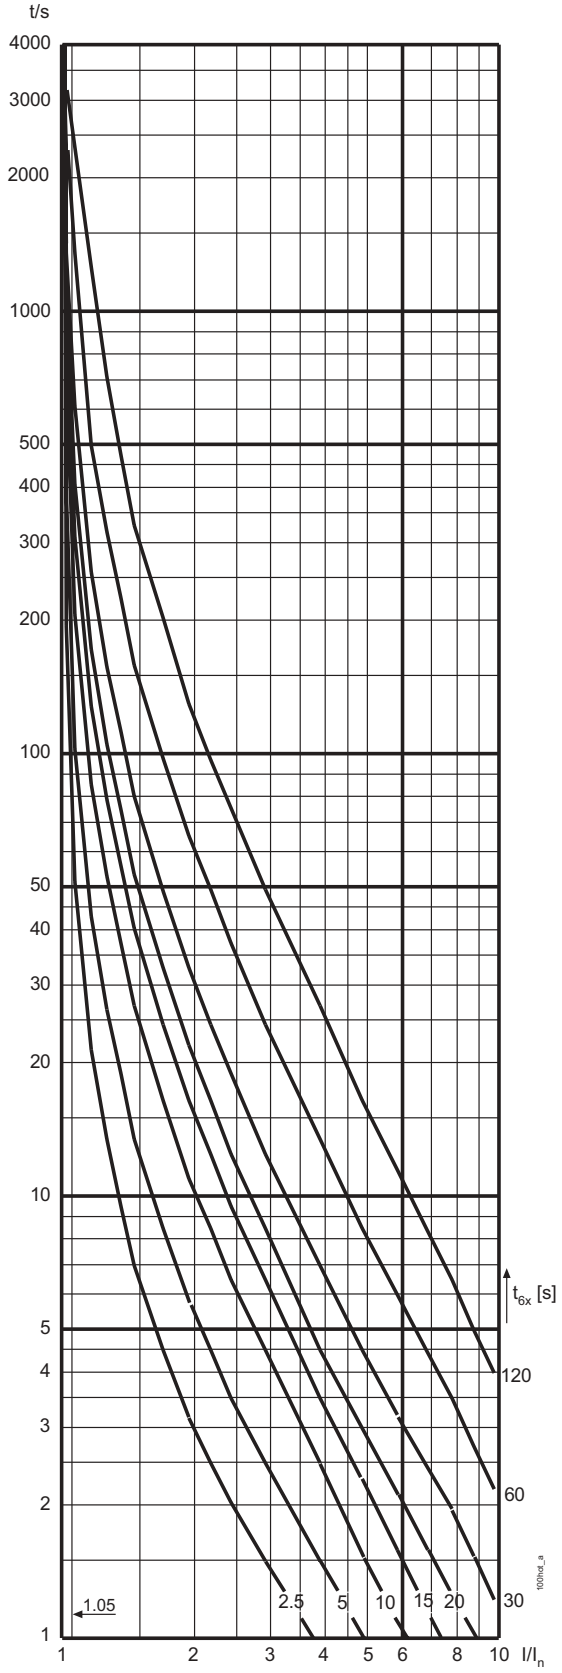


Fig. 4.1.4.2.-2 Trip curves at prior load 1 x FLC and p=100%

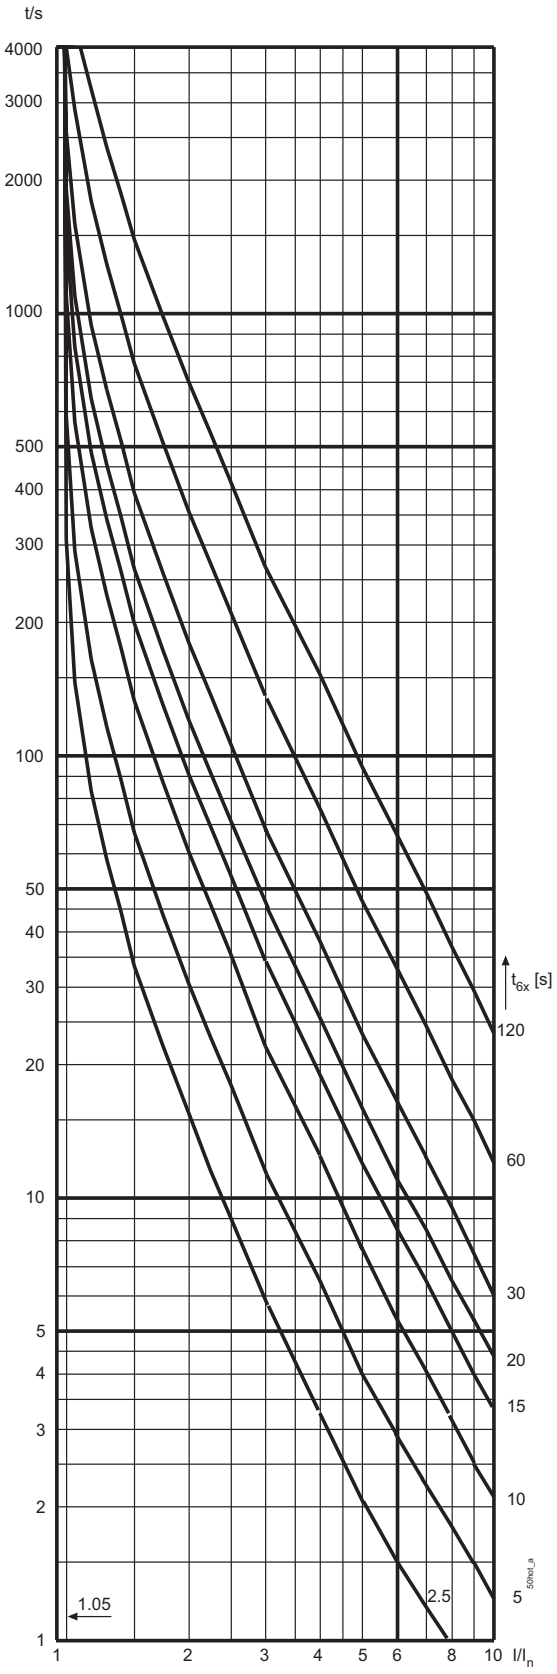


Fig. 4.1.4.2.-3 Trip curves at prior load 1 x FLC and p=50%

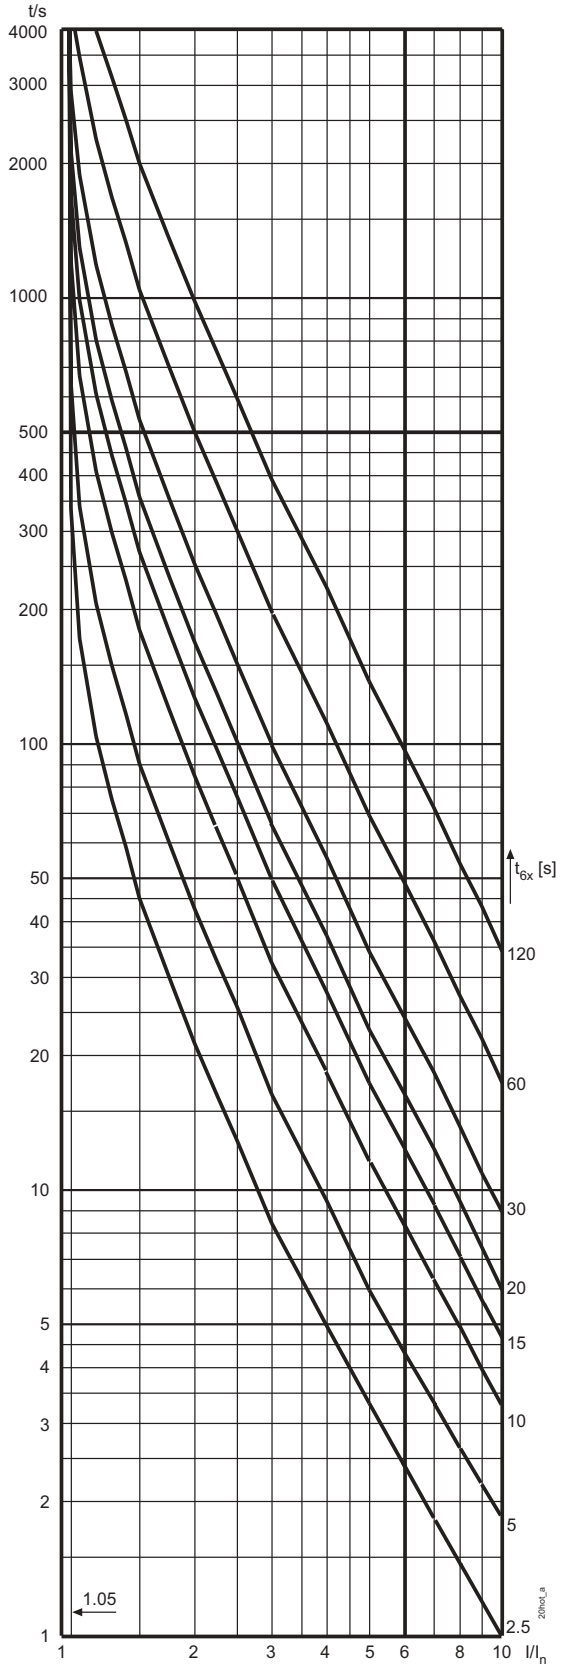


Fig. 4.1.4.2.-4 Trip curves at prior load 1 x FLC and p=20%

4.1.4.3. Start-up supervision

Start-up supervision can be based on either definite-time overcurrent protection or thermal stress calculation. The selection is made in SGF3, the default being thermal stress calculation.

Start-up supervision based on definite-time overcurrent protection

The non-directional low-set stage, $I_s>$, detects overcurrent, caused by an overload or a short circuit, for instance. When one or several phase currents exceed the set start value of stage $I_s>$, the stage will generate a start signal after a ~ 55 ms' start time. When the set operate time elapses, the stage will generate a trip signal.

The overcurrent stage will be reset when all three phase currents have fallen below the set start value of the stage. The resetting time depends on how sharp the drop is: if the phase currents fall below 0.5 x $I_s>$, the stage will be reset in 10 ms; if the phase currents fall below $I_s>$ but not below 0.5 x $I_s>$, the stage will be reset in 50 ms.

It is possible to block the tripping of the low-set overcurrent stage by applying a digital input signal to the relay.

A disadvantage of start-up supervision based on definite-time overcurrent protection is that the operate time is fixed and cannot be extended during low-voltage conditions.

Note!

Stage $I_s>$ cannot be used concurrently with stage $I_s^2 \times t_s$.

Note!

When stage $I_s>$ starts during motor start up, no start signal will be generated.

Start-up supervision based on thermal stress calculation

Stage $I_s^2 \times t_s$ detects thermal stress, caused by a locked rotor during motor start up, for instance. The stage can be set to start either when the conditions for motor start up are met or when one or several phase currents exceed the set start value. The selection is made in SGF3.

When stage $I_s^2 \times t_s$ has been set to start when the conditions for motor start up are met, the stage will calculate the thermal stress value, $I^2 \times t$, for as long as the conditions for motor start up are met and compare it to a reference value, $I_s^2 \times t_s$. The reference value is set to equal the amount of thermal stress built up during a normal start up of the motor. The stage will not generate a separate start signal. When the reference value is exceeded, the stage will generate a trip signal. The stage will be reset in 240 ms after the motor start up has ended and the motor is running.

When stage $I_s^2 \times t_s$ has been set to start when one or several phase currents exceed the set start value ($I_L > I_s$), the stage will generate a start signal after a ~ 100 ms' start time and calculate the thermal stress value, $I^2 \times t$, until all three phase currents have fallen below the set start value. When the calculated value exceeds the reference value, $I_s^2 \times t_s$, the stage will generate a trip signal. The stage will be reset in 240 ms after all three phase currents have fallen below the set start value of the stage.

The operate time is calculated as below. However, the shortest possible operate time of stage I_s^2 x t_s is ~300 ms.

$$t[s] = \frac{(I_s >)^2 \times t_s >}{I^2}$$

where

t = operate time

I_s> = set start-up current for motor

t_s> = set start-up time for motor

I = phase current value

An advantage of start-up supervision based on thermal stress calculation is that the operate time will be automatically extended during low-voltage conditions as it depends on the start-up current of the motor.

Note!

Stage I_s^2 x t_s cannot be used concurrently with stage I_s>.

Start-up supervision with speed switch

In case the safe stall time is shorter than the start-up time of the motor stated by the motor manufacturer, as with motors of ExE-type, for instance, a speed switch on the motor shaft is required to give information on whether the motor is accelerating during motor start up. The speed switch should be open at standstill and closed during acceleration.

Stages I_s> and I_s^2 x t_s will be blocked on activation of the speed switch input.

4.1.4.4. Short-circuit protection

The non-directional short-circuit protection detects overcurrent caused by interwinding, phase-to-phase and phase-to-earth short circuits.

When one or several phase currents exceed the set start value of stage I>>, the stage will generate a start signal after a ~ 50 ms' start time. When the set operate time at definite-time characteristic elapses, the stage will generate a trip signal. The high-set overcurrent stage can be given an instantaneous characteristic by setting the operate time to the minimum, i.e. 0.05 s. The stage will be reset in 50 ms after all three phase currents have fallen below the set start value of the stage.

The set start value of stage I>> can be set to be automatically doubled in a motor start-up situation, i.e. when the object to be protected is being connected to a network. Consequently, a set start value below the connection inrush current level can be selected for the stage. In this case, the short-circuit protection will still detect overcurrent caused by a locked rotor when the motor is running, which in turn may be caused by bearing failure, for instance. The selection is made in SGF3.

Note!

When automatic doubling is in use and the PU scale has been set to be very low, it must be assured that the doubled set start value of stage I>> does not exceed the maximum measured current.

Note!

If the PU scale has been set to 0.5, the maximum measured rated current (FLC) is 25 x In.

It is possible to block the tripping of the high-set overcurrent stage by applying a digital input signal to the relay.

The high-set overcurrent stage can be set out of operation in SGF3 to prevent the contactor in a contactor controlled drive from operating at too high phase currents. This state will be indicated by dashes on the LCD and by “999” when the set start value is read via serial communication.

Note!

When stage I>> starts during motor start up, no start signal will be generated.

4.1.4.5. Undercurrent protection

The non-directional undercurrent protection detects loss of load, caused by a damaged pump or a broken conveyor, for instance, and can be used in applications where undercurrent is considered a fault condition.

When all three phase currents fall below the set start value of stage I<, the stage will generate a start signal after a ~ 300 ms’ start time. When the set operate time elapses, the stage will generate a trip signal. To avoid tripping a de-energized motor, stage I< will be set out of operation when all phase currents fall below twelve per cent of the FLC of the motor.

The undercurrent stage will be reset in 350 ms after one or several phase currents have exceeded the set start value of the stage.

It is possible to block the tripping of the undercurrent stage by applying a digital input signal to the relay.

Stage I< can be set out of operation in SGF3. This state will be indicated by dashes on the LCD and by “999” when the set start value is read via serial communication.

Note!

When stage I< starts during motor start up, no start signal will be generated.

4.1.4.6. Earth-fault protection

The non-directional earth-fault current protection detects phase-to-earth currents, caused by ageing and thermal cycling, for instance.

When the earth-fault current exceeds the set start value of stage I_0>, the stage will generate a start signal after a ~ 50 ms’ start time. When the set operate time at definite-time characteristic elapses, the stage will generate a trip signal. The stage can be given an instantaneous characteristic by setting the operate time to the minimum, i.e. 0.05 s. The earth-fault stage will be reset in 50 ms after the earth-fault current has fallen below the set start value of the stage.

It is possible to block the tripping of the earth-fault stage by applying a digital input signal to the relay.

Stage I_0> can be set out of operation in SGF3. This state will be indicated by dashes on the LCD and by “999” when the set start value is read via serial communication.

To prevent the contactor in a contactor controlled drive from operating at too high phase currents, the earth-fault stage can be set to be inhibited when one or several phase currents exceed the FLC of the motor four, six or eightfold. The selection is made in SGF4.

Note!

When stage $I_0>$ starts during motor start up, no start signal will be generated.

Note!

The PU scale does not affect the earth fault current, I_0.

4.1.4.7. Unbalance protection

The inverse-definite-minimum-time (IDMT) unbalance protection is based on the calculated negative-phase-sequence (NPS) current and detects phase unbalance between phases I_{L1}, I_{L2} and I_{L3}, caused by a broken conductor, for instance. Phase unbalance in a network feeding the motor will cause overheating of the rotor.

When the calculated NPS current value exceeds the set start value of stage $I_2>$, the stage will generate a start signal after a ~ 100 ms' start time. When the calculated operate time elapses, the stage will generate a trip signal. The operate time depends on the current value: the higher the current value, the shorter the operate time. The unbalance stage will be reset in 200 ms after the NPS current has fallen below the set start value of the stage.

The unbalance protection will be inhibited when all phase currents fall below twelve per cent of the FLC of the motor or one or several phase currents exceed the FLC of the motor fourfold.

It is possible to block the tripping of the unbalance stage by applying a digital input signal to the relay.

Stage $I_2>$ can be set out of operation in SGF3. This state will be indicated by dashes on the LCD and by "999" when the set start value is read via serial communication.

The operate time is calculated as below:

$$t[s] = \frac{K_2}{(I_2)^2 - (I_2 > \quad)^2}$$

where

t = operate time

I_2 = NPS current

$I_2>$ = set start value

K_2 = set time constant equals the motor constant, I_2^2 x t (provided by the motor manufacturer)

Note!

When stage $I_2>$ starts during motor start up, no start signal will be generated.

Note!

Stage $I_2>$ will be blocked during the tripping of the phase reversal stage.

The figure below illustrates the inverse-time curves of stage $I_2>$.

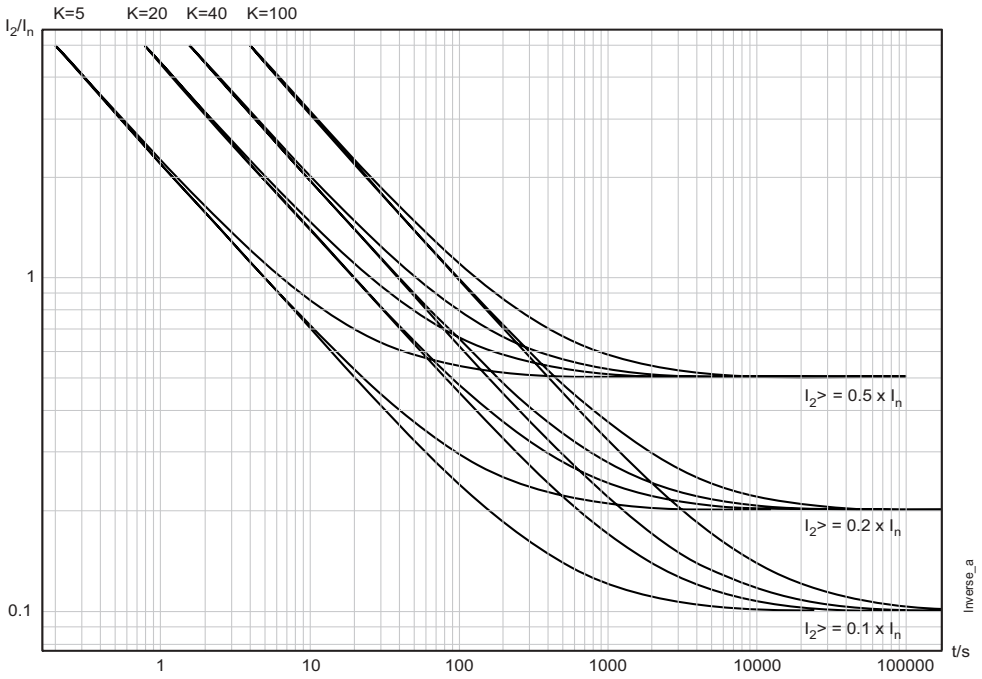


Fig. 4.1.4.7.-1 Inverse-time curves of stage $I_2>$

4.1.4.8. Phase reversal protection

The phase reversal protection is based on the calculated negative-phase-sequence current and detects too high NPS current values during motor start up, caused by incorrectly connected phases, which in turn will cause the motor to rotate in the opposite direction.

When the calculated NPS current value exceeds 75 per cent of the maximum phase current value, the phase reversal stage (REV) will generate a trip signal after a fixed 200 ms' operate time.

The stage will be reset in 200 ms after the calculated NPS current value has fallen below 75 per cent of the maximum phase current value.

The phase reversal stage can be set out of operation in SGF3.

Note!

The unbalance stage will be blocked during the tripping of the phase reversal stage.

4.1.4.9. Cumulative start-up time counter

The cumulative start-up time counter detects too frequent start-up attempts, which cause overheating of the motor.

The start-up time of every motor start up is added to a register, Σt_s. When the register's value exceeds the set restart inhibit value, Σt_{si}, any attempt to restart the motor will be inhibited.

The time to the next possible motor start up depends on the countdown rate of the start-up time counter, $\Delta\Sigma t_s/\Delta t$, i.e. the rate at which the register's value decreases. For instance, if the motor manufacturer allows a maximum of three 60 s' motor start ups in four hours, Σt_{si} should be set to 2 x 60 s + margin = 121 s and $\Delta\Sigma t_s/\Delta t$ to 60 s/4 h = 15 s/h; see the figure below.

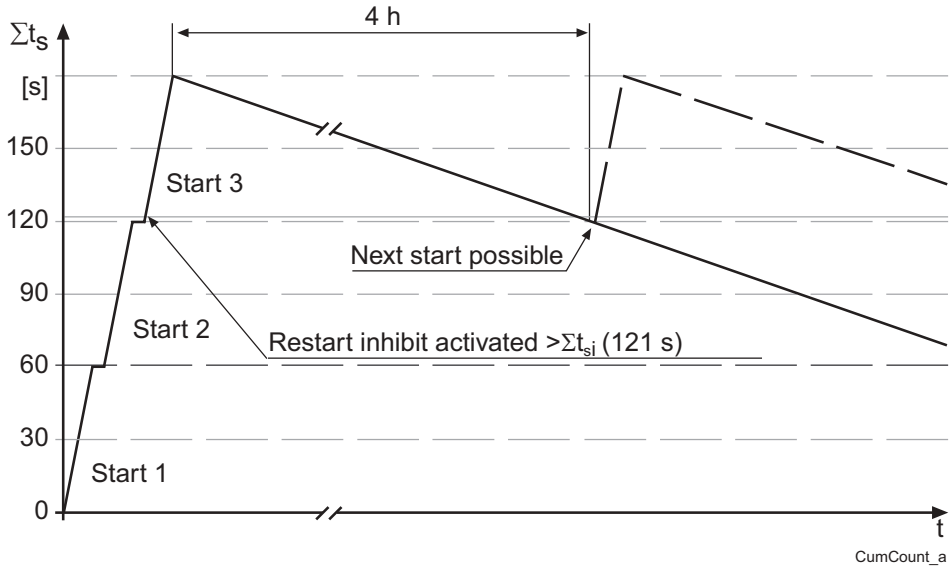


Fig. 4.1.4.9.-1 Cumulative start-up time counter operation

Note!

The register's value will decrease during motor start up as well.

Note!

If the emergency start has been activated, a motor start up will be allowed even though the register's value exceeds the set restart inhibit value.

4.1.4.10. Circuit-breaker failure protection

The circuit-breaker failure protection (CBFP) detects situations where the circuit breaker remains closed although the circuit breaker should have operated.

If a trip signal generated via output PO1 is still active and the current has not been cut off on expiration of the CBFP set operate time, the CBFP will generate a trip signal via output PO2.

The CBFP will not be triggered in case of:

- an alarm or a trip of the thermal protection stage
- an alarm or a trip a temperature stage
- a trip of the phase reveral stage
- an external trip

The CBFP can also be selected to be triggered by applying a digital input signal to the relay. In this case, the CBFP will generate a trip signal via output PO2 if the current has not been cut off on expiration of the set operate time. External triggering will be inhibited when all phase currents fall below 12 per cent of the FLC of the motor, i.e. at standstill.

Internal triggering is selected by activating the CBFP in SGF and external triggering by activating the CBFP in SGB. Both triggering options can be selected at the same time.

Normally, the CBFP controls the upstream circuit breaker. However, it can also be used for tripping via redundant trip circuits of the same circuit breaker, provided that the circuit breaker has two trip coils.

4.1.4.11. Temperature protection (optional)

The temperature protection detects too high temperatures in motor bearings and windings, for instance, measured either using RTD sensors or thermistors.

The optional RTD module includes six inputs divided into two groups: RTD1...3 form ThA and RTD4...6 ThB. Inputs RTD1 and RTD4 can also be used with thermistors.

The inputs of ThA can be used for measuring the stator temperature and those of ThB for measuring bearing temperatures and the ambient temperature, for instance.

Each RTD input can be set out of operation. This state will be indicated by dashes on the LCD and by “-999” when parameters are read via the SPA bus. When RTD sensors/thermistors are not in use, dashes will be shown on the LCD and “-999”/ ”999” when parameters are read via serial communication.

Note!

All RTD inputs will automatically be set out of operation when the self-supervision of the RTD module has detected a fault.

Temperature protection using RTD sensors

An alarm value, Ta1...6>, and a trip value, Tp1...6>, are set for each input separately. When one or several measured temperatures exceed their set alarm values, Ta1...3>/ Ta4...6>, stage ThA/ThB will generate an alarm signal on expiration of the set operate time. When one or several measured temperatures exceed their set trip values, Tp1...3>/Tp4...6>, stage ThA>/ThB> will generate a trip signal on expiration of the set operate time.

The alarm signal from ThA>/ThB> will be reset in 800 ms after the temperatures have fallen below their respective set alarm values (Ta1...3>/Ta4...6>) and the trip signal in 800 ms after the temperatures have fallen below their respective set trip values (Tp1...3>/Tp4...6>).

Note!

RTD6 can be used to measure the ambient temperature for the thermal protection stage. In this case, Ta6> and Tp6> will not be in use. This state will be indicated by dashes on the LCD and by “-999” when the set alarm/trip value is read via the SPA bus.

Note!

For as long as the emergency start is activated, Tp1...6> will be increased by 10 per cent.

Temperature protection using thermistors

REM610 supports PTC thermistors.

When input RTD1/RTD4 is used with thermistors, a trip value, Thp1>/Thp2>, is set for the respective input.

When the resistance of the thermistor exceeds the set trip value, Thp1>/Thp2>, stage ThA>/ThB> will generate a trip signal on expiration of the 2 s’ fixed operate time.

The trip signal from ThA>/ThB> will be reset in 800 ms after the resistance has fallen below set trip value Thp1>/Thp2>.

RTD sensor/thermistor connection

When connecting the RTD sensors and the thermistors to the RTD inputs, a double-shielded cable is to be used. The cable shield is to be connected to the chassis earth screw on the rear panel of the relay.

The RTD sensors and thermistors are to be connected to the RTD inputs according to the three-wire connection principle. Consequently, the wire resistance will be automatically compensated. The RTD sensor/thermistor is connected across the plus and the minus terminal, and the negative side of the RTD sensor/thermistor to the common terminal. The leads connected to the plus and the common terminal must be of the same type and length.

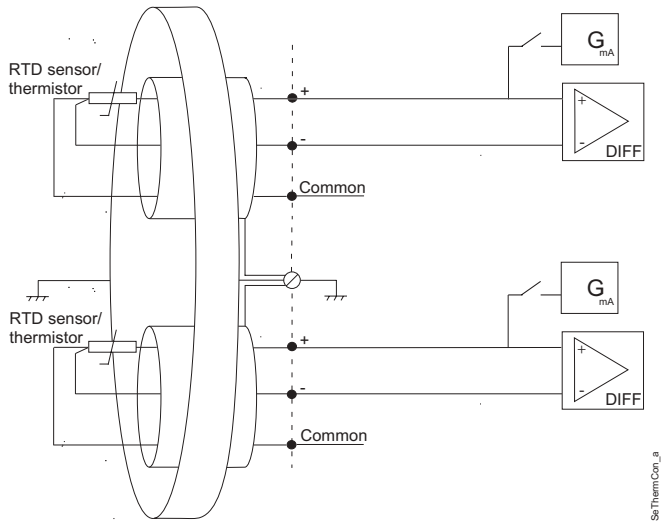


Fig. 4.1.4.11.-1 RTD sensor/thermistor connection

RTD temperature vs resistance

Resistance values (Ω) of RTD sensors at specified temperatures are presented in the table below.

Table 4.1.4.11-1 Resistance values of RTD sensors

Temperature °C	Platinum TCR 0.00385			Nickel TCR 0.00618		Copper TCR 0.00427	Nickel TCR 0.00672
	Pt 100	Pt 250	Pt 1000	Ni 100	Ni 120	Cu 10	Ni 120 US
-40	84.27	210.68	842.7	79.1	94.92	7.49	92.76
-30	88.22	220.55	882.2	84.1	100.92	-	-
-20	92.16	230.4	921.6	89.3	107.16	8.26	106.15
-10	96.09	240.23	960.9	94.6	113.52	-	-
0	100.00	250	1000	100.0	120	9.04	120.00
10	103.90	259.75	1039	105.6	126.72	-	-
20	107.79	269.48	1077.9	111.2	133.44	9.81	134.52
30	111.67	279.18	1116.7	117.1	140.52	-	-
40	115.54	288.85	1155.4	123.0	147.6	10.58	149.79
50	119.40	298.5	1194	129.1	154.92	-	-
60	123.24	308.1	1232.4	135.5	162.36	11.352	165.90
70	127.07	317.68	1270.7	141.7	170.04	-	-
80	130.89	327.23	1308.9	148.3	177.96	12.12	182.84
90	134.70	336.75	1347	154.9	185.88	-	-
100	138.50	346.25	1385	161.8	194.16	12.90	200.64
120	146.06	365.15	1460.6	176.0	211.2	13.67	219.29
140	153.58	383.95	1535.8	190.9	229.08	14.44	238.85
150	-	-	-	198.6	238.32	-	-
160	161.04	402.6	1610.4	206.6	247.92	15.22	259.30
180	168.46	421.15	1684.6	223.2	267.84	-	280.77
200	175.84	439.6	1758.4	240.7	288.84	-	303.46
220	-	-	-	259.2	311.04	-	327.53
240	-	-	-	278.9	334.68	-	353.14
250	194.07	485.18	1940.7	289.2	347.04	-	-
260	-	-	-	-	-	-	380.31
300	212.02	530.05	2120.2	-	-	-	-
350	229.67	574.18	2296.7	-	-	-	-
400	247.04	617.6	2470.4	-	-	-	-
450	264.11	660.28	2641.1	-	-	-	-
500	280.90	702.25	2809	-	-	-	-
550	297.39	743.48	2973.9	-	-	-	-
600	313.59	783.98	3135.9	-	-	-	-

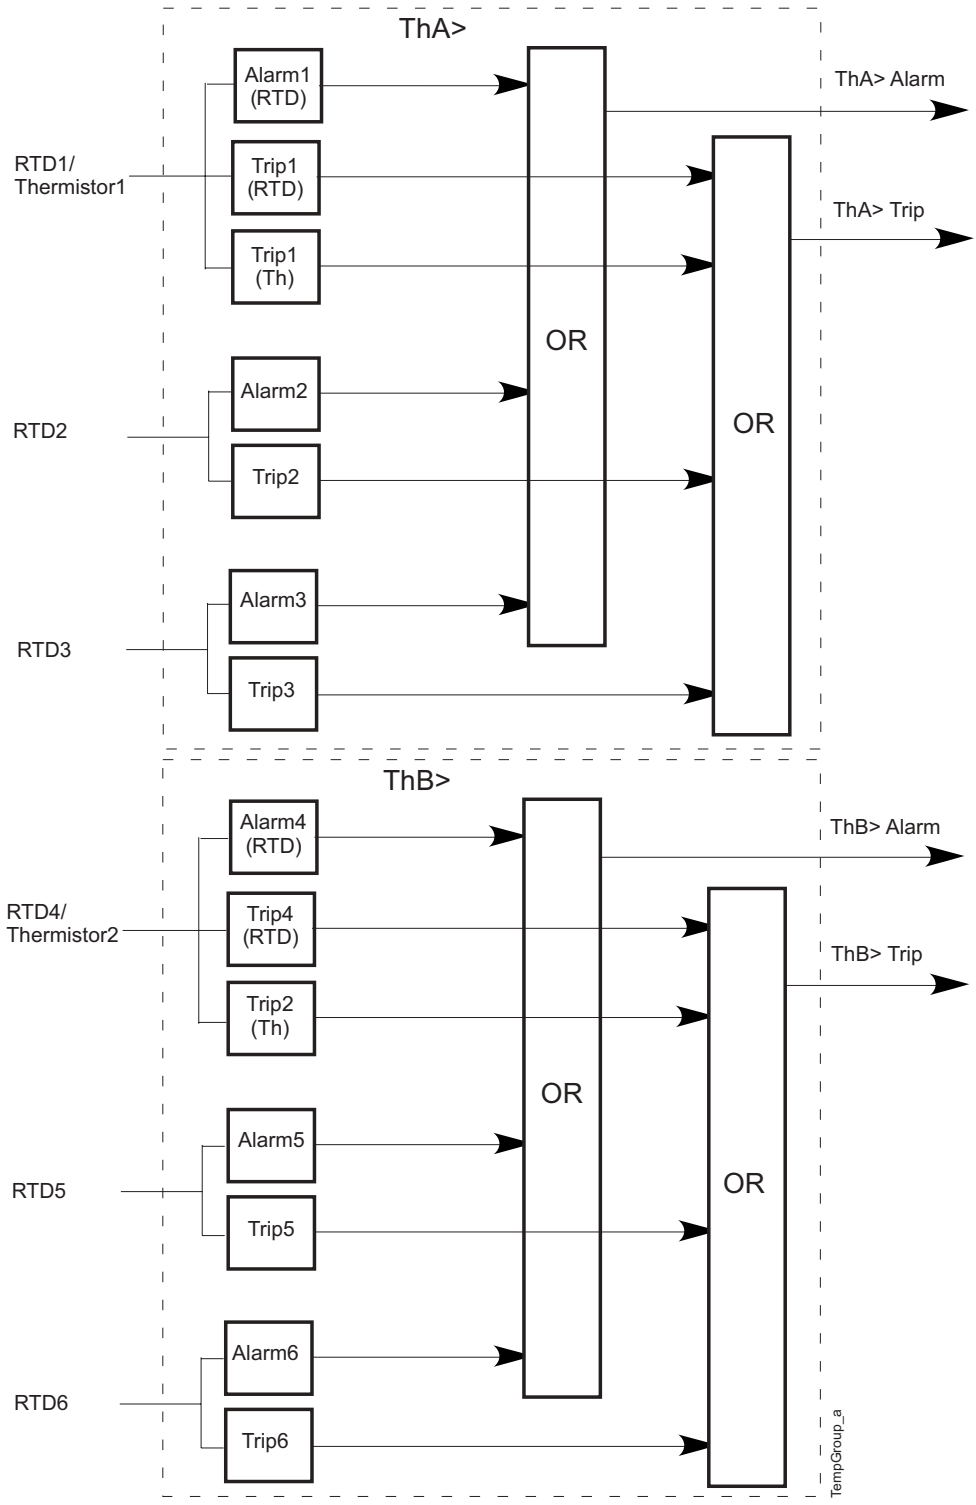


Fig. 4.1.4.11.-2 Grouping of temperature stages

4.1.4.12. Settings

There are two alternative setting groups available, setting groups 1 and 2. Either of these setting groups can be used as the actual settings, one at a time. Both groups have their related registers. By switching between the setting groups, a whole group of settings can be changed at the same time. This can be done in any of the following ways:

Group configuration:

- via the HMI
- entering parameter V150 via serial communication

Group selection:

- switching between group 1 and group 2 is accomplished by means of a digital input

Note!

Switching between setting groups through group selection has higher priority than through group configuration.

The setting values can be altered via the HMI or with a PC provided with the Relay Setting Tool.

Before the relay is connected to a system it must be assured that the relay has been given the correct settings. If there is any doubt, the setting values should be read with the relay trip circuits disconnected or tested with current injection; refer to section Check lists for additional information.

Table 4.1.4.12-1 Setting values

Setting	Description	Setting range	Default setting
PU scale	Protected unit scaling factor	0.50...2.50 [1)]	1
t_{6x}	Safe stall time	2...120 s [2)]	2 s
p	Weighting factor	20...100%	50%
K_c	Time constant multiplier	1...64	1
θ_a>	Prior alarm level	50...100%	95%
θ_i>	Restart inhibit level	20...80%	40%
T_{amb}	Ambient temperature	0...70°C	40°C
I_s>/I_n	Start-up current for motor or start value of stage I_s>	1.00…10.0 x I_n	1.00 x I_n
t_s>	Start-up time for motor or operate time of stage I_s>	0.30...80.0 s	0.30 s
I>>/I_n	Start value of stage I>>	0.50...20.0 x I_n	1.00 x I_n
t>>	Operate time of stage I>>	0.05...30.0 s	0.05 s
I_0>/I_n	Start value of stage I_0>	1.0...100% I_n	1.0% I_n
t_0>	Operate time of stage I_0>	0.05...300 s	0.05 s
I</I_n	Start value of stage I<	30...80% I_n	50% I_n
t<	Operate time of stage I<	2...600 s	2 s
I_2>/I_n	Start value of stage I_2>	0.10…0.50 x I_n	0.20 x I_n
K_2	Time constant of stage I_2> at IDMT characteristic	5...100	5

Table 4.1.4.12-1 Setting values

Setting	Description	Setting range	Default setting
Σt_{si}	Restart inhibit value	5...500 s	5 s
$\Delta\Sigma t_s/\Delta t$	Countdown rate of start-up time counter	2...250 s/h	2 s/h
CBFP	Operate time of CBFP	0.10...60.0 s	0.10 s
Ta1>	Alarm value Ta1>	0...200°C	0°C
ta1>	Operate time ta1>	1...100 s	1 s
Tp1>	Trip value Tp1>	0...200°C	0°C
tp1>	Operate time tp1>	1...100 s	1 s
Ta2>	Alarm value Ta2>	0...200°C	0°C
ta2>	Operate time ta2>	1...100 s	1 s
Tp2>	Trip value Tp2>	0...200°C	0°C
tp2>	Operate time tp2>	1...100 s	1 s
Ta3>	Alarm value Ta3>	0...200°C	0°C
ta3>	Operate time ta3>	1...100 s	1 s
Tp3>	Trip value Tp3>	0...200°C	0°C
tp3>	Operate time tp3>	1...100 s	1 s
Ta4>	Alarm value Ta4>	0...200°C	0°C
ta4>	Operate time ta4>	1...100 s	1 s
Tp4>	Trip value Tp4>	0...200°C	0°C
tp4>	Operate time tp4>	1...100 s	1 s
Ta5>	Alarm value Ta5>	0...200°C	0°C
ta5>	Operate time ta5>	1...100 s	1 s
Tp5>	Trip value Tp5>	0...200°C	0°C
tp5>	Operate time tp5>	1...100 s	1 s
Ta6>	Alarm value Ta6>	0...200°C	0°C
ta6>	Operate time ta6>	1...100 s	1 s
Tp6>	Trip value Tp6>	0...200°C	0°C
tp6>	Operate time tp6>	1...100 s	1 s
Thp1>	Trip value Thp1>	0.1...15.0 kΩ	0.1 kΩ
Thp2>	Trip value Thp2>	0.1...15.0 kΩ	0.1 kΩ

[1)] The protected unit scaling factor has only one setting and thus switching between setting groups does not apply.
[2)] The setting step is 0.5.

Switchgroups and parameter masks

The settings can be altered and the functions of the relay selected in the SG_ selector switchgroups. The switchgroups are software based and thus not physical switches to be found in the hardware of the relay.

A checksum is used for verifying that the switches have been properly set. The figure below shows an example of manual checksum calculation.

Switch number	Position		Weighting factor		Value
1	1	x	1	=	1
2	0	x	2	=	0
3	1	x	4	=	4
4	0	x	8	=	0
5	1	x	16	=	16
6	0	x	32	=	0
7	1	x	64	=	64
8	0	x	128	=	0
9	1	x	256	=	256
10	0	x	512	=	0
11	1	x	1024	=	1024
12	0	x	2048	=	0
13	1	x	4096	=	4096
14	0	x	8192	=	0
15	1	x	16384	=	16384
16	0	x	32768	=	0
17	1	x	65536	=	65536
18	0	x	131072	=	0
19	1	x	262144	=	262144
20	0	x	524288	=	0
	checksum		SG_ Σ	=	349525

Fig. 4.1.4.12.-1 An example of calculating the checksum of a SG_ selector switchgroup

When the checksum, calculated according to the example above, equals the checksum of the relay, the switches in the switchgroup have been properly set.

The factory default settings of the switches and the corresponding checksums are presented in the tables below.

SGF1...SGF5

Switchgroups SGF1...SGF5 are used for configuring the desired function as follows:

Table 4.1.4.12-2 SGF1

Switch	Function	Default setting
SGF1/1	Selection of the latching feature for PO1	0
SGF1/2	Selection of the latching feature for PO2	0
SGF1/3	Selection of the latching feature for PO3 • When the switch is in position 0 and the measuring signal which caused the trip falls below the set start value, the output contact will return to its initial state. • When the switch is in position 1, the output contact will remain active although the measuring signal which caused the trip falls below the set start value. A latched output contact can be unlatched either via the HMI, a digital input or the serial bus.	0
SGF1/4	Minimum pulse length for SO1 and SO2 • 0=80 ms • 1=40 ms	0
SGF1/5	Minimum pulse length for PO1, PO2 and PO3 • 0=80 ms • 1=40 ms Note! The latching feature being selected for PO1, PO2 and PO3 will override this function.	0
SGF1/6	CBFP • 0 = CBFP is not in use • 1 = the signal to PO1 will start a timer which will generate a delayed signal to PO2, provided that the fault is not cleared before the CBFP operate time has elapsed.	0
SGF1/7	Restart inhibit function • When the switch is in position 0, the restart inhibit signal will be routed to PO3. • When the switch is in position 1, the restart inhibit signal will not be routed to PO3.	0
SGF1/8	External fault warning • When the switch is in position 1, the warning signal from the trip-circuit supervision is routed to SO2. Note! To avoid conflicts, SGR5 should be set to 0 when SGF1/8=1.	0
ΣSGF1		0

Table 4.1.4.12-3 SGF2

Switch	Function	Default setting
SGF2/1	Operation mode of the alarm indication of stage θ>	0
SGF2/2	Operation mode of the start indication of stage I_s> [1)]	0
SGF2/3	Operation mode of the start indication of stage I>> [1)]	0
SGF2/4	Operation mode of the start indication of stage I< [1)]	0
SGF2/5	Operation mode of the start indication of stage I_0>	0
SGF2/6	Operation mode of the start indication of stage I_2>	0
SGF2/7	Operation mode of the alarm indication of stage ThA>	0
SGF2/8	Operation mode of the alarm indication of stageThB> • 0 = the start indication will automatically be cleared once the fault has disappeared • 1 = latching. The start indication will remain active although the fault has disappeared.	0
ΣSGF2		0

[1)] In addition, the phase(s) which caused the start will be shown on the LCD.

Table 4.1.4.12-4 SGF3

Switch	Function	Default setting
SGF3/1	Inhibition of stage I>>	0
SGF3/2	Inhibition of stage I<	1
SGF3/3	Inhibition of stage I_0>	0
SGF3/4	Inhibition of stage I_2>	0
SGF3/5	Inhibition of stage REV • When the switch is in position 1, the stage is inhibited.	0
SGF3/6	Start-up supervision • 0 = based on thermal stress calculation • 1 = based on definite-time overcurrent protection	0
SGF3/7	Start criteria for stage $I_s^2 \times t_s$ • 0 = the stage will start when the conditions for motor start up are met • 1 = the stage will start when one or several phase currents exceed the set start value	0
SGF3/8	Automatic doubling of the start value of stage I>> • When the switch is in position 1, the set start value of the stage will automatically be doubled at high inrush situations	0
ΣSGF3		2

Table 4.1.4.12-5 SGF4

Switch	Function			Default setting
SGF4/1 and SGF4/2	Inhibition of stage I_0> when one or several phase currents exceed the FLC of the motor			0 0
		SGF4/1	SGF4/2	
	x 4	0	1	
	x 6	1	0	
	x 8	1	1	
SGF4/3	Selection of ambient temperature • 0 = set ambient temperature • 1 = ambient temperature from RTD6 If the RTD module has not been installed, the set ambient temperature will be used.			0
ΣSGF4				0

Table 4.1.4.12-6 SGF5

Switch	Function	Default setting
SGF5/1	Selection of the latching feature for programmable LED1	0
SGF5/2	Selection of the latching feature for programmable LED2	0
SGF5/3	Selection of the latching feature for programmable LED3	0
SGF5/4	Selection of the latching feature for programmable LED4	0
SGF5/5	Selection of the latching feature for programmable LED5	0
SGF5/6	Selection of the latching feature for programmable LED6	0
SGF5/7	Selection of the latching feature for programmable LED7	0
SGF5/8	Selection of the latching feature for programmable LED8 • When the switch is in position 0 and the signal routed to the LED is reset, the programmable LED will be cleared. • When the switch is in position 1, the programmable LED will remain lit although the signal routed to the LED is reset. A latched programmable LED can be cleared either via the HMI, a digital input or the serial bus.	0
ΣSGF5		0

SGB1...SGB5

The DI1 signal is routed to the functions below with the switches of switchgroup SGB1, the DI2 signal with those of SGB2, and so forth.

Table 4.1.4.12-7 SGB1...SGB5

Switch	Function	Default setting
SGB1...5/1	• 0 = indications are not cleared by the digital input signal • 1 = indications are cleared by the digital input signal	0
SGB1...5/2	• 0 = indications are not cleared and latched output contacts are not unlatched by the digital input signal • 1 = indications are cleared and latched output contacts are unlatched by the digital input signal	0

Table 4.1.4.12-7 SGB1...SGB5

Switch	Function	Default setting
SGB1...5/3	• 0 = indications and memorized values are not cleared and latched output contacts are not unlatched by the digital input signal • 1 = indications and memorized values are cleared and latched output contacts are unlatched by the digital input signal	0
SGB1...5/4	Switching between setting groups 1 and 2 using the digital input • 0 = the setting group cannot be changed using the digital input • 1 = the setting group is changed by using the digital input. When the digital input is energized, setting group 2 will be activated, if not, setting group 1 will be activated. Note! When SGB1...5/4 is set to 1, it is important that the switch has the same setting in both setting groups.	0
SGB1...5/5	External tripping by the digital input signal	0
SGB1...5/6	External triggering of the CBFP by the digital input signal	0
SGB1...5/7	External restart inhibit by the digital input signal	0
SGB1...5/8	Activating the emergency start by the digital input signal	0
SGB1...5/9	Blocking of stage $I_s^2 \times t_s$ or $I_s>$ by the digital input signal (speed switch input)	0
SGB1...5/10	Blocking of stage I>> by the digital input signal	0
SGB1...5/11	Blocking of stage I< by the digital input signal	0
SGB1...5/12	Blocking of stage $I_0>$ by the digital input signal	0
SGB1...5/13	Blocking of stage $I_2>$ by the digital input signal	0
SGB1...5/14	Time synchronization by the digital input signal	0
ΣSGB1...5		0

SGR1...SGR5

The start, trip and alarm signals from the protection stages, the motor start-up signal and the external trip signal are routed to the output contacts with the switches of switchgroups SGR1...SGR5. The signals are routed to PO1 with the switches of switchgroup SGR1, to PO2 with those of SGR2, to PO3 with those of SGR3, to SO1 with those of SGR4 and to SO2 with those of SGR5.

The matrix below can be of help when making the desired selections. The start, trip and alarm signals from the protection stages, the motor start-up signal and the external trip signal are combined with the output contacts by encircling the desired intersection point. Each intersection point is marked with a switch number, and the corresponding weighting factor of the switch is shown on the bottom line of the matrix. The switchgroup checksum is obtained by vertically adding the weighting factors of all the selected switches of the switchgroup.

Note!

If CBFP is in use, SGR2 should be set to 0 to avoid conflicts.

Note!

If the external fault warning is in use, SGR5 should be set to 0 to avoid conflicts.

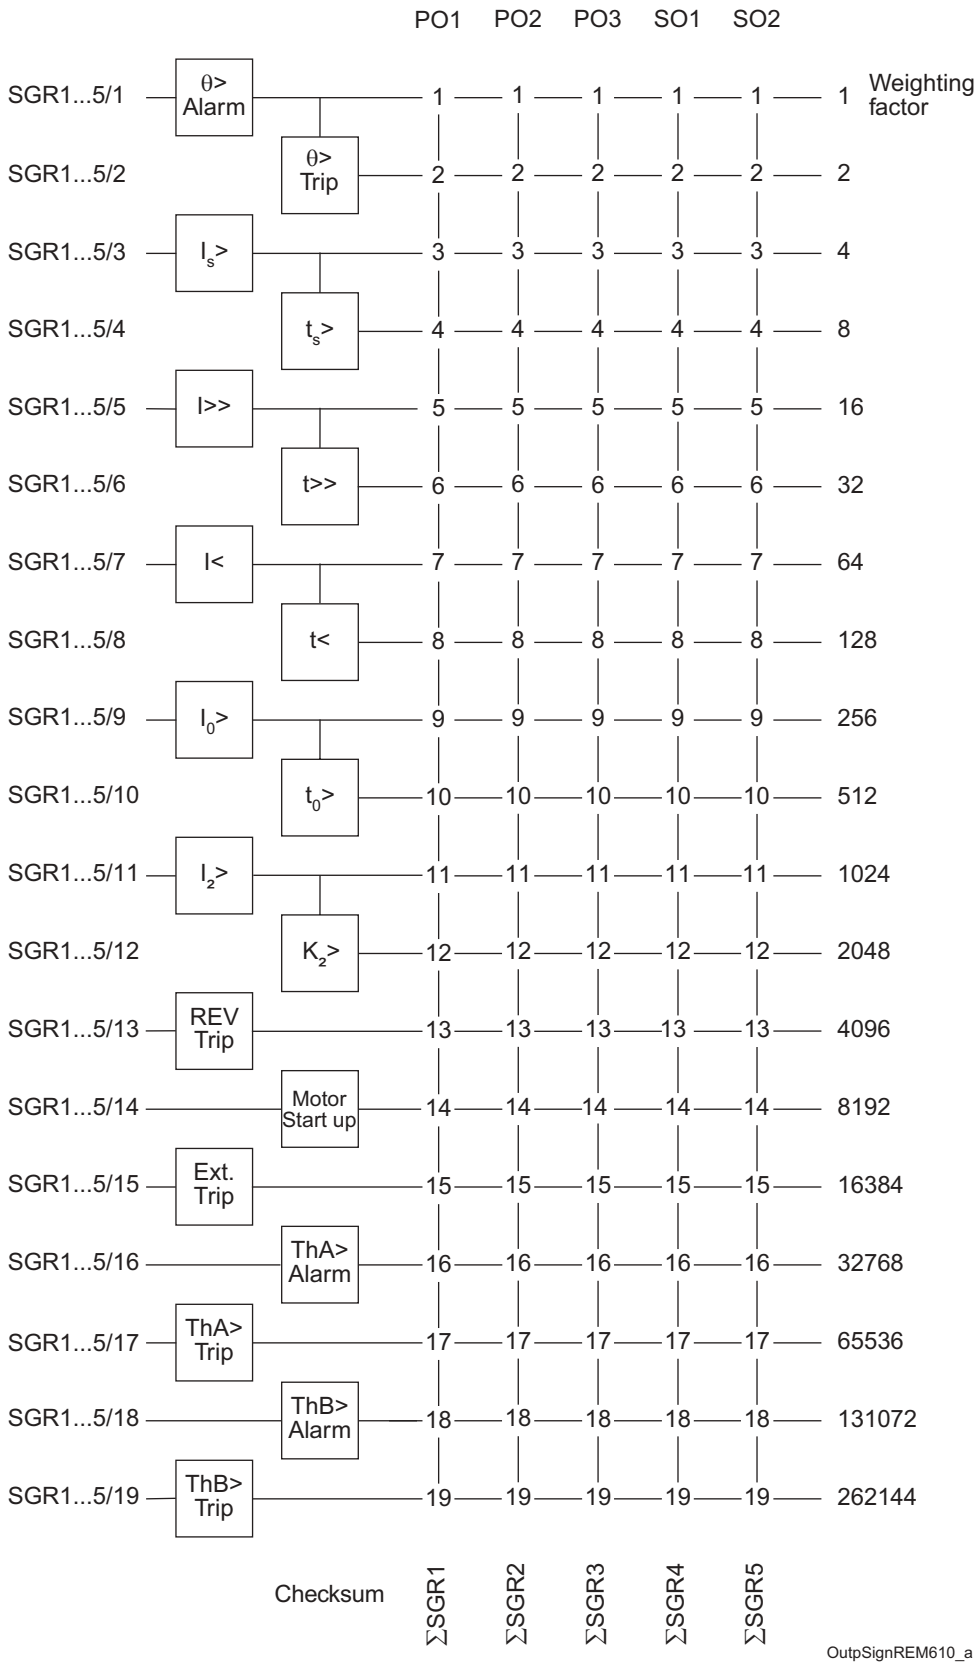


Fig. 4.1.4.12.-2 Output signal matrix

Table 4.1.4.12-8 SGR1...SGR5

Switch	Function	Default setting		
		SGR1...SGR2	SGR3	SGR4...SGR5
SGR1...5/1	Alarm signal from stage θ>	0	0	1
SGR1...5/2	Trip signal from stage θ>	1	0	0
SGR1...5/3	Start signal from stage I_s^2 x t_s or I_s>	0	0	1
SGR1...5/4	Trip signal from stage I_s^2 x t_s or I_s>	1	0	0
SGR1...5/5	Start signal from stage I>>	0	0	1
SGR1...5/6	Trip signal from stage I>>	1	0	0
SGR1...5/7	Start signal from stage I<	0	0	1
SGR1...5/8	Trip signal from stage I<	1	0	0
SGR1...5/9	Start signal from stage I_0>	0	0	1
SGR1...5/10	Trip signal from stage I_0>	1	0	0
SGR1...5/11	Start signal from stage I_2>	0	0	1
SGR1...5/12	Trip signal from stage I_2>	1	0	0
SGR1...5/13	Trip signal from stage REV	1	0	0
SGR1...5/14	Motor start-up signal	0	0	1
SGR1...5/15	External trip signal	0	0	0
SGR1...5/16	Alarm signal from stage ThA>	0	0	0
SGR1...5/17	Trip signal from stage ThA>	0	0	0
SGR1...5/18	Alarm signal from stage ThB>	0	0	0
SGR1...5/19	Trip signal from stage ThB>	0	0	0
ΣSGR1...5		6826	0	9557

Note!

If the restart inhibit signal has been routed to PO3, SGR3 will be overridden.

SGL1...SGL8

The signals are routed to LED1 with the switches of switchgroup SGL1, to LED2 with those of SGL2, and so forth.

Table 4.1.4.12-9 SGL1...SGL8

Switch	Function	Default setting		
		SGL1	SGL2	SGL3...8
SGL1...8/1	Alarm signal from stage θ>	0	0	0
SGL1...8/2	Trip signal from stage θ>	0	0	0
SGL1...8/3	Restart inhibit signal	1	0	0
SGL1...8/4	Motor start up signal	0	1	0
SGL1...8/5	Trip signal from stage I_s^2 x t_s or I_s>	0	0	0
SGL1...8/6	Trip signal from stage I>>	0	0	0
SGL1...8/7	Trip signal from stage I<	0	0	0
SGL1...8/8	Trip signal from stage I_0>	0	0	0

Table 4.1.4.12-9 SGL1...SGL8

Switch	Function	Default setting		
		SGL1	SGL2	SGL3...8
SGL1...8/9	Trip signal from stage I_2>	0	0	0
SGL1...8/10	Trip signal from stage REV	0	0	0
SGL1...8/11	Emergency start signal	0	0	0
SGL1...8/12	DI1 signal	0	0	0
SGL1...8/13	DI2 signal	0	0	0
SGL1...8/14	DI3 signal	0	0	0
SGL1...8/18	DI4 signal	0	0	0
SGL1...8/16	DI5 signal	0	0	0
SGL1...8/17	Alarm signal from stage ThA>	0	0	0
SGL1...8/18	Trip signal from stage ThA>	0	0	0
SGL1...8/19	Alarm signal from stage ThB>	0	0	0
SGL1...8/20	Trip signal from stage ThB>	0	0	0
ΣSGL1...8		4	8	0

New trip indication timer

The new trip indication timer can be configured to allow a second trip indication on the LCD. When several protection stages trip, the first trip indication will be displayed until the time, as specified by the `NEW TRIP IND.` setting value, has expired. After this, a new trip indication can displace the old one. The basic protection functions are not affected by the `NEW TRIP IND.` setting.

Table 4.1.4.12-10 New trip indication timer

Setting	Description	Setting range	Default setting
New trip indication	New trip indication timer in minutes No new trip indication allowed until the previous one has been manually cleared	0...998 999	60

Non-volatile memory settings

The table below presents data which can be configured to be stored in the non-volatile memory. All of the functions mentioned below can be selected separately with switches 1...6 either via the HMI or the SPA bus.

Table 4.1.4.12-11 Memory settings

Setting	Switch	Function	Default setting
Non-volatile memory settings	1	• 0 = operation indication messages and LEDs will be cleared • 1 = operation indication messages and LEDs will be retained [1)]	1
	2	• 1 = number of motor start ups will be retained[1)]	1
	3	• 1 = disturbance recorder data will be retained[1)]	1
	4	• 1 = event codes will be retained [1)]	1
	5	• 1 = recorded data and information on the number of starts of the protection stages will be retained [1)]	1
	6	• 1 = the real-time clock will be running also during loss of auxiliary voltage [1)]	1
	Checksum		63

[1)] The prerequisite is that the battery has been inserted and is charged.

Note!

When all switches have been set to zero, the battery supervision will be disabled.

4.1.4.13. Technical data on protection functions

Table 4.1.4.13-1 Stage θ>

Feature	Value
Set safe stall time, t_{6x}	2.0...120 s [1)]
Set ambient temperature, T_{amb}	0...70°C
Set restart inhibit level, θ_i>	20...80%
Set prior alarm level, θ_a>	50...100%
Trip level, θ_t>	100%
Time constant multiplier, K_c	1...64
Weighting factor, p	20...100%
Operate time accuracy • >1.2 x I_n	±5% of the set operate time or ±1 s

Table 4.1.4.13-2 Stage I_s> [2)]

Feature	Value
Set start value, I_s> • at definite-time characteristic	1.00...10.0 x I_n
Start time, typical	55 ms
Time/current characteristic • definite-time operate time, t_s>	0.30...80.0 s
Resetting time, typical/maximum	35/50 ms
Retardation time	30 ms
Drop-off/pick-up ratio, typical	0.96
Operate time accuracy at definite time characteristic	±2% of the set operate time or ±25 ms
Operation accuracy	±3% of the set start value

Table 4.1.4.13-3 Stage $I_s^2 \times t_s$ [2)]

Feature	Value
Set start-up current for motor, I_s>	1.00...10.0 x I_n
Start time, typical • at start criterion I_L>I_s	100 ms
Set start-up time for motor, t_s>	0.30...80.0 s
Resetting time, typical/maximum	180/250 ms
Drop-off/pick-up ratio, typical • at start criterion I_L>I_s	0.96
Operation accuracy	±10% of the calculated operate time ±0.2 s
Shortest possible operate time	300 ms

Table 4.1.4.13-4 Stage I>> 3)

Feature	Value
Set start value, I>> • at definite-time characteristic	 0.50...20.0 x I_n
Start time, typical	50 ms
Time/current characteristic • definite time operate time, t>>	 0.05...30.0 s
Resetting time, typical/maximum	40/50 ms
Retardation time	30 ms
Drop-off/pick-up ratio, typical	0.96
Operate time accuracy at definite-time characteristic	±2% of the set operate time or ±25 ms
Operation accuracy	±3% of the set start value

Table 4.1.4.13-5 Stage I< 3)

Feature	Value
Set start value, I< • at definite-time characteristic	 30...80% I_n
Start time, typical	300 ms
Time/current characteristic • definite time operate time, t<	 2...600 s
Resetting time, typical/maximum	300/350 ms
Drop-off/pick-up ratio, typical	1.1
Inhibition of I<	<12% I_n
Operate time accuracy at definite-time characteristic	±3% of the set operate time or 100 ms
Operation accuracy	±3% of the set start value or +0.5% I_n

Table 4.1.4.13-6 Stage I_0> 3)

Feature	Value
Set start value, I_0> • at definite-time characteristic	 1.0...100% I_n
Start time, typical	50 ms
Time/current characteristic • definite time operate time, t_0>	 0.05...300 s
Resetting time, typical/maximum	40/50 ms
Retardation time	30 ms
Drop-off/pick-up ratio, typical	0.96

Table 4.1.4.13-6 Stage I_0> 3)

Feature	Value
Operate time accuracy at definite-time characteristic	±2% of the set operate time or ±25 ms
Operation accuracy • 1.0...10.0% I_n • 10.0...100% I_n	 ±5% of the set start value ±3% of the set start value

Table 4.1.4.13-7 Stage I_2> 3)

Feature	Value
Set start value, I_2> • at IDMT characteristic	 0.10...0.50 x I_n
Start time, typical	100 ms
Time/current characteristic • IDMT time constant, K_2	 5...100
Resetting time, typical/maximum	130/200 ms
Drop-off/pick-up ratio, typical	0.95
Operate time accuracy • I_2> + 0.065...4.0 x I_n	 ±5% of the calculated operate time or ±100 ms
Operation accuracy	±5% of the set start value
Inhibition of I_2>	I < 0.12 x I_n or I > 4.0 x I_n

Table 4.1.4.13-8 Stage REV 4)

Feature	Value
Trip value	NPS ≥ 75% of the maximum phase current
Time/current characteristic • definite time operate time	 220 ms ±50 ms
Resetting time, typical	100...200 ms
Drop-off/pick-up ratio, typical	0.95

Table 4.1.4.13-9 Stage Σt_{si}

Feature	Value
Set restart inhibit value, Σt_{si}	5...500 s
Countdown rate of start-up time counter, $\Delta\Sigma t_s/\Delta t$	2...250 s/h

Table 4.1.4.13-10 Stages ThA> and ThB>

Feature	Value
Operate time accuracy at definite-time characteristic	±3% of the set operate time or 200 ms
RTD sensors	
Set alarm value, Ta1...6>	0...200°C
Operate time, ta1...6>	1...100 s
Set trip value, Tp1...6>	0...200°C
Operate time, tp1...6>	1...100 s
Hysteresis	5°C
Operation accuracy	±1°C (±3°C for Cu10)
Thermistors	
Set trip value, Thp1> and Thp2>	0.1...15.0 kΩ
Operate time	2 s
Operation accuracy	±1% of the setting range

Table 4.1.4.13-11CBFP

Feature	Value
Set operate time	0.10...60.0 s
Phase-current threshold for external triggering of the CBFP • pick-up/drop-off	 0.13/0.11 x I_n

[1] The setting step is 0.5.
[2] Stages $I_s^2 \times t_s$ and $I_s>$ cannot be used concurrently.
[3] The stage can be set out of operation in SGF. This state will be indicated by dashes on the LCD and by “999” when parameters are read via the SPA bus.
[4] The stage can be set out of operation in SGF.

Note!

The accuracies apply only when the protected unit scaling factor has been set to 1.

4.1.5. Trip-circuit supervision

The trip-circuit supervision (TCS) detects open circuits, both when the circuit breaker is open and closed, and trip-circuit supply failure.

The trip-circuit supervision includes:

- a current limiter including the necessary hardware
- a software-based function in the self-supervision system

The trip-circuit supervision is based on the constant current injection principle: by applying an external voltage over the relay’s trip contacts, a constant current is forced to flow through the external trip circuit. If the resistance of the trip circuit exceeds a certain limit for more than 21 seconds, due to oxidation or a bad contact, for instance, the trip-circuit supervision will be activated and a warning will appear on the LCD together with a fault code. The warning signal from the trip-circuit supervision can also be routed to SO2 by setting switch SGF1/8 to 1.

Under normal operating conditions, the applied external voltage is divided between the relay's internal circuit and the external trip circuit so that at least 20 V remains over the relay's internal circuit. If the external trip circuit's resistance is too high or the internal circuit's too low, due to welded relay contacts, for instance, the voltage over the relay's internal circuit will fall below 20 V (15...20 V), which will activate the trip-circuit supervision.

The operation condition is:

$$U_c - (R_{ext} + R_{int} + R_s) \times I_c \geq 20 Vac/dc$$

where

- U_c = operating voltage over the supervised trip circuit
- I_c = current flowing through the trip circuit, ~1.5 mA
- R_{ext} = external shunt resistor
- R_{int} = internal shunt resistor, 1kΩ
- R_s = trip coil resistance

The external shunt resistor is used to enable trip-circuit supervision also when the circuit breaker is open.

The resistance of the external shunt resistor is to be calculated so that it does not cause malfunction of the trip-circuit supervision or affect the operation of the trip coil. Too high a resistance will cause too high a voltage drop, which in turn will result in the operation conditions not being fulfilled, whereas too low a resistance may cause faulty operation of the trip coil.

The following values are recommended for the external resistor, R_{ext}:

Table 4.1.5-1 Recommended values for R_{ext}

Operating voltage, U_C	Shunt resistor R_{ext}
48 V dc	1.2 kΩ, 5 W
60 V dc	5.6 kΩ, 5 W
110 V dc	22 kΩ, 5 W
220 V dc	33 kΩ, 5 W

The circuit breaker is to be provided with two external contacts, one opening and one closing contact. The closing contact is to be connected in parallel with the external shunt resistor (R_{ext}), which will enable trip-circuit supervision when the circuit breaker is closed. The opening contact is to be connected in series with the external shunt resistor (R_{ext}), which will enable trip-circuit supervision when the circuit breaker is open; see Fig. 4.1.5.-1.

Trip-circuit supervision can be selected either via the HMI or with parameter V113.

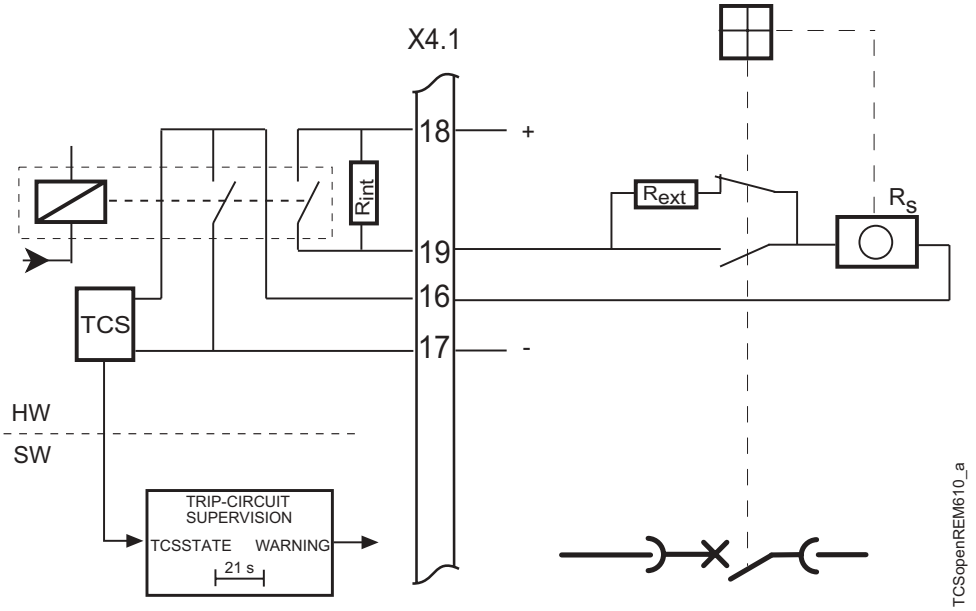


Fig. 4.1.5.-1 Connecting the trip-circuit supervision using two external contacts and the external resistor in the trip circuit

4.1.6. Indicator LEDs and operation indication messages

The operation of REM 610 can be monitored via the HMI by means of LED indications and text messages on the LCD. On the front panel of the relay there are three indicator LEDs with fixed functionality: a green indicator LED (ready), a yellow indicator LED (start/alarm) and a red indicator LED (trip). In addition, there are eight programmable LEDs and an indicator LED for front communication. Refer to the Operator's Manual for a more thorough presentation.

The messages on the LCD have a certain priority order. If different types of indications are activated simultaneously, the message with the highest priority will appear on the LCD.

The priority order of the messages:

1. CBFP
2. Trip
3. Start/Alarm
4. Restart inhibit
   4.1. Thermal protection
   4.2. Cumulative start-up time counter
   4.3. External restart inhibit

4.1.7. Motor running time counter

The motor running time counter provides history data since last commissioning. The counter counts the total number of motor running hours and is incremented when one or several phase currents have exceeded twelve per cent of the FLC of the motor for 100 running hours. The running time is stored in the EEPROM. The counter can be read via the HMI but changed only via parameter V53.

Note!

Writing to parameter V53 will reset the number of motor start ups.

4.1.8. Monitoring of demand values

REM 610 provides three different kinds of demand values. The first value shows the average current of all three phases measured during one minute. The value is updated once a minute. The second value shows the average current during an adjustable time range, ranging from 0 to 999 minutes, with an accuracy of one minute. This value is updated at the expiration of each time range. The third value shows the highest one-minute average current value measured during the previous time range. However, if the time range is set to zero, only the one-minute and the maximum demand value will be shown. The maximum value is the highest one-minute mean value since the last reset.

The demand values can be set to zero by resetting the relay or through communication using a V parameter. The demand values will also be reset if V105 is changed.

4.1.9. Commissioning tests

The following two product functions can be used during the commissioning of the relay: function test and digital input test.

The function test is used for testing the configuration as well as the connections from the relay. By selecting this test, the internal signals from the protection stages, the motor start-up signal, the external trip signal and the IRF function can be activated one by one. Provided that the signals have been set to be routed to the output contacts (PO1, PO2, PO3, SO1 and SO2) with the switches of SGR1...5, the output contacts will be activated and their corresponding event codes generated when the test is run. However, activation of the internal signals from the protection stages, the motor start-up signal, the external trip signal and the IRF function will not generate an event code.

The digital input test is used for testing the connections to the relay. The state of the digital inputs can be monitored via the HMI.

Refer to the Operator’s Manual for more detailed instructions on how to perform the tests.

4.1.10. Disturbance recorder

4.1.10.1. Function

REM 610 features an integrated disturbance recorder for recording monitored quantities. The recorder continuously captures the curve forms of the currents as well as the status of both internal and digital input signals and stores these in the memory.

Triggering of the recorder will generate an event code. After the recorder has been triggered, it will continue to record data for a pre-defined post-triggering time. An asterisk will be shown on the LCD on completion of the recording. The status of the recording can also be viewed using SPA parameter V246.

As soon as the recorder has been triggered and the recording has finished, the recording can be uploaded and analysed by means of a PC provided with a special program.

4.1.10.2. Disturbance recorder data

One recording contains data from the four analogue channels and up to eight digital channels. The analogue channels, whose data is stored either as RMS curves or as momentary measured values, are the currents measured by the relay. The digital channels, referred to as digital signals, are start and trip signals from the protection stages, the alarm signal from stage θ>, the motor start-up signal and the digital input signals linked to the relay.

The user can select up to eight digital signals to be recorded. If more than eight signals are selected, the first eight signals will be stored, starting with the internal signals followed by the digital input signals. The digital signals to be stored are selected with parameters V238 and V243; see tables 4.1.15-5 and 4.1.15-6.

The recording length varies according to the selected sampling frequency. The RMS curve is recorded by selecting the sampling frequency to be the same as the nominal frequency of the relay. The sampling frequency is selected with parameter M15; see the table below for details.

Table 4.1.10.2-1 Sampling frequency

Nominal frequency Hz	Sampling frequency Hz	Cycles
50	800	250
	400	500
	50 [1)]	4000
60	960	250
	480	500
	60 [1)]	4000

[1)] RMS curve.

Recording length:

$$[s] = \frac{Cycles}{Nominal\ \ frequency[Hz]}$$

Changing the setting values of parameters M15, V238 and V243 is allowed only when the recorder is not triggered.

The post-triggering recording length defines the time during which the recorder continues to store data after it has been triggered. The length can be changed with parameter V240. If the post-triggering recording length has been defined to be the same as the total recording length, no data stored prior to the triggering will be retained in the memory. By the time the post-triggering recording finishes, a complete recording will have been created.

Triggering of the recorder immediately after it has been cleared or the auxiliary voltage connected may result in a shortened total recording length. Disconnection of the auxiliary voltage after the recorder has been triggered but before the recording has finished, on the other hand, may result in a shortened post-triggering recording length. This, however, will not affect the total recording length.

At a power reset, triggered recorder data will be retained in the memory provided that it has been defined non-volatile.

4.1.10.3. Control and indication of disturbance recorder status

It is possible to control and monitor the recording status of the disturbance recorder by writing to and reading parameters M1, M2 and V246. Reading parameter V246 will return either the value 0 or 1, indicating whether the recorder has not been triggered or triggered and ready to be uploaded. Event code E31 will be generated the moment the disturbance recorder is triggered. If the recorder is ready to be uploaded, this will also be indicated by an asterisk shown in the lower right-hand corner of the LCD when it is in the idle mode.

Writing the value 1 to parameter M2 will clear the recorder memory, restart the storing of new data and enable the triggering of the recorder. Recorder data can be cleared by performing a master reset, i.e. clearing indications and memorized values and unlatching output contacts. Writing the value 2 to parameter V246 will restart the unloading process by setting the time stamp and the first data ready to be read.

4.1.10.4. Triggering

The user can select one or several internal or digital input signals to trigger the disturbance recorder, either on the rising or falling edge of the signal(s). Triggering on the rising edge means that the post-triggering recording sequence will start when the signal is activated. Correspondingly, triggering on the falling edge means that the post-triggering recording sequence will start when the active signal is reset. The trigger signal(s) and the edge are selected with parameters V236...V237 and V241...V242; see tables 4.1.15-5 and 4.1.15-6. The recorder can also be triggered manually using parameter M1.

Triggering of the disturbance recorder is only possible if the recorder has not already been triggered.

4.1.10.5. Settings and unloading

The setting parameters for the disturbance recorder are V parameters V236...V238, V240...V243 and V246, and M parameters M15, M18, M20 and M80...M83.

Unloading correct information from the recorder requires that M80 and M83 have been set. Unloading is done using a PC application. The uploaded recorder data is stored in separate files defined by the comtrade® format.

4.1.10.6. Event code of the disturbance recorder

The disturbance recorder generates an event code on triggering (E31) and clearing (E32) the recorder. The event mask is determined using SPA parameter V155.

4.1.11. Recorded data of the last events

REM 610 records up to five events. This enables the user to analyse the last five fault conditions in the motor drive controller. Each event includes the measured currents, start durations and time stamp, for instance. Additionally, information on the number of starts is provided.

Recorded data is non-volatile by default, provided that the battery has been inserted and is charged. A master reset, i.e. clearing of indications and memorized values and unlatching of output contacts, will erase the contents of the stored events and the number of starts.

REM 610 collects data during fault conditions and motor start ups. When all start or alarm signals have been reset, a stage trips or the motor start up has ended, the collected data and time stamp will be stored as “EVENT1” and the previously stored events will move one step forward. When a sixth event is stored, the oldest event will be cleared.

Table 4.1.11-1 Recorded data

REGISTER	Data description
EVENT1	• Phase currents L1, L2, L3 and the NPS current as a multiple of the rated current, I_n, which corresponds to the FLC of the motor. The earth fault current, I_0, as a percentage of the rated current of the CT used. When a stage generates a start or an alarm signal, or when a motor start up ends, the maximum currents during the pick-up period will be stored. When a stage trips, the values at the time of the trip will be stored. • Thermal stress value, $I^2 x t$, as a percentage of the set reference value, $I_s^2 x t_s$. If start-up supervision based on thermal stress calculation has been selected and the start criteria for the stage have been met, the maximum calculated thermal stress value will be stored. The value 100% indicates that the calculated thermal stress has exceeded the set reference value. • Number of motor start ups. The number indicates the motor start up during which the event was stored and provides history data since last commissioning. Writing to parameter V53 will reset the number of motor start ups. • Thermal level, as a percentage of the maximum thermal level of the motor, at activation of a start, alarm or motor start-up signal. • The maximum thermal level during the time the start, alarm or motor start-up signal was active, as a percentage of the maximum thermal level of the motor, or in case of a trip, the thermal level, as a percentage of the maximum thermal level of the motor, at activation of a trip signal. • The temperatures from inputs RTD1...6 (optional) and the resistance values of thermistors 1 and 2 (optional). When a stage generates a start or an alarm signal, or when a motor start up ends, the maximum temperature(s) and thermistor resistance value(s) during the pick-up period will be stored. When a stage trips, the temperatures and resistance values at the time of trip will be stored. • Duration of the last starts of stages $I_s>$, I>>, $I_2>$, $I_0>$ and I<, and of the last alarms and trips of stages ThA> (optional) and ThB> (optional), expressed as a percentage of the set or calculated operate time. The timing will start when a stage starts. The elapsed operate times of stages ThA> and ThB> for the RTD input which has been activated the longest in their respective groups. A value other than zero indicates that the corresponding stage has started whereas the value 100% indicates that the operate time of the stage has elapsed, i.e. the stage has tripped. If the operate time of a stage has elapsed but the stage is blocked, the value will be 99% of the set or calculated operate time. • Time stamp for the event. The time when the collected data was stored. The time stamp is displayed in two registers, one including the date expressed as yy-mm-dd, and the other including the time expressed as HH.MM; SS.sss.
EVENT 2	Same as EVENT 1.
EVENT 3	Same as EVENT 1.
EVENT 4	Same as EVENT 1.
EVENT 5	Same as EVENT 1.
Number of starts	• The number of times each protection stage, $I_s>$, I>>, $I_2>$, $I_0>$, and I<, has started, counting up to 999.
Motor start up	• Motor start-up time and maximum motor start-up current

4.1.12. Communication ports

REM 610 is provided with an optical communication port (infrared) on the front panel. Rear communication is optional and requires a communication module, which can be provided with either a fibre-optic, combined fibre-optic (plastic and glass) or RS-485 connection. The relay is connected to an automation system via the rear connection. The optional rear communication module allows the use of either the SPA bus, IEC 60870-5-103 or Modbus communication protocol.

For further information on optional rear communication module connections, refer to section Serial communication connections.

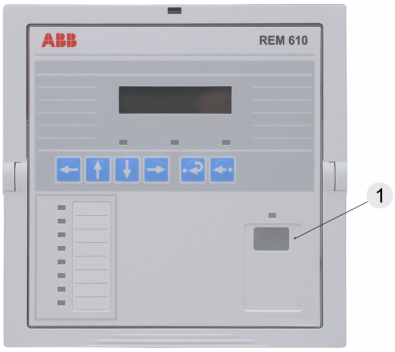


Fig. 4.1.12.-1 Front connection (1) for local communication

The relay is connected to a PC used for local parameterization via the infrared port on the front panel. The front connection allows the use of the SPA bus protocol only.

The optical front connection galvanically isolates the PC from the relay. The front connection can be used in two different ways: wirelessly using a PC compatible to the IrDA® Standard specifications or using a specific front communication cable (ABB art. no 1MRS050698). The cable is connected to the serial RS-232 port of the PC. The optical stage of the cable is powered by RS-232 control signals. The cable has a fixed baud rate of 9.6 kbps.

The following serial communication parameters are to be set for RS-232:

- Number of data bits 7
- Number of stop bits 1
- Parity even
- Baud rate 9.6 kbps

Relay data such as events, setting values and all input data and memorized values can be read via the front communication port.

When setting values are altered via the front communication port, the relay will check that the entered parameter values are within the permitted setting range. If an entered value is too high or too low, the setting value will remain unchanged.

REM 610 has a counter which can be accessed via `COMMUNICATION` under `CONFIGURATION` in the HMI menu. The counter value is set to zero when the relay receives a valid message.

4.1.13. IEC 60870-5-103 remote communication protocol

REM 610 supports the IEC 60870-5-103 remote communication protocol (henceforward referred to as the IEC_103) in the unbalanced transmission mode. The IEC_103 protocol is used to transfer measurand and status data from the slave to the master. However, the IEC_103 protocol cannot be used to transfer disturbance recorder data.

The IEC_103 protocol can be used only through the rear connection of the relay on the optional communication module. Connecting REM 610 to a fibre-optic communication bus requires a fibre-optic communication module. The line-idle state of the fibre-optic communication module can be selected either via the HMI or the SPA bus. According to the IEC_103 standard, however, the line-idle state is “light on”. To ensure communication, the line-idle state should be the same for both the master and the slave device. The connection topology can be selected to be either loop or star, the default being loop, and either via the HMI or the SPA bus. The selected line-idle state and connection topology apply irrespective of which rear communication protocol is active.

REM 610 will use the SPA bus protocol as default when the optional communication module is in use. The protocol selection is memorized and will therefore always be activated when the rear connection is in use. The baud rate can be selected either via the HMI or the SPA bus. According to the IEC_103 standard, however, the baud rate is 9.6 kbps. When the IEC_103 protocol is active, event masks are not in use. Consequently, all events in the selected configuration set will be included in the event reporting.

REM 610 is provided with two different selectable configuration sets, of which configuration set 1 is used by default. Configuration set 1 is intended to be used when the optional RTD module has not been installed. Configuration set 2 includes additional information, e.g. temperature protection events and digital input events 3...5, provided that the optional RTD module has been installed. Function type and information number have been mapped into configuration sets according to the IEC_103 standard to the extent that these have been defined by the standard. If not defined by the standard, the type of function and/or the information number have/has been mapped into a private range.

The tables below indicate the information mapping of the corresponding configuration sets. The column GI indicates whether the status of the specified information object is transmitted within the general interrogation cycle. The relative time in messages with the type identification 2 is calculated as a time difference between the occurred event and the event specified in the column Relative time. The measurand multiplied by the normalize factor is proportional to the rated value. Therefore, the maximum value of each measurand is the normalize factor multiplied by the rated value.

Table 4.1.13-1 Information mapping of configuration set 1 and 2

Event reason	Event code	Configuration set 1	Configuration set 2	Function type	Information number	GI	Relative time	Type identification
Emergency start Activated/Reset	E5/E6	X	X	11	31	X	-	1
Disturbance recorder Triggered/Cleared	E31/ E32	X	X	178	100	-	-	1
HMI Password Opened/Closed	E33/ E34	X	X	178	101	-	-	1
Motor start up Begins/Ends	1E1/ 1E2	X	X	178	84	X	1E1	2
θ> Start/Reset	1E3/ 1E4	X	X	184	84	X	1E3	2
θ> Alarm/Reset	1E5/ 1E6	X	X	184	11	X	1E3	2
θ> Trip/Reset	1E7/ 1E8	X	X	184	90	-	1E3	2
θ> Restart Inhibit/Reset	1E9/ 1E10	X	X	184	30	X	1E3	2
Σt_{si} Restart Inhibit/Reset	1E11/ 1E12	X	X	178	30	X	-	1
Restart Inhibit/Reset	1E13/ 1E14	X	X	11	30	X	-	1
$I_s^2 \times t_s/I_s$> Start/Reset	1E15/ 1E16	X	X	160	84	X	1E15	2
$I_s^2 \times t_s/I_s$>Trip/Reset	1E17/ 1E18	X	X	160 [1)] (178)	90	-	1E15	2
I>> Start/Reset	1E19/ 1E20	X	X	162	94	X	1E19	2
I>> Trip/Reset	1E21/ 1E22	X	X	160	91	-	1E19	2
I< Start/Reset	1E23/ 1E24	X	X	20	84	X	1E23	2
I< Trip/Reset	1E25/ 1E26	X	X	20	90	-	1E23	2
I_0> Start/Reset	1E27/ 1E28	X	X	160	67	X	1E27	2
I_0> Trip/Reset	1E29/ 1E30	X	X	160	92	-	1E27	2
I_2> Start/Reset	1E31/ 1E32	X	X	21	84	X	1E31	2

Table 4.1.13-1 Information mapping of configuration set 1 and 2

Event reason	Event code	Configuration set 1	Configuration set 2	Function type	Information number	GI	Relative time	Type identification
I_2> Trip/Reset	1E33/ 1E34	X	X	21	90	-	1E31	2
REV Trip/Reset	1E35/ 1E36	X	X	22	90	-	1E1	2
CBFP Activated/ Reset	1E37/ 1E38	X	X	160	85	-	-	1
PO1 Activated/Reset	2E1/ 2E2	X	X	251	27	X	-	1
PO2 Activated/Reset	2E3/ 2E4	X	X	251	28	X	-	1
PO3 Activated/Reset	2E5/ 2E6	X	X	251	29	X	-	1
SO1 Activated/Reset	2E7/ 2E8	X	X	251	30	X	-	1
SO2 Activated/Reset	2E9/ 2E10	X	X	251	31	X	-	1
DI1 Activated/ Deactivated	2E11/ 2E12	X	X	249	231	X	-	1
DI2 Activated/ Deactivated	2E13/ 2E14	X	X	249	232	X	-	1
DI3 Activated/ Deactivated	2E15/ 2E16	-	X	249	233	X	-	1
DI4 Activated/ Deactivated	2E17/ 2E18	-	X	249	234	X	-	1
DI5 Activated/ Deactivated	2E19/ 2E20	-	X	249	235	X	-	1
ThA> Alarm/Reset	2E21/ 2E22	-	X	210	11	X	2E21	2
ThA> Trip/Reset	2E23/ 2E24	-	X	210	21	-	2E23	2
ThB> Alarm/Reset	2E25/ 2E26	-	X	211	11	X	2E25	2
ThB> Trip/Reset	2E27/ 2E28		X	211	21	-	2E27	2

[1)] When start-up supervision based on thermal stress calculation has been selected (SGF3/6=0), the function type in brackets will be used.

Table 4.1.13-2 Information mapping of configuration set 1 and 2

Measurand	Normalize factor	Rated value	Configuration set 1	Configuration set 2	Function type	Information number	Type identification
Current I_{L1}	2.40	I_n	X	X	135	140	9
Current I_{L2}	2.40	I_n	X	X			
Current I_{L3}	2.40	I_n	X	X			
Current I_0	2.40	I_n	X	X			

4.1.14. Modbus remote communication protocol

4.1.14.1. Protocol overview

The master/slave protocol Modbus was first introduced by Modicon Inc. and is widely accepted as a communication standard for industrial device controllers and PLCs. For the protocol definition, refer to “Modicon Modbus Protocol Reference Guide PI-MBUS-300 Rev. E”.

The implementation of the Modbus protocol in REM 610 supports both the RTU and the ASCII link mode. Both the link mode and the line setting parameters are user-configurable.

The character codings of the link modes follow the protocol definition. The RTU character format is presented in table 4.1.14.1-1 and the ASCII character format in table 4.1.14.1-2:

Table 4.1.14.1-1 RTU character format

Coding system	8-bit binary
Bits per character	1 start bit 8 data bits, the least significant bit is sent first 1 bit for even/odd parity; no bit if parity is not used 1 stop bit if parity is used; 2 stop bits if parity is not used

Table 4.1.14.1-2 ASCII character format

Coding system	Two ASCII characters representing a hexadecimal number
Bits per character	1 start bit 7 data bits, the least significant bit is sent first 1 bit for even/odd parity; no bit if parity is not used 1 stop bit if parity is used; 2 stop bits if parity is not used

Note!

The turnaround time (response time) of REM 610 depends on the amount of data requested in a query. Therefore, the turnaround time can vary between approximately 10 and 70 milliseconds. However, a turnaround timeout no lower than 100 ms is recommended for the Modbus master.

Note!

The data address range in the Modbus network follows the protocol definition and starts from 0.3. Consequently, the data addresses in table 4.1.14.2-5 will be decreased by one when transferred over the network.

Note!

The Modbus data type digital input (DI) is commonly also referred to as 1X, coils as 0X, input register (IR) as 3X and holding register (HR) as 4X, of which the former will be used here. Thus, HR 123, for instance, can also be referred to as register 400123.

4.1.14.2. Profile of Modbus REM 610

The Modbus protocol (ASCII or RTU) is selected via the HMI and can be used only through the rear connection of the relay on the optional communication module. Modbus line settings, i.e. parity, CRC byte order and baud rate, can be adjusted either via the HMI or the SPA bus.

The implementation of the Modbus protocol in REM 610 supports the following functions:

Table 4.1.14.2-1 Supported application functions

Function code (HEX)	Function description
01	Read coil status Reads the status of discrete outputs.
02	Read digital input status Reads the status of discrete inputs.
03	Read holding registers Reads the contents of output registers.
04	Read input registers Reads the contents of input registers.
05	Force single coil Sets the status of a discrete output.
06	Preset single register Sets the value of a holding register.
08	Diagnostics Checks the communication system between the master and the slave.
0F	Force multiple coils Sets the status of multiple discrete outputs.
10	Preset multiple registers Sets the value of multiple holding registers.
17	Read/write holding registers Exchanges holding registers in one query.

Table 4.1.14.2-2 Supported diagnostic subfunctions

Code	Name	Description
00	Return query data	The data in the query data field is returned (looped back) in the response. The entire response is to be identical to the query.
01	Restart communication option	The slave's peripheral port is initialized and restarted and the communication event counters are cleared. Before this, a normal response will be sent provided that the port is not in the listen only mode. However, if the port is in the listen only mode, no response will be sent.
04	Force listen only mode	The slave is forced to enter the listen only mode for Modbus communication.
10	Clear counters and diagnostic register	All counters and the diagnostic register are cleared.
11	Return bus message count	The number of messages in the communications system detected by the slave since its last restart, clear counters operation or power up is returned in the response.
12	Return bus communication error count	The number of CRC errors encountered by the slave since its last restart, clear counters operation or power up is returned in the response.
13	Return bus exception error count	The number of Modbus exception responses sent by the slave since its last restart, clear counters operation or power up is returned in the response.
14	Return slave message count	The number of messages addressed to the slave or broadcast which the slave has processed since its last restart, clear counters operation or power up is returned in the response.
15	Return slave no response count	The number of messages addressed to the slave for which a response (neither a normal response nor an exception response) has not been sent since its last restart, clear counters operation or power up is returned in the response.
16	Return slave NACK response count	The number of messages addressed to the slave for which a NACK response has been sent is returned in the response.
18	Return bus character overrun count	The number of messages addressed to the slave for which it has not been able to send a response due to a character overrun since its last restart, clear counters operation or power up is returned in the response.

Note!

Sending other subfunction codes than those listed above will cause an "Illegal data value" response.

The Modbus protocol provides the following diagnostic counters:

Table 4.1.14.2-3 Diagnostic counters

Name	Description
Bus message count	The number of messages in the communications system detected by the slave since its last restart, clear counters operation or power up.
Bus communication error count	The number of CRC or LRC errors encountered by the slave since its last restart, clear counters operation or power up.
Bus exception error count	The number of Modbus exception responses sent by the slave since its last restart, clear counters operation or power up.
Slave message count	The number of messages addressed to the slave or broadcast which the slave has processed since its last restart, clear counters operation or power up.
Slave no response count	The number of messages addressed to the slave for which a response (neither a normal response nor an exception response) has not been sent since its last restart, clear counters operation or power up.
Slave NACK response count	The number of messages addressed to the slave for which a NACK response has been sent.
Bus character overrun count	The number of messages addressed to the slave for which it has not been able to send a response due to a character overrun since its last restart, clear counters operation or power up.

The following exception codes may be generated by the Modbus protocol:

Table 4.1.14.2-4 Possible exception codes

Code	Name	Description
01	Illegal function	The slave does not support the requested function.
02	Illegal data address	The slave does not support the data address or the number of items in the query is incorrect.
03	Illegal data value	A value contained in the query data field is out of range.
04	Slave device failure	An unrecoverable error has occurred while the slave was attempting to perform the requested task.

Note!

If an “Illegal data value” exception response is generated when attempting to preset multiple registers, the contents of the register to which an illegal value has been imposed and of the following registers will not be changed. Registers which have already been preset will not be restored.

User-defined registers

Reading of unwanted data in a data block wastes bandwidth and complicates data interpretation. For optimum efficiency in Modbus communication, data has therefore been organized into consecutive blocks. In addition, a set of programmable user-defined registers (UDR) has been defined in the holding register area.

The first sixteen holding registers, i.e. HR1...16, are user-defined registers. The UDRs can be linked to any holding register, except for HR721...727, using SPA parameters 504V1...504V16. However, one UDR cannot be linked to another, i.e. linking cannot be nested. Each parameter contains the address of the holding register to which the UDR is linked.

If a UDR is linked to a non-existent holding register, reading from the register will fail and an “Illegal address exception” response will be sent. Giving the link address the value 0 will disable the UDR. If the master reads from a disabled UDR, the value 0 will be returned.

The UDRs are mirrored in HR385…400.

Fault records

The data recorded during a fault sequence is called a fault record (FR). The slave stores the five latest fault records. When a sixth record is stored, the oldest record will be deleted. To read a fault record:

1. Write a preset single register command (function 06) to HR601 using a selection code as data value.
2. Read the selected fault record (function 04) from HR601, register count 33.

Alternatively, a fault record can be read using one command (function 17H) only.

Selection code 1: The master reads the oldest unread record

Status register 3 (HR403) informs whether there are unread fault records (see Fig. 4.1.14.2.-2). If there is one or several unread fault records, the master can read the contents using selection code 1.

The fault record contains a sequence number which makes it possible for the master to determine whether one or several unread fault records have been deleted due to overflow by comparing it to the sequence number of the previously read fault record.

The slave keeps track of which fault record is currently the oldest unread. The master can continue reading fault records for as long as Status register 3 indicates that there are unread records.

Special case 1: If there are no unread fault records, the contents of the last read record will be returned. If the buffer is empty, however, the registers will contain only zeros. This is the only time when sequence number zero will appear.

Special case 2: If the master tries to read the next unread fault record without entering selection code 1 again, the contents of the last read record will be returned.

Selection code 2: The master reads the oldest stored record

By resetting the read pointer using selection code 2, the master can read the oldest stored fault record. After this, the master can continue reading the following records using selection code 1, irrespective of whether they have been read before.

Note!

Resetting the read pointer will not affect the sequence number of the fault record.

Note!

A master reset, i.e. clearing of indications and memorized values and unlatching of output contacts, will clear the fault records, after which the sequence number will start from 1 again.

Event records

Modbus events are derived from SPA events. With a few exceptions, SPA events update binary points in the DI and the packed HR area. Simultaneously, a corresponding Modbus event record will be generated. The event record contains the

Modbus DI/CO data point address and the value to which the point has changed (0 or 1). SPA events lacking a corresponding DI/CO data point are shown as SPA channel and event code (informative event) in the event record. The maximum capacity of the Modbus event buffer is 99 events. The time stamp of Modbus events is extended to contain complete information, from date to millisecond. To read an event record:

1. Write a preset single register command (function 06) to HR671 using a selection code as data value.
2. Read the selected event record (function 04) from HR672, register count 8.

Alternatively, an event record can be read using one command (function 23) only.

Selection code 1: reading the oldest unread record

Status register 3 (HR403) informs whether there are unread event records (see Fig. 4.1.14.2.-2). If there is one or several unread event records, the master can read the contents using selection code 1.

The event record contains a sequence number which makes it possible for the master to determine whether one or several unread event records have been deleted due to overflow by comparing it to the sequence number of the previously read event record.

The slave keeps track of which event record is currently the oldest unread. The master can continue reading event records for as long as Status register 3 indicates that there are unread records.

Special case 1: If there are no unread event records, the contents of the last read record will be returned. If the buffer is empty, however, the registers will contain only zeros. This is the only time when sequence number zero will appear.

Special case 2: If the master tries to read the next unread event record without entering selection code 1 again, the contents of the last read record will be returned.

Selection code 2: reading the oldest stored record

By resetting the read pointer using selection code 2, the master can read the oldest stored event record. After this, the master can continue reading the following records using selection code 1, irrespective of whether they have been read before.

Note!

Resetting the read pointer will not affect the sequence number of the event record.

Selection code -1...-99

With selection code -1...-99, the master can move backwards from the newest event as many events as defined by the selection code and read that specific event record. After this, the master can continue reading the following records using selection code 1, irrespective of whether they have been read before.

Special case: If there is not as many events in the buffer as specified by the selection code, the oldest stored event will be read.

Selection code 3

The Modbus event buffer is cleared with selection code 3. Clearing the buffer does not require any read operation to follow.

Digital Inputs

As the master may not detect the changes of state of all digital signals when scanning, an additional change detect (CD) indication bit will be created for every momentary indication point; see the example below.

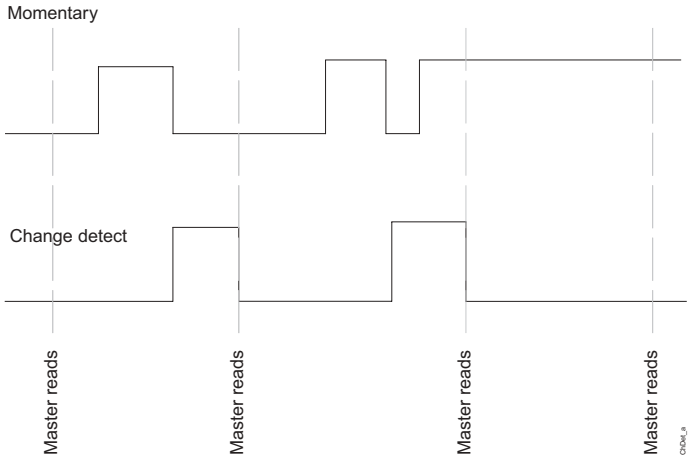


Fig. 4.1.14.2.-1 Change detection bit

If the momentary value of an indication bit has changed two or more times since the master last read it, the CD bit will be set to one. When the CD bit has been read, it will be set to zero.

The momentary and the CD bit of a certain indication point always occur as a pair in the Modbus memory map.

Modbus data mapping

There are two types of monitoring data: digital indications and measurands. For convenience and efficiency, the same data can be read from different data areas. Measurands and other 16-bit values can be read either from the IR or HR (read-only) area and digital indication values from either the DI or coil (read-only) area. It is also possible to read the status of the DIs as packed 16-bit registers from both the IR and the HR area.

Consequently, all monitoring data can be read as consecutive blocks of data from the IR or HR area.

The register and bit addresses are presented in table 4.1.14.2-5. Some register structures are presented in separate sections below.

Note!

The HR and IR values are unsigned 16-bit integers unless otherwise specified.

Table 4.1.14.2-5 Mapping of Modbus data

Description	HR/IR address (.bit)	DI/Coil bit address	Writeable	Value range	Comment
User-defined registers					
UDR 1	1 or 385				
UDR 2	2 or 386				
UDR 3	3 or 387				

Table 4.1.14.2-5 Mapping of Modbus data

Description	HR/IR address (.bit)	DI/Coil bit address	Writeable	Value range	Comment
UDR 4	4 or 388				
UDR 5	5 or 389				
UDR 6	6 or 390				
UDR 7	7 or 391				
UDR 8	8 or 392				
UDR 9	9 or 393				
UDR 10	10 or 394				
UDR 11	11 or 395				
UDR 12	12 or 396				
UDR 13	13 or 397				
UDR 14	14 or 398				
UDR 15	15 or 399				
UDR 16	16 or 400				
Status registers					
Status register 1	401			IRF code	See Structure 1
Status register 2	402			Warning codes	See Structure 1
Status register 3	403				See Structure 1
Analogue data					
Phase current I_{L1} x I_n	404			0...5000	0...50 x I_n
Phase current I_{L2} x I_n	405			0...5000	0...50 x I_n
Phase current I_{L3} x I_n	406			0...5000	0...50 x I_n
Earth-fault current x I_n	407			0...8000	0...800.0% I_n
NPS current	408			0...5000	0...50 x I_n
Temperature from RTD1	409			-40...999	°C (signed) 1)
Temperature from RTD2	410			-40...999	°C (signed) 1)
Temperature from RTD3	411			-40...999	°C (signed) 1)
Temperature from RTD4	412			-40...999	°C (signed) 1)
Temperature from RTD5	413			-40...999	°C (signed) 1)
Temperature from RTD6	414			-40...999	°C (signed) 1)
Thermistor1, resistance value	415			0...200	0...20.0 kΩ 2)
Thermistor 2, resistance value	416			0...200	0...20.0 kΩ 2)
Digital data					
Motor start up	417.00	1		0/1	1 = begins 0 = ends
Motor start up CD	417.01	2			
Start signal from stage θ>	417.02	3		0/1	1 = activated
Start signal from stage θ> CD	417.03	4			
Alarm signal from stage θ>	417.04	5		0/1	1 = activated
Alarm signal from stage θ> CD	417.05	6			
Trip signal from stage θ>	417.06	7		0/1	1 = activated
Trip signal from stage θ> CD	417.07	8			
Restart inhibit signal from stage θ>	417.08	9		0/1	1 = activated

Table 4.1.14.2-5 Mapping of Modbus data

Description	HR/IR address (.bit)	DI/Coil bit address	Writeable	Value range	Comment
Restart inhibit signal from stage θ> CD	417.09	10			
Restart inhibit signal from stage Σt_{si}	417.10	11		0/1	1 = activated
Restart inhibit signal from stage Σt_{si} CD	417.11	12			
Restart inhibit	417.12	13		0/1	1 = activated 3)
Restart inhibit CD	417.13	14			
Start signal from stage $I_s^2 \times t_s$ or I_s>	417.14	15		0/1	1 = activated
Start signal from stage $I_s^2 \times t_s$ or I_s> CD	417.15	16			
Trip signal from stage $I_s^2 \times t_s$ or I_s>	418.00	17		0/1	1 = activated
Trip signal from stage $I_s^2 \times t_s$ or I_s> CD	418.01	18			
Start signal from stage I>>	418.02	19		0/1	1 = activated
Start signal from stage I>> CD	418.03	20			
Trip signal from stage I>>	418.04	21		0/1	1 = activated
Trip signal from stage I>> CD	418.05	22			
Start signal from stage I<	418.06	23		0/1	1 = activated
Start signal from stage I< CD	418.07	24			
Trip signal from stage I<	418.08	25		0/1	1 = activated
Trip signal from stage I< CD	418.09	26			
Start signal from stage I_0>	418.10	27		0/1	1 = activated
Start signal from stage I_0> CD	418.11	28			
Trip signal from stage I_0>	418.12	29		0/1	1 = activated
Trip signal from stage I_0> CD	418.13	30			
Start signal from stage I_2>	418.14	31		0/1	1 = activated
Start signal from stage I_2> CD	418.15	32			
Trip signal from stage I_2>	419.00	33		0/1	1 = activated
Trip signal from stage I_2> CD	419.01	34			
Trip signal from stage REV	419.02	35		0/1	1 = activated
Trip signal from stage REV CD	419.03	36			
CBFP	419.04	37		0/1	1 = activated
CBFP CD	419.05	38			
PO1	419.06	39		0/1	1 = activated
PO1 CD	419.07	40			
PO2	419.08	41		0/1	1 = activated
PO2 CD	419.09	42			
PO3	419.10	43		0/1	1 = activated
PO3 CD	419.11	44			
SO1	419.12	45		0/1	1 = activated
SO1 CD	419.13	46			
SO2	419.14	47		0/1	1 = activated

Table 4.1.14.2-5 Mapping of Modbus data

Description	HR/IR address (.bit)	DI/Coil bit address	Writeable	Value range	Comment
SO2 CD	419.15	48			
DI1	420.00	49		0/1	1 = activated
DI1 CD	420.01	50			
DI2	420.02	51		0/1	1 = activated
DI2 CD	420.03	52			
DI3	420.04	53		0/1	1 = activated
DI3 CD	420.05	54			
DI4	420.06	55		0/1	1 = activated
DI4 CD	420.07	56			
DI5	420.08	57		0/1	1 = activated
DI5 CD	420.09	58			
Alarm signal from stage ThA>	420.10	59		0/1	1 = activated
Alarm signal from stage ThA> CD	420.11	60			
Trip signal from stage ThA>	420.12	61		0/1	1 = activated
Trip signal from stage ThA> CD	420.13	62			
Alarm signal from stage ThB>	420.14	63		0/1	1 = activated
Alarm signal from stage ThB> CD	420.15	64			
Trip signal from stage ThB>	421.00	65		0/1	1 = activated
Trip signal from stage ThB> CD	421.01	66			
Disturbance recorder	421.02	67		0/1	1 = triggered 0 = cleared
Disturbance recorder CD	421.03	68			
HMI password	421.04	69		0/1	1 = opened 0 = closed
HMI password CD	421.05	70			
IRF	421.06	71		0/1	1 = activated
IRF CD	421.07	72			
Warning	421.08	73		0/1	1 = activated
Warning CD	421.09	74			
Emergency start	421.10	75		0/1	1 = activated
Emergency start CD	421.11	76			
Recorded data					
Fault record	601...633				See Structure 2
Event record	671...679				See Structure 3
Relay identification					
Type designation of the relay	701...708				ASCII chars, 2 chars/register
Real-time clock					
Time reading and setting	721...727		W		See Structure 4
Additional analogue data					
Maximum phase current after motor start up	801			0...5000	0...50 x I_n
Maximum earth-fault current after motor start up	802			0...8000	0...800.0% I_n

Table 4.1.14.2-5 Mapping of Modbus data

Description	HR/IR address (.bit)	DI/Coil bit address	Writeable	Value range	Comment
Minimum phase current after motor start up	803			0...5000	0...50 x I_n 4)
Minimum earth-fault current after motor start up	804			0...8000	0...800.0% I_n 5)
One-minute demand value	805			0...5000	0...50 x I_n
Demand value during the specified time range	806			0...5000	0...50 x I_n
Maximum one-minute demand value during the specified time range	807			0...5000	0...50 x I_n
Thermal level	808			0...106	%
Cumulative start-up time counter	809			0...999	Seconds
Time to next possible motor start up	810			0...999	Minutes
Motor running time	811			0...999	x 100 h
Maximum phase current during motor start up	812			0...5000	0...50 x I_n
Stage/phase which caused the trip	813			0...65535	See table 4.1.15-2
Trip indication code	814			0...21	See table 4.1.15-2
Start-up time of the latest motor start up	815			0...240	Seconds
Number of starts of stage I_S>	816			0...999	Counter
Number of starts of stage I>>	817			0...999	Counter
Number of starts of stage I_0>	818			0...999	Counter
Number of starts of stage I<	819			0...999	Counter
Number of starts of stage I_2>	820			0...999	Counter
Control points					
LED reset		501	W	1	1 = LED reset 6)

1) If the input is out of operation or the optional RTD module has not been installed, the value -32768 will be returned.
2) If the input is out of operation or the optional RTD module has not been installed, the value 655 will be returned.
3) The thermal restart inhibit level is exceeded, the start-up time counter is full or the external restart inhibit signal is active.
4) During motor start up, the value 16383 will be returned, indicating that the current value is not available.
5) During motor start up, the value 13107 will be returned, indicating that the current value is not available.
6) Coil area, only writeable.

Structure 1

The status registers contain information on unread fault and event records, and relay status. The registers are arranged as in the figure below.

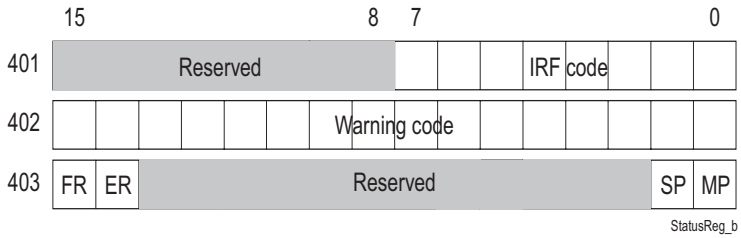


Fig. 4.1.14.2.-2 Status registers

When the value of the FR or ER bit is 1, there is one or several unread fault/event records. If time synchronization is realized via a digital input, either the SP (second-pulse) or MP (minute-pulse) bit will be activated. Refer to table 4.1.16-1 for IRF codes and table 4.1.16-2 for warning codes.

Structure 2

This structure contains data recorded during a fault sequence. Refer to section Fault records for the reading method.

Table 4.1.14.2-6 Fault record

Address	Signal name	Range	Comment
601	Latest selection code 1)	1...2	1 = read oldest unread record 2 = read oldest stored record
602	Sequence number	1...999	
603	Unread records left	0...6	
604	Time stamp of the recorded data, date		2 bytes: YY.MM
605	Time stamp of the recorded data, time		2 bytes: DD.HH
606	Time stamp of the recorded data, date and time		2 bytes: MM.SS
607	Time stamp of the recorded data, time	0...999	0...999 ms
608	Phase current I_{L1}	0...5000	0...50 x I_n
609	Phase current I_{L2}	0...5000	0...50 x I_n
610	Phase current I_{L3}	0...5000	0...50 x I_n
611	Earth-fault current	0...8000	0...800.0% I_n
612	NPS current	0...5000	0...50 x I_n
613	Thermal stress value	0...100	0...100%
614	Number of motor start ups	0...999	0...999
615	Thermal level at start	0...106	0...106%
616	Thermal level at end	0...106	0...106%
617	Temperature from RTD1	-40...999	-40...999°C 2)
618	Temperature from RTD2	-40...999	-40...999°C 2)
619	Temperature from RTD3	-40...999	-40...999°C 2)
620	Temperature from RTD4	-40...999	-40...999°C 2)
621	Temperature from RTD5	-40...999	-40...999°C 2)
622	Temperature from RTD6	-40...999	-40...999°C 2)
623	Thermistor 1, resistance value	0...200	0...20 kΩ 3)
624	Thermistor 2, resistance value	0...200	0...20 kΩ 3)

Table 4.1.14.2-6 Fault record

625	Start duration of stage ThA>, alarm	0...100	0...100%
626	Start duration of stage ThA>, trip	0...100	0...100%
627	Start duration of stage ThB>, alarm	0...100	0...100%
628	Start duration of stage ThB>, trip	0...100	0...100%
629	Start duration, stage $I_s^2 \times t_s$ or I_s>	0...100	0...100%
630	Start duration, stage I>>	0...100	0...100%
631	Start duration, stage I_2>	0...100	0...100%
632	Start duration, stage I_0>	0...100	0...100%
633	Start duration, stage I<	0...100	0...100%

1) Readable and writeable register.
2) If the input is out of operation or the optional RTD module has not been installed, the value -32768 will be returned.
3) If the input is out of operation or the optional RTD module has not been installed, the value 655 will be returned.

Structure 3

This structure contains Modbus event records. Refer to section Event records for the reading method.

Table 4.1.14.2-7 Event record

Address	Name	Range	Comment
671	Latest selection code 1)	1...3 -1...-99	1 = read oldest unread record 2 = read oldest stored record 3 = clear Modbus event buffer -1...-99 = move to the nth newest record
672	Sequence number	1...999	
673	Unread records left	0...99	
674	Time stamp of the event, date		2 bytes: YY.MM
675	Time stamp of the event, date and time		2 bytes: DD.HH
676	Time stamp of the event, time		2 bytes: MM.SS
677	Time stamp of the event, time	0...999	0...999 ms
678 679	Event data		See table 4.1.14.2-8 for Modbus DI-point events and table 4.1.14.2-9 for informative events.

1) Readable and writeable register.

Table 4.1.14.2-8 Modbus DI-point event

Address	Name	Range	Comment
678	0 Modbus DI-point	1...99	MSB = 0
679	Modbus DI value	0...1	

Table 4.1.14.2-9 Informative event

Address	Name	Range	Comment
678	1 SPA channel	0...3	MSB = 1
679	SPA event	0...63	

Structure 4

The relay's real-time clock is stored in this structure. It can be updated by presetting the whole register structure in one Modbus transaction.

Table 4.1.14.2-10Real-time clock structure

Address	Description	Range
721	Year	0...99
722	Month	1...12
723	Day	1...31
724	Hour	0...23
725	Minute	0...59
726	Second	0...59
727	Hundredth of a second	0...99

4.1.15. SPA bus communication protocol parameters

Altering parameter values via serial communication requires the use of the SPA password in some cases. The password is a user-defined number within the range 1...999, the default value being 1. SPA parameters are found on channels 0...5, 504 and 507.

To enter the setting mode, enter the password into parameter V160. To quit the setting mode, enter the same password into parameter V161. The password protection is also reactivated in case of loss of auxiliary voltage.

The HMI password can be changed via parameter V162, but it is not possible to read the password via this parameter.

Abbreviations used in the following tables:

- R = readable data
- W = writeable data
- P = password protected writeable data

Settings

Table 4.1.15-1 Settings

Variable	Actual settings (R), channel 0	Group/ Channel 1 (R, W, P)	Group/ Channel 2 (R, W, P)	Setting range
Safe stall time	S1	1S1	2S1	2...120 s [1)]
Weighting factor	S2	1S2	2S2	20...100%
Time constant multiplier	S3	1S3	2S3	1...64
Prior alarm level	S4	1S4	2S4	50...100%
Restart inhibit level	S5	1S5	2S5	20...80%
Ambient temperature	S6	1S6	2S6	0...70°C

Table 4.1.15-1 Settings

Variable	Actual settings (R), channel 0	Group/ Channel 1 (R, W, P)	Group/ Channel 2 (R, W, P)	Setting range
Start-up current for motor or start value of stage I_s>	S7	1S7	2S7	1.00…10.0 x I_n
Start-up time for motor or operate time of stage I_s>	S8	1S8	2S8	0.30...80.0 s
Start value of stage I>>	S9 2)	1S9	2S9	0.50...20.0 x I_n
Operate time of stage I>>	S10	1S10	2S10	0.05...30.0 s
Start value of stage I_0>	S11 2)	1S11	2S11	1.0...100% I_n
Operate time of stage I_0>	S12	1S12	2S12	0.05...300 s
Start value of stage I<	S13 2)	1S13	2S13	30...80% I_n
Operate time of stage I<	S14	1S14	2S14	2...600 s
Start value of stage I_2>	S15 2)	1S15	2S15	0.10…0.50 x I_n
Time constant of stage I_2>	S16	1S16	2S16	5...100
Restart inhibit value	S17	1S17	2S17	5...500 s
Countdown rate of start-up time counter	S18	1S18	2S18	2...250 s/h
Operate time of CBFP	S19	1S19	2S19	0.10...60.0 s
Alarm value Ta1>	S20 2)	1S20	2S20	0...200°C
Operate time ta1>	S26	1S26	2S26	1...100 s
Trip value Tp1>	S32 2)	1S32	2S32	0...200°C
Operate time tp1>	S38	1S38	2S38	1...100 s
Alarm value Ta2>	S21 2)	1S21	2S21	0...200°C
Operate time ta2>	S27	1S27	2S27	1...100 s
Trip value Tp2>	S33 2)	1S33	2S33	0...200°C
Operate time tp2>	S39	1S39	2S39	1...100 s
Alarm value Ta3>	S22 2)	1S22	2S22	0...200°C
Operate time ta3>	S28	1S28	2S28	1...100 s
Trip value Tp3>	S34 2)	1S34	2S34	0...200°C
Operate time tp3>	S40	1S40	2S40	1...100 s
Alarm value Ta4>	S23 2)	1S23	2S23	0...200°C
Operate time ta4>	S29	1S29	2S29	1...100 s
Trip value Tp4>	S35 2)	1S35	2S35	0...200°C
Operate time tp4>	S41	1S41	2S41	1...100 s
Alarm value Ta5>	S24 2)	1S24	2S24	0...200°C
Operate time ta5>	S30	1S30	2S30	1...100 s
Trip value Tp5>	S36 2)	1S36	2S36	0...200°C
Operate time tp5>	S42	1S42	2S21	1...100 s
Alarm value Ta6>	S25 2)	1S25	2S25	0...200°C
Operate time ta6>	S31	1S31	2S31	1...100 s
Trip value Tp6>	S37 2)	1S37	2S37	0...200°C
Operate time tp6>	S43	1S43	2S43	1...100 s
Trip value Thp1>	S44 2)	1S44	2S44	0.1...15.0 kΩ
Trip value Thp2>	S45 2)	1S45	2S45	0.1...15.0 kΩ
Checksum, SGF 1	S61	1S61	2S61	0...255

Table 4.1.15-1 Settings

Variable	Actual settings (R), channel 0	Group/ Channel 1 (R, W, P)	Group/ Channel 2 (R, W, P)	Setting range
Checksum, SGF 2	S62	1S62	2S62	0...255
Checksum, SGF 3	S63	1S63	2S63	0...255
Checksum, SGF 4	S64	1S64	2S64	0...15
Checksum, SGF 5	S65	1S65	2S65	0...255
Checksum, SGB 1	S71	1S71	2S71	0...16383
Checksum, SGB 2	S72	1S72	2S72	0...16383
Checksum, SGB 3	S73 3)	1S73	2S73	0...16383
Checksum, SGB 4	S74 3)	1S74	2S74	0...16383
Checksum, SGB 5	S75 3)	1S75	2S75	0...16383
Checksum, SGR 1	S81	1S81	2S81	0...524287
Checksum, SGR 2	S82	1S82	2S82	0...524287
Checksum, SGR 3	S83	1S83	2S83	0...524287
Checksum, SGR 4	S84	1S84	2S84	0...524287
Checksum, SGR 5	S85	1S85	2S85	0...524287
Checksum, SGL 1	S91	1S91	2S91	0...1048575
Checksum, SGL 2	S92	1S92	2S92	0...1048575
Checksum, SGL 3	S93	1S93	2S93	0...1048575
Checksum, SGL 4	S94	1S94	2S94	0...1048575
Checksum, SGL 5	S95	1S95	2S95	0...1048575
Checksum, SGL 6	S96	1S96	2S96	0...1048575
Checksum, SGL 7	S97	1S97	2S97	0...1048575
Checksum, SGL 8	S98	1S98	2S98	0...1048575

1) The setting step is 0.5.
2) If the protection stage is out of operation, the number indicating the currently used value will be displaced by “999” when parameters are read via the SPA bus and by dashes on the LCD.
3) If the optional RTD module has not been installed, dashes will be shown on the LCD and “99999” when the parameter is read via the SPA bus.

Recorded data

Parameter V1 shows the stage which has caused the trip, parameter V2 the trip indication code, parameter V3 the start-up time of the latest motor start up and parameters V4...V8 show the number of starts of the protection stages.

Table 4.1.15-2 Recorded data: Channel 0

Recorded data	Parameter (R)	Value
Stage/phase which caused the trip	V1	1=I_s^2 x t_s or I_{sL3}> 2=I_s^2 x t_s or I_{sL2}> 4=I_s^2 x t_s or I_{sL1}> 8=I_0> 16=I_{L3}>> 32=I_{L2}>> 64=I_{L1}>> 128=I_2> 256=I_{L3}> 512=I_{L2}< 1024=I_{L1}< 2048=REV 4096=θ> 8192=ThA> 16384=ThB> 32768=external trip
Trip indication code	V2	0 = --- 1 = alarm of stage θ> 2 = trip of stage θ> 3 = start of stage I_s^2 x t_s or I_s> 4 = trip of stage I_s^2 x t_s or I_s> 5 = start of stage I>> 6 = trip of stage I>> 7 = start of stage I< 8 = trip of stage I< 9 = start of stage I_0> 10 = trip of stage I_0> 11 = start of stage I_2> 12 = trip of stage I_2> 13 = trip of stage REV 14 = external trip 15 = alarm of stage ThA> 16 = trip of stage ThA> 17 = alarm of stage ThB> 18 = trip of stage ThB> 19 = restart inhibit (θ>) 20 = restart inhibit (Σt_{si}) 21 = restart inhibit (external) 22 = CBFP
Start-up time of the latest motor start up	V3	0...240 s
Number of starts of stage I_s^2 x t_s or I_s>	V4	0...999
Number of starts of stage I>>	V5	0...999
Number of starts of stage I_0>	V6	0...999

Table 4.1.15-2 Recorded data: Channel 0

Recorded data	Parameter (R)	Value
Number of starts of stage I<	V7	0...999
Number of starts of stage I_2>	V8	0...999

The last five recorded values can be read with parameters V1...V28 on channels 1...5. Event n denotes the last recorded value, n-1 the next one, and so forth.

Table 4.1.15-3 Recorded data: Channels 1...5

Recorded data	Event (R)					Value
	n Channel 1	n-1 Channel 2	n-2 Channel 3	n-3 Channel 4	n-4 Channel 5	
Phase current I_{L1}	1V1	2V1	3V1	4V1	5V1	0...50 x I_n
Phase current I_{L2}	1V2	2V2	3V2	4V2	5V2	0...50 x I_n
Phase current I_{L3}	1V3	2V3	3V3	4V3	5V3	0...50 x I_n
Earth-fault current	1V4	2V4	3V4	4V4	5V4	0...800% I_n
NPS current	1V5	2V5	3V5	4V5	5V5	0...50 x I_n
Thermal stress value	1V6	2V6	3V6	4V6	5V6	0...100%
Number of motor start ups	1V7	2V7	3V7	4V7	5V7	0...999
Thermal level at start	1V8	2V8	3V8	4V8	5V8	0...106%
Thermal level at end	1V9	2V9	3V9	4V9	5V9	0...106%
Temperature from RTD1	1V10	2V10	3V10	4V10	5V10	-40...+999°C
Temperature from RTD2	1V11	2V11	3V11	4V11	5V11	-40...+999°C
Temperature from RTD3	1V12	2V12	3V12	4V12	5V12	-40...+999°C
Temperature from RTD4	1V13	2V13	3V13	4V13	5V13	-40...+999°C
Temperature from RTD5	1V14	2V14	3V14	4V14	5V14	-40...+999°C
Temperature from RTD6	1V15	2V15	3V15	4V15	5V15	-40...+999°C
Thermistor1, resistance value	1V16	2V16	3V16	4V16	5V16	0...20 kΩ
Thermistor2, resistance value	1V17	2V17	3V17	4V17	5V17	0...20 kΩ
Start duration of stage ThA>, alarm	1V18	2V18	3V18	4V18	5V18	0...100%
Start duration of stage ThA>, trip	1V19	2V19	3V19	4V19	5V19	0...100%
Start duration of stage ThB>, alarm	1V20	2V20	3V20	4V20	5V20	0...100%
Start duration of stage ThB>, trip	1V21	2V21	3V21	4V21	5V21	0...100%
Start duration, stage I_s^2 x t_s or I_s>	1V22	2V22	3V22	4V22	5V22	0...100%

Table 4.1.15-3 Recorded data: Channels 1...5

Recorded data	Event (R)					Value
	n Channel 1	**n-1 Channel 2**	**n-2 Channel 3**	**n-3 Channel 4**	**n-4 Channel 5**	
Start duration, stage I>>	1V23	2V23	3V23	4V23	5V23	0...100%
Start duration, stage I_2>	1V24	2V24	3V24	4V24	5V24	0...100%
Start duration, stage I_o>	1V25	2V25	3V25	4V25	5V25	0...100%
Start duration, stage I<	1V26	2V26	3V26	4V26	5V26	0...100%
Time stamp of the recorded data, date	1V27	2V27	3V27	4V27	5V27	YY-MM-DD
Time stamp of the recorded data, time	1V28	2V28	3V28	4V28	5V28	HH.MM; SS.sss

Disturbance recorder

Table 4.1.15-4 Parameters for the disturbance recorder

Description	Parameter (channel 0)	R, W	Value
Remote triggering	M1 [2]	W	1
Clear recorder memory	M2	W	1
Sampling rate	M15 [3]	R, W	800/960 Hz 400/480 Hz 50/60 Hz
Station identification/unit number	M18	R, W	0...9999
Rated frequency	M19	R	50 or 60 Hz
Name of the motor drive	M20	R, W	Max 16 characters
Digital channel texts	M40...M47	R	
Analogue channel texts	M60...M63	R	
Analogue channel conversion factor and unit for I_{L1}, I_{L2} and I_{L3}	M80 [1] [4] M81 and M82	R, W R	Factor 0...65535, unit (a, kA), e.g. 10 kA
Analogue channel conversion factor and unit for the earth-fault current	M83 [1]	R, W	Factor 0...65535, unit (a, kA), e.g. 10 kA
Internal trigger signals' checksum	V236	R, W	0...8191
Internal trigger signal's edge	V237	R, W	0...8191
Checksum of internal signal storing mask	V238 [3]	R, W	0...8191
Post-triggering recording length	V240	R, W	0...100%
External trigger signal's checksum	V241	R, W	0...31
External trigger signal's edge	V242	R, W	0...31
Checksum of external signal storing mask	V243 [3]	R, W	0...31
Triggering state, clearing and restart	V246	R, W	R: 0 = recorder not triggered 1 = recorder triggered and recording stored in the memory W: 0 = clear recorder memory 2 = download restart; sets the first information and the time stamp for triggering ready to be read 4 = manual triggering

[1] The disturbance recorder requires this parameter to be set. The conversion factor is the transformation ratio multiplied by the rated current of the relay. If this parameter has been given the value 0, dashes will be shown on the LCD instead of the primary values and the recorded data will be redundant.
[2] M1 can be used for broadcast triggering by using the unit address “900”.
[3] Parameters can be written if the recorder has not been triggered.
[4] This value is copied to parameters M81 and M82.

Table 4.1.15-5 Disturbance recorder internal triggering and storing

Event	Weighting factor	Default value of triggering mask, V236	Default value of triggering edge, V237 1)	Default value of storing mask, V238
Alarm of stage θ>	1	0	0	0
Trip of stage θ>	2	0	0	1
Start of stage $I_s^2 \times t_s$ or I_s>	4	0	0	0
Trip of stage $I_s^2 \times t_s$ or I_s>	8	1	0	1
Start of stage I>>	16	0	0	1
Trip of stage I>>	32	1	0	1
Start of stage I<	64	0	0	0
Trip of stage I<	128	1	0	1
Start of stage I_0>	256	0	0	0
Trip of stage I_0>	512	1	0	1
Start of stage I_2>	1024	0	0	0
Trip of stage I_2>	2048	1	0	1
Motor start up	4096	0	0	1
Checksum		2728	0	6842

1) 0 = rising edge, 1 = falling edge.

Table 4.1.15-6 Disturbance recorder external triggering and storing

Event	Weighting factor	Default value of triggering mask, V241	Default value of triggering edge, V242 1)	Default value of storing mask, V243
DI1	1	0	0	0
DI2	2	0	0	0
DI3	4	0	0	0
DI4	8	0	0	0
DI5	16	0	0	0
Checksum		0	0	0

1) 0 = rising edge, 1 = falling edge.

Control parameters

Table 4.1.15-7 Control parameters

Description	Parameter	R, W, P	Value
Reading of an event buffer	L	R	Time, channel number and event code
Re-reading of an event buffer	B	R	Time, channel number and event code
Reading of relay state data	C	R	0 = normal state 1 = the relay has been subject to an automatic reset 2 = overflow of the event buffer 3 = both 1 and 2
Resetting of relay state data	C	W	0 = resetting E50 and E51 1 = reset only E50 2 = reset only E51 4 = reset all events including E51 except for E50
Time reading and setting	T	R, W	SS.sss
Date and time reading and setting	D	R, W	YY-MM-DD HH.MM;SS.sss
Type designation of the relay	F	R	REM 610
Unlatching output contacts	V101	W	1 = unlatch
Clearing indications and memorized values and unlatching contacts (master reset)	V102	W	1 = clear and unlatch
PU scale (protected unit scaling factor)	V103	R, W (P)	0.50...2.50
Rated frequency	V104	R, W (P)	50 or 60 Hz
Time setting range for demand values in minutes	V105	R, W	0...999 min
Non-volatile memory settings	V106	R, W	0...63
Time setting for disabling new trip indications on the LCD	V108	R, W (P)	0...999 min
Activating the self-supervision	V109	W (P)	1 = the self-supervision output contact is activated and the READY indicator LED starts to blink 0 = normal operation
LED test for start and trip indicators	V110	W (P)	0 = start and trip LEDs off 1 = trip LED on, start LED off 2 = start LED on, trip LED off 3 = start and trip LEDs on
LED test for programmable LEDs	V111	W (P)	0...255
Trip-circuit supervision	V113	R, W	0 = not in use 1 = in use

Table 4.1.15-7 Control parameters

Description	Parameter	R, W, P	Value
Sensor/thermistor selection for input RTD1	V121 1)	R, W (P)	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C 8 = PTC 0...20 kΩ
Sensor selection for input RTD2	V122 1)	R, W (P)	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C
Sensor selection for input RTD3	V123 1)	R, W (P)	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C
Sensor/thermistor selection for input RTD4	V124 1)	R, W (P)	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C 8 = PTC 0...20 kΩ
Sensor selection for input RTD5	V125 1)	R, W (P)	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C
Sensor selection for input RTD6	V126 1)	R, W (P)	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C
Remote control of settings	V150	R, W	0 = setting group 1 1 = setting group 2
Entering the SPA password for settings	V160	W	1...999

Table 4.1.15-7 Control parameters

Description	Parameter	R, W, P	Value
Changing the SPA password or reinstating the password protection	V161	W (P)	1...999
Changing the HMI password	V162	W	1...999
Restore factory settings	V167	W (P)	2 = restore factory settings for CPU 3 = restore factory settings for RTD 4 = restore factory settings for CPU and RTD
Warning code	V168	R	0...65535 [2]
IRF code	V169	R	0...255 [2]
Unit address of the relay	V200	R, W	1...254
Data transfer rate (SPA), kbps	V201	R, W	9.6/4.8
Rear communication	V202	W	1 = rear connector activated
Rear communication protocol	V203	W	0 = SPA 1 = IEC_103 2 = Modbus RTU 3 = Modbus ASCII
Connection type	V204	R, W	0 = loop 1 = star
Line-idle state	V205	R, W	0 = light off 1 = light on
Optional communication module	V206	R, W (P)	0 = not in use 1 = in use [3]
HMI language set information	V226	R	00...99
CPU software number	V227	R	1MRS118511
CPU software revision	V228	R	A...Z
CPU build number	V229	R	XXX
RTD software number	1V227	R	1MRS118514
RTD software revision	1V228	R	A...Z
RTD build number	1V229	R	XXX
Relay serial number	V230	R	BAxxxxxx
CPU serial number	V231	R	ACxxxxxx
RTD serial number	V232	R	ARxxxxxx
Test date	V235	R	YYMMDD
Date reading and setting (RED 500 format)	V250	R, W	YY-MM-DD
Time reading and setting (RED 500 format)	V251	R, W	HH.MM;SS.sss

[1] The supply voltage should not be disconnected less than ten seconds after writing to parameters V121...V126.
[2] In case of a warning, the value 255 will be stored in V169. This will enable the master to continuously read only V169.
[3] If the optional communication module has not been installed, a warning of a faulty communication module will appear on the LCD together with the fault code.

The measured currents can be read with parameters I1...I4, the calculated NPS current value with parameter I5, the status of the digital inputs with parameters I6...I10, the temperatures from RTD1...RTD6 with parameters I11...I16 and the resistance values of thermistors 1 and 2 with parameters I17 and I18.

Table 4.1.15-8 Inputs

Description	Parameter (R), channel 0	Value
Current measured on phase I_{L1}	I1	0...50 x I_n
Current measured on phase I_{L2}	I2	0...50 x I_n
Current measured on phase I_{L3}	I3	0...50 x I_n
Measured earth-fault current	I4	0...800% I_n
Calculated NPS current	I5	0...50 x I_n
DI1 status	I6	0/1 [1)]
DI2 status	I7	0/1 [1)]
DI3 status	I8	0/1 [1) 4)]
DI4 status	I9	0/1 [1) 4)]
DI5 status	I10	0/1 [1) 4)]
Temperature from RTD1	I11	-40...+999°C [2)]
Temperature from RTD2	I12	-40...+999°C [2)]
Temperature from RTD3	I13	-40...+999°C [2)]
Temperature from RTD4	I14	-40...+999°C [2)]
Temperature from RTD5	I15	-40...+999°C [2)]
Temperature from RTD6	I16	-40...+999°C [2)]
Thermistor1, resistance value	I17	0...20 kΩ [3)]
Thermistor2, resistance value	I18	0...20 kΩ [3)]

[1)] When the value is 1, the digital input is energized.
[2)] If the input is out of operation or the optional RTD module has not been installed or is faulty, dashes will be shown on the LCD and “-999” when parameters are read via the SPA bus.
[3)] If the input is out of operation or the optional RTD module has not been installed or is faulty, dashes will be shown on the LCD and “999” when parameters are read via the SPA bus.
[4)] If the optional RTD module has not been installed, a dash will be shown on the LCD and “9” when parameters are read via the SPA bus.

Each protection stage has its internal output signal. These signals can be read with parameters O1...O21 and the recorded functions with parameters O61...81. The state of the output contacts can be read or changed with parameters O41...O46 and the recorded functions read with parameters O101...O105.

Table 4.1.15-9 Output signals

Status of the protection stages	State of stage (R), channel 0	Recorded functions (R), channel 0	Value
Start of stage θ>	O1	O61	0/1
Alarm of stage θ>	O2	O62	0/1
Trip of stage θ>	O3	O63	0/1
Start of stage I_s^2 x t_s or I_s>	O4	O64	0/1
Trip of stage I_s^2 x t_s or I_s>	O5	O65	0/1
Start of stage I>>	O6	O66	0/1
Trip of stage I>>	O7	O67	0/1
Start of stage I<	O8	O68	0/1
Trip of stage I<	O9	O69	0/1

Table 4.1.15-9 Output signals

Status of the protection stages	State of stage (R), channel 0	Recorded functions (R), channel 0	Value
Start of stage I_0>	O10	O70	0/1
Trip of stage I_0>	O11	O71	0/1
Start of stage I_2>	O12	O72	0/1
Trip of stage I_2>	O13	O73	0/1
Trip of stage REV	O14	O74	0/1
External trip	O15	O75	0/1
Motor start up	O16	O76	0/1
Restart inhibit	O17	O77	0/1
Alarm of stage ThA>	O18	O78	0/1
Trip of stage ThA>	O19	O79	0/1
Alarm of stageThB>	O20	O80	0/1
Trip of stage ThB>	O21	O81	0/1
CBFP trip	O22	O82	0/1

Table 4.1.15-10 Outputs

Operation of output contact	State of output (R, W, P), channel 0	Recorded functions (R), channel 0	Value
Output PO1	O41	O101	0/1
Output PO2	O42	O102	0/1
Output PO3 [1)]	O43	O103	0/1 [2)]
Output SO1	O44	O104	0/1
Output SO2	O45	O105	0/1
Output PO3 (restart inhibit) [3)]	O46	-	0/1 [2)]
Enabling activation of output contacts PO1, PO2, PO3, SO1 and SO2 via the SPA bus	O51	-	0/1

[1)] State of output when the start, trip and alarm signals from the protection stages, the motor start-up signal and the external trip signal have been routed to PO3 (SGR3/1...19=1), provided that SGF1/7=1.
[2)] Either O43/O103 or O46 is to be used at a time.
[3)] State of output when the restart inhibit signal have been routed to PO3 (SGF1/7=0).

Note!

Parameters O41...O46 and O51 control the physical output contacts which can be connected to circuit breakers, for instance.

Parameters for the IEC 60870-5-103 remote communication protocol

Table 4.1.15-11 Settings

Description	Parameter (channel 507)	R, W, P	Value
Unit address of the relay	507V200	R, W	1...254
Data transfer rate (IEC_103), kbps	507V201	R, W (P)	9.6/4.8

Parameters for the Modbus remote communication protocol

Table 4.1.15-12 Settings

Description	Parameter (channel 504)	R, W, P	Value
User-defined register 1	504V1	R, W	0...65535 [1)]
User-defined register 2	504V2	R, W	0...65535 [1)]
User-defined register 3	504V3	R, W	0...65535 [1)]
User-defined register 4	504V4	R, W	0...65535 [1)]
User-defined register 5	504V5	R, W	0...65535 [1)]
User-defined register 6	504V6	R, W	0...65535 [1)]
User-defined register 7	504V7	R, W	0...65535 [1)]
User-defined register 8	504V8	R, W	0...65535 [1)]
User-defined register 9	504V9	R, W	0...65535 [1)]
User-defined register 10	504V10	R, W	0...65535 [1)]
User-defined register 11	504V11	R, W	0...65535 [1)]
User-defined register 12	504V12	R, W	0...65535 [1)]
User-defined register 13	504V13	R, W	0...65535 [1)]
User-defined register 14	504V14	R, W	0...65535 [1)]
User-defined register 15	504V15	R, W	0...65535 [1)]
User-defined register 16	504V16	R, W	0...65535 [1)]
Unit address of the relay	504V200	R, W	1...254
Data transfer rate (Modbus), kbps	504V201	R, W (P)	9.6/4.8/2.4/ 1.2/0.3
Modbus link parity	504V220	R, W	0 = even 1 = odd 2 = no parity
CRC order of Modbus RTU link	504V221	R, W	0 = low/high 1 = high/low

[1)] The default value is 0.

Measurements

Table 4.1.15-13 Measured values

Description	Parameter (channel 0)	R, W, P	Value
Cumulative start-up time counter	V51	R	0...999 s
Time to next possible motor start up	V52	R	0...999 min
Motor running time	V53	R, W (P)	0...999 x 100 h [4)]
Maximum phase current during motor start up	V54	R	0...50 x I_n
Maximum phase current after motor start up	V56	R	0...50 x I_n
Maximum earth-fault current after motor start up	V57	R	0...800% I_n
Minimum phase current after motor start up	V58	R	0...50 x I_n [2)]

Table 4.1.15-13 Measured values

Description	Parameter (channel 0)	R, W, P	Value
Minimum earth-fault current after motor start up	V59	R	0...800% I_n [2]
Thermal level	V60	R, W (P)	0...106% [1]
One-minute demand value	V61	R	0...50 x I_n [3]
Demand value during the specified time range	V62	R	0...50 x I_n [3]
Maximum one-minute demand value during the specified time range	V63	R	0...50 x I_n [3]

[1] Changing the thermal level via serial communication will generate an event code.
[2] During motor start up, the value will be displaced by dashes on the LCD and by “999” when parameters are read via the SPA bus.
[3] If the demand value is reset and the specified time has not elapsed, dashes will be shown on the LCD and “999” when the parameter is read via the SPA bus.
[4] Writing to the parameter will reset the number of motor start ups.

4.1.15.1. Event codes

Special codes have been determined to represent certain events, such as start and tripping of protection stages and different states of output signals.

The events are stored in the event buffer of the relay. The maximum capacity of the buffer is 100 events. Under normal conditions the buffer is empty.

The contents of the buffer can be read using the L command, five events at a time. Using the L command erases the previously read events from the buffer, with the exception of events E50 and E51 which have to be reset using the C command. Should a fault occur and reading fails, for example in data communication, the events can be re-read using the B command. If needed, the B command can also be repeated.

Events to be included in the event reporting are marked with the multiplier 1. The event mask is formed by the sum of the weighting factors of all those events which are to be included in event reporting.

Table 4.1.15.1-1 Event masks

Event mask	Code	Setting range	Default setting
V155	E31...E34	0...15	1
1V155	1E1...1E14	0...16383	4180
1V156	1E15...1E26	0...4095	1365
1V157	1E27...1E38	0...4095	341
2V155	2E1...2E10	0...1023	3
2V156	2E11...2E20	0...1023	0
2V157	2E21...2E28	0...255	0

Channel 0

Events always included in the event reporting:

Table 4.1.15.1-2 Event codes E1...E7

Channel	Event	Description
0	E1	IRF
0	E2	IRF disappeared
0	E3	Warning
0	E4	Warning disappeared
0	E5	Emergency start activated
0	E6	Emergency start deactivated
0	E7	The thermal level has been changed via serial communication

Table 4.1.15.1-3 Event codes E50...E51

Channel	Event	Description
0	E50	Restart of relay
0	E51	Overflow of event buffer

Events possible to mask out:

Table 4.1.15.1-4 Event codes E31...E34

Channel	Event	Description	Weighting factor	Default value
0	E31	Disturbance recorder triggered	1	1
0	E32	Disturbance recorder memory cleared	2	0
0	E33	HMI password opened	4	0
0	E34	HMI password closed	8	0
		Default value of event mask V155		1

Channel 1

Table 4.1.15.1-5 Event codes E1...E14

Channel	Event	Description	Weighting factor	Default value
1	E1	Motor start up begins	1	0
1	E2	Motor start up ends	2	0
1	E3[1)]	Start of stage θ> activated	4	1
1	E4[1)]	Start of stage θ> reset	8	0
1	E5	Alarm signal from stage θ> activated	16	1
1	E6	Alarm signal from stage θ> reset	32	0
1	E7	Trip signal from stage θ> activated	64	1
1	E8	Trip signal from stage θ> reset	128	0
1	E9	Restart inhibit signal from stage θ> activated	256	0
1	E10	Restart inhibit signal from stage θ> reset	512	0
1	E11	Restart inhibit signal from stage Σt_{si} activated	1024	0

Table 4.1.15.1-5 Event codes E1...E14

Channel	Event	Description	Weighting factor	Default value
1	E12	Restart inhibit signal from stage Σt_{si} reset	2048	0
1	E13	Restart inhibit activated [2]	4096	1
1	E14	Restart inhibit reset	8192	0
		Default value of event mask 1V155		4180

Table 4.1.15.1-6 Event codes E15...E26

Channel	Event	Description	Weighting factor	Default value
1	E15[1]	Start signal from stage $I_s^2 \times t_s$ or I_s> activated	1	1
1	E16[1]	Start signal from stage $I_s^2 \times t_s$ or I_s> reset	2	0
1	E17	Trip signal from stage $I_s^2 \times t_s$ or I_s> activated	4	1
1	E18	Trip signal from stage $I_s^2 \times t_s$ or I_s> reset	8	0
1	E19[1]	Start signal from stage I>> activated	16	1
1	E20[1]	Start signal from stage I>> reset	32	0
1	E21	Trip signal from stage I>> activated	64	1
1	E22	Trip signal from stage I>> reset	128	0
1	E23[1]	Start signal from stage I< activated	256	1
1	E24[1]	Start signal from stage I< reset	512	0
1	E25	Trip signal from stage I< activated	1024	1
1	E26	Trip signal from stage I< reset	2048	0
		Default value of event mask 1V156		1365

Table 4.1.15.1-7 Event codes E27...E38

Channel	Event	Description	Weighting factor	Default value
1	E27[1]	Start signal from stage I_0> activated	1	1
1	E28[1]	Start signal from stage I_0> reset	2	0
1	E29	Trip signal from stage I_0> activated	4	1
1	E30	Trip signal from stage I_0> reset	8	0
1	E31[1]	Start signal from stage I_2> activated	16	1
1	E32[1]	Start signal from stage I_2> reset	32	0
1	E33	Trip signal from stage I_2> activated	64	1
1	E34	Trip signal from stage I_2> reset	128	0
1	E35	Trip signal from stage REV activated	256	1
1	E36	Trip signal from stage REV reset	512	0
1	E37	CBFP activated	1024	0
1	E38	CBFP reset	2048	0
		Default value of event mask 1V157		341

[1] The event code is not generated during motor start up.
[2] The thermal restart inhibit level is exceeded, the start-up time counter is full or the external restart inhibit signal is active.

Channel 2

Table 4.1.15.1-8 Event codes E1...E10

Channel	Event	Description	Weighting factor	Default value
2	E1	PO1 activated	1	1
2	E2	PO1 reset	2	1
2	E3	PO2 activated	4	0
2	E4	PO2 reset	8	0
2	E5	PO3 activated	16	0
2	E6	PO3 reset	32	0
2	E7	SO1 activated	64	0
2	E8	SO1 reset	128	0
2	E9	SO2 activated	256	0
2	E10	SO2 reset	512	0
		Default value of event mask 2V155		3

Table 4.1.15.1-9 Event codes E11...E20

Channel	Event	Description	Weighting factor	Default value
2	E11	DI1 activated	1	0
2	E12	DI1 deactivated	2	0
2	E13	DI2 activated	4	0
2	E14	DI2 deactivated	8	0
2	E15	DI3 activated	16	0
2	E16	DI3 deactivated	32	0
2	E17	DI4 activated	64	0
2	E18	DI4 deactivated	128	0
2	E19	DI5 activated	256	0
2	E20	DI5 deactivated	512	0
		Default value of event mask 2V156		0

Table 4.1.15.1-10 Event codes E21...E28

Channel	Event	Description	Weighting factor	Default value
2	E21	Alarm signal from stage ThA> activated	1	0
2	E22	Alarm signal from stage ThA> reset	2	0
2	E23	Trip signal from stage ThA> activated	4	0
2	E24	Trip signal from stage ThA> reset	8	0
2	E25	Alarm signal from stage ThB> activated	16	0
2	E26	Alarm signal from stage ThB> reset	32	0
2	E27	Trip signal from stage ThB> activated	64	0
2	E28	Trip signal from stage ThB> reset	128	0
		Default value of event mask 2V157		0

4.1.16. Self-supervision (IRF) system

REM 610 is provided with an extensive self-supervision system which continuously supervises the software and the electronics of the relay. It handles run-time fault situations and informs the user about an existing fault via a LED on the HMI and a text message on the LCD. There are two types of fault indications: IRF indications and warnings.

Internal relay fault

When an internal relay fault is detected, which will prevent relay operation, the relay will first try to eliminate it by restarting. Only after the fault has been found to be permanent, the green indicator LED (ready) will start to blink and the self-supervision output contact will be activated. All other output contacts will be returned to the initial state and locked for the internal relay fault. Further, a fault indication message will appear on the LCD, including a fault code.

IRF indications have the highest priority on the HMI. None of the other HMI indications can override the IRF indication. As long as the green indicator LED (ready) is blinking, the fault indication cannot be cleared. In case an internal fault disappears, the green indicator LED (ready) will stop blinking and the relay will be returned to the normal service state, but the fault indication message will remain on the LCD until manually cleared (or a motor start up begins).

The IRF code indicates the type of internal relay fault. When a fault appears, the code is to be recorded and stated when ordering service. The fault codes are listed in the following table:

Table 4.1.16-1 IRF codes

Fault code	Type of fault
4	Error in output relay PO1
5	Error in output relay PO2
6	Error in output relay PO3
7	Error in output relay SO1
8	Error in output relay SO2
9	Error in the enable signal for output relays PO1, PO2, SO1 or SO2
10, 11, 12	Error in the feedback, enable signal or output relays PO1, PO2, SO1 or SO2
20, 21	Auxiliary voltage dip
30	Faulty program memory
50, 59	Faulty work memory
51, 52, 53 [2)], 54, 56	Faulty parameter memory [1)]
55	Faulty parameter memory, calibration parameters
75	RTD module faulty
80	RTD module missing
81	RTD module unknown
82	RTD module configuration error
85	Power supply module faulty
86	Power supply module unknown
90	Hardware configuration error

Table 4.1.16-1 IRF codes

Fault code	Type of fault
95	Communication module unknown
103, 104	Faulty configuration set (for IEC 60870-5-103)
131, 139, 195, 203, 222, 223	Internal reference voltage error
253	Error in the measuring unit

1) May be corrected by formatting to the factory setting.
2) All settings will be zero during the fault.

For further information on internal relay faults, refer to the Operator's Manual.

Warnings

In case of a warning, the relay will continue to operate except for those protection functions possibly affected by the fault, and the green indicator LED (ready) will remain lit as during normal operation. Further, a fault indication message, which depending on the type of fault includes a fault code, will appear on the LCD. If more than one type of fault occur at the same time, one single numeric code which indicates all the faults will be displayed. The fault indication message cannot be manually cleared but will disappear with the fault.

When a fault appears, the fault indication message is to be recorded and stated when ordering service. The fault codes are listed in the following table:

Table 4.1.16-2 Warning codes

Fault	Weight value
Battery low	1
Trip-circuit supervision 1)	2
Power supply module temperature high	4
Communication module faulty or missing	8
RTD module faulty	16
Temperature sensor range error	32
Sensor circuit open or shorted (RTD1)	64
Sensor circuit open or shorted (RTD2)	128
Sensor circuit open or shorted (RTD3)	256
Sensor circuit open or shorted (RTD4)	512
Sensor circuit open or shorted (RTD5)	1024
Sensor circuit open or shorted (RTD6)	2048
Thermistor circuit open or shorted (Thermistor1)	4096
Thermistor circuit open or shorted (Thermistor2)	8192
Σ	16383

1) The external fault warning can be routed to SO2 with SGF1/8.

For further information on warnings, refer to the Operator's Manual.

4.1.16.1. Self-supervision of the RTD module

Each input sample is validated before it is fed into the filter algorithm. The samples are validated by measuring an internally set reference voltage immediately after the inputs have been sampled. If the measured offset voltage deviates from the set value by more than 1.5 per cent from the measuring range, the sample will be discarded.

If the fault has not disappeared on expiration of the filter time of eight seconds, all inputs will automatically be set out of operation to indicate a hardware fault. Should the fault later disappear, the inputs will be re-enabled. This will prevent most sudden hardware faults from affecting the measured value.

To ensure that the specified measurement accuracy is achieved, a more thorough test of the hardware will be performed as part of the continuous self-calibration procedure to identify errors which degrade the measurement accuracy. If the self-calibration of the RTD module fails, all inputs will automatically be set out of operation to indicate a hardware fault. Should the self-calibration later succeed, the inputs will be re-enabled.

Additionally, a single input will be set out of operation if the measured value is outside the specified limits (-4%...104%) or if an open-loop or a short-circuit condition is detected.

4.1.17. Relay parameterization

Local parameterization

The parameters of the relay can be set either locally via the HMI or externally via serial communication with the Relay Setting Tool. When the parameters are set locally, the setting parameters can be chosen via the hierarchical menu structure. The desired language can be selected for parameter descriptions. Refer to the Operator's Manual for further information.

External parameterization

The Relay Setting Tool is used for parameterizing the relay units. Adjusting the parameter values using the Relay Setting Tool is done off-line, after which the parameters can be downloaded to the relay via a communication port.

4.2. Design description

4.2.1. Input/output connections

All external circuits are connected to the terminals on the rear panel of the relay. Terminals X2.1-_ are dimensioned for one 0.5...6.0 mm^2 wire or for two max 2.5 mm^2 wires and terminals X3.1-_ and X4.1-_ for one 0.2...2.5 mm^2 wire or for two 0.2...1.0 mm^2 wires.

The energizing phase currents of REM 610 are connected to terminals X2.1/1-2, X2.1/3-4 and X2.1/5-6 (see table 4.2.1-1). The relay can also be used in single or two-phase applications by leaving one or two energizing inputs unoccupied.

The energizing earth-fault current of REM 610 is connected to terminals X2.1/7-8 (see table 4.2.1-1).

The input terminals of the optional RTD module are located on connection socket X3.1. The RTD sensors or thermistors are connected to terminals X3.1/7-24 (see table 4.2.1-6). Both the inner and the outer shield of the cable must be connected to the chassis earth screw between connectors X4.1 and X3.1 (lower screw). In addition, the outer shield must be connected to chassis earth at the other end of the cable as well.

Note!

Unused RTD inputs are to be short-circuited separately.

Note!

REM 610 is provided with connection socket X3.1 only if the optional RTD module has been installed.

Terminals X4.1/21-24 and X3.1/1-6 (optional) are digital input terminals (see table 4.2.1-5). The digital inputs can be used to generate a blocking signal, to unlatch output contacts or for remote control of relay settings, for instance. The requested functions are selected separately for each input in switchgroups SGB1...5. The digital inputs can also be used to trigger the disturbance recorder; this function is selected with SPA parameter V243.

The auxiliary voltage of the relay is connected to terminals X4.1/1-2 (see table 4.2.1-2). At dc supply, the positive lead is connected to terminal X4.1/1. The permitted auxiliary voltage range of the relay is marked on the front panel of the relay under the handle of the plug-in unit.

Output contacts PO1, PO2 and PO3 (restart inhibit) are heavy-duty trip contacts capable of controlling most circuit breakers (see table 4.2.1-4). The trip signals from the different protection stages are routed to the power outputs with the switches of switchgroups SGR1...SGR3. On delivery from the factory, the trip signals from all the protection stages except ThA> and ThB> are routed to both PO1 and PO2 and the restart inhibit signal to PO3.

Output contacts SO1 and SO2 can be used for signalling on start and tripping of the relay (see table 4.2.1-4). The signals to be routed to signal outputs SO1 and SO2 are selected with the switches of switchgroups SGR4 and SGR5. On delivery from the factory, the start and alarm signals from all the protection stages except ThA> and ThB> are routed to both SO1 and SO2.

The IRF contact functions as an output contact for the self-supervision system of the protection relay (see table 4.2.1-3). Under normal operating conditions the relay is energized and the contact closed (X4.1/3-5). When a fault is detected by the self-supervision system or the auxiliary voltage is disconnected, the output contact will drop off and the contact close (X4.1/3-4).

Fig. 4.2.1.-1 and Fig. 4.2.1.-2 present a rear view of REM 610, showing four connecting sockets: one for measuring transformers, one for the optional RTD module, one for power supply and one for optional serial communication.

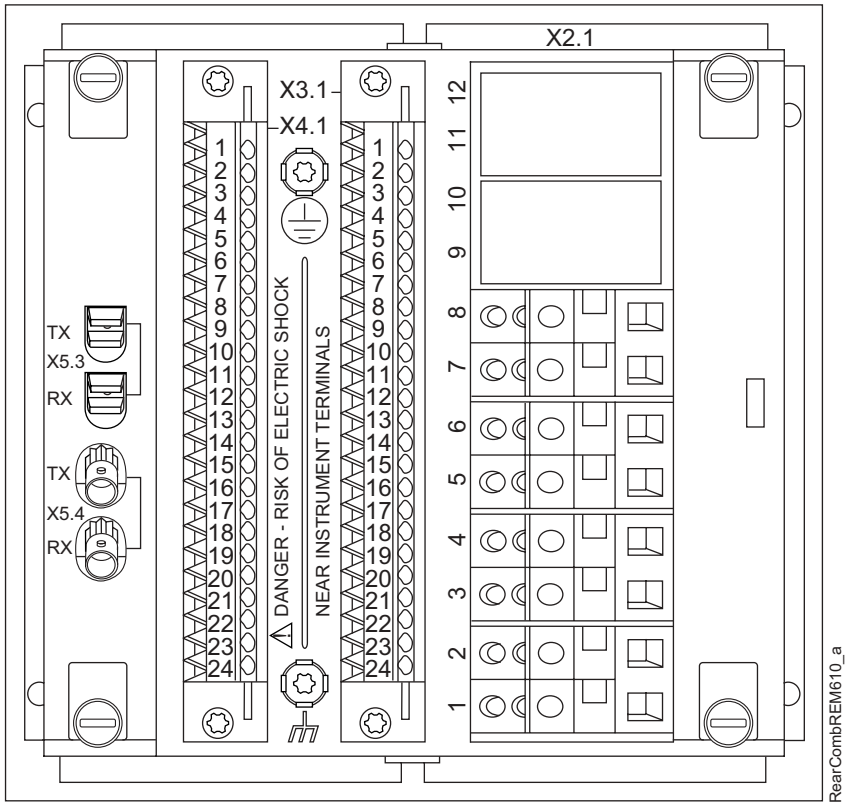


Fig. 4.2.1.-1 Rear view of REM 610 with the fibre-optic communication module for plastic and glass fibre

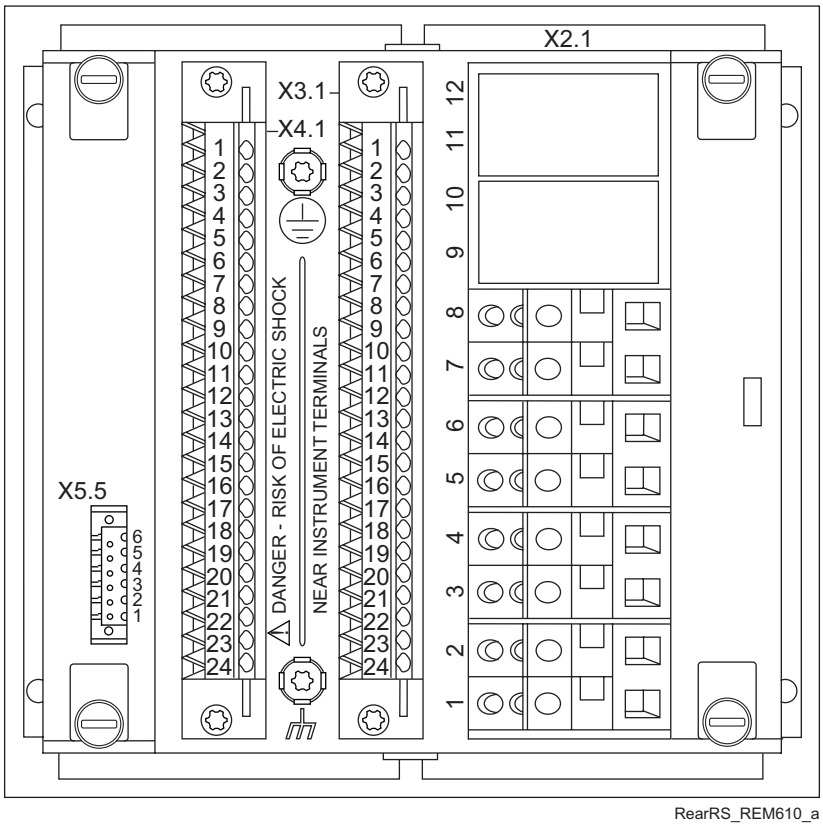


Fig. 4.2.1.-2 Rear view of REM 610 with the RS-485 communication module

Table 4.2.1-1 Inputs for phase and earth-fault currents [1)]

Terminal	Function			
	REM610x11xxxx	**REM610x15xxxx**	**REM610x51xxxx**	**REM610x55xxxx**
X2.1-1 X2.1-2	I_{L1} 1 A	I_{L1} 1 A	I_{L1} 5 A	I_{L1} 5 A
X2.1-3 X2.1-4	I_{L2} 1 A	I_{L2} 1 A	I_{L2} 5 A	I_{L2} 5 A
X2.1-5 X2.1-6	I_{L3} 1 A	I_{L3} 1 A	I_{L3} 5 A	I_{L3} 5 A
X2.1-7 X2.1-8	I_0 1 A	I_0 5 A	I_0 1 A	I_0 5 A
X2.1-9	-	-	-	-
X2.1-10	-	-	-	-
X2.1-11	-	-	-	-
X2.1-12	-	-	-	-

[1)] The value denotes the rated current for each input.

Table 4.2.1-2 Auxiliary supply voltage

Terminal	Function
X4.1-1	Input, +
X4.1-2	Input, -

Table 4.2.1-3 IRF contact

Terminal	Function
X4.1-3	IRF, common
X4.1-4	Closed; IRF, or U_{aux} disconnected
X4.1-5	Closed; no IRF, and U_{aux} connected

Table 4.2.1-4 Output contacts

Terminal	Function
X4.1-6	SO2, common
X4.1-7	SO2, NC
X4.1-8	SO2, NO
X4.1-9	SO1, common [1]
X4.1-10	SO1, NC [1]
X4.1-11	SO1, NO [1]
X4.1-12	PO3 (Restart Inhibit), NC [2]
X4.1-13	
X4.1-14	PO2, NO
X4.1-15	
X4.1-16	PO1, NO
X4.1-17	
X4.1-18	PO1 (TCS), NO
X4.1-19	
X4.1-20	-

[1] This output is intended to be used with contactor controlled motors.
[2] If the restart inhibit signal has not been routed to PO3 (SGF1/7=1), PO3 will be NO.

Table 4.2.1-5 Digital inputs

Terminal	Function
X4.1-23	DI1
X4.1-24	
X4.1-21	DI2
X4.1-22	
X3.1-1	DI3 [1]
X3.1-2	
X3.1-3	DI4 [1]
X3.1-4	
X3.1-5	DI5 [1]
X3.1-6	

[1] Optional

Table 4.2.1-6 RTD inputs (optional)

Terminal	Function
X3.1-7	RTD1, +
X3.1-8	RTD1, -
X3.1-9	RTD1, common
X3.1-10	RTD2, +
X3.1-11	RTD2, -
X3.1-12	RTD2, common
X3.1-13	RTD3, +
X3.1-14	RTD3, -
X3.1-15	RTD3, common
X3.1-16	RTD4, +
X3.1-17	RTD4, -
X3.1-18	RTD4, common
X3.1-19	RTD5, +
X3.1-20	RTD5, -
X3.1-21	RTD5, common
X3.1-22	RTD6, +
X3.1-23	RTD6, -
X3.1-24	RTD6, common

4.2.2. Serial communication connections

The optical front connection of the relay is used to connect the relay to a SPA bus via the front communication cable 1MRS050698. If a PC compatible to the IrDA® Standard specifications is used, wireless communication is possible as well. The maximum wireless operating distance depends on the transceiver of the PC.

Rear communication of REM 610 is optional and the physical connection varies with the communication option.

Plastic fibre-optic connection

If REM 610 is provided with the optional fibre-optic communication module for plastic fibre, the fibre-optic cables are connected to terminals X5.3-RX (Receiver) and X5.3-TX (Transmitter).

Table 4.2.2-1 Plastic fibre-optic rear connector

Terminal	Function
X5.3-TX	Transmitter
X5.3-RX	Receiver

RS-485 connection

If REM 610 is provided with the optional RS-485 communication module, the cable is connected to terminals X5.5/1-2 and X5.5/4-6. The connection socket is a 6-pin header-type socket and the terminals are of screw compression type.

The RS-485 communication module follows the TIA/EIA-485 standard and is intended to be used in a Daisy-chain bus wiring scheme with 2-wire, half-duplex, multi-point communication. The maximum number of devices (nodes) connected to the bus where REM 610 is being used is 32, and the maximum length of the bus is 1200 meters.

When connecting REM610 to the bus, a quality twisted pair shielded cable is to be used. The conductors of the pair are connected to A and B. If signal ground is being used for balancing potential differences between devices/nodes, a quality dual twisted pair shielded cable is to be used. In this case, one pair is connected to A and B, and one of the conductors of the other pair to signal ground. When connecting one device to another, A is connected to A and B to B.

The cable shield is to be connected directly to earth (shield GND) in one point/ device of the bus. Other devices connected to the bus should have the cable shield connected to earth via a capacitor (shield GND via capacitor).

Note!

Signal ground can only be used for balancing potential differences between devices/ nodes if all devices connected to the bus have isolated RS-485 interfaces.

The RS-485 communication module is provided with jumpers for setting bus termination and fail-safe biasing. The bus is to be terminated at both ends, which can be done by using the internal termination resistor on the communication module. The termination resistor is selected by setting jumper X5 to the ON position. If the internal termination resistor of 120 Ω is used, the impedance of the cable should be the same.

The bus is to be biased at one end to ensure fail-safe operation, which can be done using the pull-up and pull-down resistors on the communication module. The pull-up and pull-down resistors are selected by setting jumpers X3 and X4 to the ON position.

The jumpers have been set to no termination (X5 in the OFF position) and no biasing (X3 and X4 in the OFF position) as default.

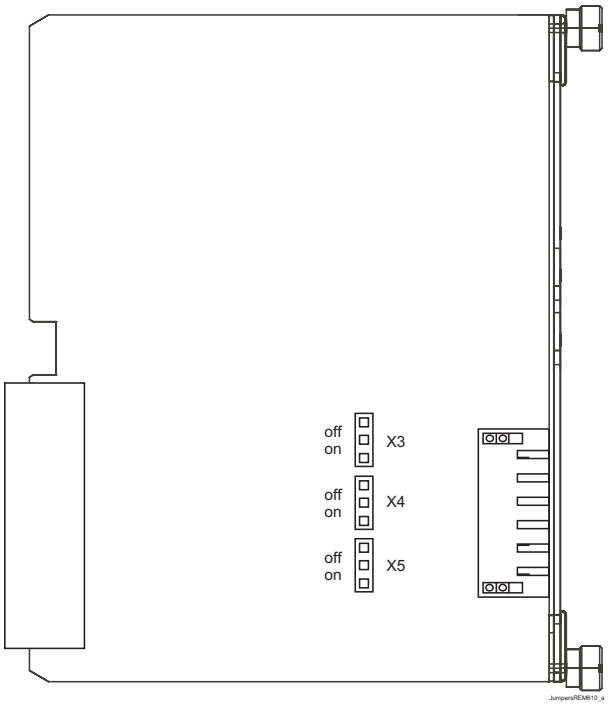


Fig. 4.2.2.-1 Jumper location on the RS-485 communication module

Table 4.2.2-2 RS-485 rear connector

Terminal	Function
X5.5-6	Data A (+)
X5.5-5	Data B (-)
X5.5-4	Signal GND (for potential balancing)
X5.5-3	-
X5.5-2	Shield GND (via capacitor)
X5.5-1	Shield GND

Combined fibre-optic connection (plastic and glass)

If REM 610 is provided with the optional fibre-optic communication module for plastic and glass fibre, the plastic fibre-optic cables are connected to terminals X5.3-RX (Receiver) and X5.3-TX (Transmitter) and the glass fibre-optic cables to terminals X5.4-RX (Receiver) and X5.4-TX (Transmitter).

The fibre-optic interface is selected with jumpers X6 and X2 located on the PCB of the communication module (see Fig. 4.2.2.-2).

Table 4.2.2-3 Transmitter selection

Transmitter	Position of jumper X6
Plastic	X5.3-TX
Glass	X5.4-TX

Table 4.2.2-4 Receiver selection

Transmitter	Position of jumper X2
Plastic	X5.3-RX
Glass	X5.4-RX

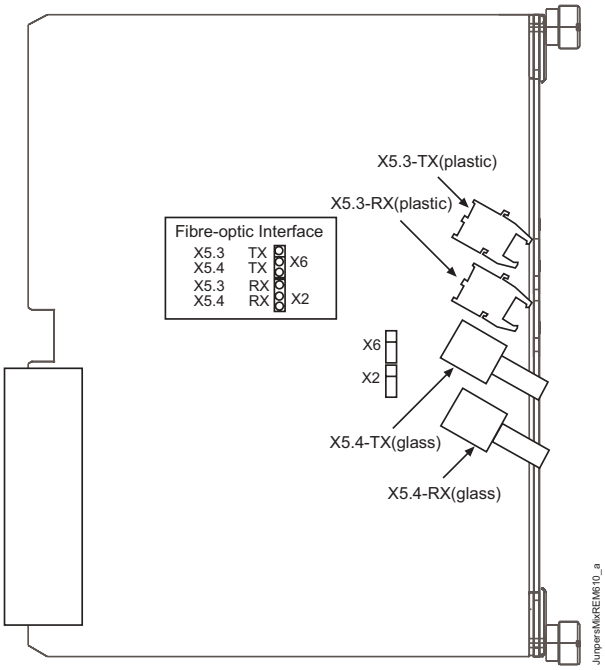


Fig. 4.2.2.-2 Jumper location on the communication module for plastic and glass fibre

Table 4.2.2-5 Fibre-optic rear connectors (plastic and glass)

Terminal	Function
X5.3-TX	Transmitter for plastic fibre
X5.3-RX	Receiver for plastic fibre
X5.4-TX	Transmitter for glass fibre
X5.4-RX	Receiver for plastic fibre

4.2.3. Technical data

Table 4.2.3-1 Dimensions [1)]

Width, frame 177 mm, case 164 mm	
Height, frame 177 mm (4U), case 160 mm	
Depth, case 149.3 mm	
Weight of the relay ~3.5 kg	
Weight of the spare unit ~1.8 kg	

1) For dimension drawings, refer to the Installation Manual (1MRS 752265-MUM).

Table 4.2.3-2 Power supply

U_{aux} rated	
• REM610BxxHxxx	Ur=100/110/120/220/240 V ac Ur=110/125/220/250 V dc
• REM610BxxLxxx	Ur=24/48/60 V dc
U_{aux} variation (temporary)	
• REM610BxxHxxx	85...110% of U_r (ac) 80...120% of U_r (dc)
• REM610BxxLxxx	80...120% of U_r (dc)
Burden of auxiliary voltage supply under quiescent (P_q)/operating condition	<9 W/13 W
Ripple in the dc auxiliary voltage	Max 12% of the dc value
Interruption time in the auxiliary dc voltage without resetting the relay	<50 ms at U_{aux} rated
Time to trip from switching on the auxiliary voltage [1)]	<350 ms
Internal over temperature limit	+100°C
Fuse type	T2A/250 V

1) Time to trip of stages I>> and I_0>.

Table 4.2.3-3 Energizing inputs

Rated frequency	50/60 Hz ± 5 Hz	
Rated current, I_n	1 A	5 A
Thermal withstand capability		
• continuously	4 A	20 A
• for 1 s	100 A	500 A
• for 10 s	25 A	100 A
Dynamic current withstand		
• half-wave value	250 A	1250 A
Input impedance	<100 mΩ	<20 mΩ

Table 4.2.3-4 Measuring range

Measured currents on phases I_{L1}, I_{L2} and I_{L3} as multiples of the rated currents of the energizing inputs	0...50 x I_n
Earth-fault current as a multiple of the rated current of the energizing input	0...8 x I_n

Table 4.2.3-5 Digital inputs

Operating range		±20% of the rated voltage
Rated voltage	DI1...DI2	DI3...DI5 (optional)
REM610BxxHxxx	110/125/220/250 V dc	
REM610BxxLxxx	24/48/60/110/125/220/250 V dc	
REM610BxxxxMx		24/48/60/110/125/220/250 V dc
Current drain		2...18 mA
Power consumption/input		<0.9 W

Table 4.2.3-6 Signal output SO1

Rated voltage	250 V ac/dc
Continuous carry	5 A
Make and carry for 3.0 s	15 A
Make and carry for 0.5 s	30 A
Breaking capacity when the control-circuit time constant L/R <40 ms, at 48/110/220 V dc	1 A/0.25 A/0.15 A
Minimum contact load	100 mA at 24 V ac/dc

Table 4.2.3-7 Signal output SO2 and self-supervision (IRF) output

Rated voltage	250 V ac/dc
Continuous carry	5 A
Make and carry for 3.0 s	10 A
Make and carry for 0.5 s	15 A
Breaking capacity when the control-circuit time constant L/R <40 ms, at 48/110/220 V dc	1 A/0.25 A/0.15 A
Minimum contact load	100 mA at 24 V ac/dc

Table 4.2.3-8 Power outputs (PO1, PO2, PO3)

Rated voltage	250 V ac/dc
Continuous carry	5 A
Make and carry for 3.0 s	15 A
Make and carry for 0.5 s	30 A
Breaking capacity when the control-circuit time constant L/R <40 ms, at 48/110/220 V dc (PO1 with both contacts connected in series)	5 A/3 A/1 A
Minimum contact load	100 mA at 24 V ac/dc
TCS	
• Control voltage range	20...265 V ac/dc
• Current drain through the supervision circuit	~1.5 mA
• Minimum voltage over a contact	20 V ac/dc (15...20 V)

Table 4.2.3-9 Enclosure class of the flush-mounted relay

Front side	IP 54
Rear side, top of the relay	IP 40
Rear side, connection terminals	IP 20

Table 4.2.3-10 RTD/analogue inputs

Supported RTD sensors	100 Ω platinum	TCR0.00385 (DIN 43760)
	250 Ω platinum	TCR 0.00385
	1000 Ω platinum	TCR 0.00385
	100 Ω nickel	TCR 0.00618 (DIN 43760)
	120 Ω nickel	TCR 0.00618
	120 Ω nickel (US)	TCR 0.00672
	10 Ω copper	TCR 0.00427
Supported PTC thermistor range	0...20 kΩ	
Maximum lead resistance (three-wire measurement)	200 Ω per lead	
Isolation	2 kV (inputs to protective earth)	
Sampling frequency	5 Hz	
Response time	<8 s	
RTD/Resistance sensing current	Maximum 4.2 mA rms 6.2 mA rms for 10 Ω copper	

Table 4.2.3-11 Environmental tests and conditions

Recommended service temperature range (continuous)	-10...+55°C
Limit temperature range (short-term)	-40...+70°C
Transport and storage temperature range	-40...+85°C according to the IEC 60068-2-48
Dry heat test	According to the IEC 60068-2-2
Dry cold test	According to the IEC 60068-2-1
Damp heat test, cyclic	According to the IEC 60068-2-30

Table 4.2.3-12 Electromagnetic compatibility tests

EMC immunity test level meets the requirements listed below	
1 MHz burst disturbance test, class III	According to the IEC 60255-22-1
• Common mode	2.5 kV
• Differential mode	1.0 kV
Electrostatic discharge test, class IV	According to the IEC 61000-4-2, IEC 60255-22-2 and ANSI C37.90.3-2001
• For contact discharge	8 kV
• For air discharge	15 kV
Radio frequency interference tests	
• Conducted, common mode	According to the IEC 61000-4-6 and IEC 60255-22-6 (2000) 10 V (rms), f=150 kHz...80 MHz
• Radiated, amplitude-modulated	According to the IEC 61000-4-3 and IEC 60255-22-3 (2000) 10 V/m (rms), f=80...1000 MHz
• Radiated, pulse-modulated	According to the ENV 50204 and IEC 60255-22-3 (2000) 10 V/m, f=900 MHz
Fast transient disturbance tests	According to IEC 60255-22-4 and IEC 61000-4-4
• Power outputs, energizing inputs, power supply	4 kV
• I/O ports	2 kV
Surge immunity test	According to the IEC 61000-4-5
• Power outputs, energizing inputs, power supply	4 kV, line-to-earth 2 kV, line-to-line
• I/O ports	2 kV, line-to-earth 1 kV, line-to-line
Power frequency (50 Hz) magnetic field IEC 61000-4-8	300 A/m continuous
Voltage dips and short interruptions	According to the IEC 61000-4-11 30%/10 ms 60%/100 ms 60%/1000 ms >95%/5000 ms
Electromagnetic emission tests	According to the EN 55011
• Conducted, RF-emission (Mains terminal)	EN 55011, class A, IEC 60255-25
• Radiated RF-emission	EN 55011, class A, IEC 60255-25
CE approval	Complies with the EMC directive 89/336/EEC and the LV directive 73/23/EEC

Table 4.2.3-13 Standard tests

Insulation tests	
Dielectric tests • Test voltage	According to the IEC 60255-5 2 kV, 50 Hz, 1 min
Impulse voltage test • Test voltage	According to the IEC 60255-5 5 kV, unipolar impulses, waveform 1.2/50 µs, source energy 0.5 J
Insulation resistance measurements • Isolation resistance	According to the IEC 60255-5 >100 MΩ, 500 V dc
Mechanical tests	
Vibration tests (sinusoidal) Shock and bump test	According to the IEC 60255-21-1, class I According to the IEC 60255-21-2, class I

Table 4.2.3-14 Data communication

Rear interface, connector X5.3, X5.4 or X5.5 • Fibre-optic or RS-485 connection • SPA bus, IEC 60870-5-103 or Modbus protocol • 9.6 or 4.8 kbps (additionally 2.4, 1.2 or 0.3 kbps for Modbus)
Front interface • Optical connection (infrared): wirelessly or via the front communication cable (1MRS050698) • SPA bus protocol • 9.6 or 4.8 kbps (9.6 kbps with front communication cable)

Auxiliary voltage

REM 610 requires a secured auxiliary voltage supply to operate. The internal power supply of the relay forms the voltages required by the relay electronics. The power supply is a galvanically isolated (flyback-type) DC/DC converter. When the auxiliary voltage is connected, the green indicator LED (ready) on the front panel will be on. For detailed information on power supply, refer to table 4.2.3-2.

The primary side of the power supply is protected with a fuse located on the PCB of the relay.

5. Setting calculations and application examples

5.1. Setting calculations

5.1.1. Protected unit scaling factor

The protected unit scaling factor for phase currents is calculated as follows:

$$Protected\ unit\ scaling\ factor = \frac{I_{N1}}{I_{NM}} \times \frac{I_{NR}}{I_{N2}}$$

where

I_{N1} = rated primary current of the CT

I_{N2} = rated secondary current of the CT

I_{NM} = rated current of the motor

I_{NR} = rated current of the relay

The rated current of the protected unit, I_n, equals the FLC of the motor provided that the protected unit scaling factor has been properly set. The rated current of the protected unit will equal that of the CT when the factor is 1.

Example 1

Rated power, P_{nm}	4500 kW
Rated voltage, U_{nm}	3300 V
Rated current, I_{nm}	930 A
CT current ratio, I_{N1}/I_{N2}	1000/5 A
Relay input, I_{NR}	5 A

The protected unit scaling factor is calculated as follows: 1000 A/930 A x 5 A/5 A = 1.075 ≈ 1.08

Example 2

Rated power, P_{nm}	900 kW
Rated voltage, U_{nm}	380 V
Rated current, I_{nm}	1650 A
CT current ratio	2000/1 A
Relay input	1 A

The protected unit scaling factor is calculated as follows: 2000 A/1650 A x 1 A/1 A = 1.212 ≈ 1.21

5.1.2. Thermal overload protection

The FLC of the motor at an ambient temperature of 40°C determines the highest permissible continuous load. In this case, an increase of five per cent in the motor current will eventually cause a trip.

Note!

If the settings of the thermal overload protection have been defined by means of the FLC of the motor instead of the internal FLC, they will be valid at an ambient temperature of 40°C.

For how the ambient temperature is used to determine the internal FLC, refer to section Thermal overload protection.

5.1.2.1. Selecting weighting factor p

Setting p to 100 per cent creates a pure single time constant thermal protection for protecting cables, for instance. In this case, the allowed stall time will be only approximately ten per cent of the safe stall time, t_{6x}, when no prior load; see Fig. 5.1.2.1.-1. At a set safe stall time of twenty seconds, the operate time when the prior load is 1 x FLC will be only two seconds, even though the motor can withstand a stall time of five seconds, for instance. To allow the use of the motor's full capacity, a lower weighting factor should be used.

Normally, approximately half of the thermal capacity is used when a motor is running at full load. By setting p to 50 per cent, the thermal overload protection will take this into account.

In special cases where the thermal overload protection is required to follow the characteristics of the object to be protected more closely and the thermal capacity of the object is very well known, a value between 50 and 100 per cent may be required.

In applications where, for instance, three cold starts vs two hot starts are allowed, setting the weighting factor to 40 per cent has at times proved useful.

Note!

Setting the weighting factor to significantly below 50 per cent may overload the object to be protected as the thermal overload protection may allow too many hot starts or the thermal history of the motor has not sufficiently been taken into account.

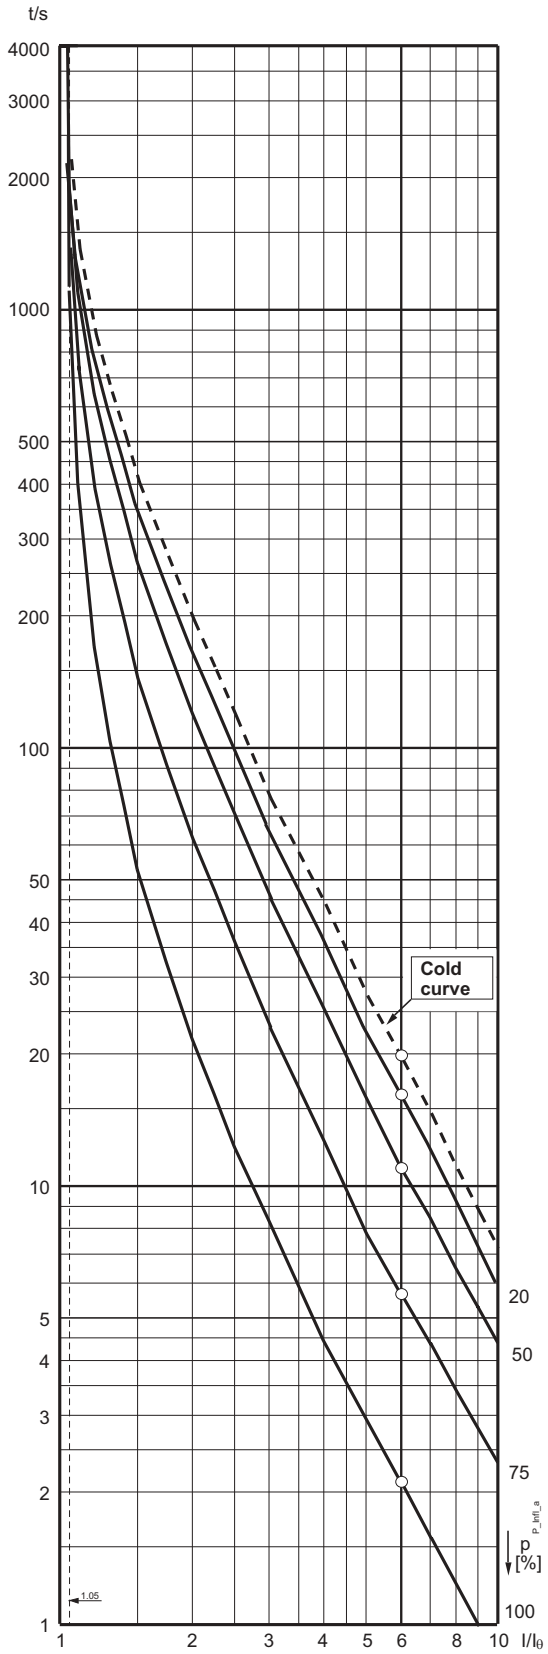


Fig. 5.1.2.1.-1 The influence of p at prior load 1 x FLC and t_{6x}=20 s

5.1.2.2. Safe stall time for hot starts

The safe stall time setting, t_{6x}, is determined according to the start-up time of the motor. The safe stall time can easily be determined from the trip curves at prior load 1 x FLC.

Normally, the safe stall time setting is selected to allow one hot or two cold starts. The appropriate trip curve is selected by means of the start-up current and start-up time (and margin) of the motor. If multiple hot starts are allowed, the total start-up time instead of a single start-up time is to be used.

The safe stall time setting can be calculated as follows:

$$t_{6x} = \frac{t}{32.15 \times \ln \left\{ \frac{\left(\frac{I_{start}}{FLC_{int}}\right)^2 - \frac{p}{100} \times \left(\frac{I_{prior}}{FLC_{int}}\right)^2}{\left(\frac{I_{start}}{FLC_{int}}\right)^2 - 1.1025} \right\}}$$

where

t = required operate time (i.e the number of hot starts x start-up time of the motor and margin)

ln = natural logarithm

I_{start} = start-up current of the motor

FLC_{int} = internal FLC (equals the FLC of the motor at an ambient temperature of 40°C)

p = weighting factor

I_{prior} = prior load current (normally equal to the FLC of the motor).

Note!

Cooling between starts is not considered in the formula above.

The operate time with the selected safe stall time setting can be calculated as follows:

$$operate\ \ time = 32.15 \times t_{6x} \times \ln \left\{ \frac{\left(\frac{I_{start}}{FLC_{int}}\right)^2 - \frac{p}{100} \times \left(\frac{I_{prior}}{FLC_{int}}\right)^2}{\left(\frac{I_{start}}{FLC_{int}}\right)^2 - 1.1025} \right\}$$

Example 1

Start-up current of the motor	6.2 x FLC
Start-up time of the motor	11 s
One hot start allowed	
Ambient temperature	40°C

At an ambient temperature of 40°C the internal FLC equals the FLC of the motor. Thus, the start-up current of the motor is 6.2 x the internal FLC.

The safe stall time setting is calculated or selected from the trip curves at prior load 1 x FLC. In the figure below, a safe stall time of 30 seconds is selected, permitting a start-up time slightly longer than the one stated by the motor manufacturer; see the figure below.

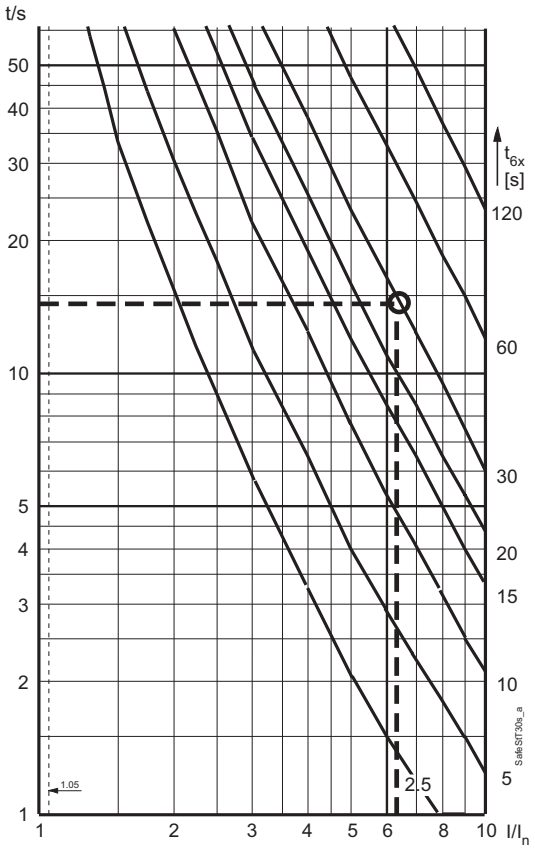


Fig. 5.1.2.2.-1 Selected safe stall time 30 s

Example 2

Start-up current of the motor	6.2 x FLC
Start-up time of the motor	11 s
One hot start allowed	
Ambient temperature	20°C

At an ambient temperature of 20°C the internal FLC is 1.09 x FLC of the motor. Thus, the start-up current of the motor is 6.2/1.09 = 5.69 x the internal FLC.

In this case, a safe stall time setting of 23 seconds is selected from the trip curves at prior load 1 x FLC, permitting a start-up time slightly longer than the one stated by the motor manufacturer; see the figure below.

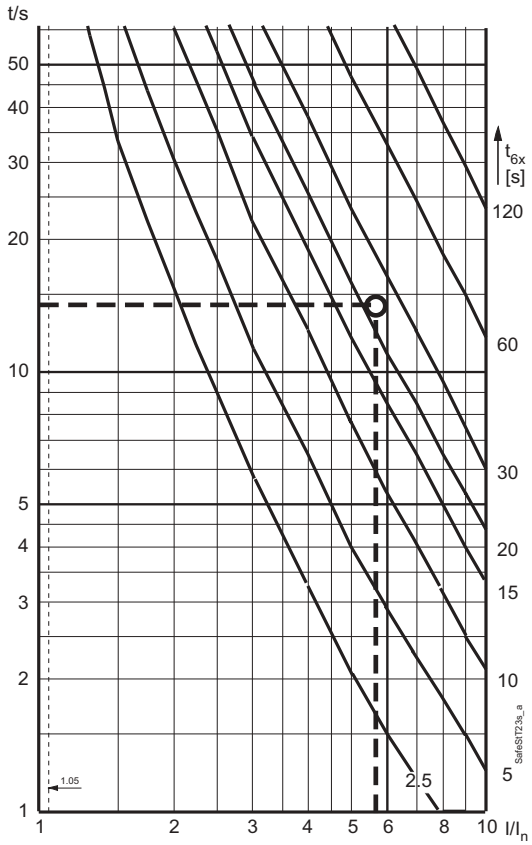


Fig. 5.1.2.2.-2 Selected safe stall time=23 s

Example 3

Start-up current of the motor	6.2 x FLC
Start-up time of the motor	11 s
Two hot starts allowed	
Ambient temperature	40°C

At an ambient temperature of 40°C the internal FLC equals the FLC of the motor. Thus, the start-up current of the motor is 6.2 x the internal FLC.

In Fig. 5.1.2.2.-3, a safe stall time setting of 60 seconds is selected from the trip curves at prior load 1 x FLC, permitting a start-up time slightly longer than twice the one stated by the motor manufacturer; see the figure below.

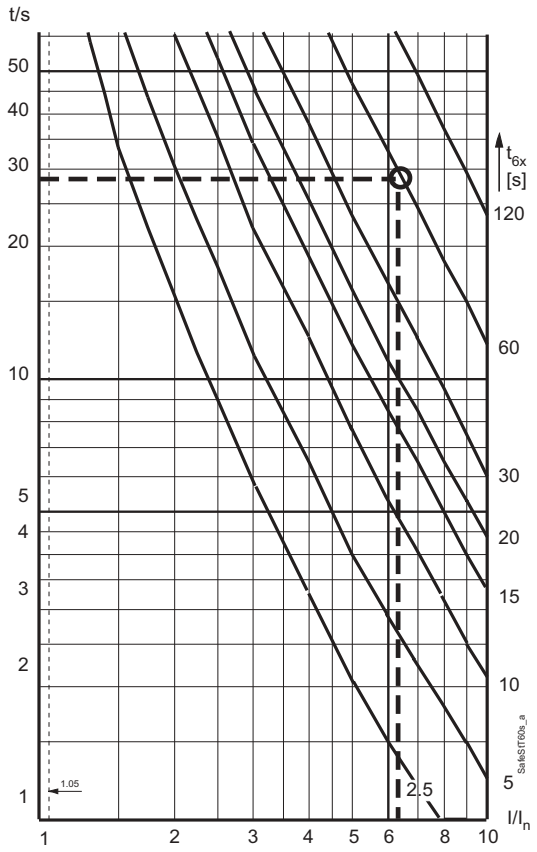


Fig. 5.1.2.2.-3 Selected safe stall time=60 s

5.1.2.3. Checking the set safe stall time for cold starts

By selecting the correct trip curve from the trip curves at no prior load according to the previously selected or calculated safe stall time setting, the total start-up time of the motor can be read from the curve. The total start-up time should permit as many cold starts as stated by the motor manufacturer.

In applications where, for instance, three cold vs two hot starts are allowed, the total start-up time of the motor may allow too many cold starts. In this case, the thermal protection can be supplemented by using the cumulative start-up time counter for limiting the number of cold starts. Alternatively, setting the weighting factor to 40 per cent, instead of to 50 per cent, has at times proved useful.

The operate time when no prior load with the selected safe stall time setting can also be calculated as follows:

$$operate\ \ time\ =\ 32.15 \times t_{6x} \times \ln\left\{\frac{\left(\frac{I_{start}}{FLC_{int}}\right)^2}{\left(\frac{I_{start}}{FLC_{int}}\right)^2 - 1.1025}\right\}$$

5.1.2.4. Checking the set safe stall time for a single start

If the safe stall time of the motor is shorter than the operate time when no prior load, a single motor start up should instead be protected by the start-up supervision.

5.1.2.5. Restart inhibit level, θ_i

The restart inhibit level can be calculated as follows:

$$\theta_i = 100\% - \left(\frac{start-up\ time\ of\ the\ motor}{operate\ time\ when\ no\ prior\ load} \times 100\% + margin \right)$$

For instance, if the start-up time of the motor is 11 seconds and the calculated operate time of the thermal protection stage when no prior load 25 seconds, one motor start up will use 11 s/25 s = 45% of the thermal capacity of the motor. Therefore, the restart inhibit level must be set to below 100% - 45% = 55%, e.g. to 50%.

5.1.2.6. Prior alarm level, θ_a

Tripping due to a beginning overload can be avoided by reducing the load of the motor at a prior alarm.

The prior alarm level can be set to a level, which will allow the use of the motor's full thermal capacity without causing a trip due to long-time overload.

Generally, the prior alarm level is set to 80…90 per cent of the trip level.

5.1.2.7. Time constant multiplier, K_c

The time constant multiplier, K_c, is the ratio of the cooling time (at motor standstill) and the heating time constant:

$$K_c = \frac{\tau_{cooling}}{\tau_{heating}}$$

Generally, the time constant multiplier of the motor is set to 4...6. However, when protecting non-rotating objects, e.g. feeder cables or transformers, for instance, the time constant multiplier is generally set to one.

5.1.3. Start-up supervision

Start-up supervision is based on thermal stress calculation by default but can also be set to be based on definite-time overcurrent protection, especially in other than motor applications.

5.1.3.1. Start-up supervision based on thermal stress calculation

The start-up current, $I_s>$, is set to equal the start-up current of the motor and the start-up time, $t_s>$, to approximately ten per cent above the start-up time of the motor in order to leave a safety margin for operation.

For instance, if the start-up current of the motor is 6.2 x FLC and the start-up time 11 seconds, $I_s>$ = 6.2 and $t_s>$ = 11 s x 1.1 = 12 s.

5.1.3.2. Checking the need for speed switch

When protecting motors of ExE-type, for instance, the safe stall time may be shorter than the start-up time of the motor, which is why a speed switch on the motor shaft is required to give information on whether the motor is accelerating during motor start up. In this case, the start-up time is set to slightly below the safe stall time.

The speed switch should be open at standstill and closed during acceleration. When the input is activated, stage $I_s^2 \times t_s/I_s>$ will be blocked. If the motor does not start to accelerate, stage $I_s^2 \times t_s$ will trip when the reference value, $I_s^2 \times t_s$, is exceeded. If start-up supervision is based on overcurrent protection, stage $I_s>$ will trip on expiration of the set operate time

However, if the safe stall time is longer than the start-up time of the motor when no prior load, a speed switch will not be required.

5.1.4. Cumulative start-up time counter

The cumulative start-up time counter functions as backup to the thermal overload protection and prevents too frequent motor start ups, i.e. ensures that the recommendations from the manufacturer are followed.

There are two values to set: the restart inhibit value in seconds, Σt_{si}, and the countdown rate of the start-up time counter, $\Delta\Sigma t_s/\Delta t$.

The restart inhibit value is calculated as follows:

$$\Sigma t_{si} = (n-1) \times t + margin$$

where

n = allowed number of motor start ups

t = start-up time of the motor (in seconds)

margin = safety margin (~10... 20%)

The countdown rate is calculated as follows:

$$\Delta\Sigma t_s = \frac{t}{t_{reset}}$$

where

t = start-up time of the motor (in seconds)

t_{reset} = time during which the maximum number of motor start ups stated by the manufacturer can be made (in hours)

If the motor manufacturer has recommended a maximum of three start ups in four hours and a start-up time of 60 seconds/start up, the restart inhibit will be activated when the third motor start up has been initiated, thus preventing a fourth motor start up. Consequently, the restart inhibit value is to be set to 130 seconds.

A maximum of three motor start ups in four hours means that the register's value should reach the set restart inhibit value four hours later to allow a new motor start up. Consequently, the register's value should decrease by 60 seconds in four hours, i.e. $\Delta\Sigma t_s/\Delta t$ = 60 s/4 h = 15 s/h.

5.1.5. Short-circuit protection

It is recommended that the set start value of stage I>> is set to be automatically doubled during motor start up. Consequently, a start value lower than the start-up current of the motor can be selected.

A start value of 70%...90% x the start-up current of the motor is normally selected. This low a set start value together with a suitable set operate time will enable tripping of the high-set overcurrent stage if overcurrent due to a locked rotor, for instance, is detected while the motor is running.

Generally, a set start value as low as 75% of the start-up current of the motor has proved useful, but if the inrush current causes tripping during motor start up, a higher set start value will be required.

5.1.6. Unbalance and phase reversal protection

The start value of the unbalance stage, I_2>, is the NPS current which the motor can continuously withstand without being damaged. The time constant, K_2, equals the motor constant, I_2^2 x t, i.e. it determines the rotor's ability to withstand heating caused by the NPS current.

The unbalance and the phase reversal protection stage can be separately selected or set out of operation. The phase reversal protection should be set out of operation in applications where the motor rotates in the opposite direction.

5.1.6.1. Selecting the start value for stage I_2>

The start value of stage I_2> is selected as stated by the motor manufacturer. If the maximum allowed NPS voltage and not the current is stated, the NPS current will be approximately the same as the product of the NPS voltage and the ratio of the start-up current and the FLC of the motor.

For instance, if the start-up current of the motor is 6 x FLC and the maximum allowed NPS voltage four per cent, the estimated NPS current will be 6 x 4% = 24%. Thus, I_2> will be 0.24 x I_n.

5.1.6.2. Selecting the time constant, K_2

The time constant can be estimated as follows:

$$K_2 = \frac{175}{(I_{start})^2}$$

where

I_{start} = start-up current of the motor x FLC

For instance, if the start-up current of the motor is 5 x FLC, the estimated time constant will be $175/5^2$ = 7.

The operate time of the unbalance stage should be set to be shorter than the safe stall time stated by the motor manufacturer in case a phase is lost.

5.1.6.3. Connection with two phase current transformers

If two-phase connection is used, it is recommended that a current corresponding to the sum of these two phases is connected to the input circuit of the missing phase; see Fig. 5.1.6.3.-1. This has two advantages: the unbalance stage does not have to be set out of operation and the current measurement is more accurate compared to two-phase measurement.

However, an earth-fault current may affect the unbalance measurement. Therefore, it is recommended that the unbalance protection is used to protect the motor against single-phasing only.

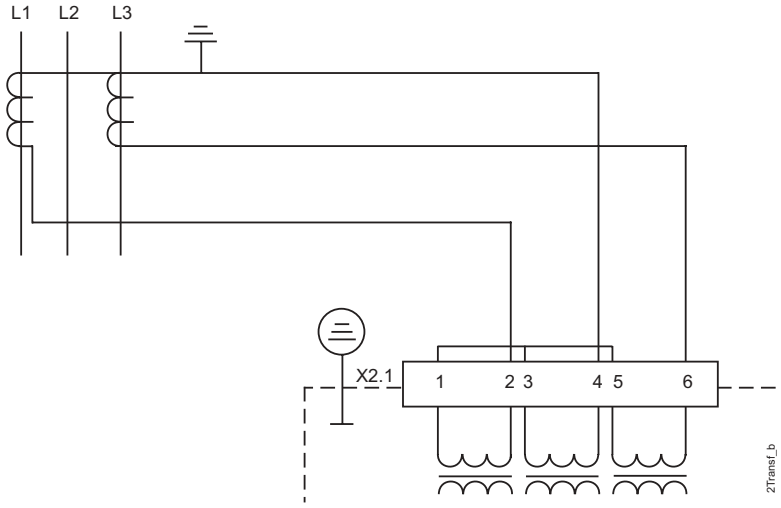


Fig. 5.1.6.3.-1 Connection with two phase current transformers

5.1.7. Earth-fault protection

In solidly or low-resistance earthed networks, the earth-fault current can be derived from the line CTs, provided that the CTs have been residually connected. In this case, the operate time of the earth-fault stage is typically set to be short, e.g. 50 ms.

To avoid damaging the contactor in a contactor controlled drive, the earth-fault stage can be set to be inhibited when one or several phase currents exceed the FLC of the motor four, six or eightfold. This can also be done to ensure that the earth-fault protection will not trip even though the line CTs would partially saturate during a motor start up. The start value of the earth-fault stage is typically set to 15...40% I_n.

A core balance transformer is recommended for isolated neutral networks and high resistance earthed networks. The use of a core balance transformer makes the earth-fault protection very sensitive and the variations in the load current will not affect the earth-fault measurement. Consequently, a relatively low start value can be selected in high resistance earthed networks.

The transformation ratio of the core balance transformer can be freely selected according to the earth-fault current, and consequently, the sensitivity of the earth-fault protection as well. Due to the extremely low burden of the relay, low

transformation ratios may be used in cable current transformers, in KOLMA type transformers even as low as 10/1 A. However, a transformation ratio of at least 50/1 A or 100/1 A is recommended.

The start value of the earth-fault stage is typically selected to be 5...30% I_n of the fully developed earth-fault current and the operate time to be 0.5...2 seconds.

If a residual connection is preferred, the start value and operate time must be set slightly higher in order to avoid possible stability problems due to unbalance in the main transformers, as the unbalance will cause virtual earth-fault currents during high phase current conditions. Also, an external stabilizing resistor can be used to compensate too weak main transformers, thus preventing them from causing earth-fault currents.

5.1.7.1. Stabilizing virtual earth-fault currents

An apparent earth-fault current caused by the difference between the phase current transformers connected in parallel may cause nuisance trippings of the earth-fault stage, especially during an overload. This can be avoided by using a stabilizing resistor in the earth-fault current circuit. The continuous power withstand of the resistor can be 30 W, for instance. The resistance value can be, for instance, 100 Ω when the 1 A input is used and 10 Ω when the 5 A input is used. The value of the knee-point voltage must be checked and should be >2 x U_{stab}. The stabilizing resistor will also slightly reduce the earth-fault sensitivity.

5.1.7.2. Increasing the sensitivity of the earth-fault protection

The sensitivity of the earth-fault protection can be increased by using a relay provided with a 1 A input instead of one with a 5 A input. This is possible in a solidly earthed network as well, because the thermal withstand capability of the current input is normally high enough.

5.1.8. Circuit-breaker failure protection

The operate time of the CBFP should be set to be longer than the circuit-breaker opening time + the resetting time of the protection stage with the longest resetting time, with the exception of the thermal, temperature and phase reversal protection stages and the external trip.

5.1.9. Temperature protection (optional)

Tripping due to a beginning thermal overload can be avoided by reducing the load of the motor at an alarm of stage ThA>/ThB>.

5.2. Application examples

5.2.1. Protecting a circuit-breaker controlled motor

Data of the squirrel cage motor stated by the manufacturer:

Rated power, P_{nm}	4500 kW
Rated voltage, U_{nm}	3300 V
Rated current, I_{nm}	930 A
Start-up current of the motor	6.2 x FLC
Start-up time of the motor	11 s
Safe stall time	19 s
Ambient temperature	40°C
CT current ratio	1000/5 A (relay input = 5 A)

Setting calculations

The protected unit scaling factor is calculated as follows:

$$\frac{1000A}{930A} \times \frac{5A}{5A} = 1.075 \approx 1.08$$

For a direct-on-line started motor, p = 50%.

At an ambient temperature of 40°C the internal FLC equals the FLC of the motor. Thus the start-up current of the motor is 6.2 x the internal FLC.

The safe stall time setting, t_{6x}, is calculated or selected from the trip curves at prior load 1 x FLC. A safe stall time setting of 30 seconds is selected, permitting a start-up time slightly longer than the one stated by the motor manufacturer.

By selecting the correct trip curve from the trip curves at no prior load according to the previously selected or calculated safe stall time setting, the total start-up time of the motor can be read from the curve. In this case, the thermal protection stage will trip in approximately 28 seconds, which will allow two cold starts.

However, as the operate time when no prior load is longer than the safe stall time of nineteen seconds, single motor start ups should instead be protected by the start-up supervision. The start-up current, $I_s>$, is set to equal the start-up current of the motor and the start-up time, $t_s>$, to approximately ten per cent above the start-up time of the motor in order to leave a safety margin for operation. Thus $t_s>$ is set to 1 s x 1.1 ≈ 12 s.

As the safe stall time is longer than the start-up time of the motor, no speed switch will be required.

As one motor start up uses 11 s/28 s ≈ 39% of the thermal capacity of the motor, the restart inhibit level, $\theta_i>$, should be set to below 61 per cent, e.g. to 55 per cent.

The prior alarm level, $\theta_a>$, is set to 80...90 per cent of the trip level.

The time constant multiplier, K_c, is set to 4.

If the start value of stage I>> is set to be doubled during motor start up (SGF3/8=1), the start value should be set below the start-up current of the motor, i.e to 75...90% x the start-up current of the motor: I>> = 0.75 x 6.2 ≈ 4.65.

5.2.2. Protecting a motor at an ambient temperature other than 40°C

Data of the squirrel cage motor stated by the manufacturer:

Rated power, P_{nm}	4500 kW
Rated voltage, U_{nm}	3300 V
Rated current, I_{nm}	930 A
Start-up current of the motor	6.2 x FLC
Start-up time of the motor	11 s
Safe stall time	19 s
Ambient temperature	20...70°C
CT current ratio	1000/5 A (relay input = 5 A)

Setting calculations

The protected unit scaling factor is calculated as follows:

$$\frac{1000A}{930A} \times \frac{5A}{5A} = 1.075 \approx 1.08$$

For a direct-on-line started motor, p = 50%.

At an ambient temperature of 40°C the internal FLC is 1.0 x FLC of the motor. Thus, the start-up current of the motor is 6.2 x the internal FLC. A safe stall time of 30 seconds is selected as in the previous application example.

If the ambient temperature is lower than 40°C, the motor can be run at a slight overload in relation to the specified maximum load at 40°C. If the ambient temperature is higher than 40°C, the continuous load must be lower than the specified maximum load at 40°C.

At an ambient temperature of 20°C the internal FLC is 1.09 x FLC of the motor. Thus, the start-up current of the motor is 6.2/1.09 = 5.69 x the internal FLC. If a safe stall time setting of 30 seconds is selected, the relay will allow two hot starts instead of one. If this is unacceptable, however, and only one hot start is to be allowed, a safe stall time setting of 23 seconds is to be selected instead.

At an ambient temperature of 65°C the internal FLC is 0.75 x the FLC of the motor. Thus, the start-up current of the motor is 6.2/0.75 = 8.27 x the internal FLC. If a safe stall time setting of 30 seconds and a prior load of 0.75 x the FLC of the motor are selected, the relay will not allow a hot start until the motor has been at standstill for several minutes. However, if a hot start is to be allowed, a safe stall time setting of approximately 50 seconds is to be selected instead.

All other settings are as in the previous application example.

5.2.3. Protecting a contactor controlled motor

Data of the squirrel cage motor stated by the manufacturer:

Rated power, P_{nm}	900 kW
Rated voltage, U_{nm}	380 V
Rated current, I_{nm}	1650 A
Start-up current of the motor	6.0 x I_{nm}
Two cold starts allowed	
Start-up time of the motor	9 s
Safe stall time	21 s
Ambient temperature	50°C
CT current ratio	2000/5 A (relay input = 5 A)

Setting calculations

The protected unit scaling factor is calculated as follows:

$$\frac{2000A}{1650A} \times \frac{5A}{5A} = 1.212 \approx 1.21$$

For a direct-on-line started motor, p = 50%.

At an ambient temperature of 50°C the internal FLC is 0.9 x FLC of the motor. Thus, the start-up current of the motor is 6.0/0.9 = 6.67 x the internal FLC.

The safe stall time setting, t_{6x}, is calculated or selected from the trip curves at prior load 1 x FLC. A safe stall time setting of 25 seconds is selected, permitting a start-up time slightly longer than the one stated by the motor manufacturer.

By selecting the correct trip curve from the trip curves at no prior load according to the previously selected or calculated safe stall time setting, the total start-up time of the motor can be read from the curve. In this case, the thermal protection stage will trip in approximately 20 seconds, which will allow two cold starts.

As the operate time when no prior load is shorter than the safe stall time of 21 seconds, no start-up supervision will be required to protect the motor against single start ups. Still, start-up supervision is recommended in order to shorten the operate time in case of a locked rotor condition.

The start-up current, $I_s>$, is set to equal the start-up current of the motor and the start-up time, $t_s>$, to approximately ten per cent above the start-up time of the motor in order to leave a safety margin for operation. Thus $t_s>$ is set to 9 s x 1.1 ≈ 10 s.

As the safe stall time is longer than the start-up time of the motor, no speed switch will be required.

As one motor start-up uses 9 s/20 s ≈ 45% of the thermal capacity of the motor, the restart inhibit level, $\theta_i>$, should be set to below 55 per cent, e.g. to 50 per cent.

The prior alarm level, $\theta_a>$, is set to 80...90 per cent of the trip level.

The time constant multiplier, K_c, is set to 4...6.

The high-set overcurrent stage should be set out of operation to prevent the contactor in a contactor controlled drive from operating at too high phase currents. In addition, to avoid damaging the contactor, the earth-fault stage should be set to be inhibited when one or several phase currents exceed the FLC of the motor sixfold (SGF4/1 = 1, SGF4/2 = 0). During high phase current conditions the protection will be based on the backup fuses.

5.2.4. Protecting non-rotating objects

In other than motor applications, start-up supervision is usually set to be based on definite-time overcurrent protection (SGF3/6=1) or on thermal stress calculation (start criterion $I_L > I_s$). If start-up supervision is set to be based on thermal stress calculation (SGF3/6=0) and stage $I_s^2 \times t_s$ is set to start when one or several phase currents exceed the set start value (SGF3/7=1), the tripping of stage $I_s^2 \times t_s$ will be similar to that at the IDMT characteristic “extremely inverse”.

If a core balance transformer is used for measuring the earth-fault current, refer to section 5.1.7. Earth-fault protection.

When protecting objects without hot spot tendencies, weighting factor p is set to 100 per cent. When setting t_{6x}, the expression $\tau = 32.15 \times t_{6x}$ can be used.

Usually, the time constant multiplier, K_c, is set to 1.

5.2.5. Earth-fault protection in an isolated or a compensated network

Data of the motor stated by the manufacturer:

Network earth-fault current at fully developed earth-fault	10 A isolated network
Required earth-fault sensitivity	20% (=2A)

Due to the high sensitivity required, a residual connection cannot be used, but instead, a core balance transformer with a CT ratio of 100/1.

The start value of stage $I_0>$ is calculated as follows:

$$20\% \times 10A \times \frac{1A}{100A} = 2\% \times 1A$$

Thus, $I_0> = 2\%$ and the 1A input is used.

5.2.6. Earth-fault protection in a solidly earthed network

Data of the motor stated by the manufacturer:

Rated current, I_{nm}	1650 A
CT current ratio	2000/5 A (relay input = 5 A)
Required earth-fault sensitivity	20% I_{nm}

The start value of stage $I_0>$ is calculated as follows:

$$20\% \times 1650A \times \frac{5A}{2000A} = 16\% \times 5A$$

Thus, $I_0>$ = 16% and the 5A input is used.

The operate time of the earth-fault stage is set to 50 ms when the network is solidly earthed.

If the drive is contactor controlled, refer to section Protecting a contactor controlled motor.

6. Ordering information

When ordering REM 610 protection relays and/or accessories, please specify the following:

- Order number
- HMI language set number
- Quantity

The order number identifies the protection relay type and hardware as described in the figures below and is labelled on the marking strip under the lower handle of the relay.

Use the ordering key in Fig. 6.-1 to generate the order number when ordering complete protection relays.

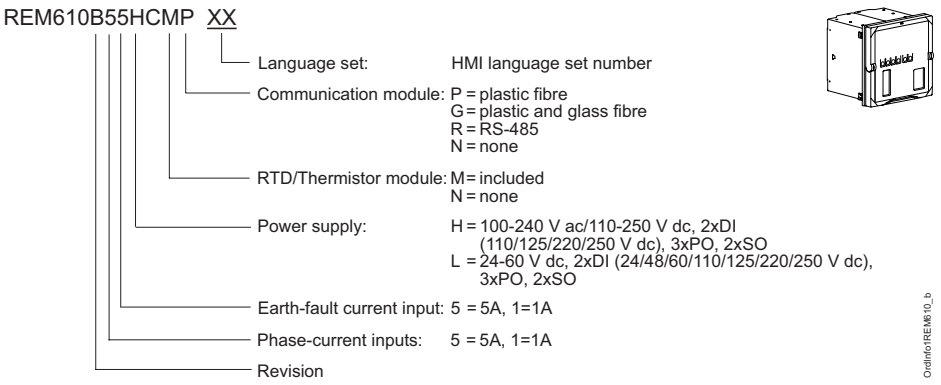


Fig. 6.-1 Ordering key for complete relays

Use the ordering key in Fig. 6.-2 to generate the order number when ordering spare units.

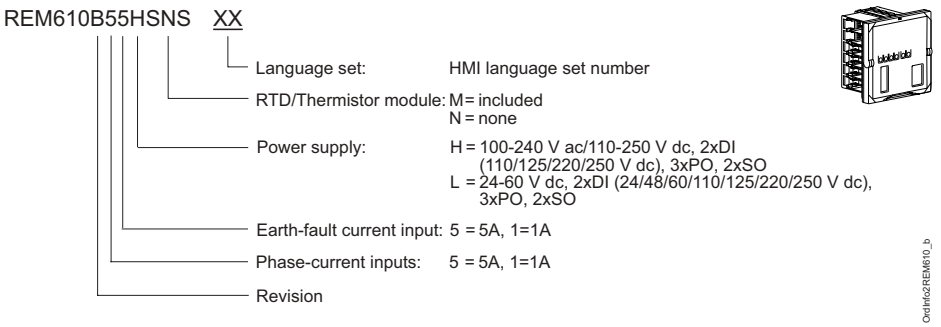


Fig. 6.-2 Ordering key for spare units

HMI language set numbers, corresponding terminology and languages included, are described in table 6.-1.

Table 6.-1 HMI language set numbers

Language set number	Terminology	Languages
01	IEC	English, Svenska, Suomi
02	IEC	English, Deutsch, Francais, Italiano, Español
11	ANSI	English (US), Español, Portuguese

The following accessories are available:

Item	Order number
Semi-flush mounting kit	1MRS050696
Inclined (/ 25^{o}) semi-flush mounting kit	1MRS050831
Wall mounting kit	1MRS050697
19” Rack mounting kit, side-by-side	1MRS050695
19" Rack mounting kit, single relay	1MRS050694
19" Rack mounting kit for single relay and RTXP18	1MRS050783
Front communication cable	1MRS050698

7. Revision history of REM 610

7.1. Revision identification

The different revisions of REM 610 may include functional additions and changes to the product.

Product	Revision	Release
REM 610	A	Q4/2003
	B	Q1/2005

7.2. Changes and additions to the earlier released revision A

General

- The product can be ordered with different language sets using IEC or ANSI terminology
- Current condition added for external triggering of CBFP
- Time synchronization via a digital input added
- Warning signal from TCS can be routed to SO2
- Reading of event records via Modbus

Hardware

- Low voltage power supply option added
- Combined glass and plastic communication option added

8. References

Other available manuals:

- Operator’s Manual, 1MRS 752264-MUM
- Installation Manual, 1MRS 752265-MUM

9. Abbreviations

ANSI	American National Standards Institute
ASCII	American Standard Code for Information Interchange
CBFP	Circuit-breaker failure protection
CD	Change detect
CPU	Central Processing Unit
CRC	Cyclical Redundancy Check
CT	Current transformer
DI	Digital input
EMC	Electromagnetic compatibility
FLC	Full load current
FR	Fault record
GI	General interrogation
HMI	Human-Machine Interface
HR	Holding register
IDMT	Inverse definite minimum time
IEC	International Electrotechnical Commission
IEC_103	Standard IEC 60870-5-103
IR	Input registers
IRF	Internal relay fault
LCD	Liquid Crystal Display
LED	Light-emitting diode
LRC	Longitudinal Redundancy Check
LSB	Least significant bit
MSB	Most significant bit
MV	Medium Voltage
NC	Normally closed
NO	Normally open
NPS	Negative-phase-sequence
PC	Personal Computer
PCB	Printed Circuit Board
PLC	Programmable Logical Controller
PO1, PO2, PO3	Power outputs
REV	Phase reversal
RMS	Root Mean Square
RTD	Resistive Temperature Detector
RTU	Remote Terminal Unit
SGB	Switchgroups for digital inputs
SGF	Switchgroups for functions
SGL	Switchgroups for programmable LEDs
SGR	Switchgroups for output contacts
SO1, SO2	Signal outputs

TCR	Temperature coefficient of resistance
TCS	Trip-circuit supervision
UDR	User-defined register

10. Check lists

Table 10.-1Setting group 1

Variable	Group/ Channel 1 (R, W, P)	Setting range	Default setting	Customer's setting
Safe stall time	1S1	2...120 s	2 s	
Weighting factor	1S2	20...100%	50%	
Time constant multiplier	1S3	1...64	1	
Prior alarm level	1S4	50...100%	95%	
Restart inhibit level	1S5	20...80%	40%	
Ambient temperature	1S6	0...70°C	40°C	
Start-up current for motor or start value of stage I_s>	1S7	1.00…10.0 x I_n	1.00 x I_n	
Start-up time for motor or operate time of stage I_s>	1S8	0.30...80.0 s	0.30 s	
Start value of stage I>>	1S9	0.50...20.0 x I_n	1.00 x I_n	
Operate time of stage I>>	1S10	0.05...30.0 s	0.05 s	
Start value of stage I_0>	1S11	1.0...100% I_n	1.0% I_n	
Operate time of stage I_0>	1S12	0.05...300 s	0.05 s	
Start value of stage I<	1S13	30...80% I_n	50% I_n	
Operate time of stage I<	1S14	2...600 s	2 s	
Start value of stage I_2>	1S15	0.10…0.50 x I_n	0.20 x I_n	
Time constant of stage I_2> at IDMT characteristic	1S16	5...100	5	
Restart inhibit value	1S17	5...500 s	5 s	
Countdown rate of start-up time counter	1S18	2...250 s/h	2 s/h	
Operate time of CBFP	1S19	0.10...60.0 s	0.10 s	
Alarm value Ta1>	1S20	0...200°C	0°C	
Operate time ta1>	1S26	1...100 s	1 s	
Trip value Tp1>	1S32	0...200°C	0°C	
Operate time tp1>	1S38	1...100 s	1 s	
Alarm value Ta2>	1S21	0...200°C	0°C	
Operate time ta2>	1S27	1...100 s	1 s	
Trip value Tp2>	1S33	0...200°C	0°C	
Operate time tp2>	1S39	1...100 s	1 s	
Alarm value Ta3>	1S22	0...200°C	0°C	
Operate time ta3>	1S28	1...100 s	1 s	
Trip value Tp3>	1S34	0...200°C	0°C	
Operate time tp3>	1S40	1...100 s	1 s	
Alarm value Ta4>	1S23	0...200°C	0°C	
Operate time ta4>	1S29	1...100 s	1 s	
Trip value Tp4>	1S35	0...200°C	0°C	
Operate time tp4>	1S41	1...100 s	1 s	
Alarm value Ta5>	1S24	0...200°C	0°C	
Operate time ta5>	1S30	1...100 s	1 s	
Trip value Tp5>	1S36	0...200°C	0°C	
Operate time tp5>	1S42	1...100 s	1 s	
Alarm value Ta6>	1S25	0...200°C	0°C	

Table 10.-1Setting group 1

Variable	Group/ Channel 1 (R, W, P)	Setting range	Default setting	Customer's setting
Operate time ta6>	1S31	1...100 s	1 s	
Trip value Tp6>	1S37	0...200°C	0°C	
Operate time tp6>	1S43	1...100 s	1 s	
Trip value Thp1>	1S44	0.1...15.0 kΩ	0.1 kΩ	
Trip value Thp2>	1S45	0.1...15.0 kΩ	0.1 kΩ	
Checksum, SGF 1	1S61	0...255	0	
Checksum, SGF 2	1S62	0...255	0	
Checksum, SGF 3	1S63	0...255	2	
Checksum, SGF 4	1S64	0...15	0	
Checksum, SGF 5	1S65	0...255	0	
Checksum, SGB 1	1S71	0...16383	0	
Checksum, SGB 2	1S72	0...16383	0	
Checksum, SGB 3	1S73	0...16383	0	
Checksum, SGB 4	1S74	0...16383	0	
Checksum, SGB 5	1S75	0...16383	0	
Checksum, SGR 1	1S81	0...524287	6826	
Checksum, SGR 2	1S82	0...524287	6826	
Checksum, SGR 3	1S83	0...524287	0	
Checksum, SGR 4	1S84	0...524287	9557	
Checksum, SGR 5	1S85	0...524287	9557	
Checksum, SGL 1	1S91	0...1048575	4	
Checksum, SGL 2	1S92	0...1048575	8	
Checksum, SGL 3	1S93	0...1048575	0	
Checksum, SGL 4	1S94	0...1048575	0	
Checksum, SGL 5	1S95	0...1048575	0	
Checksum, SGL 6	1S96	0...1048575	0	
Checksum, SGL 7	1S97	0...1048575	0	
Checksum, SGL 8	1S98	0...1048575	0	

Table 10.-2Setting group 2

Variable	Group/ Channel 2 (R, W, P)	Setting range	Default setting	Customer's setting
Safe stall time	2S1	2...120 s	2 s	
Weighting factor	2S2	20...100%	50%	
Time constant multiplier	2S3	1...64	1	
Prior alarm level	2S4	50...100%	95%	
Restart inhibit level	2S5	20...80%	40%	
Ambient temperature	2S6	0...70°C	40°C	
Start-up current for motor or start value of stage I_s>	2S7	1.00…10.0 x I_n	1.00 x I_n	
Start-up time for motor or operate time of stage I_s>	2S8	0.30...80.0 s	0.30 s	
Start value of stage I>>	2S9	0.50...20.0 x I_n	1.00 x I_n	
Operate time of stage I>>	2S10	0.05...30.0 s	0.05 s	
Start value of stage I_0>	2S11	1.0...100% I_n	1.0% I_n	

Table 10.-2Setting group 2

Variable	Group/ Channel 2 (R, W, P)	Setting range	Default setting	Customer's setting
Operate time of stage I_0>	2S12	0.05...300 s	0.05 s	
Start value of stage I<	2S13	30...80% I_n	50% I_n	
Operate time of stage I<	2S14	2...600 s	2 s	
Start value of stage I_2>	2S15	0.10…0.50 x I_n	0.20 x I_n	
Time constant of stage I_2> at IDMT characteristic	2S16	5...100	5	
Restart inhibit value	2S17	5...500 s	5 s	
Countdown rate of start-up time counter	2S18	2...250 s/h	2 s/h	
Operate time of CBFP	2S19	0.10...60.0 s	0.10 s	
Alarm value Ta1>	2S20	0...200°C	0°C	
Operate time ta1>	2S26	1...100 s	1 s	
Trip value Tp1>	2S32	0...200°C	0°C	
Operate time tp1>	2S38	1...100 s	1 s	
Alarm value Ta2>	2S21	0...200°C	0°C	
Operate time ta2>	2S27	1...100 s	1 s	
Trip value Tp2>	2S33	0...200°C	0°C	
Operate time tp2>	2S39	1...100 s	1 s	
Alarm value Ta3>	2S22	0...200°C	0°C	
Operate time ta3>	2S28	1...100 s	1 s	
Trip value Tp3>	2S34	0...200°C	0°C	
Operate time tp3>	2S40	1...100 s	1 s	
Alarm value Ta4>	2S23	0...200°C	0°C	
Operate time ta4>	2S29	1...100 s	1 s	
Trip value Tp4>	2S35	0...200°C	0°C	
Operate time tp4>	2S41	1...100 s	1 s	
Alarm value Ta5>	2S24	0...200°C	0°C	
Operate time ta5>	2S30	1...100 s	1 s	
Trip value Tp5>	2S36	0...200°C	0°C	
Operate time tp5>	2S42	1...100 s	1 s	
Alarm value Ta6>	2S25	0...200°C	0°C	
Operate time ta6>	2S31	1...100 s	1 s	
Trip value Tp6>	2S37	0...200°C	0°C	
Operate time tp6>	2S43	1...100 s	1 s	
Trip value Thp1>	2S44	0.1...15.0 kΩ	0.1 kΩ	
Trip value Thp2>	2S45	0.1...15.0 kΩ	0.1 kΩ	
Checksum, SGF 1	2S61	0...255	0	
Checksum, SGF 2	2S62	0...255	0	
Checksum, SGF 3	2S63	0...255	2	
Checksum, SGF 4	2S64	0...15	0	
Checksum, SGF 5	2S65	0...255	0	
Checksum, SGB 1	2S71	0...16383	0	
Checksum, SGB 2	2S72	0...16383	0	
Checksum, SGB 3	2S73	0...16383	0	
Checksum, SGB 4	2S74	0...16383	0	
Checksum, SGB 5	2S75	0...16383	0	

Table 10.-2Setting group 2

Variable	Group/ Channel 2 (R, W, P)	Setting range	Default setting	Customer's setting
Checksum, SGR 1	2S81	0...524287	6826	
Checksum, SGR 2	2S82	0...524287	6826	
Checksum, SGR 3	2S83	0...524287	0	
Checksum, SGR 4	2S84	0...524287	9557	
Checksum, SGR 5	2S85	0...524287	9557	
Checksum, SGL 1	2S91	0...1048575	4	
Checksum, SGL 2	2S92	0...1048575	8	
Checksum, SGL 3	2S93	0...1048575	0	
Checksum, SGL 4	2S94	0...1048575	0	
Checksum, SGL 5	2S95	0...1048575	0	
Checksum, SGL 6	2S96	0...1048575	0	
Checksum, SGL 7	2S97	0...1048575	0	
Checksum, SGL 8	2S98	0...1048575	0	

Table 10.-3Control parameters

Description	Parameter (channel 0)	Setting range	Default setting	Customer's setting
PU scale (protected unit scaling factor)	V103	0.50...2.50	1.00	
Rated frequency	V104	50 or 60 Hz	50 Hz	
Time setting range for demand values in minutes	V105	0...999 min	10 min	
Non-volatile memory settings	V106	0...63	63	
Time setting for disabling new trip indications on the LCD	V108	0...999 min	60 min	
Trip-circuit supervision	V113	0 = not in use 1 = in use		
Sensor/thermistor selection for input RTD1	V121	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C 8 = PTC 0...20 kΩ	0	
Sensor selection for input RTD2	V122	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C	0	

Table 10.-3Control parameters

Description	Parameter (channel 0)	Setting range	Default setting	Customer's setting
Sensor selection for input RTD3	V123	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C	0	
Sensor/thermistor selection for input RTD4	V124	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C 8 = PTC 0...20 kΩ	0	
Sensor selection for input RTD5	V125	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C	0	
Sensor selection for input RTD6	V126	0 = not in use 1 = Pt100 -45...+150°C 2 = Pt250 -45...+150°C 3 = Pt1000 -45...+150°C 4 = Ni100 -45...+250°C 5 = Ni120 -45...+250°C 6 = Cu10 -45...+150°C 7 = Ni120US -45...+250°C	0	
Remote control of settings	V150	0 = setting group 1 1 = setting group 2	0	
Unit address of the relay	V200	1...254	1	
Data transfer rate (SPA), kbps	V201	9.6/4.8	9.6	
Rear communication protocol	V203	0 = SPA 1 = IEC_103 2 = Modbus RTU 3 = Modbus ASCII	0	
Connection type	V204	0 = loop 1 = star	0	
Line-idle state	V205	0 = light off 1 = light on	0	
Optional communication module	V206	0 = not in use 1 = in use	0	

Table 10.-4Parameters for the disturbance recorder

Description	Parameter (channel 0)	Setting range	Default setting	Customer's setting
Sampling rate	M15	800/960 Hz 400/480 Hz 50/60 Hz	800 Hz	
Station identification/unit number	M18	0...9999	0	
Name of the motor drive	M20	Max 16 characters	- ABB -	
Analogue channel conversion factor and unit for I_{L1}, I_{L2} and I_{L3}	M80, M81	Factor 0...65535, unit (A, kA), e.g. 10,kA	00001,In	
Analogue channel conversion factor and unit for the earth-fault current	M83	Factor 0...65535, unit (A, kA), e.g. 10,kA	00001,In	
Internal trigger signals' checksum	V236	0...8191	2728	
Internal trigger signal's edge	V237	0...8191	0	
Checksum of internal signal storing mask	V238	0...8191	6842	
Post-triggering recording length	V240	0...100%	50%	
External trigger signal's checksum	V241	0...31	0	
External trigger signal's edge	V242	0...31	0	
Checksum of external signal storing mask	V243	0...31	0	

ABB Oy
Distribution Automation
P.O. Box 699
FI-65101 Vaasa
FINLAND
Tel. +358 10 22 11
Fax. +358 10 224 1094
www.abb.com/substationautomation

1MRS 752263-MUM EN 03.2005