DRAWING NUMBER	DO NOT SCALE
NPWD128A	

ISS	DATE	CHANGE	APPROVAL	ZONE
A	27/01/2015	ORIGINAL ISSUE		

* keep wires 1 & 2 short as quoted on the ballast

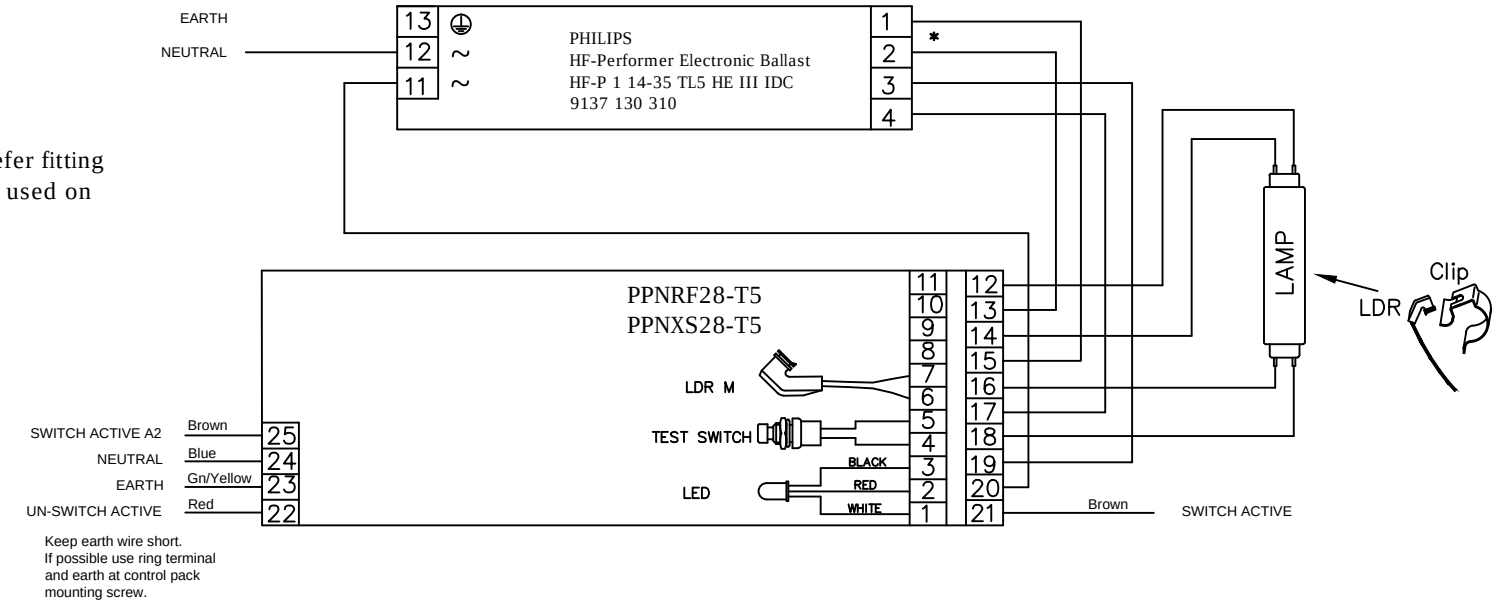

For EMC filter connections refer fitting sample. only 1 EMC filters is used on Un-switched Active

DATA, RF ANTENNA & BATTERY PACK CONNECTIONS NOT SHOWN

NOTES:

1. Wiring status: Draft - Not tested. The ballast / power pack combination has not been wired up and tested to confirm functional compatibility.
2. This wiring diagram is provided in good faith and the best of our knowledge at the time of publication. Thomas and Betts does not give any warranty or representation as to the accuracy, reliability or completeness of the information. Thomas and Betts shall not be liable for any loss or damage arising in any way from or in connection with any information provided or omitted, or from anyone acting or refraining to act in reliance on this information.
3. Changes to ballast specification by the manufacturer are beyond our control and may cause adverse effect on the performance, EMC issue and compatibility issue. Consult Thomas and Betts for further advise.

DRAWN	G.K.Grover
CHECKED	-------
APPROVED	G.K.Grover
DATE:	27/01/15
DRAWING STD AS 1100	

Thomas&Betts
A Member of the ABB Group
© ABN 62074810898 23A NYRANG ST, LIDCOMBE NSW 2141 AUSTRALIA

TITLE
Wiring diagram using PPNRF28-T5 with PHILIPS HF-Performer 1 x 28W HF-P 1 14-35 TL5 HE III IDC Electronic Ballast

ALSO USED ON	DRAWING NUMBER	SHEET SIZE
PPNXS28-T5	NPWD128A	A3

SCALE N.T.S. | SHEET 1 OF 1