

For TED Line Molded Case Circuit Breakers

Mounting Lugs TCAL12 TC012 TCAL14 TCAL15

For satisfactory performance, lugs must be securely fastened to terminal straps.


Assembly Procedure:

1. Back screw out fully.




TCAL14

2. Slip lug over terminal strap.

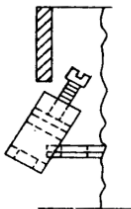

3. Fasten retaining screw.

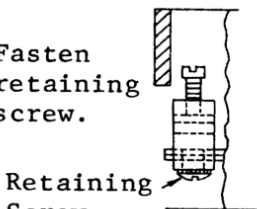

Retaining Screw

In making connections with aluminum wire use joint compound recommended by wire manufacturer.

These instructions do not purport to cover all details or variations in equipment nor, to provide every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired, or should particular problems arise that are not covered sufficiently for the purchaser's purposes, the matter should be referred to ABB Company.