


NOTES:


1. Prior to any installation in a classified hazardous location, verify installation methods by the Control Drawing referenced on the product's name tag.

Recommended Location for MultiTech® Modem
(In front, as shown, or mounted inside of the
Upper Tray)

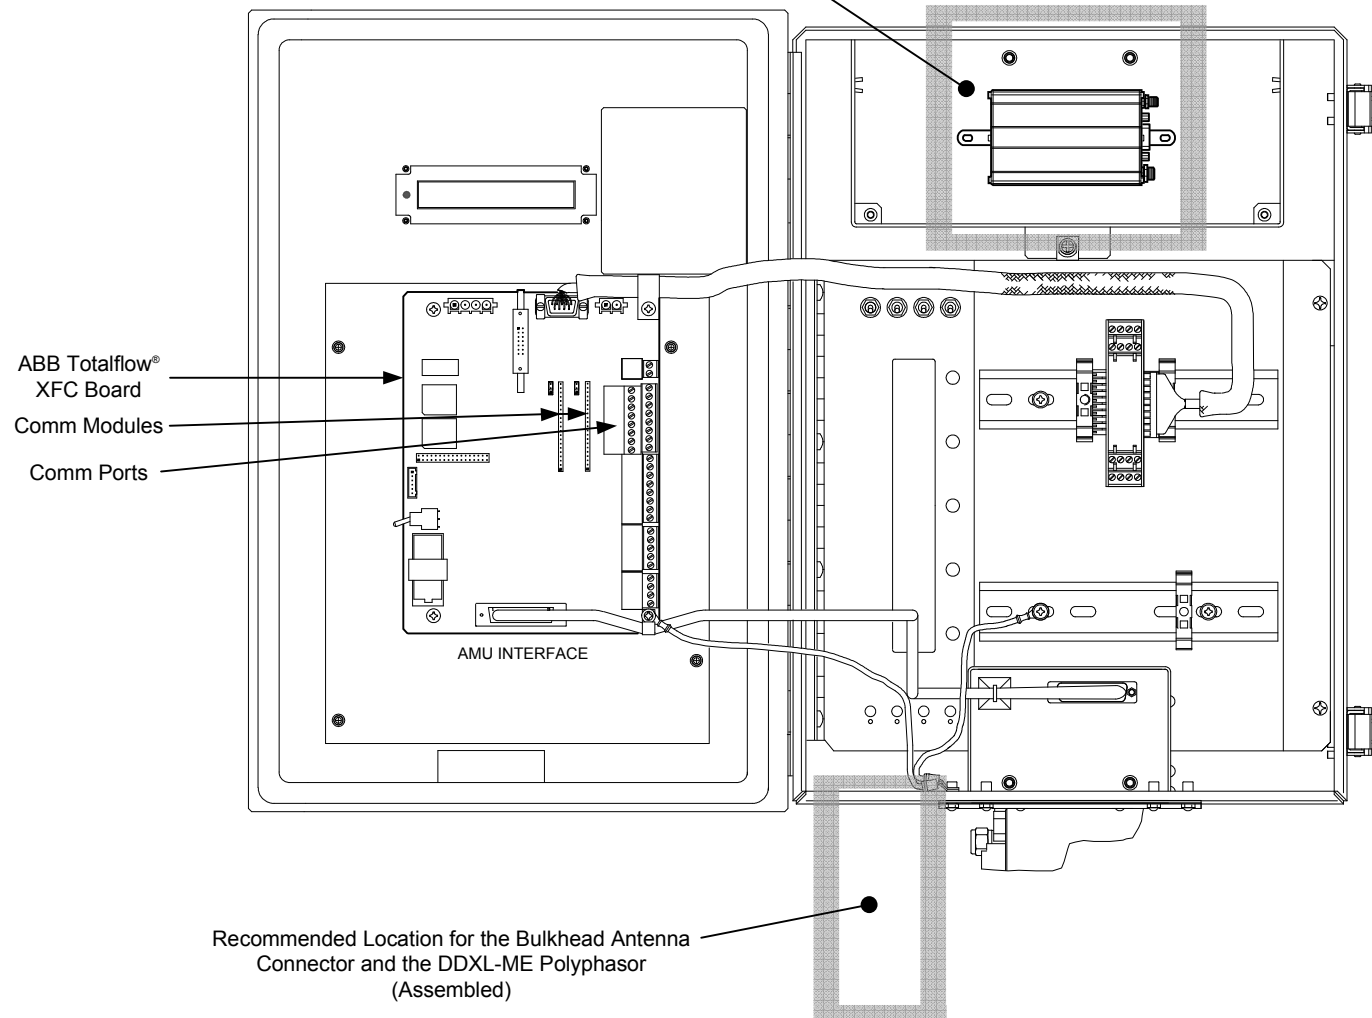

Recommended Location for the Bulkhead Antenna
Connector and the DDXL-ME Polyphasor
(Assembled)

REF: N/A

 TOTALFLOW Products	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
	L17676	UD	INSIDE BOX VIEW OF MODEM AND ANTENNA CONNECTION INSTALLATION FOR X-SERIES ENCLOSURE	2102371	AA	1 OF 1