
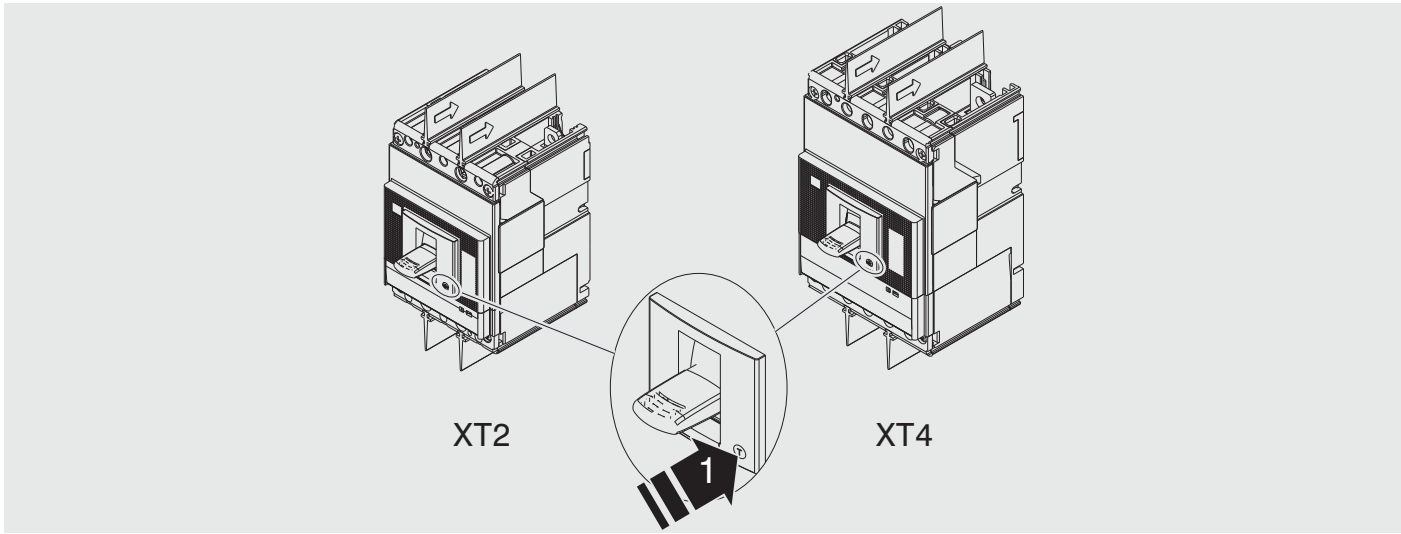
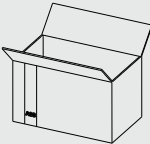









SACE XT2 - XT4



Internal Module Ekip COM Modbus RTU, Ekip COM Modbus RTU STA



XT2 - XT4







		Ekip COM Modbus RTU XT2 - XT4 F/P - W	Ekip COM Modbus RTU STA XT2 - XT4	Ekip COM Modbus RTU STA XT2 - XT4 W
A B C1 L=30mm			1	1
		1		
		1		

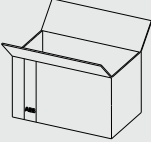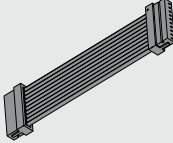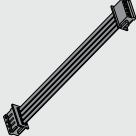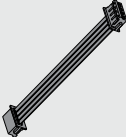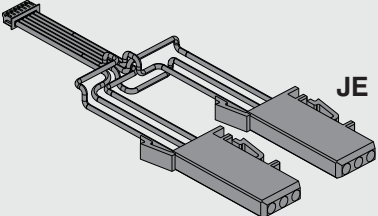
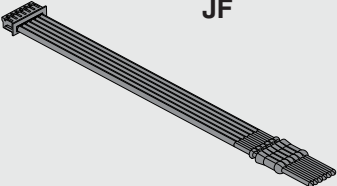
		Ekip COM Modbus RTU XT2 - XT4 F/P - W	Ekip COM Modbus RTU STA XT2 - XT4	Ekip COM Modbus RTU STA XT2 - XT4 W
C2	 L=50mm	1		
D		1		
E	 JF	1		
F	 		1	1
G	 		1	1
H	 		1	1
I	 		1	1
L	 JE			1
M	 JF		1	

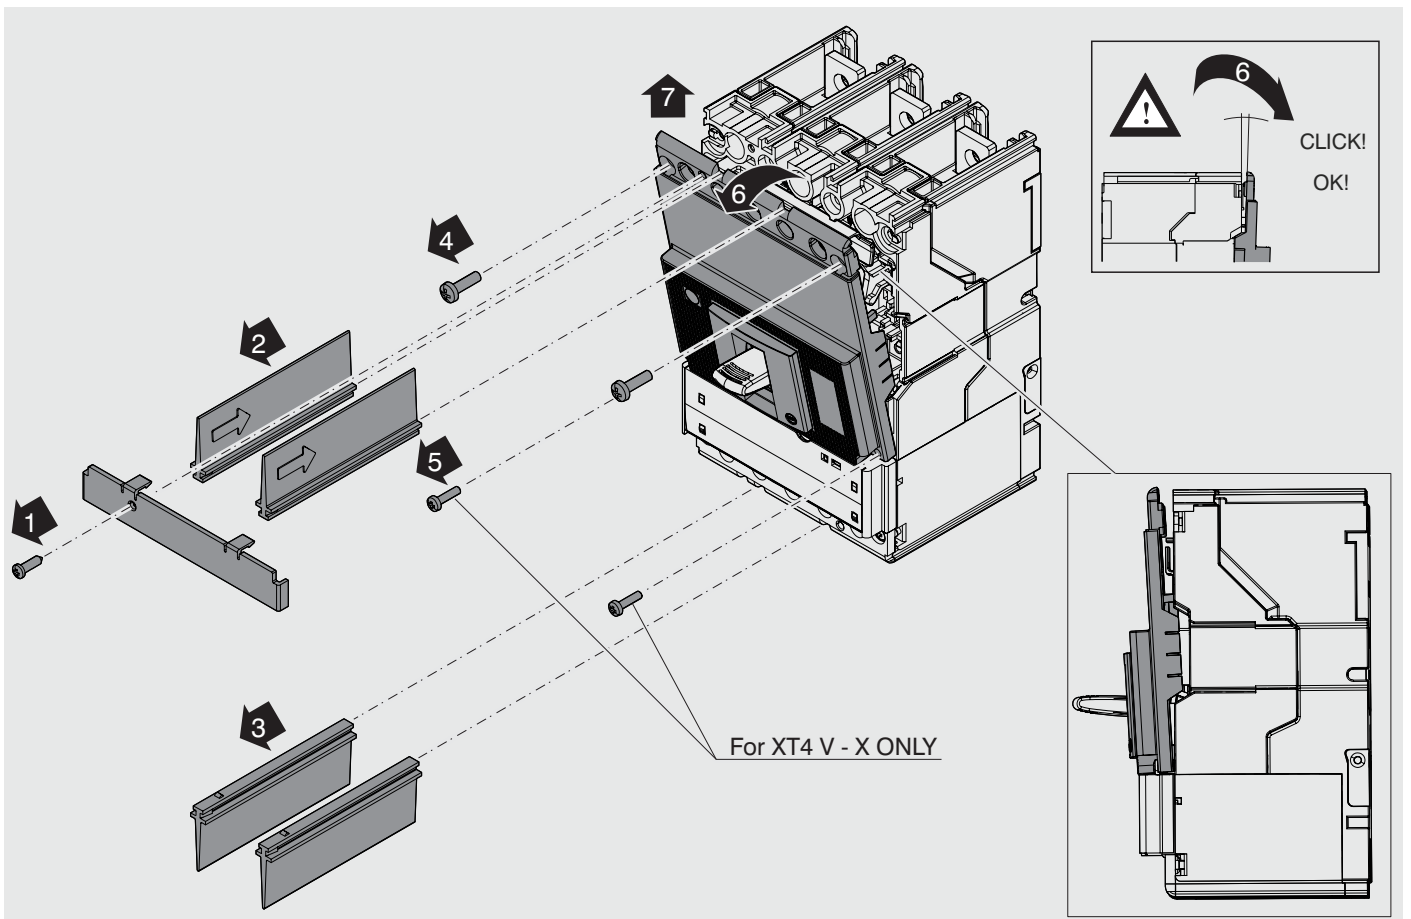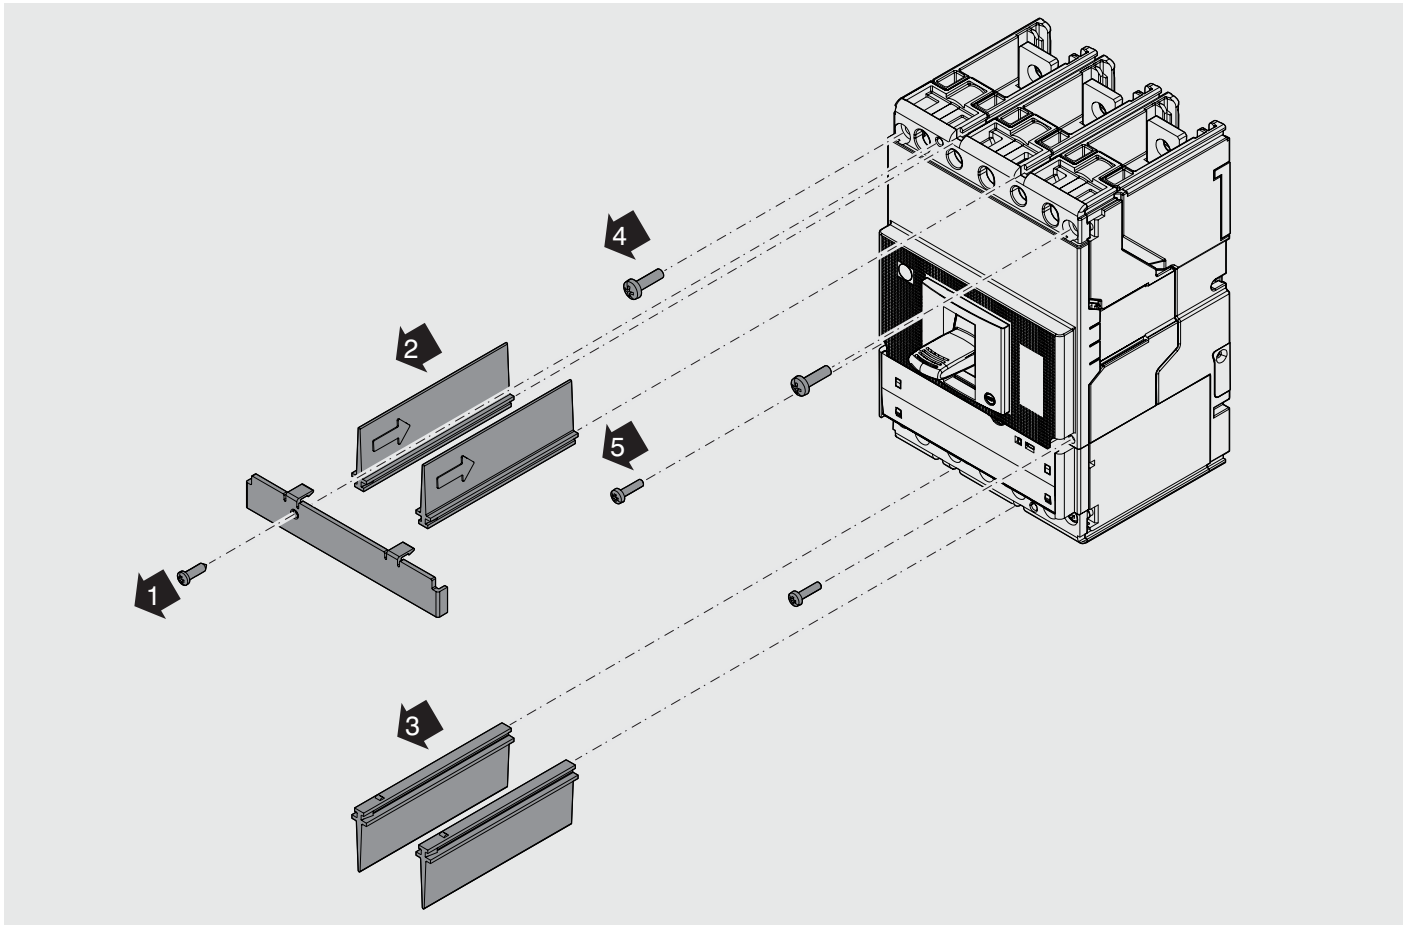

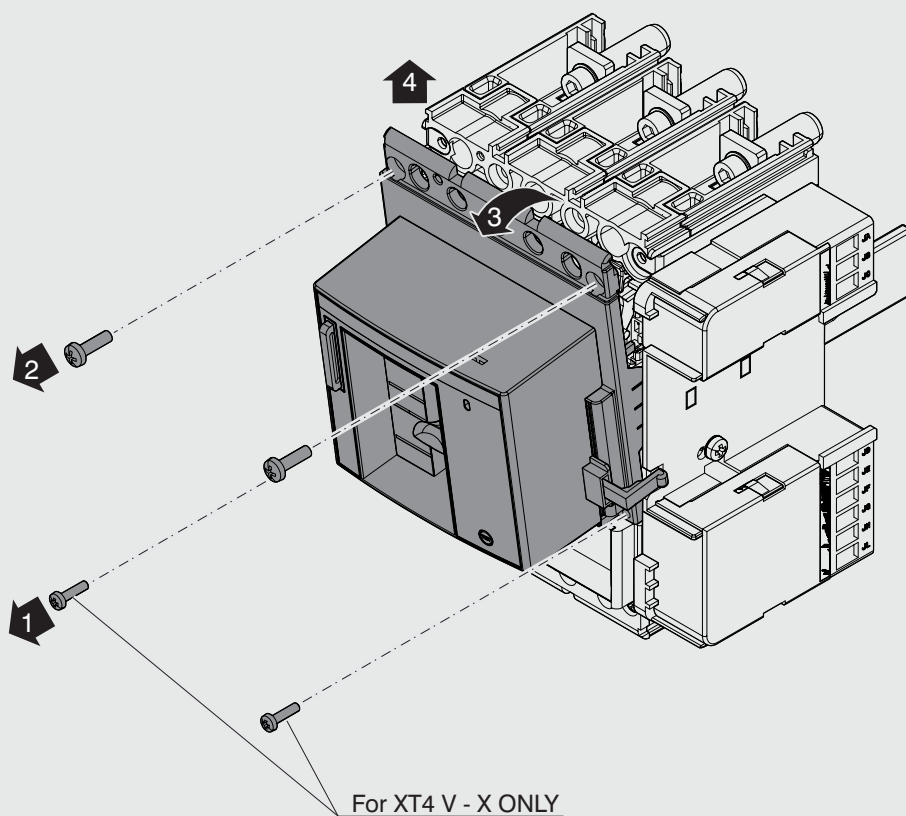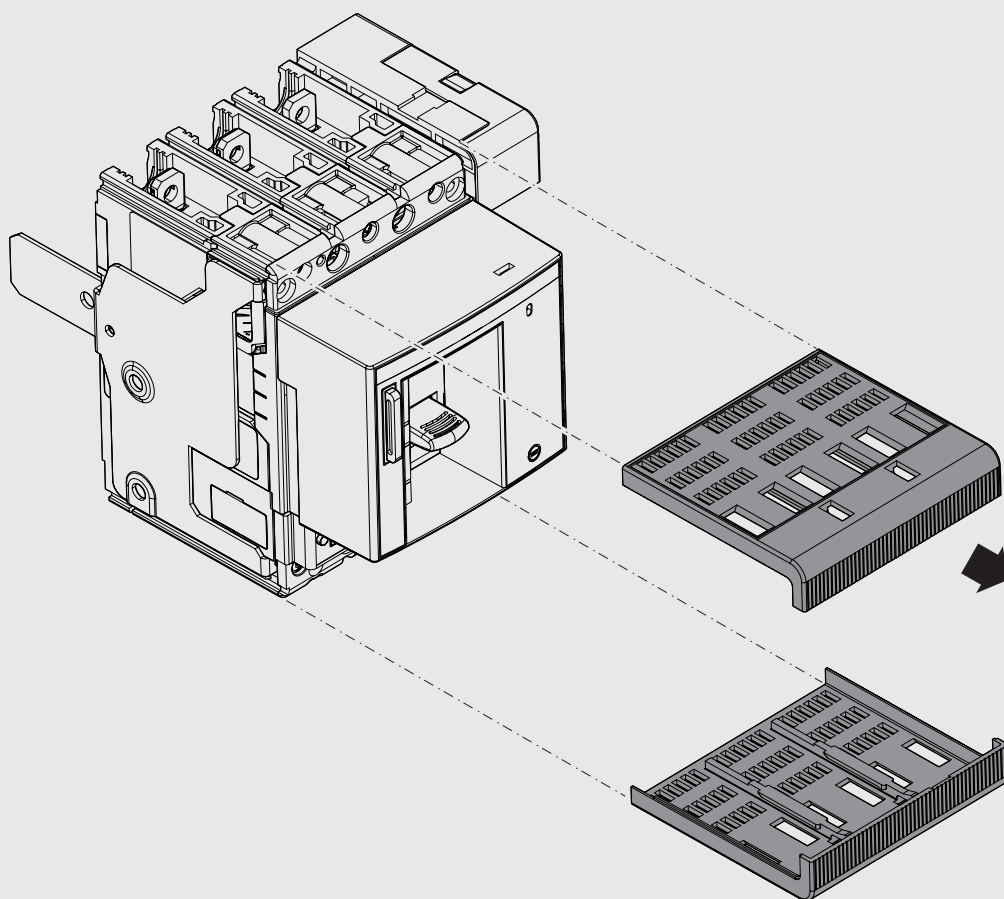

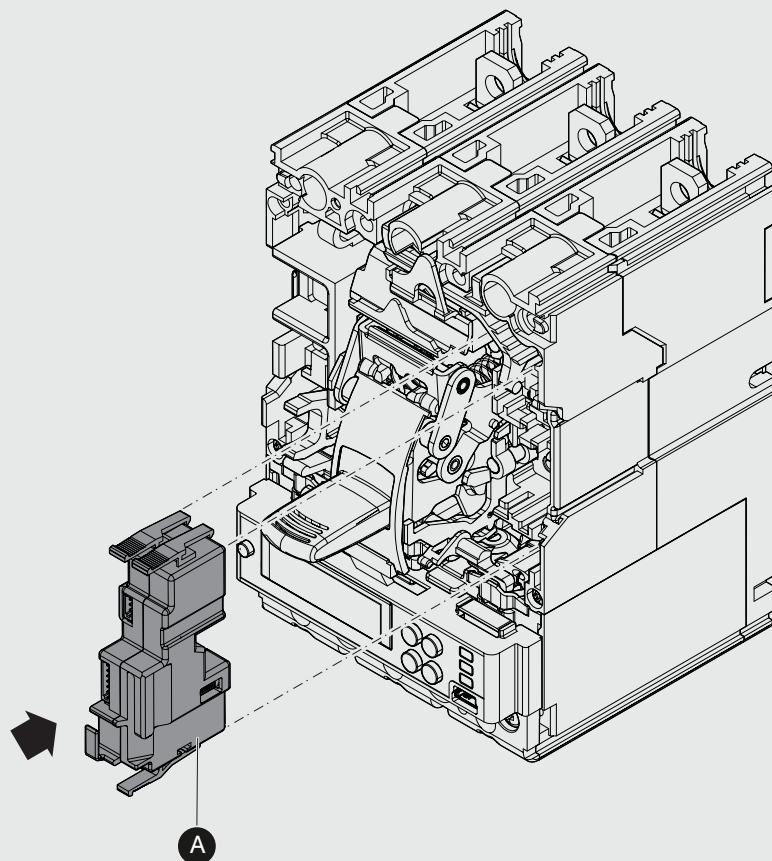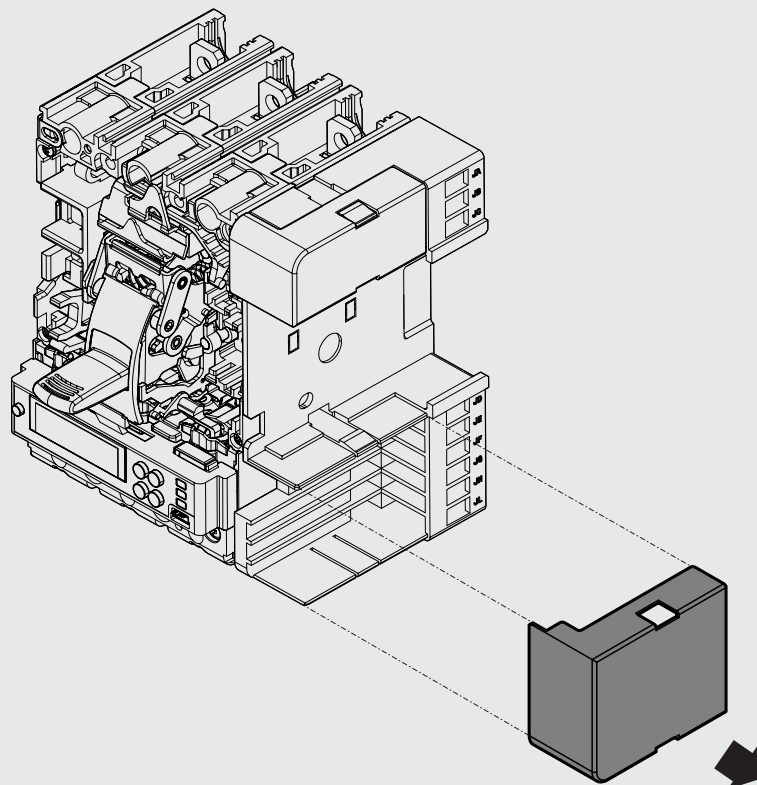

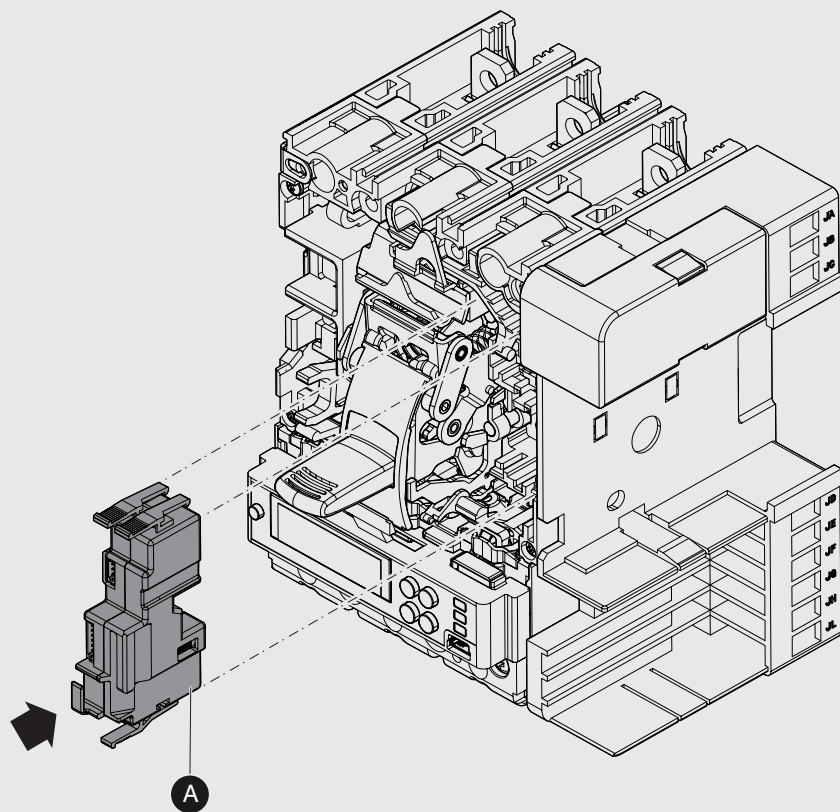
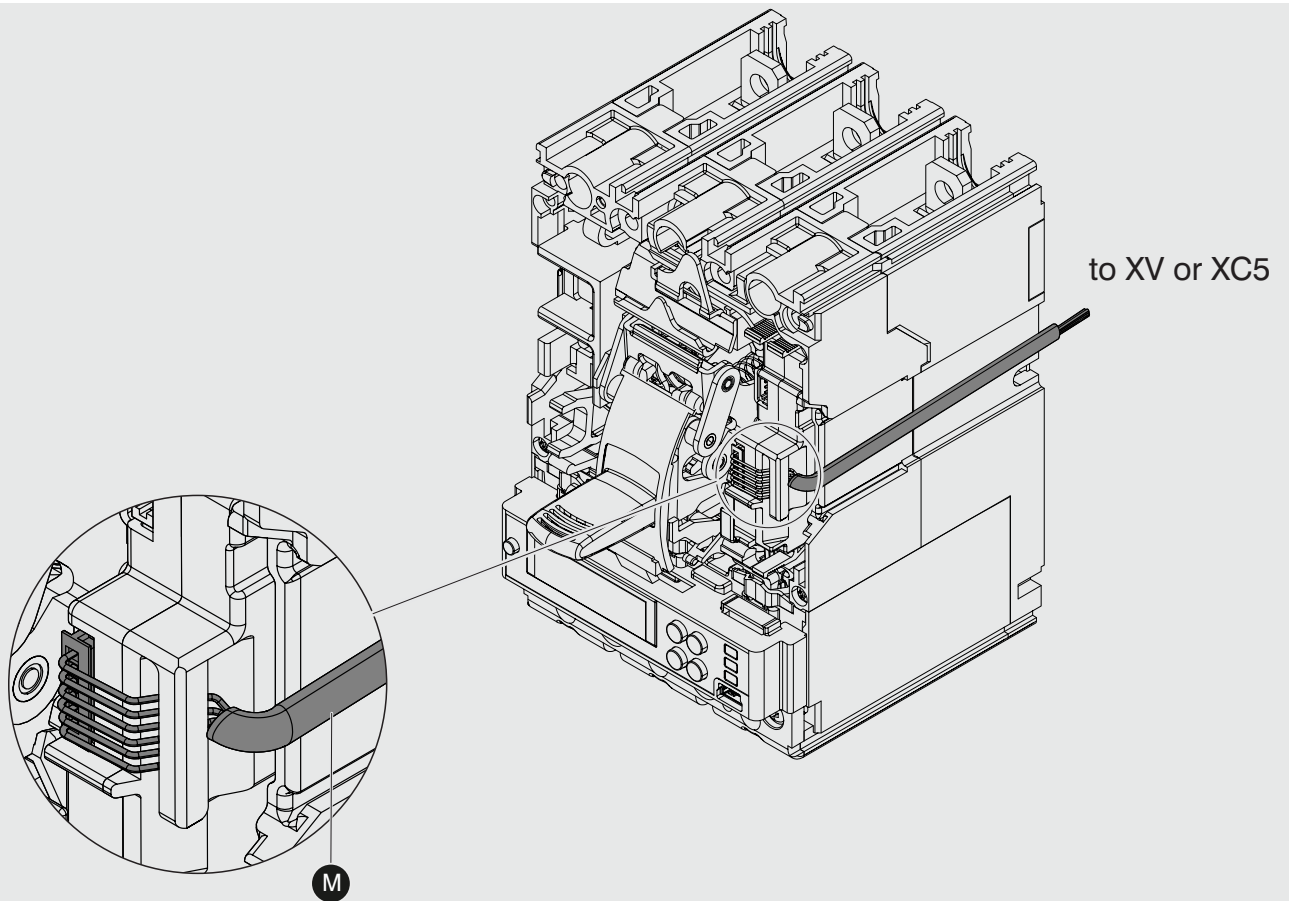


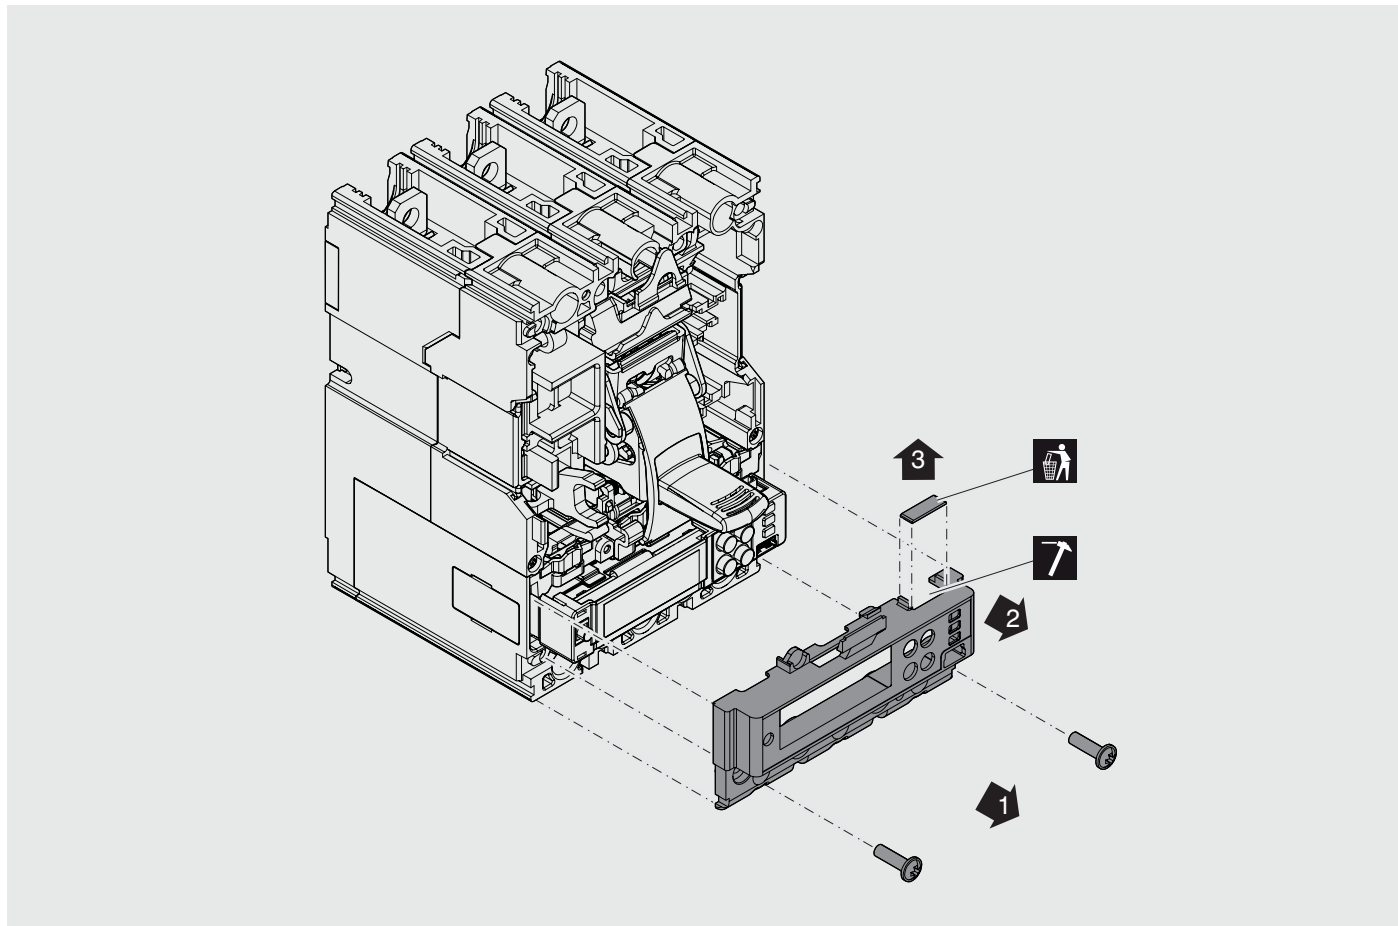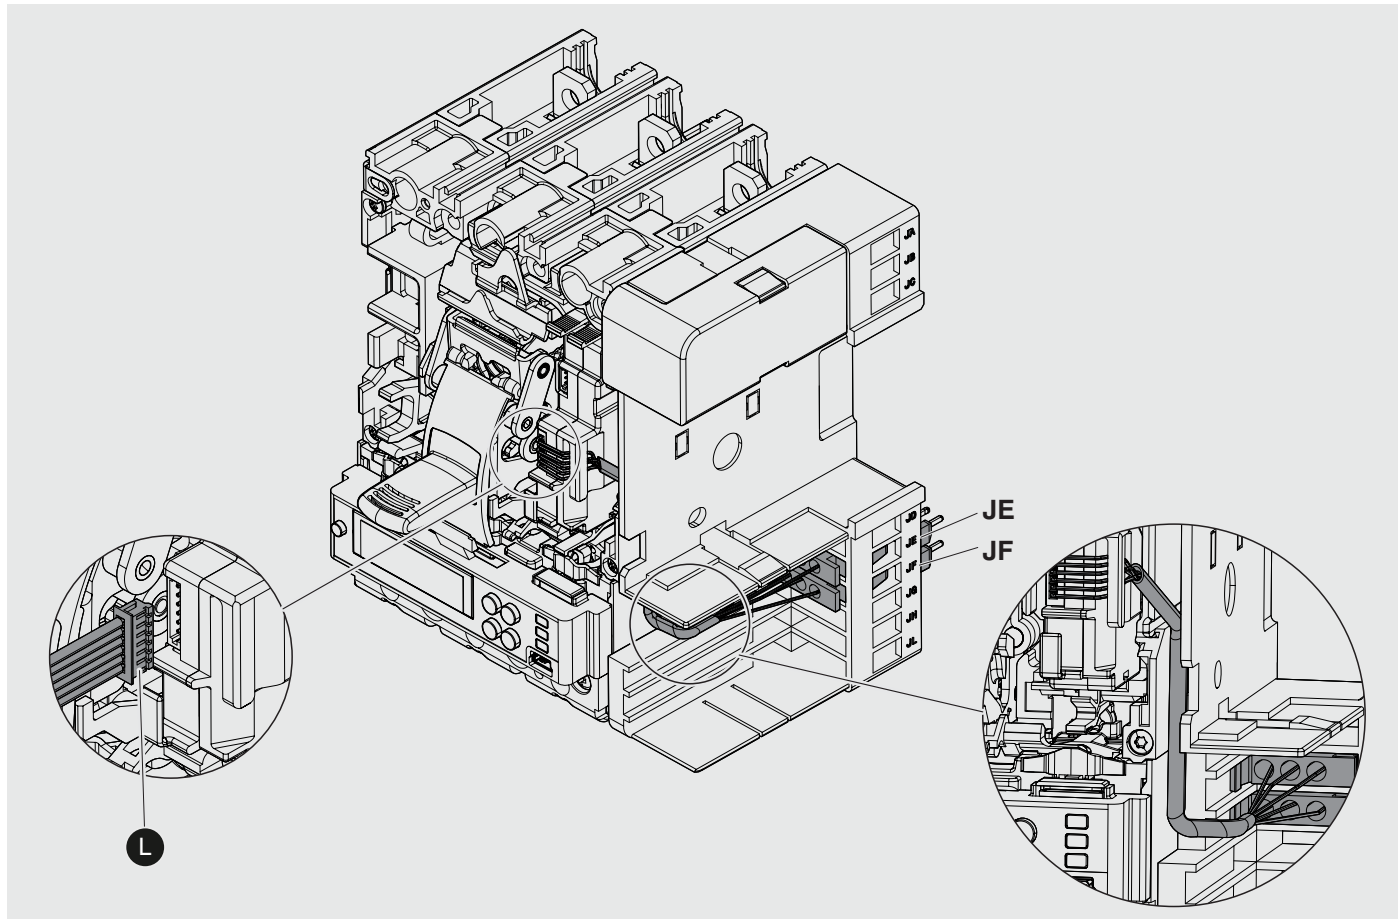

11

XT2 12



XT4


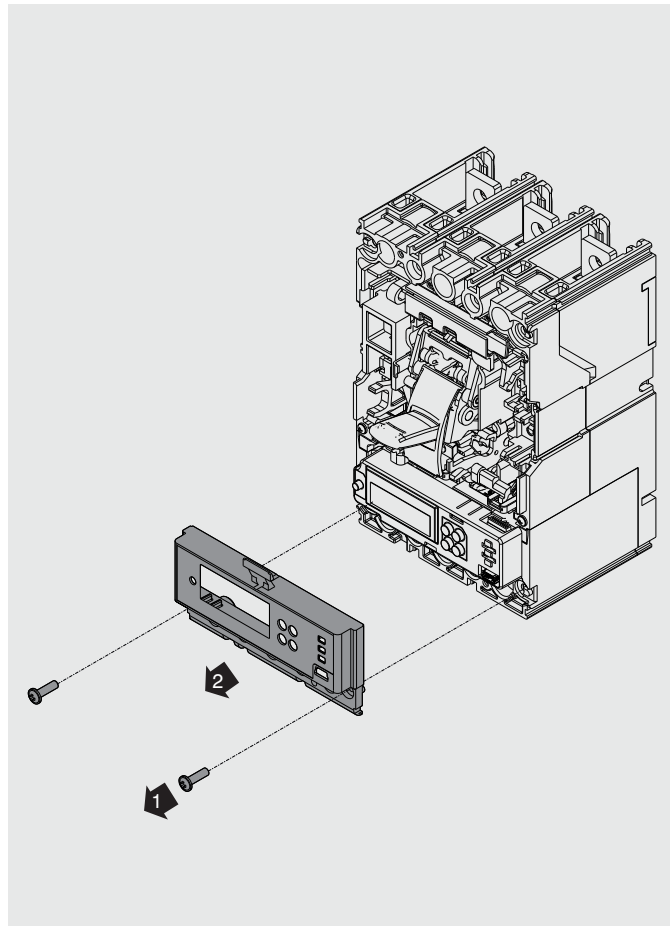
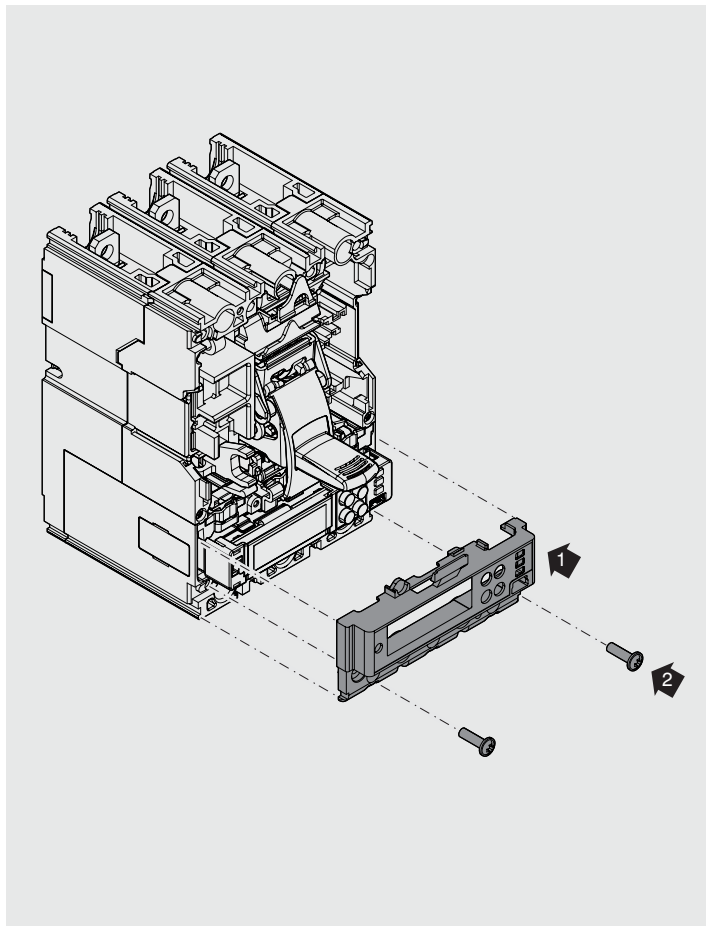




13



XT2 F 14



XT4 F

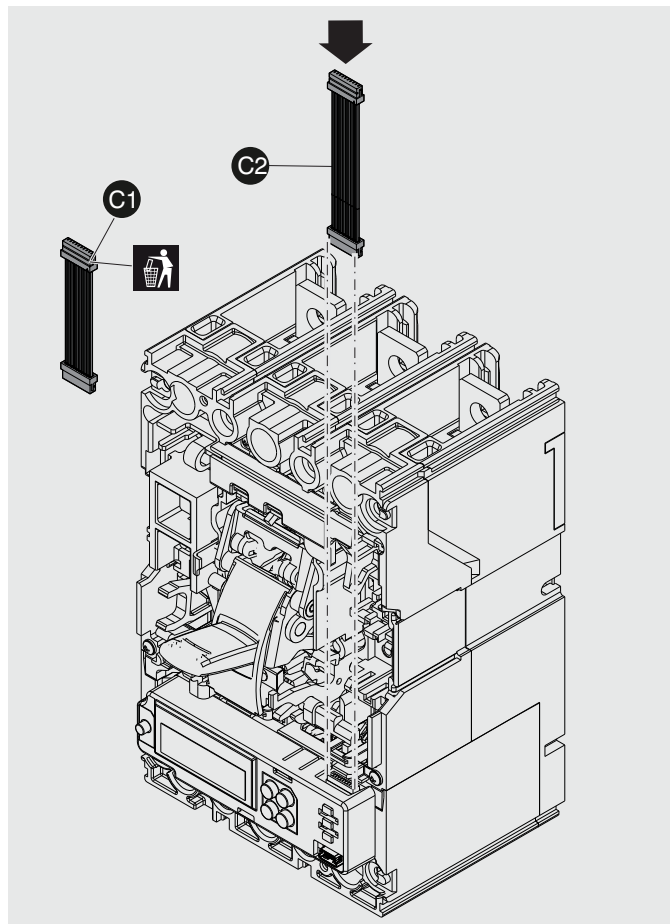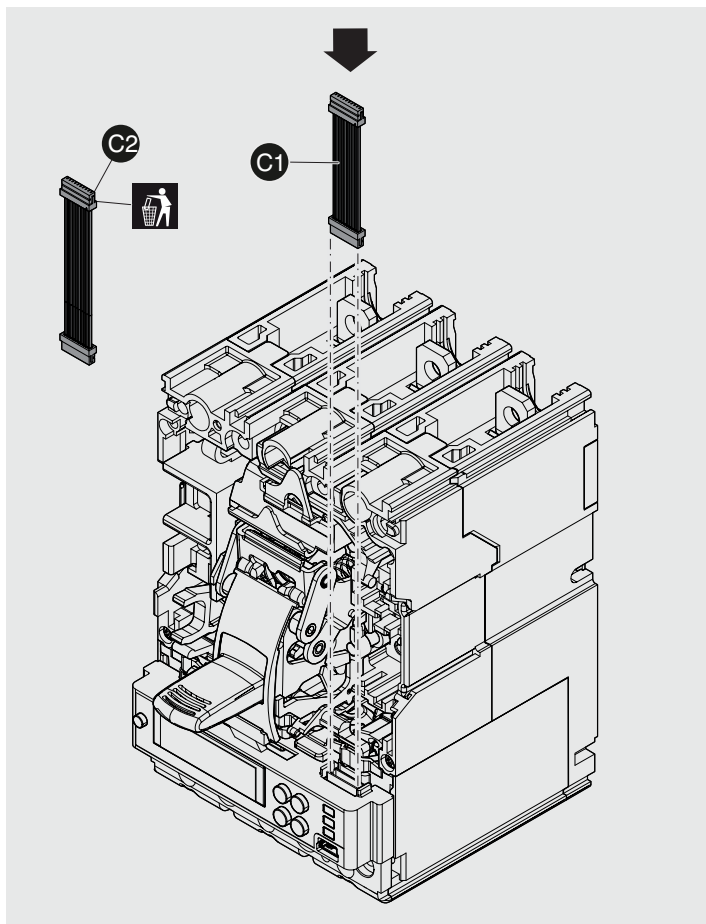


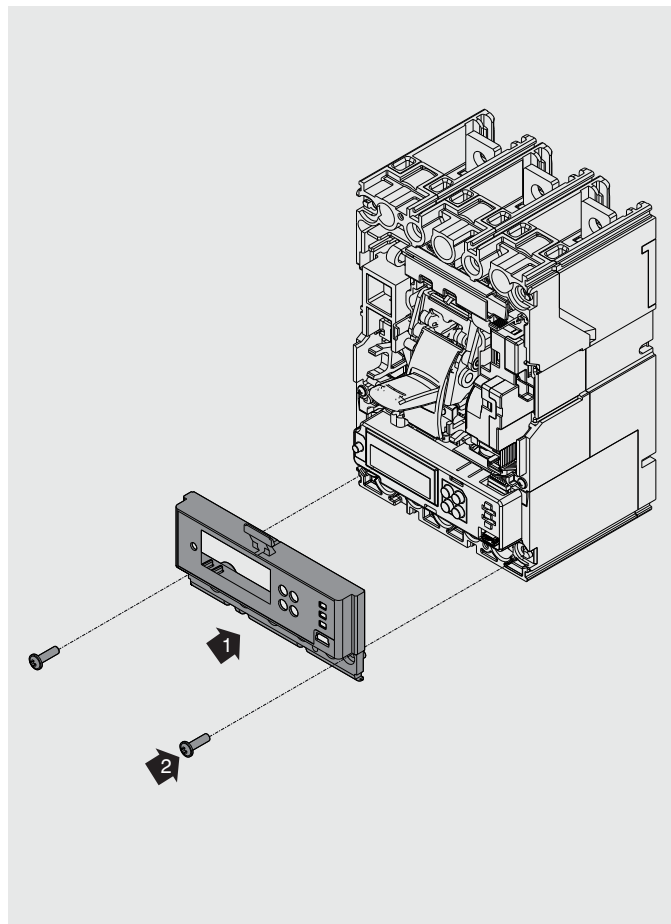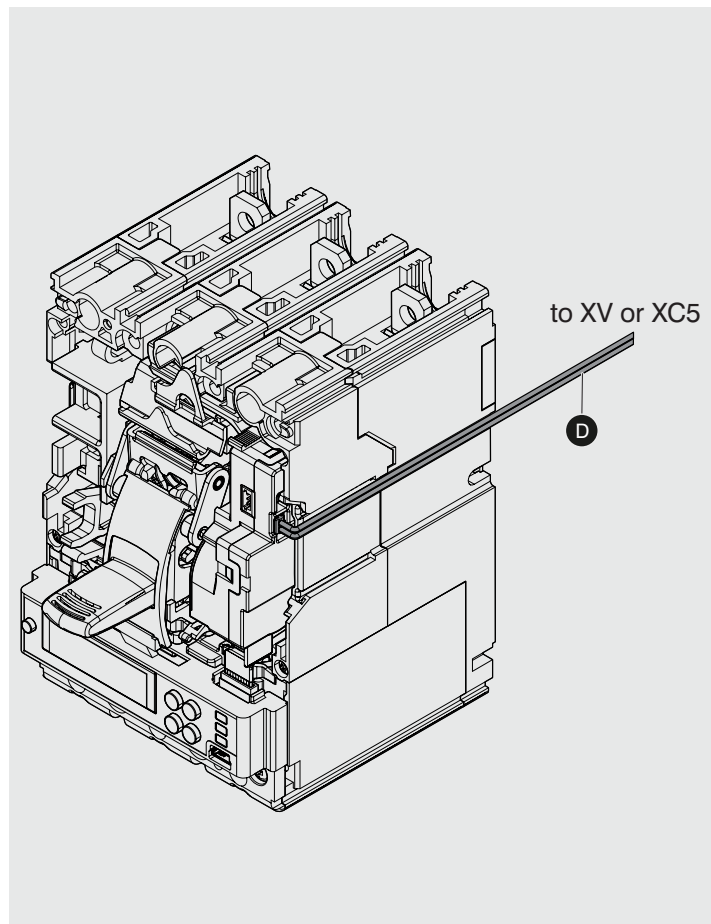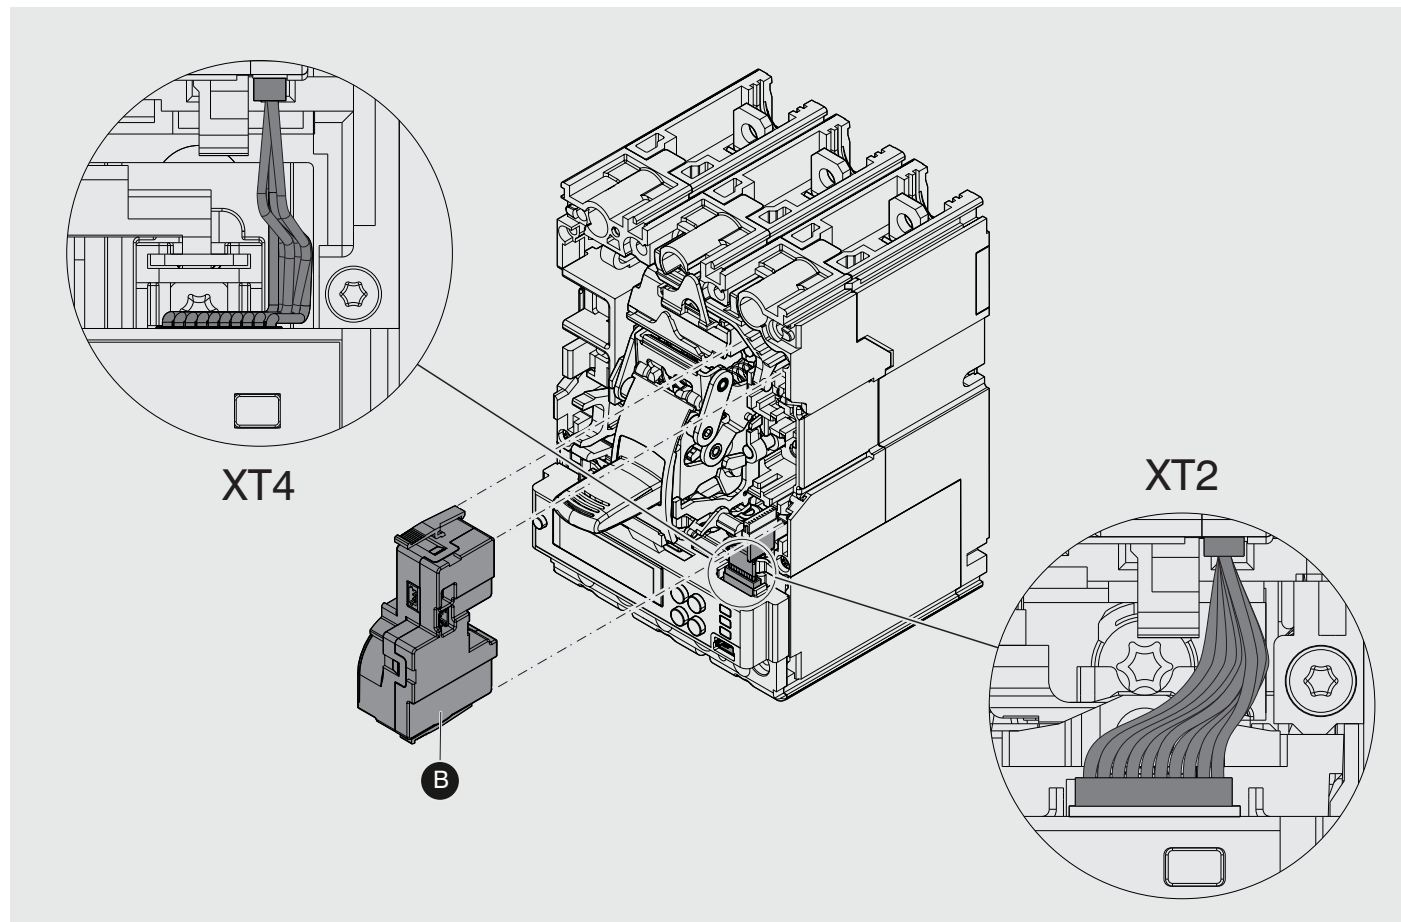

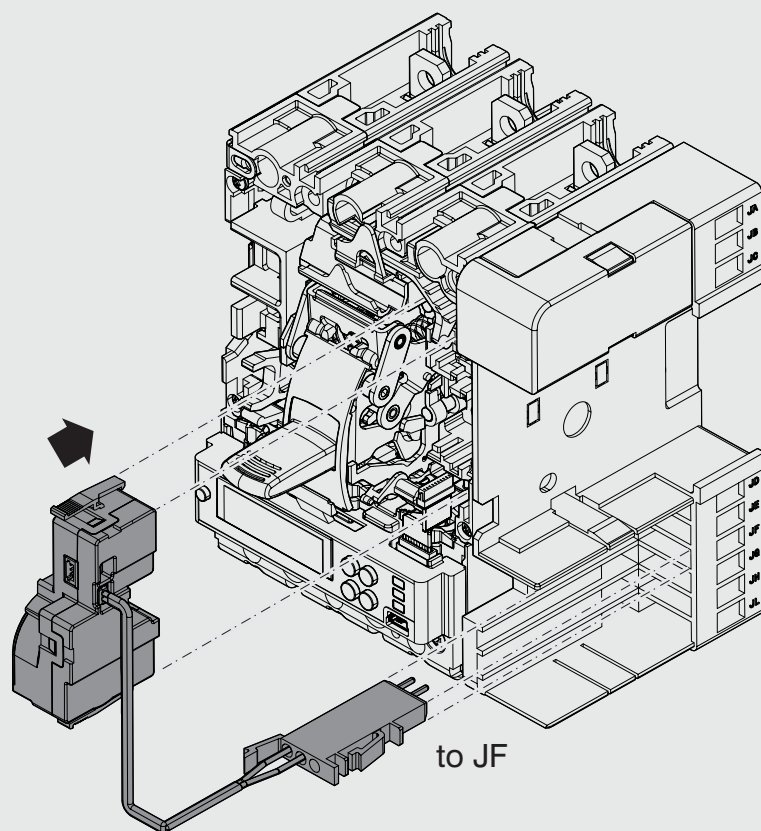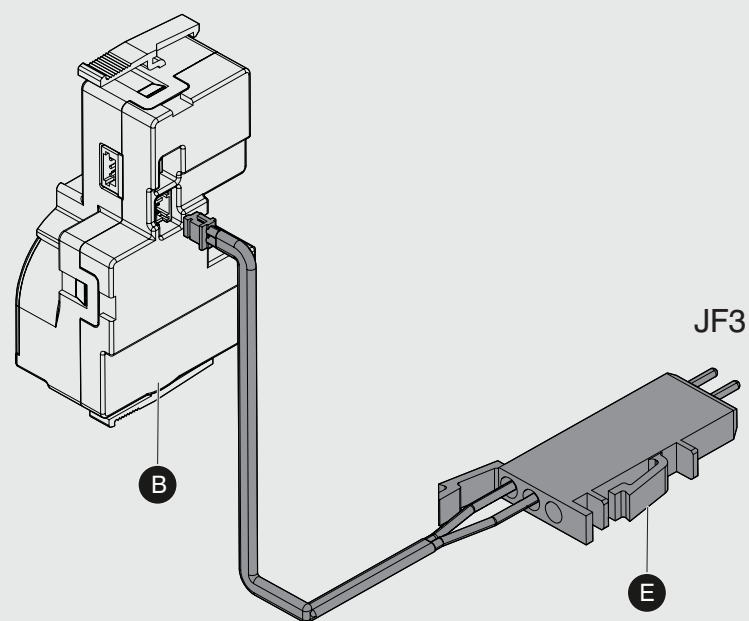

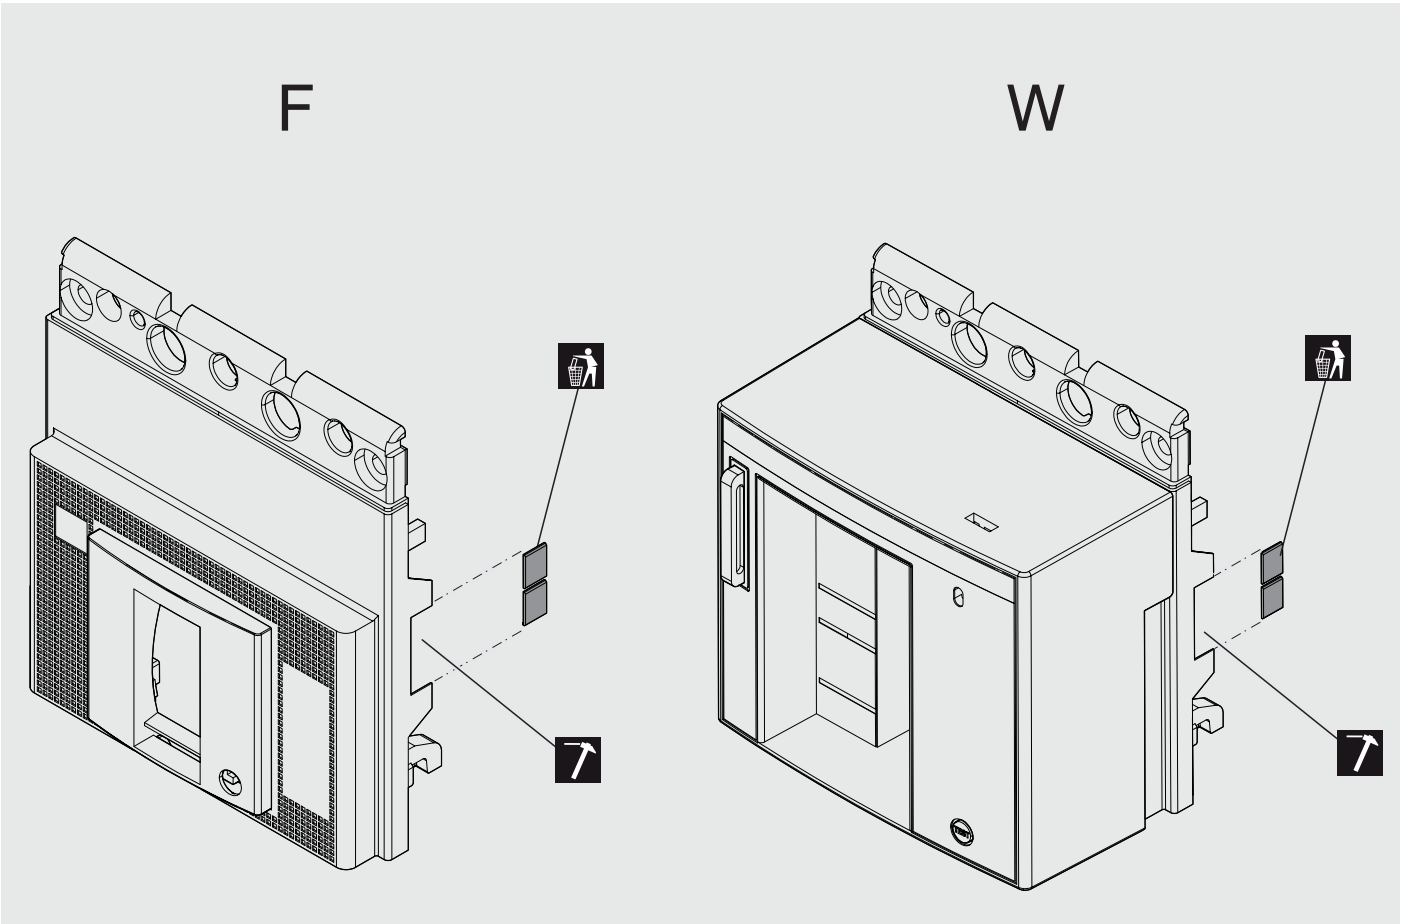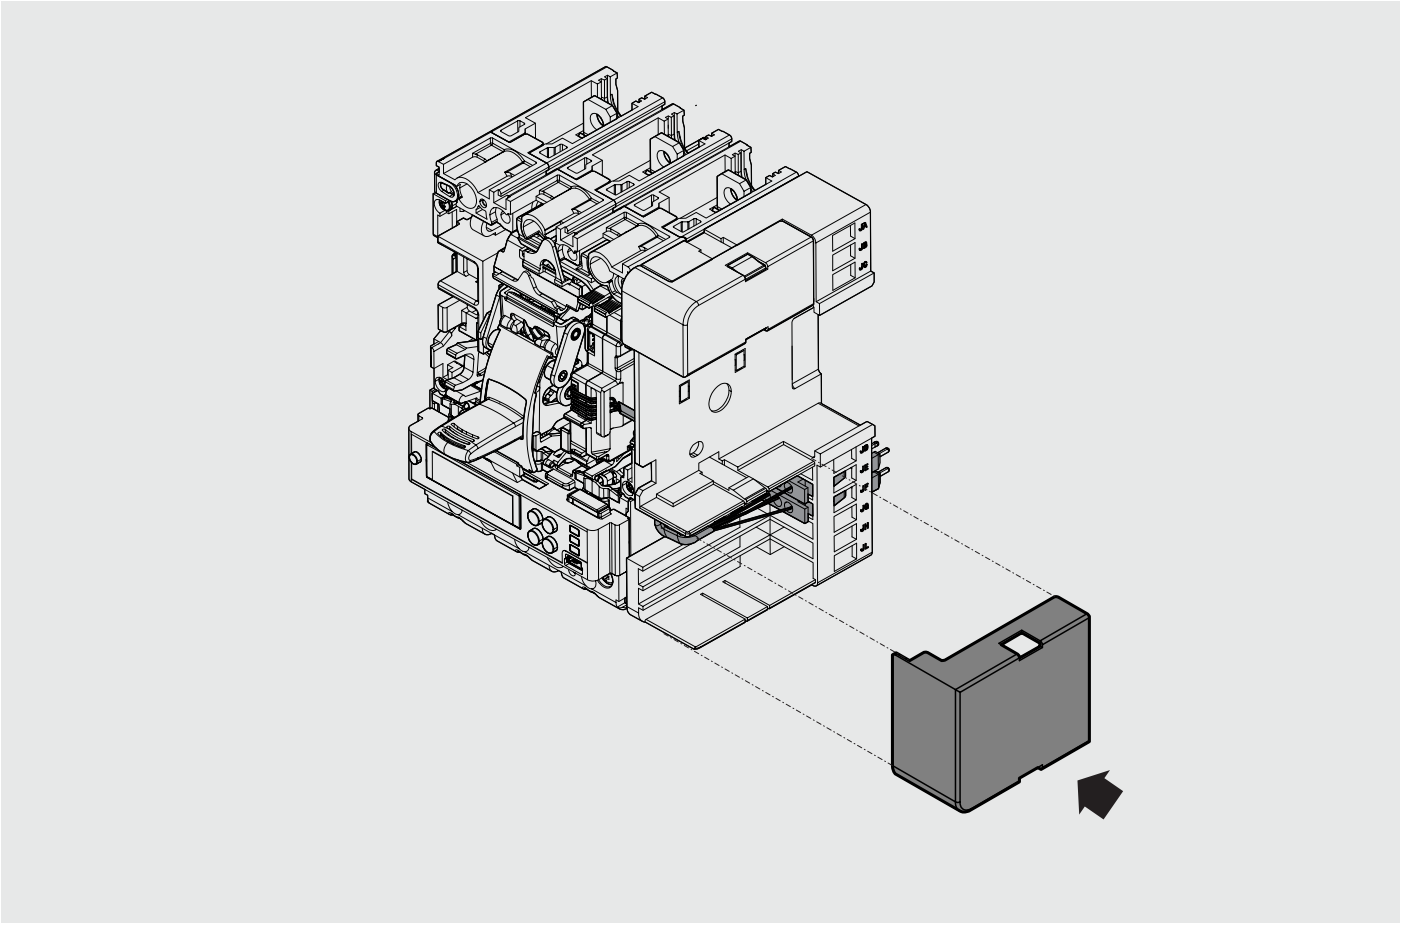


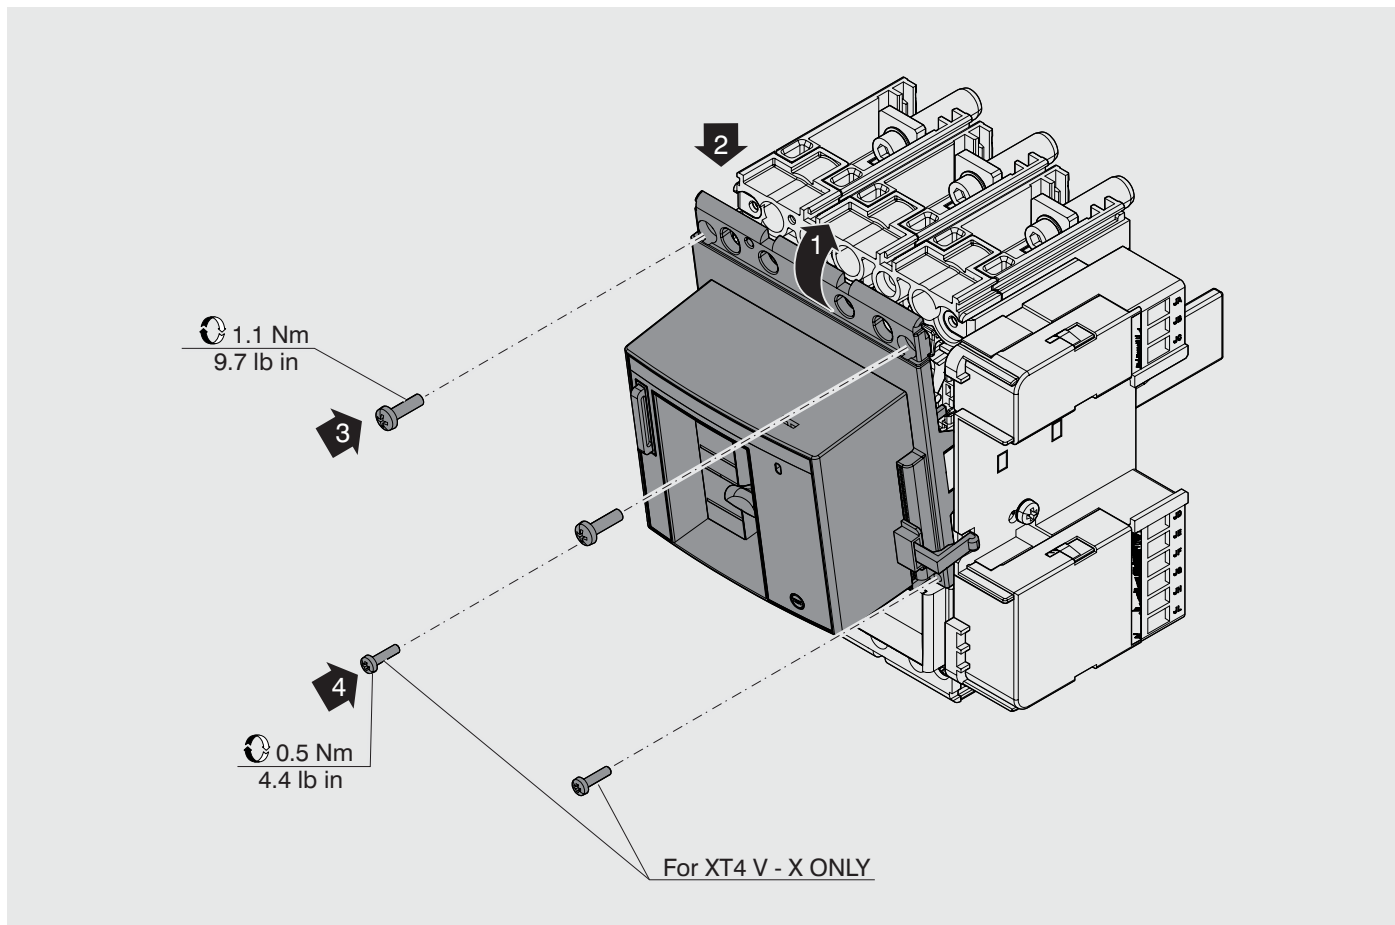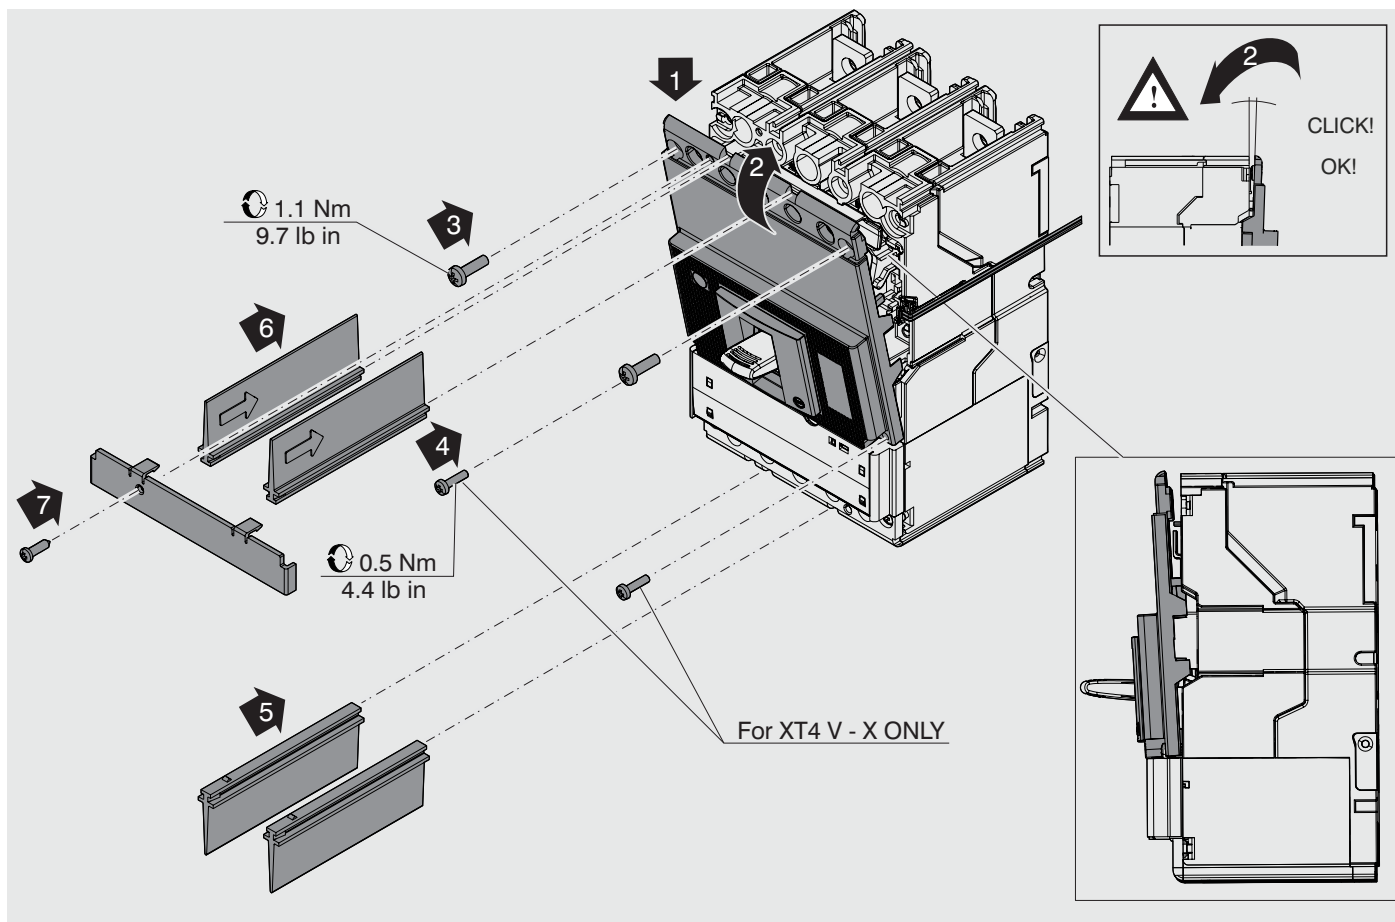


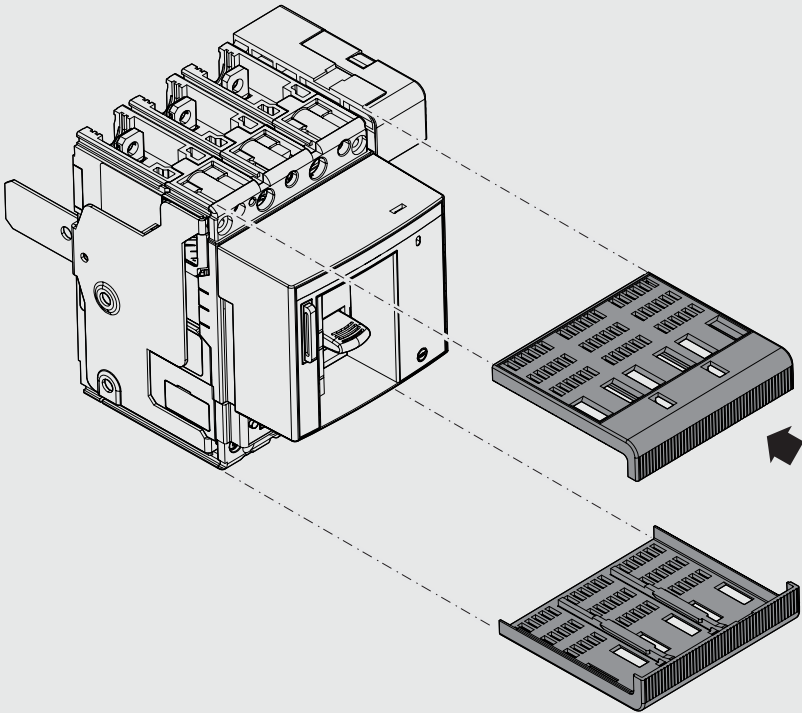

Per ulteriori informazioni vedere
For further details consult
Für weitere Informationen siehe
Pour plus d'informations voir
Para más información véase
有关更多信息请参考

1SDM000068R0001

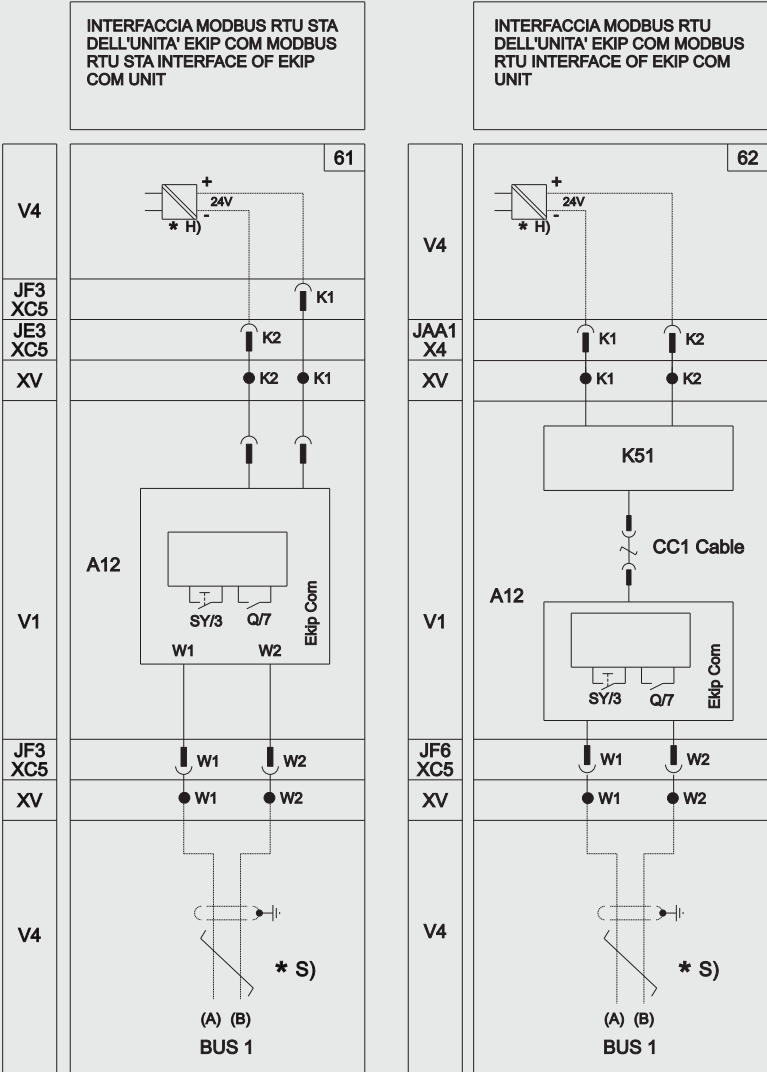

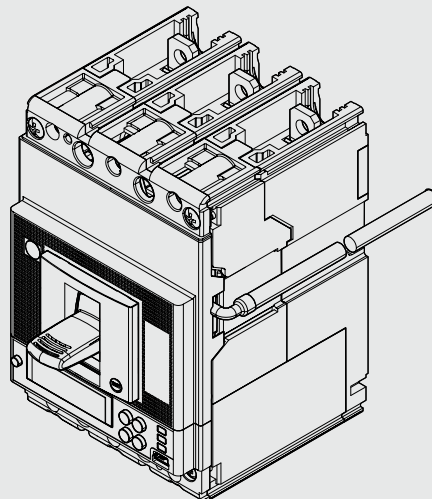

PROCEDURA DI INSTALLAZIONE (solo per versione NO STA):

- Fornire alimentazione al kit plug (K51) tramite K1 e K2
- Abilitare il bus locale, da Display -> Impostazioni -> Moduli -> Local Bus -> ON

INSTALLATION PROCEDURE (only for NO STA version):

- Energize the Kit Plug (K51) by means of K1 and K2
- Enable the local bus, by Display -> Settings -> Modules -> Local bus -> ON

INSTALLATIONSVERFAHREN ((nur für Version NO STA):

- Das Kit Plug (K51) über K1 und K2 mit Strom versorgen
- Aktivieren Sie den lokalen Bus, mit Anzeige -> Einstellungen -> Module -> Local Bus -> ON

PROCÉDURE D'INSTALLATION (Seulement pour version NO STA):

- Fournir l'alimentation au Kit Plug (K51) à travers K1 et K2
- Activer le bus local, par affichage -> Paramètres -> Modules -> bus local -> ON

PROCEDIMIENTO DE INSTALACIÓN (solo para versión NO STA):

- Suministrar alimentación al Kit Plug (K51) mediante K1 y K2
- - Habilitar el autobús local, por Pantalla -> Configuración -> Módulos -> bus local -> ON

安装程序 (仅适用于版本 NO STA):

- 通过K1和K2给Kit Plug (K51) 供电
- 激活本地总线, 点击 Display -> Impostazioni -> Moduli -> Local Bus -> ON