

Catalog No. Qty

TNI 100 1 Enclosures




GEH2961 INSTALLATION INSTRUCTIONS:

Installation of Insulated Groundable Neutral (Cat. No. TNI 100 / TNI 100UR) in Type TE, TEF and TF Circuit Breaker Enclosures

Kit Contents

- (1) neutral assembly
- (2) fiber insulator
- (2) short round head screws with washers
- (1) long bonding screw

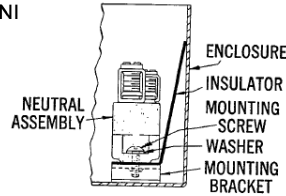

1. Mount neutral assembly on mounting bracket located in right side of enclosure. Insert fiber insulator between assembly and mounting base.
2. Fasten neutral assembly, trapping fiber insulator, to mounting bracket with (2) short round head screws. Use flat washers under screw heads.
3. To bond neutral assembly to enclosure use long bonding screw furnished.

—
ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

1SQ930086M0201, GEH2961 February 2023 Rev. B

Catalog No. Qty

TNI 100 1 Enclosures




GEH2961 INSTALLATION INSTRUCTIONS:

Installation of Insulated Groundable Neutral (Cat. No. TNI 100 / TNI 100UR) in Type TE, TEF and TF Circuit Breaker Enclosures

Kit Contents

- (1) neutral assembly
- (2) fiber insulator
- (2) short round head screws with washers
- (1) long bonding screw

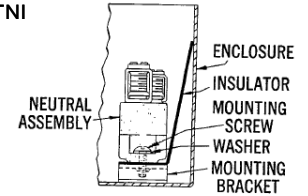

1. Mount neutral assembly on mounting bracket located in right side of enclosure. Insert fiber insulator between assembly and mounting base.
2. Fasten neutral assembly, trapping fiber insulator, to mounting bracket with (2) short round head screws. Use flat washers under screw heads.
3. To bond neutral assembly to enclosure use long bonding screw furnished.

—
ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

1SQ930086M0201, GEH2961 February 2023 Rev. B

Catalog No. Qty

TNI 100 1 Enclosures




GEH2961 INSTALLATION INSTRUCTIONS:

Installation of Insulated Groundable Neutral (Cat. No. TNI 100 / TNI 100UR) in Type TE, TEF and TF Circuit Breaker Enclosures

Kit Contents

- (1) neutral assembly
- (2) fiber insulator
- (2) short round head screws with washers
- (1) long bonding screw

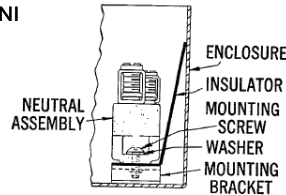

1. Mount neutral assembly on mounting bracket located in right side of enclosure. Insert fiber insulator between assembly and mounting base.
2. Fasten neutral assembly, trapping fiber insulator, to mounting bracket with (2) short round head screws. Use flat washers under screw heads.
3. To bond neutral assembly to enclosure use long bonding screw furnished.

—
ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

1SQ930086M0201, GEH2961 February 2023 Rev. B

Catalog No. Qty

TNI 100 1 Enclosures




GEH2961 INSTALLATION INSTRUCTIONS:

Installation of Insulated Groundable Neutral (Cat. No. TNI 100 / TNI 100UR) in Type TE, TEF and TF Circuit Breaker Enclosures

Kit Contents

- (1) neutral assembly
- (2) fiber insulator
- (2) short round head screws with washers
- (1) long bonding screw

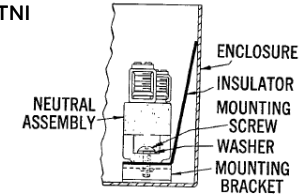

1. Mount neutral assembly on mounting bracket located in right side of enclosure. Insert fiber insulator between assembly and mounting base.
2. Fasten neutral assembly, trapping fiber insulator, to mounting bracket with (2) short round head screws. Use flat washers under screw heads.
3. To bond neutral assembly to enclosure use long bonding screw furnished.

—
ABB Inc. 305 Gregson Drive Cary, NC 27511
Electrification.us.abb.com

1SQ930086M0201, GEH2961 February 2023 Rev. B