


Installation Instructions

Insulated Equipment Ground Kit

Cat. No. EGS 12/EGC12 for ReliaGear® Lighting Panelboard Type RQ, RL and RE

Mounting Instructions

1. Put barrier in place before mounting kit.
2. Mount kit in holes in panelboard backwall using two #10 thread forming screws provided.
3. Remove paper backing from the enclosed identification label and place it in front of and adjacent to ground bar barrier

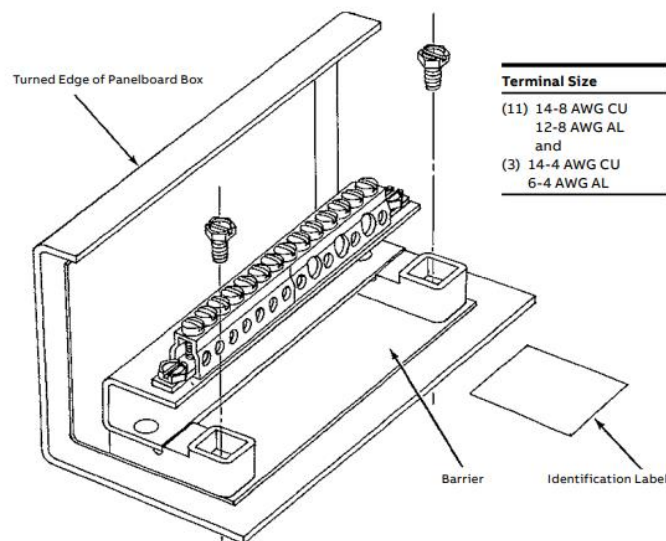

These instructions do not cover all details or variations in equipment, nor do they provide for every possible contingency that may be met in connection with installation, operation, or maintenance. Should further information be desired, or should problems arise that are not covered sufficiently for the purchaser's purposes, the matter should be referred to the ABB Inc.