


09/2019

New strain-relief for surface-mounted junction boxes


Screwless, faster and cost-effective solution

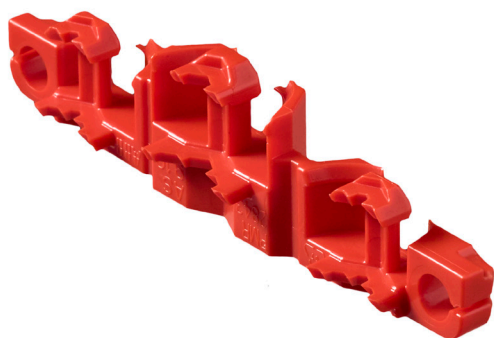

Thanks to this innovative solution, no screws or tools are needed to make a strain-relief for the cable. The cable is secured with a cable tie, making installation easy and saving installation time. (The cable tie is not included).

Installation

Attach the strain-relief to the junction box, push the cable through the membrane inlet. Attach the cable tie around the cable and strain-relief. Make sure that the cable tie is secured around the strain-relief before tightening the cable tie. When the cable tie has been tightened and the installation is complete, make sure that the strain-relief is secured by pulling firmly at the cable in an outward direction.

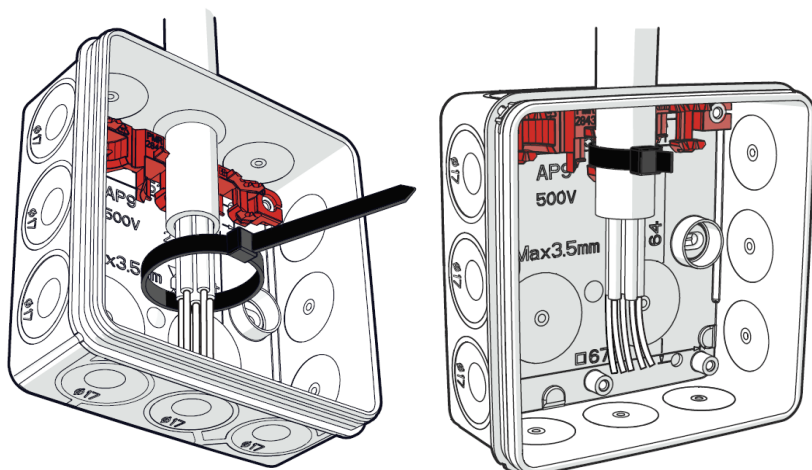

The strain-relief is suitable for junction boxes AP9 and AP10, and has three slots for cables. It can be used with a wide range of cable diameters, as well as with flat thin installation cable.



Additional

Two strain-reliefs can be used on the opposite sides of the box with AP9 and AP10, or crosswise in AP9 boxes.

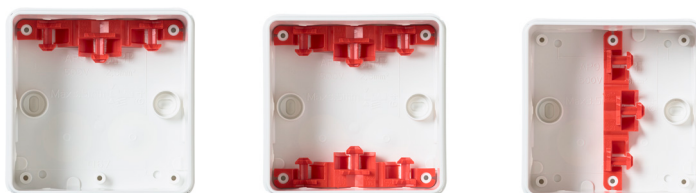


ABB Oy
Porvoon Sisäkehä 2, PO Box 16
FI-06101 Porvoo, Finland
Phone: +358 10 22 11

Type	EAN	Description	Package
AS9.10	6438199005355	Strain-relief for 3 cables, Ø6–17 mm	10/100/1000