

INSTALLATION INSTRUCTIONS

ReliaMod™ Modular Metering

RING TO RINGLESS CONVERSION



**HAZARDOUS VOLTAGE.
WILL CAUSE SEVERE
INJURY OR DEATH.**

Turn OFF power supplying this equipment before working inside.

Please read these instructions completely before installing or removing device. Improper installation could be hazardous to personnel and/or equipment.




Applicable for residential sockets only. Commercial lever bypass sockets cannot be converted.

Installation Instructions for the following Kits:

- RM125RINGLESS
- RM225RINGLESS

Kit Contains:	
Ringless Meter Cover	1
Meter Support Bracket	2
Meter Cover Hasp Bracket	1
Hasp Bracket Screw	1
Ringless Meter Cover Screw	1

- Turn “OFF” power supplying the meter module.
- Remove the meter cover and meter where the ringless conversion will be done.
- Remove the 2 mounting screws on the left side of the meter socket and retain for installation.
- Install a Meter Support Bracket using the 2 mounting screws on the left side of the meter socket.
- Torque the mounting screws to 25 in. lbf.
- Repeat for the right side of the meter socket.
- Install Meter Cover Hasp Bracket to the Meter socket separator with the screw provided in this kit.
- Torque the screw to 25 in. lbf.
- After installing the meter, install the ringless meter cover and secure with screw.
- Torque the screw to 25 in. lbf.
- Repeat Instructions for the Load Side of the meter socket.

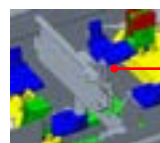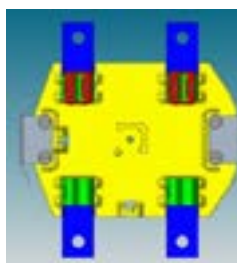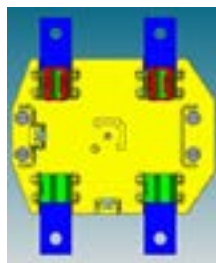

Meter Cover Hasp

ReliaMod™ Modular Metering

CONVERSIÓN DE ANILLO A SIN ANILLO



**VOLTAJE PELIGROSO.
PODRA CAUSAR MUERTE
O LESIONES SERIAS.**

Desconecte la alimentación eléctrica de este equipo antes de realizar cualquier trabajo dentro o fuera de él.

Lea atentamente estas instrucciones antes de instalar o retirar el dispositivo. Una instalación incorrecta podría resultar peligrosa para el personal y/o el equipo.




Aplicable sólo a tomas residenciales. Las tomas de derivación de palanca comercial no se pueden convertir.

Instrucciones de instalación de los siguientes kits:

- RM125RINGLESS
- RM225RINGLESS

El kit contiene:

Tapa del medidor sin anilla	1
Soporte de medidor	2
Soporte del cierre de la tapa del medidor	1
Tornillo del soporte de cierre	1
Tornillo de la tapa del medidor sin anilla	1

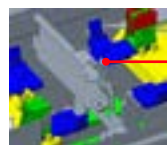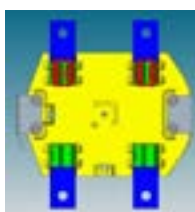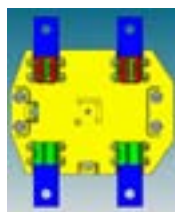

Cierre de la cubierta del medidor.

- Desconecta la alimentación del módulo de medición.
- Retira la tapa del medidor y el medidor se realizará la conversión sin anillo.
- Retira los 2 tornillos de montaje del lado izquierdo de la toma del medidor y consérvelos para su instalación.
- Instala una abrazadera de soporte del medidor utilizando los 2 tornillos de montaje en el lado izquierdo de la toma del medidor.
- Aprieta los tornillos de montaje a 25 in. lbf.
- Repita el procedimiento para el lado derecho de la toma del medidor.
- Instala el soporte del cierre de la cubierta del medidor en el separador de la toma del medidor con el tornillo suministrado en este kit.
- Apriete el tornillo a 25 in. lbf.
- Después de instalar el medidor, instala la cubierta del medidor sin anillas y fíjela con un tornillo.
- Apriete el tornillo a 25 in. lbf.
- Repita las instrucciones para el lado de carga de la toma del medidor.