



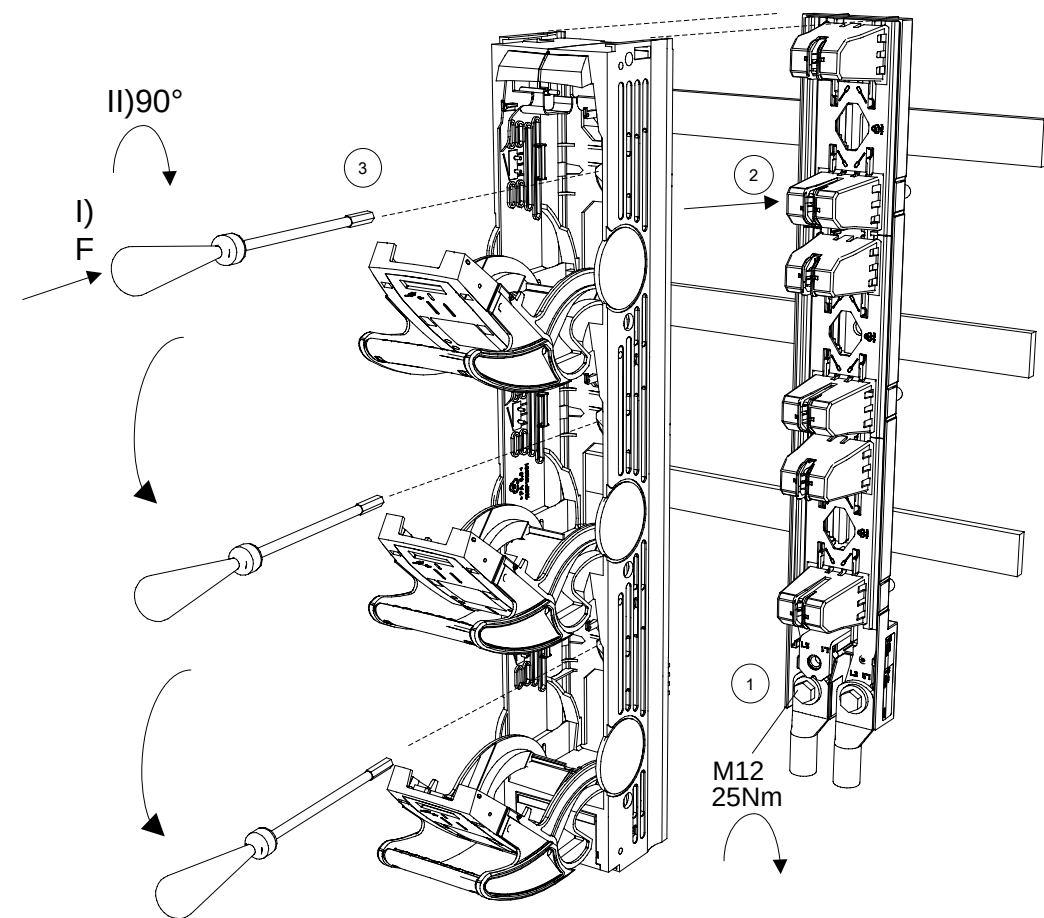


Al-leder børstes og innsettes med fett før tilkobling  
Al conductors have to be brushed and greased before connection  
Al-Leiter müssen vor den anschliessen geburset und eingefettet werden

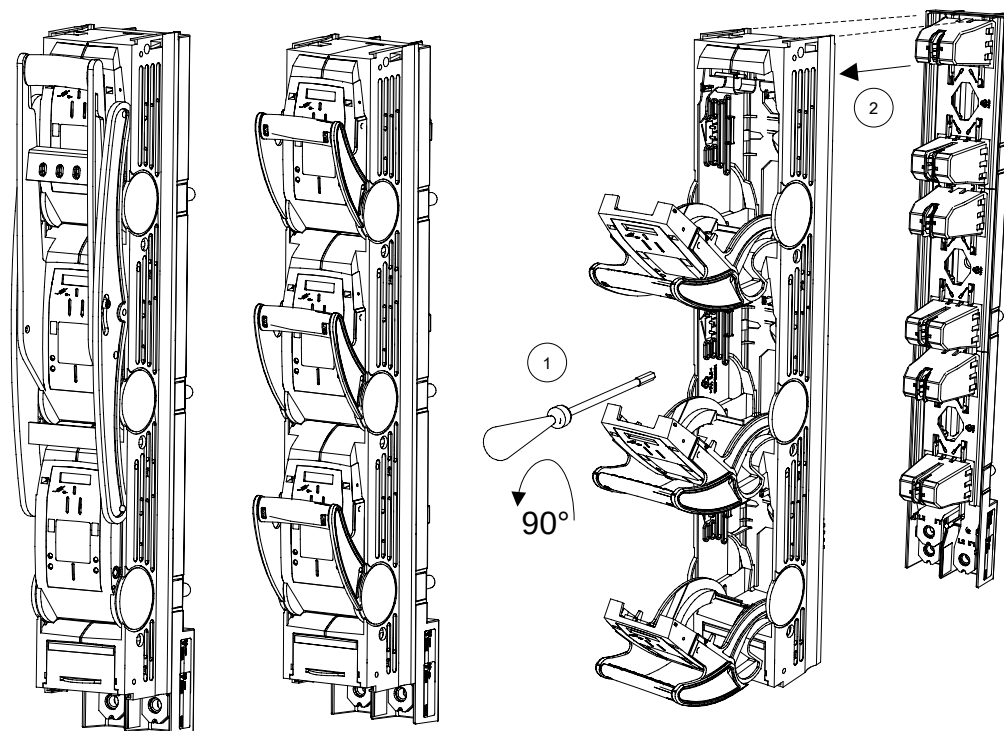


NOTE

Ved bruk av støtteskiner, vennligst benytt 1SEP408429R0001  
By use of support bars, please use 1SEP408429R0001  
Bei Montage mit Halterschienen, bitte 1SEP408429R0001 verwenden

## Z-Busbar

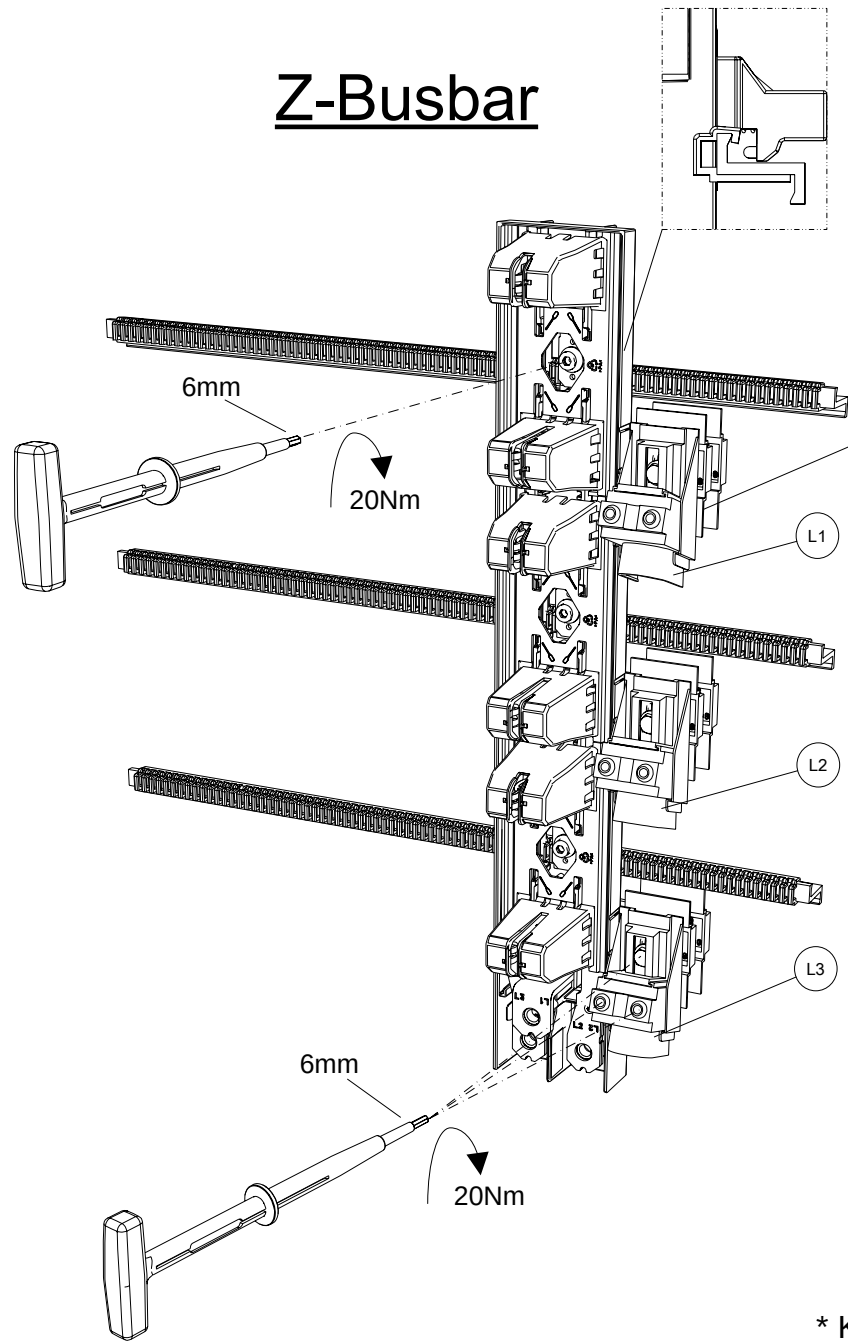

## DIN Busbar

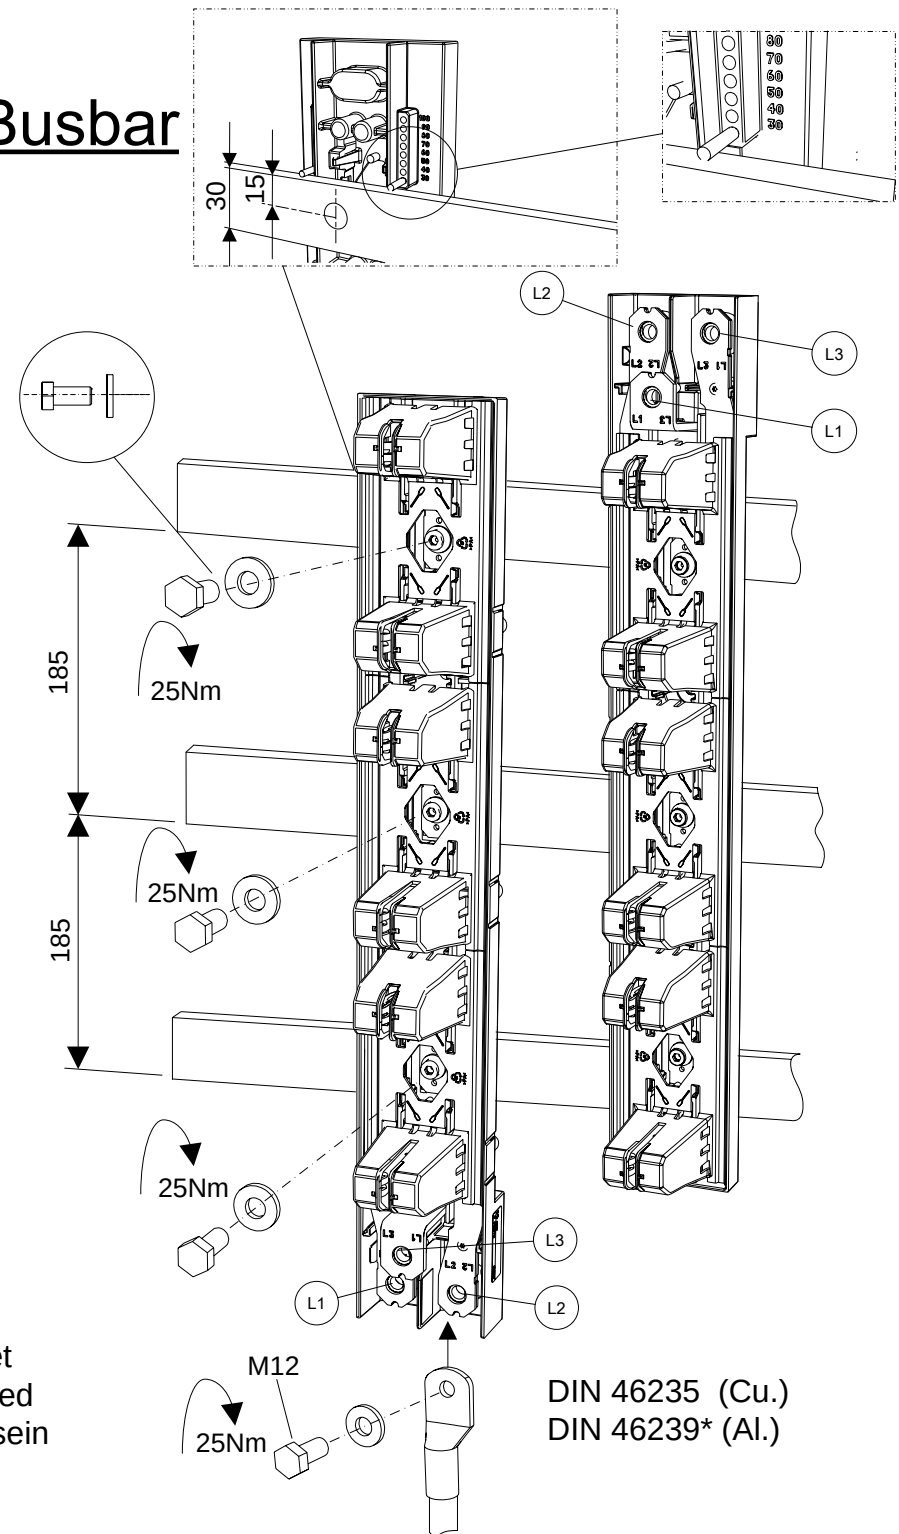

\* Kabelsko må være fortinnet  
Cable lug must be tin-coated  
Kabelschuh muss verzint sein