



SACE Tmax XT

Cable Operator Handle XT7
Poignée d'opérateur de câble XT7
Kabelbetreiber XT7
Kabelexploitant Handvat XT7
Maniglia a cavo XT7
Manija del operador del cable XT7
Manipulo do operador de cabo XT7
Uchwył kablowy operatora XT7
电缆操作手柄 XT7

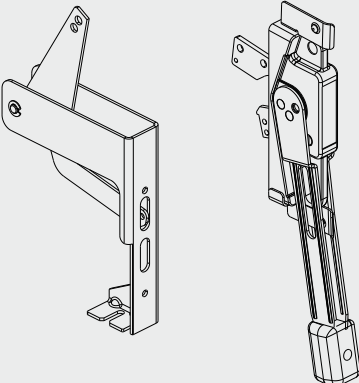





Tools
Outils
Werkzeug
Herramienta
Utensile
Ferramentas
Gereedschap
Narzędzia
工具

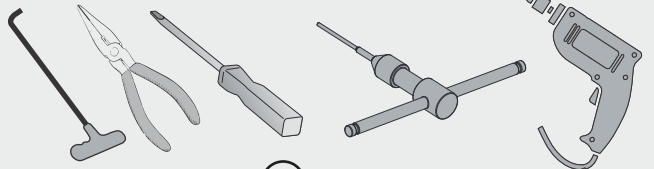

#3/16
#5/16

#8-32 in #27 (9/64in)

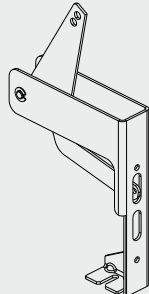

										
	1	1	1	1	1	1	6	2	4	2

NEMA 1,3R,12,13 Handle Cat.No	NEMA 4/4X Handle Cat.No	Handle Length
1SDA115942R1	1SDA115943R1	10"


Maximum Dimensions in Inches

Enclosure Depth	36" Cable			48" Cable		
	E*	F	G	E*	F	G
8	13.5	4.0	15.0	25.5	16.0	27.0
10	13.0	5.0	14.8	25.0	17.0	26.8
12	12.8	6.0	14.5	24.8	17.0	26.5
16	10.5	4.5	14.2	22.5	16.5	26.2
18	8.5	3.5	12.6	20.5	15.5	24.6
20	—	0.5	10.0	22.0	15.0	24.0
24	—	—	—	19.5	14.0	22.0




* Maximum E dimension only if F = 4.5".




To determine maximum mounting dimensions for 60-inch through 120-inch-long operating cables, add the respective additional lengths to the 48-inch cable maximum dimensions. (For example, add 12 inches to E, F, and G dimensions for 60-inch cable length.)



Circuit Breaker Mounting-Zone Dimensions

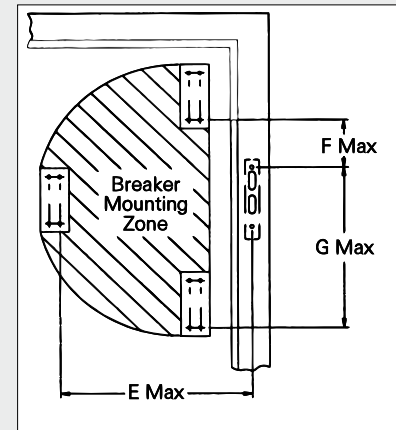



When cable is installed, the minimum cable bend radius should not be less than 3 inches. The minimum cable bending requirement must be met to ensure a safe operating environment.

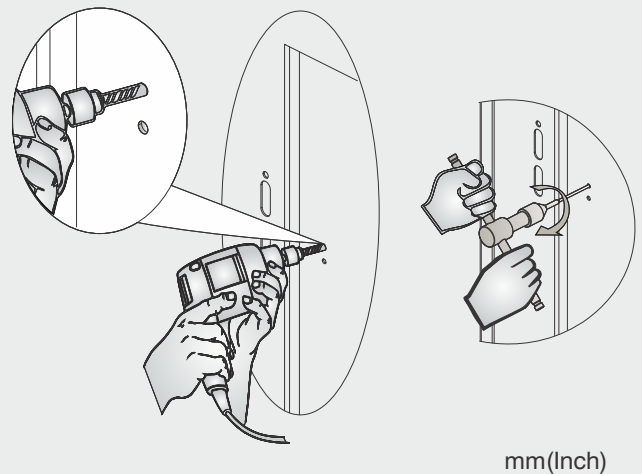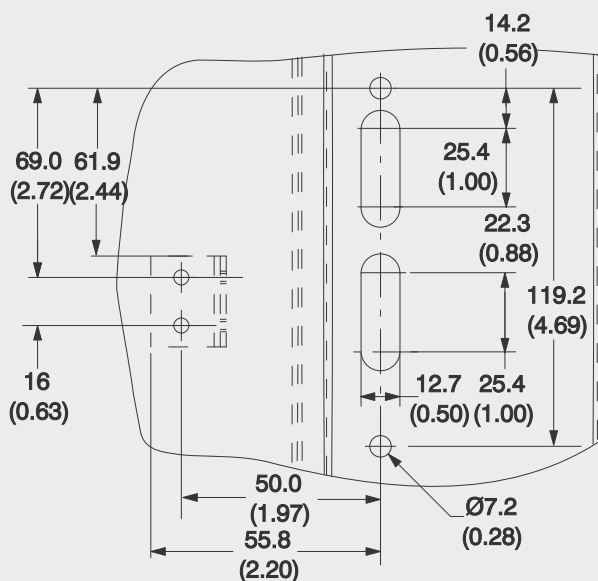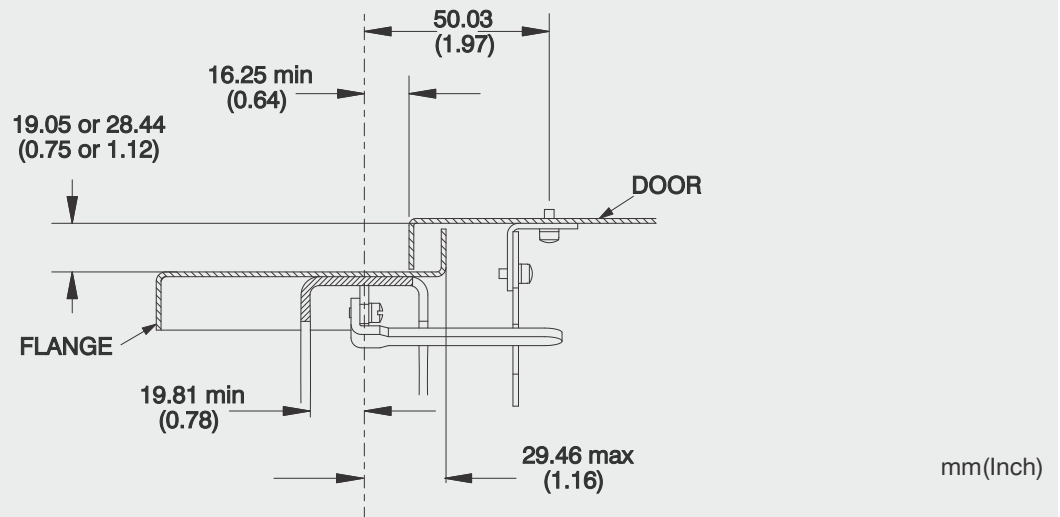

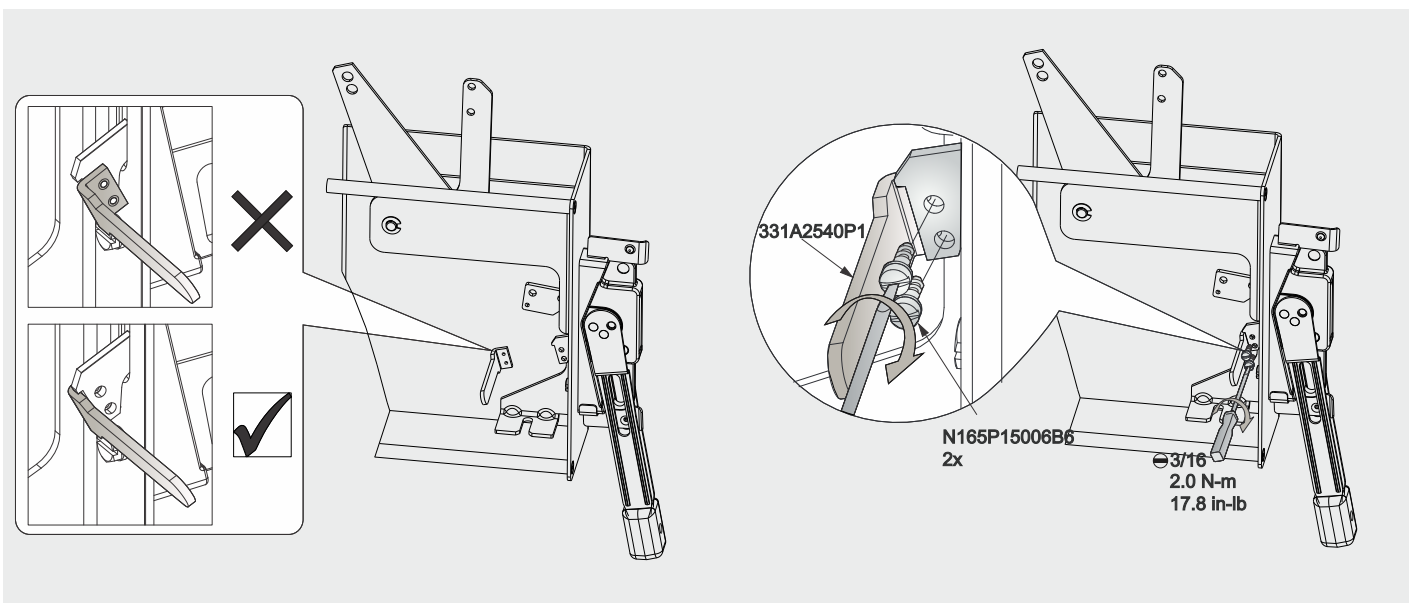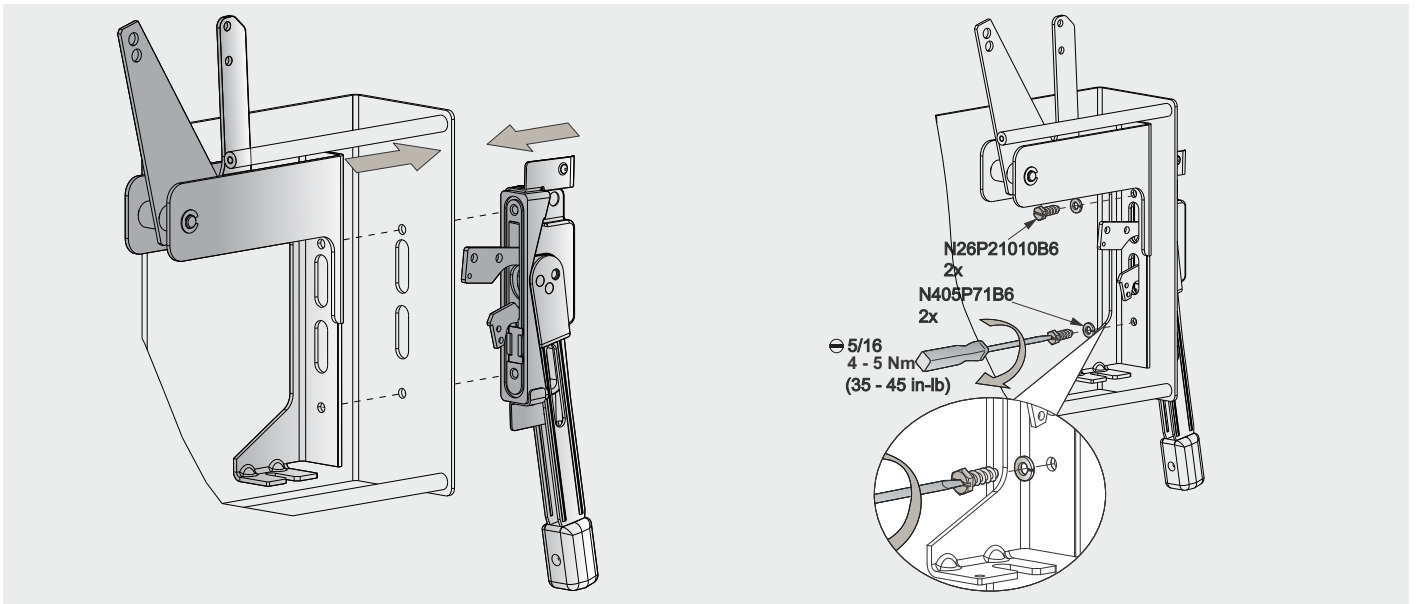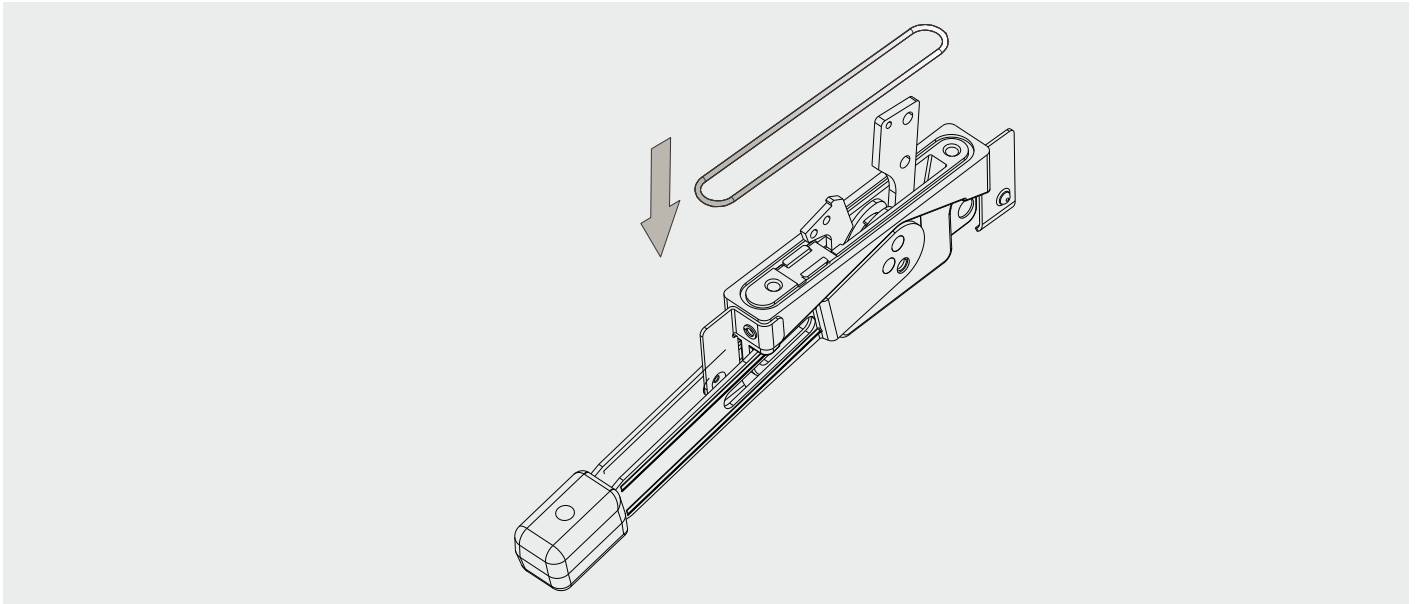

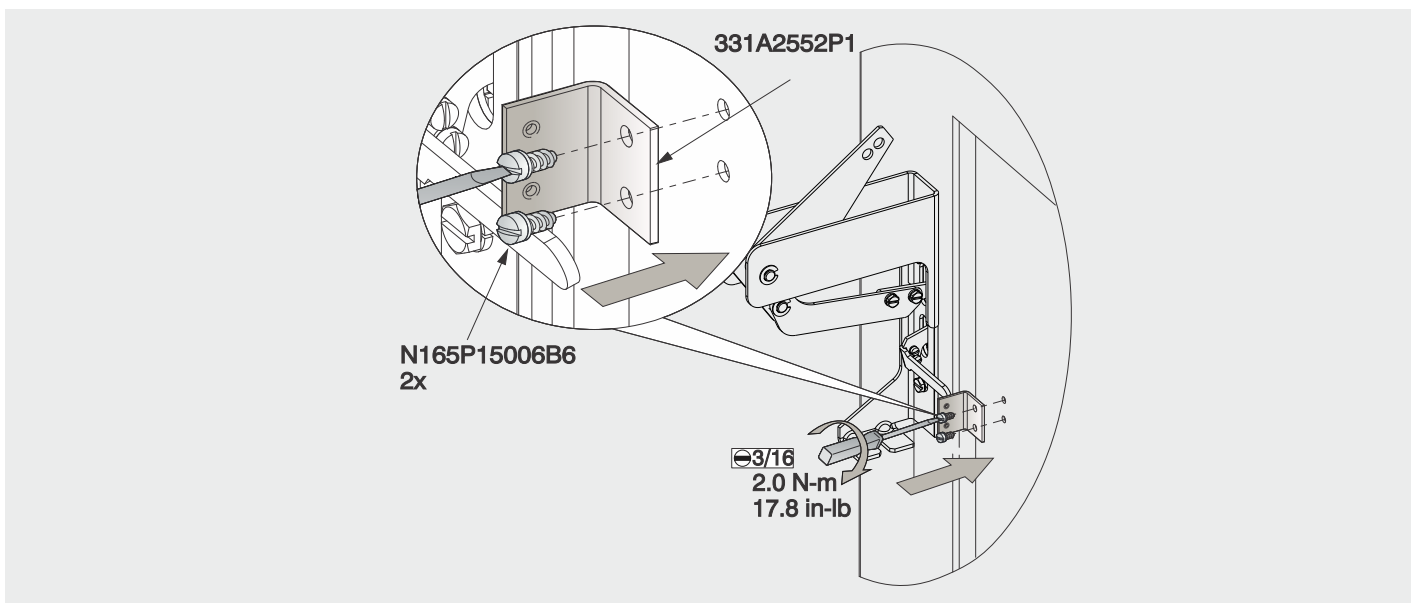
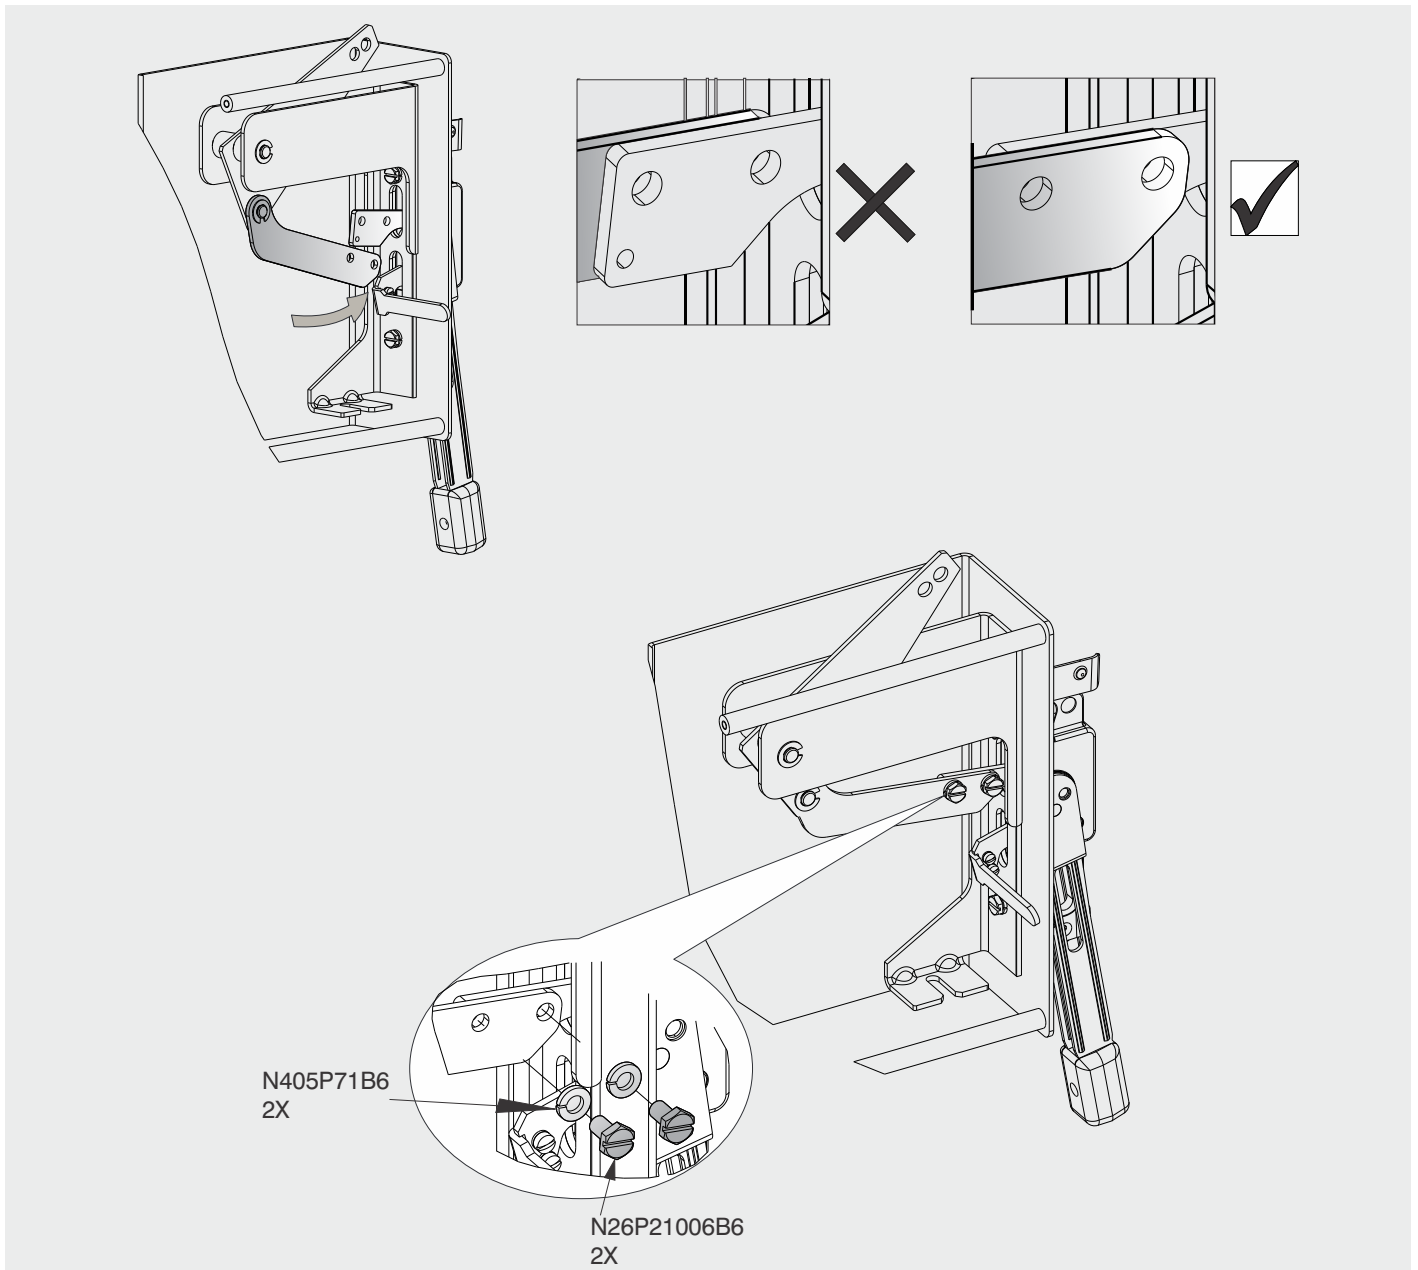


8A

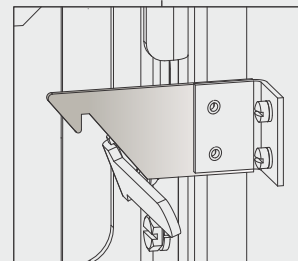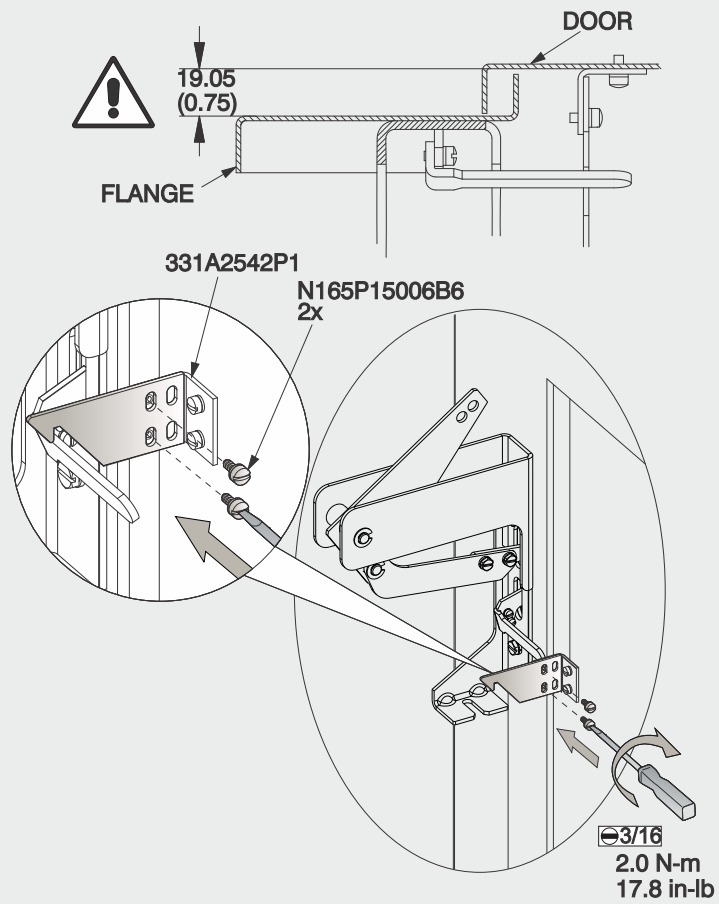


OR

8B

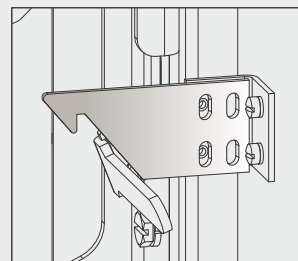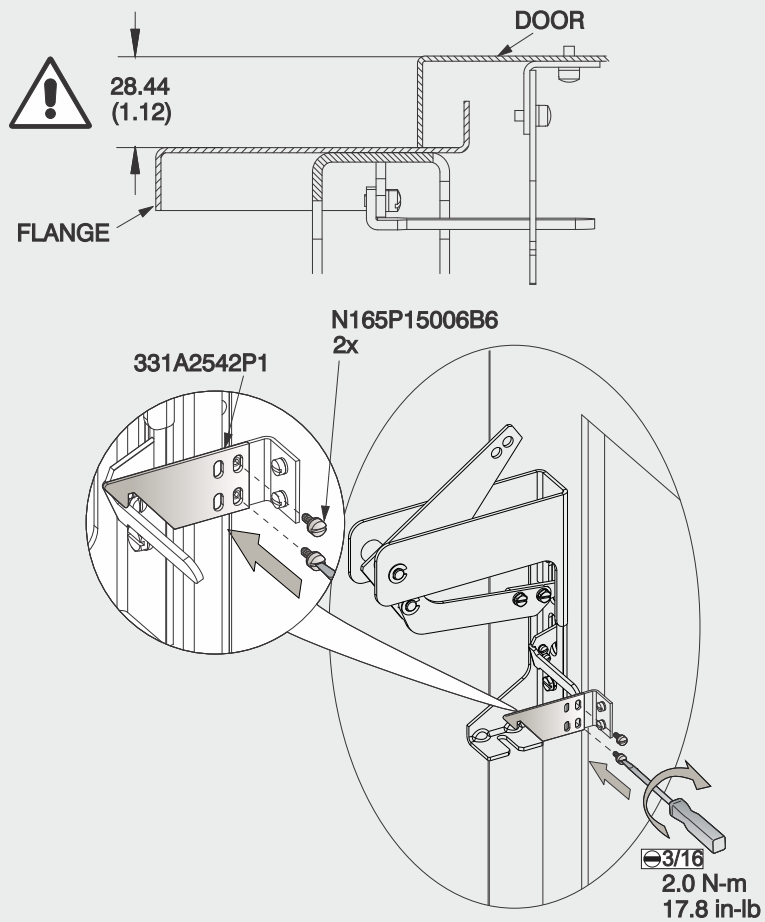


mm(Inch)

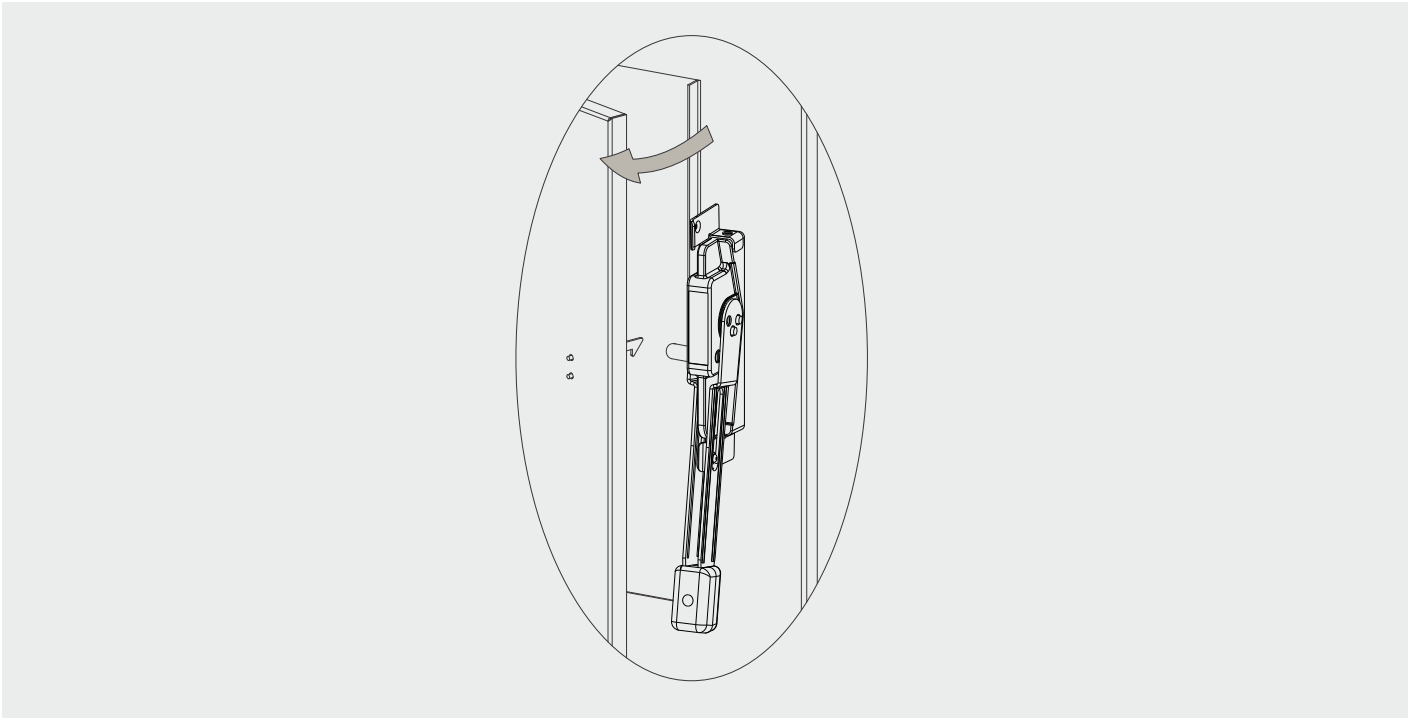


10

FINAL ASSEMBLING

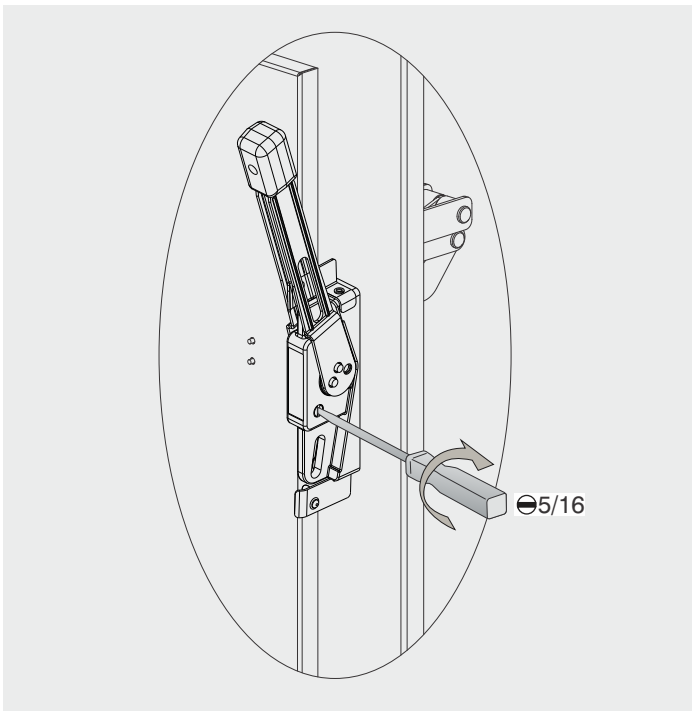

11

FINAL ASSEMBLING

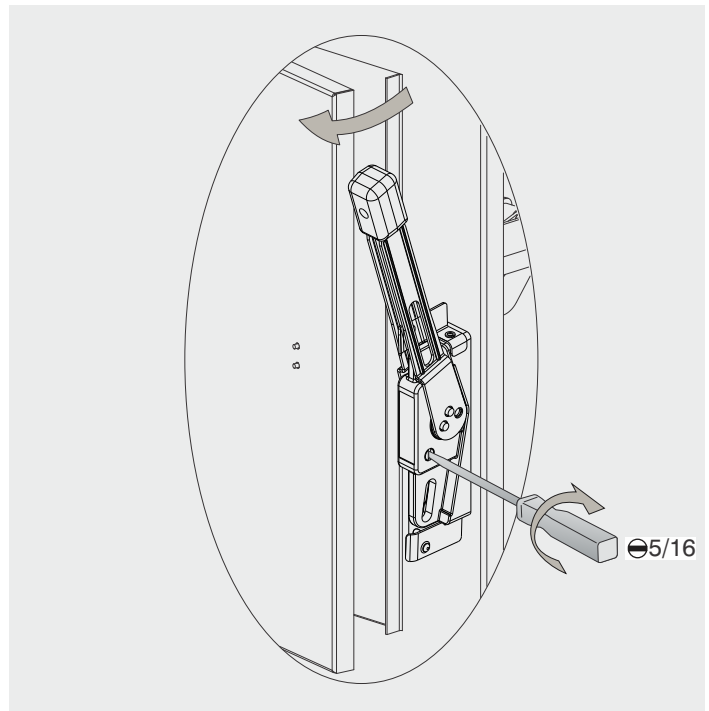

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation operation or maintenance.