## **Electromagnetic Flowmeter**

- Hygienic/Sanitary

## Specification DataFile

- Unrivalled, fully traceable flow performance, ±0.2% accuracy. Operable flow range: 1000 : 1
  - ensures precise revenue measurement; superior process control
- Approved hygienic/sanitary design with choice of connections
  - allows clean-in-place and total flexibility of installation
- Designed and manufactured to internationally accepted standards ISO 9001, 3A, FDA system
  - ensures reliable, maintenance-free operation
- Fully-featured transmitter with comprehensive display and output options, including HART
  - allows easy integration into other systems and clear operator interface
- Corrosion free polypropylene transmitter enclosure IP65/NEMA4X
  - suitable for all brewing, food,
     pharmaceutical and dairy environments



MagMaster – bringing unsurpassed flowmetering performance to the brewery, dairy, pharmaceutical and food processing industries.



### Introduction

### Setting the Standard

MagMaster – the high performance flowmeter from ABB Instrumentation – is now available in a hygienic/sanitary version for food processing and pharmaceutical applications. MagMaster is designed for use in dairies, breweries, pharmaceutical and liquid food processing markets and it takes hygienic/sanitary flowmetering to new levels of capability and performance. The new range brings to these industries a proven level of performance which is unsurpassed in electromagnetic flow measurement.

### **Unrivalled Performance**

MagMaster provides reliable measurement from high capacity down to virtually zero flow rates. Its potential operating flow range of 1000:1 enables previously unregistered minimal flows to be metered with an accuracy of  $\pm 0.2\%$  of reading or  $\pm 0.001~m~s^{-1}$  (0.0033 ft s $^{-1}$ ) (whichever is the greater). Users can now achieve more precise revenue measurement and superior process control.

### Hygienic/sanitary Design

MagMaster's wide temperature, hygienic/sanitary design eliminates germ traps and is suitable for CIP (Clean-in-Place) using chemical cleansers, hot water and steam rinses. All external crevices have been eliminated from the sensor to ensure easy and effective hose-down.



Flowmeters, Transmitter and Couplings

### **Fully Approved to International Standards**

MagMaster conforms to a wide range of national and international standards to meet hygienic/sanitary requirements for measurement and food processing legislation. Approvals include: 3A licensed, FDA system, FM and CSA general purpose. The meter's PTFE lining is approved and its housing is designed to be compatible with a hygienic/sanitary environment.

### Flexible Installation

The new range is available in sizes from 20 mm (0.75 in) to 80 mm (3 in) – the latter size also being available with 100 mm (4 in) mating couplings. The standard installation connections are tri-clamp, ISO 2852 or DIN 11851 male screw connectors.

### **Tough in Service**

The new range of meters is extremely robust and can withstand the stresses of being installed in a tanker and also accommodates the widely differing operating conditions encountered in liquid food and pharmaceutical applications.

### **Fully Featured Transmitters**

There is a choice between the 'Industry Reference' MagMaster transmitter and the hygienic/sanitary version. The hygienic/sanitary version minimizes germ traps, thus facilitating cleaning. The local communication connector is omitted and a hygienic/sanitary terminal cover is fitted to the front of the unit. The transmitter is tamper-proof thus ensuring integrity of measurement.

### Easy-to-Use – Simple to Interface

Both transmitters feature the option of a display which provides three internal totalizers covering forward, reverse and nett flow in a wide range of volumetric units. Flowrate display in forward and reverse directions in volumetric flowrate units is also provided. The display option, together with the wide choice of outputs – analog, pulse, serial data, Hart, etc. – ensures compatibility with both the user's display and control system requirements. Installation of the system is simplified by the universal power supply (available for a.c. or d.c. supplies) which enables the system to be used over very wide ranges of voltage with no manual voltage selection being required.

### **Maintaining the Standard**

MagMaster is designed and manufactured in accordance with international quality procedures (ISO 9001) and all flowmeters are calibrated on nationally traceable calibration rigs to provide the end user with complete assurance of both quality and performance of the meter.

## **General Specification**

### **Sizes**


| Size |       | Flow Range |                        |         |                        |  |  |  |
|------|-------|------------|------------------------|---------|------------------------|--|--|--|
|      | in    | †Mi        | nimum                  | Maximum |                        |  |  |  |
| mm   | ın    | m³ h-1     | US g min <sup>-1</sup> | m³ h-1  | US g min <sup>-1</sup> |  |  |  |
| *20  | *0.75 | 0.0113     | 0.05                   | 17      | 75                     |  |  |  |
| 25   | 1     | 0.0177     | 0.08                   | 27      | 115                    |  |  |  |
| 40   | 1.5   | 0.0452     | 0.20                   | 68      | 300                    |  |  |  |
| 50   | 2     | 0.0707     | 0.30                   | 107     | 450                    |  |  |  |
| 65   | 2.5   | 0.1194     | 0.53                   | 179     | 790                    |  |  |  |
| 80   | 3     | 0.1809     | 0.80                   | 271     | 1194                   |  |  |  |
| 100‡ | 4‡    | 0.1809     | 0.80                   | 271     | 1194                   |  |  |  |

<sup>\*</sup>DIN only.


Transmitter/Sensor

**Separation** < 100 m (328 ft)


### **Accuracy (under reference conditions)**

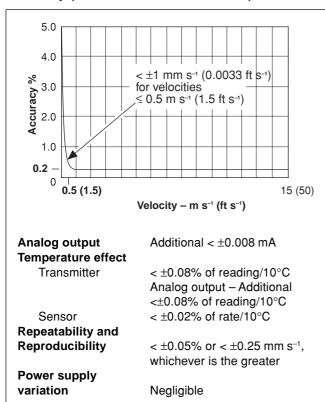


### Mounting

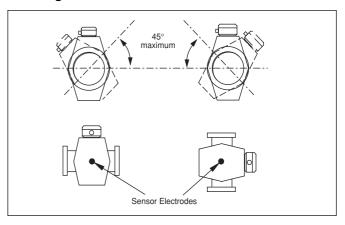

### Connections

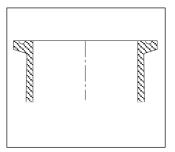


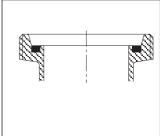

Tri-clamp ISO 2852

DIN 11851.

### Straight pipe requirements

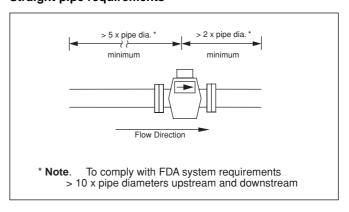

Power consumption < 20 VA

Conductivity  $\geq 5 \mu S \text{ cm}^{-1}$ 

<sup>†</sup> For accuracy see graph below.


<sup>‡ 100</sup> mm/4 in couplings with 80 mm/3 in sensor

## **Sensor Specification**

### Sizes

| Size mm<br>(in) | Dime        | Approx.<br>Weight |             |    |    |
|-----------------|-------------|-------------------|-------------|----|----|
|                 | Α           | В                 | С           | kg | lb |
| 20 (0.75)       | 174 (6.85)  | 122 (4.80)        | 285 (11.22) | 7  | 15 |
| 25 (1)          | 174 (6.85)  | 122 (4.80)        | 285 (11.22) | 7  | 15 |
| 40 (1.5)        | 210 (8.27)  | 128 (5.04)        | 284 (11.18) | 9  | 20 |
| 50 (2)          | 210 (8.27)  | 128 (5.04)        | 284 (11.18) | 10 | 22 |
| 65 (2.5)        | 280 (11.02) | 122 (4.80)        | 312 (12.28) | 13 | 29 |
| 80 (3)          | 280 (11.02) | 122 (4.80)        | 312 (12.28) | 13 | 29 |
| 100 (4) *       | 280 (11.02) | 122 (4.80)        | 392 (15.43) | 14 | 31 |

<sup>\* 100</sup> mm/4 in couplings with 80 mm/3 in sensor

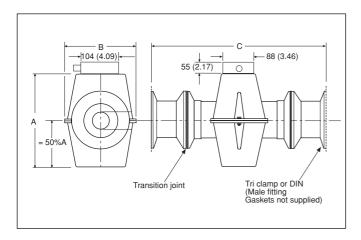

# Environmental Protection

(when installed) IP65/NEMA 4X

Approvals/Licenses 3A

FDA system

FM/CSA applied for

### **Materials**


| Item                           | Material   |  |  |  |  |  |
|--------------------------------|--|--|--|--|--|--|
| Metering tube & fittings       | Stainless steel 316                                |  |  |  |  |  |
| Lining                         | PTFE (complies with FDA system and 3A regulations) |  |  |  |  |  |
| Gaskets (Transition joints)    | Nitrile rubber:105°C (221°F)                       |  |  |  |  |  |
| , ,                            | EPDM: 135°C (275°F)                                |  |  |  |  |  |
| Flectrodes                     | Stainless steel 316                                |  |  |  |  |  |
| Licentoucs                     | Hastelloy 'C'                                      |  |  |  |  |  |
| Sensor & terminal box housings | White nylon-coated aluminium                       |  |  |  |  |  |

### **Pressure Limitations**


| Size mm (in.)          | Pressure – bar (lb/in2) |          |  |  |  |  |
|------------------------|-------------------------|----------|--|--|--|--|
| Size IIIII (III.)      | Minimum*                | Maximum  |  |  |  |  |
| 20 to 65 (0.75 to 2.5) | 0.25 (3.75)             | 17 (250) |  |  |  |  |
| 80 (3)<br>100 (4)      | 0.25 (3.75)             | 17 (250) |  |  |  |  |

<sup>\*</sup>Absolute

### **Temperature Ranges**

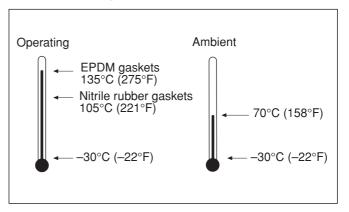


### **Transmitter Specification**

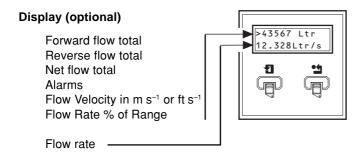

### **Power Supply**

| Voltage Type |      | Voltage Range (V)<br>Absolute rating | Frequency (Hz) | VA   |
|--------------|------|--------------------------------------|----------------|------|
|              | a.c. | 85 to 265                            | 47 to 440      | <2 0 |
| d.c.         |      | 11 to 40                             | _              | <2 0 |

### **Temperature Ranges**

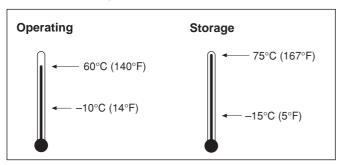

Environmental protection

IP65/NEMA 4X

Approvals Electrical safety – BS4743 Class 1

(IEC 348)

FM and CSA applied for

**EMC Specification** Conforms to –

EMC Directive 89/336/EEC


**Enclosure** Glass loaded polypropylene,

polycarbonate window, polycarbonate terminal cover (Hygienic/sanitary version)


### **Electrical connections**

20 mm plastic glands, or accepts  $^{1}/_{2}$  in NPT connectors.


(Face seals required)

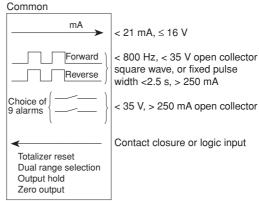



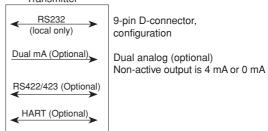

#### Hygienic/Sanitary Transmitter




Dual analog (optional) Non-active output is 4 mA or 0 mA


### **Outputs/Inputs**

Galvanic separation to 50 V d.c. between analog, pulse/alarm and earth/ground

## **Sensor Ordering Information**

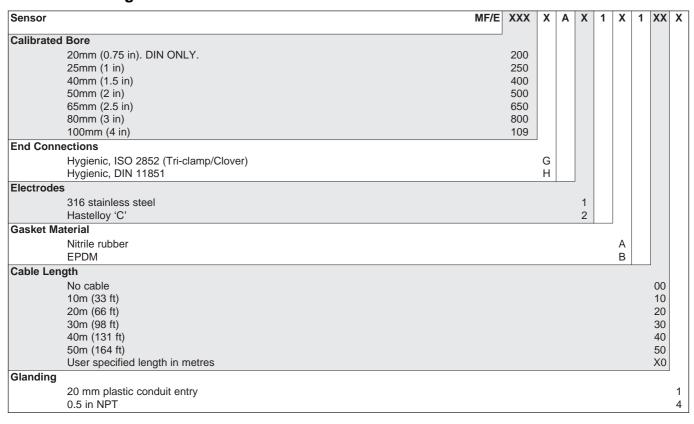

### **Transmitter Overall Dimensions**

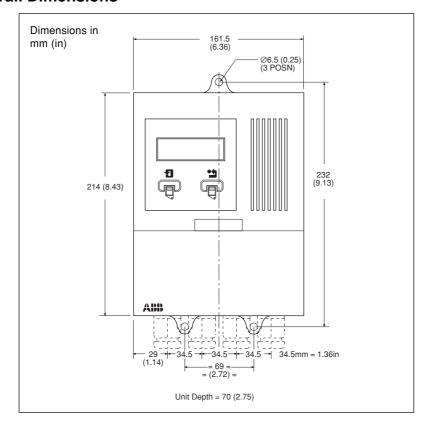


## **Transmitter Ordering Information**

| Transmitter |  | Х      | Ε    | X      | X | Х | Х | X | 1 | X      | Х |
|-------------|--|--------|------|--------|---|---|---|---|---|--------|---|
| <b>.</b> "  |  |        |      |        |   |   |   |   |   |        |   |
| Glanding    |  |        |      |        |   |   |   |   |   |        |   |
|             | 20 mm plastic gland<br>0.5 in NPT connection         | 1<br>4 |      |        |   |   |   |   |   |        |   |
| Transmitter | Туре   |        | ,    |        |   |   |   |   |   |        |   |
|             | "Industry Reference" MagMaster<br>Hygienic MagMaster |        |      | R<br>S |   |   |   |   |   |        |   |
| Power Supp  | ly   |        |      |        | , |   |   |   |   |        |   |
|             | 95 V to 24 0Va.c.<br>12 V to 35 Vd.c.                |        |      |        | 1 |   |   |   |   |        |   |
| Display     |  |        |      |        |   | • |   |   |   |        |   |
|             | Blind  |        |      |        |   | 0 |   |   |   |        |   |
|             | 2-line high integrity display                        |        |      |        |   | 3 |   |   |   |        |   |
|             | 3-line display with keypad                           |        |      | _      |   | 4 |   |   |   |        |   |
| Output Opti | ons  |        | Tx T | уре    | 2 |   |   |   |   |        |   |
|             | Standard   |        | R    |        |   |   | 0 |   |   |        |   |
|             | Dual current   |        | R    |        |   |   | 1 |   |   |        |   |
|             | HART communications *                                |        | R    |        |   |   | 2 |   |   |        |   |
|             | RS423/422 serial communications                      |        | R    |        |   |   | 4 |   |   |        |   |
|             | RS423/422 serial communications + dual current       |        | R    |        |   |   | 5 |   |   |        |   |
|             | Standard   |        |      | S      |   |   | 6 |   |   |        |   |
|             | Dual current   |        |      | S      |   |   | 7 |   |   |        |   |
|             | HART communication                                   |        |      | S      |   |   | 8 |   |   |        |   |
| Transmitter | Build  |        |      |        |   |   |   | , |   |        |   |
|             | Standard   |        |      |        |   |   |   | 1 |   |        |   |
|             | FM, CSA General Approval                             |        |      |        |   |   |   | 3 |   |        |   |
| Language    |  |        |      |        |   |   |   |   |   |        |   |
|             | English  |        |      |        |   |   |   |   |   | 1      |   |
|             | French   |        |      |        |   |   |   |   |   | 2      |   |
|             | German   |        |      |        |   |   |   |   |   | 3      |   |
|             | Spanish telian                                       |        |      |        |   |   |   |   |   | 4      |   |
|             | Italian Dutch  |        |      |        |   |   |   |   |   | 5<br>6 |   |
| Labala      |  |        |      |        |   |   |   |   |   | О      |   |
| Labels      | Factory allocated                                    |        |      |        |   |   |   |   |   |        |   |

<sup>\*</sup> Only available on UK versions


### **How to Order**




### **Features**

| User re-programmable | Local hand-held configurator programming e.g. Psion 3, etc.   |
|----------------------|---|
| Fully configurable   | A choice of engineering parameters in engineering units, e.g. flowrate, flow units, all outputs, etc.                         |
| Empty pipe sensing   | Ensures units read zero on empty pipe.  |
| Interchangeability   | Transmitter can be changed without affecting performance.   |
| Self-diagnostics     | Ensures transmitter and sensor integrity.   |
| Test mode            | Powerful commissioning aid. Exercises all outputs and displays, even without a connected sensor.                              |
| Multi-lingual        | Displays, programming and prompts available in English, French, German, Spanish and Italian – other languages on application. |

SS/MAG/HS Issue 6

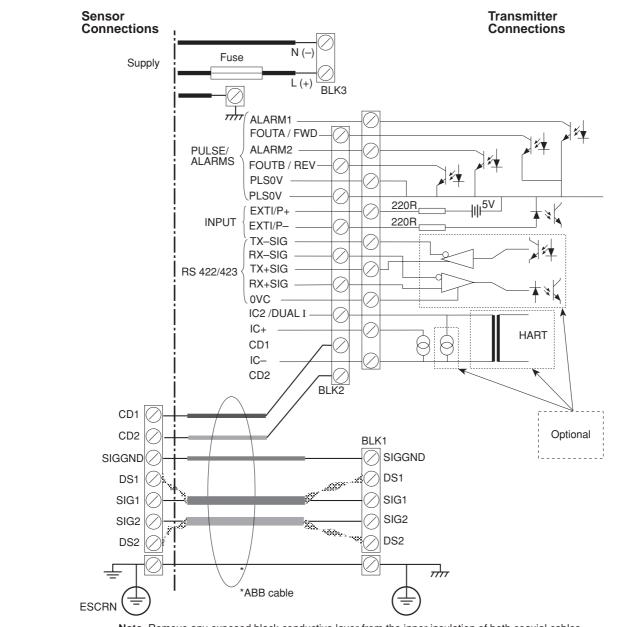





The Company's policy is one of continuous product improvement and the right is reserved to modify the information contained herein without notice.

© ABB 2000 Printed in UK (11.00)

### ABB Automation Ltd

Oldends Lane, Stonehouse Gloucestershire, GL10 3TA UK

Tel: +44 (0)1453-826-661 Fax: +44 (0)1453-827-856

### ABB Automation Inc

125 E. County Line Road Warminster, PA 18974 USA

Tel: +1 215-674-6000 Fax: +1 215-674-7183