
Application Guide

Dissolved Oxygen Monitoring in Effluent Treatment Plant

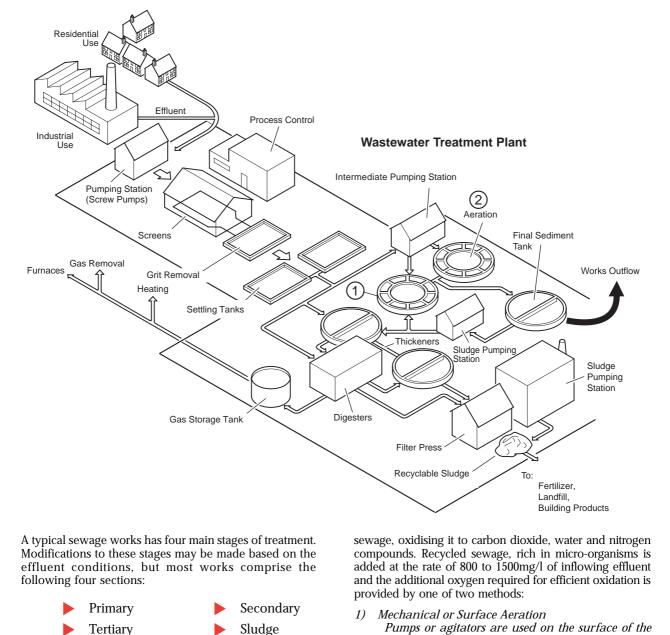

Sewage works are frequently divided into types, normally based on the method of the secondary treatment, with similar installations for the remainder of the treatment.

The type employed in most modern works is the activated sludge system which involves a culture of bacteria and other organisms in water. In the presence of sufficient air, this culture multiplies and feeds on organic material in the 1) Mechanical or Surface Aeration Pumps or agitators are used on the surface of the tanks and the rate of aeration can be controlled by varying the speed and depth of the immersion of the agitator, or speed of the pump.

2) Diffusion

Using perforated pipes or domes in the base of the tanks. In this case the rate is controlled by varying the speed of the compressors which force air through the diffusers.

ABB Instrumentation




Why use a Dissolved Oxygen Monitor	Monitoring the dissolved oxygen at the aeration tanks ensures that optimum process conditions are maintained. Controlling the aeration equipment between close D.O. levels minimises the energy consumed. Considerable cost savings can be achieved.
Why use ABB Instrumentation ?	 ABB dissolved oxygen instrumentation has proven reliability and low maintenance requirements. Full installation, commissioning and routine servicing is available (in the UK this is covered by the <i>Assist</i>[™] Customer Support Programme).
What ABB Products are Suitable ?	 Model 4640 Dissolved Oxygen Transmitter Model 9408 Measuring System Mounting configurations available:

Associated **ABB Products for use** on Effluent Treatment Plant

- ^tpH transmitters for pH control type 4630.
- *Phosphate monitors type 8242.
- *Nitrate monitors type 8236.
- *Turbidity monitors type 4670.
 - * to ensure compliance with discharge consent limits

Installation

- Basic installation configurations for both mechanical and surface aeration and diffusion type installations are shown below.
- In this application, the sample is at ambient temperature – no preparation required.
- In this installation, where the sample level varies, a 'floating ball' type measuring system must be used.

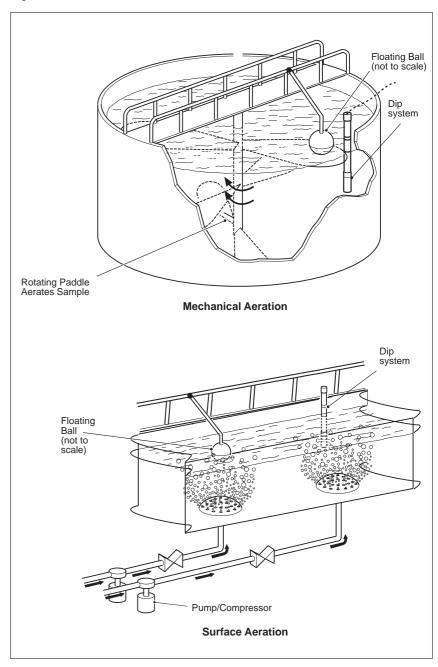



The Company's policy is one of continuous product improvement and the right is reserved to modify the information contained herein without notice.

© ABB 1997

(8.97)

AG/ETD Issue 1

ABB Kent-Taylor Ltd.

St. Neots Cambs. England, PE19 3EU Tel: +44 (0) 1480 475321 Fax: +44 (0) 1480 217948

ABB Kent-Taylor Ltd. Analytical & Flow Group Stonehouse, Glos. England, GL10 3TA Tel: +44 (0) 1453 826661 Fax: +44 (0) 1453 826358

ABB Instrumentation Inc. PO Box 20550, Rochester New York 14602-0550 USA Tel: +1 716 292 6050 Fax: +1 716 273 6207

ABB Kent-Taylor SpA

22016 Lenno Como Italy Tel: +39 (0) 344 58111 Fax: +39 (0) 344 56278