



Relion® 650 series

Line distance protection REL650 Commissioning Manual



Document ID: 1MRK 506 327-UEN
Issued: February 2011
Revision: -
Product version: 1.1

© Copyright 2011 ABB. All rights reserved

Copyright

This document and parts thereof must not be reproduced or copied without written permission from ABB, and the contents thereof must not be imparted to a third party, nor used for any unauthorized purpose.

The software or hardware described in this document is furnished under a license and may be used or disclosed only in accordance with the terms of such license.

Trademarks

ABB and Relion are registered trademarks of ABB Group. All other brand or product names mentioned in this document may be trademarks or registered trademarks of their respective holders.

Warranty

Please inquire about the terms of warranty from your nearest ABB representative.

ABB AB

Substation Automation Products

SE-721 59 Västerås

Sweden

Telephone: +46 (0) 21 32 50 00

Facsimile: +46 (0) 21 14 69 18

<http://www.abb.com/substationautomation>

Conformity

This product complies with the directive of the Council of the European Communities on the approximation of the laws of the Member States relating to electromagnetic compatibility (EMC Directive 2004/108/EC) and concerning electrical equipment for use within specified voltage limits (Low-voltage directive 2006/95/EC). This conformity is the result of tests conducted by ABB in accordance with the product standards EN 50263 and EN 60255-26 for the EMC directive, and with the product standards EN 60255-1 and EN 60255-27 for the low voltage directive. The IED is designed in accordance with the international standards of the IEC 60255 series.

Disclaimer

The data, examples and diagrams in this manual are included solely for the concept or product description and are not to be deemed as a statement of guaranteed properties. All persons responsible for applying the equipment addressed in this manual must satisfy themselves that each intended application is suitable and acceptable, including that any applicable safety or other operational requirements are complied with. In particular, any risks in applications where a system failure and/or product failure would create a risk for harm to property or persons (including but not limited to personal injuries or death) shall be the sole responsibility of the person or entity applying the equipment, and those so responsible are hereby requested to ensure that all measures are taken to exclude or mitigate such risks.

This document has been carefully checked by ABB but deviations cannot be completely ruled out. In case any errors are detected, the reader is kindly requested to notify the manufacturer. Other than under explicit contractual commitments, in no event shall ABB be responsible or liable for any loss or damage resulting from the use of this manual or the application of the equipment.

Safety information



Dangerous voltages can occur on the connectors, even though the auxiliary voltage has been disconnected.



Non-observance can result in death, personal injury or substantial property damage.



Only a competent electrician is allowed to carry out the electrical installation.



National and local electrical safety regulations must always be followed.



The frame of the IED has to be carefully earthed.



Whenever changes are made in the IED, measures should be taken to avoid inadvertent tripping.



The IED contains components which are sensitive to electrostatic discharge. Unnecessary touching of electronic components must therefore be avoided.

Table of contents

| | | |
|------------------|---|-----------|
| Section 1 | Introduction..... | 9 |
| | This manual..... | 9 |
| | Intended audience..... | 9 |
| | Product documentation..... | 10 |
| | Product documentation set..... | 10 |
| | Document revision history..... | 11 |
| | Related documents..... | 11 |
| | Symbols and conventions..... | 12 |
| | Safety indication symbols..... | 12 |
| | Manual conventions..... | 13 |
| Section 2 | Available functions..... | 15 |
| | Main protection functions..... | 15 |
| | Back-up protection functions..... | 15 |
| | Control and monitoring functions..... | 17 |
| | Designed to communicate..... | 19 |
| | Basic IED functions..... | 20 |
| Section 3 | Starting up..... | 21 |
| | Factory and site acceptance testing..... | 21 |
| | Commissioning checklist..... | 21 |
| | Checking the power supply..... | 22 |
| | Energizing the IED..... | 22 |
| | Checking the IED operation..... | 22 |
| | IED start-up sequence..... | 22 |
| | Setting up communication between PCM600 and the IED..... | 23 |
| | Writing an application configuration to the IED..... | 27 |
| | Checking CT circuits..... | 28 |
| | Checking VT circuits..... | 28 |
| | Checking the RTXP test switch | 29 |
| | Checking binary input and output circuits..... | 30 |
| | Binary input circuits..... | 30 |
| | Binary output circuits..... | 30 |
| | Checking optical connections..... | 30 |
| Section 4 | Establishing connection and verifying the IEC 61850 station communication..... | 31 |
| | Setting the station communication..... | 31 |
| | Verifying the communication..... | 31 |

| | | |
|------------------|--|-----------|
| Section 5 | Testing IED operation..... | 33 |
| | Preparing the IED to verify settings..... | 33 |
| | Activating test mode..... | 35 |
| | Preparing the connection to the test equipment..... | 35 |
| | Connecting test equipment to the IED..... | 36 |
| | Releasing the function to be tested..... | 37 |
| | Verifying analog primary and secondary measurement..... | 37 |
| | Testing protection functionality..... | 39 |
| Section 6 | Testing functionality..... | 41 |
| | Testing disturbance report..... | 41 |
| | Introduction..... | 41 |
| | Disturbance report settings..... | 41 |
| | Identifying the function to test in the technical reference manual | 41 |
| | Testing impedance protection functions..... | 42 |
| | Five zone distance protection, quadrilateral characteristic ZQDPDIS..... | 42 |
| | Measuring the operating limit of set values with shaped load encroachment characteristics..... | 45 |
| | Measuring the operate time of distance protection zones..... | 45 |
| | Completing the test..... | 45 |
| | Phase selection with load encroachment, quadrilateral characteristic FDPSPDIS | 46 |
| | Measuring the operate limit of set values..... | 48 |
| | Completing the test..... | 48 |
| | Five zone distance protection, mho characteristic function ZMOPDIS..... | 49 |
| | Phase-to-phase faults..... | 50 |
| | Phase-to-earth faults..... | 50 |
| | Faulty phase identification with load encroachment FMPSPDIS | 51 |
| | Phase preference logic PPLPHIZ | 52 |
| | Completing the test..... | 53 |
| | Power swing detection ZMRPSB | 53 |
| | Verifying the settings..... | 54 |
| | Testing the power swing detection function ZMRPSB | 55 |
| | Testing the $tR1$ timer..... | 55 |
| | Completing the test..... | 56 |
| | Automatic switch onto fault logic, voltage and current based ZCVPSOF..... | 56 |
| | External activation of ZCVPSOF..... | 56 |
| | Automatic initiation of ZCVPSOF..... | 57 |

| | |
|--|----|
| Completing the test..... | 57 |
| Testing current protection functions..... | 57 |
| Instantaneous phase overcurrent protection PHPIOC | 57 |
| Measuring the operate limit of set values..... | 57 |
| Completing the test..... | 58 |
| Instantaneous phase overcurrent protection SPTPIOC | 58 |
| Completing the test..... | 58 |
| Four step phase overcurrent protection OC4PTOC..... | 59 |
| Verifying the settings..... | 59 |
| Completing the test..... | 60 |
| Four step phase overcurrent protection OC4SPTOC | 60 |
| Verifying the settings..... | 60 |
| Completing the test..... | 61 |
| Instantaneous residual overcurrent protection EFPIOC | 61 |
| Measuring the operate limit of set values..... | 62 |
| Completing the test..... | 62 |
| Four step residual overcurrent protection EF4PTOC | 62 |
| Four step directional residual overcurrent | 62 |
| Four step non-directional residual overcurrent | |
| protection..... | 63 |
| Completing the test..... | 63 |
| Sensitive directional residual overcurrent and power | |
| protection SDEPSDE | 64 |
| Measuring the operate and time limit for set values..... | 64 |
| Completing the test..... | 69 |
| Thermal overload protection, one time constant LPTTR | 69 |
| Completing the test..... | 69 |
| Breaker failure protection CCRBRF..... | 69 |
| Checking the phase current operate value, $IP>$ | 70 |
| Checking the residual (earth fault) current operate value | |
| $IN>$ set below $IP>$ | 70 |
| Checking the re-trip and back-up times..... | 70 |
| Verifying the re-trip mode..... | 71 |
| Verifying the back-up trip mode..... | 71 |
| Verifying the case <i>RetripMode = Contact</i> | 73 |
| Verifying the function mode <i>Current&Contact</i> | 73 |
| Completing the test..... | 74 |
| Breaker failure protection CSPRBRF..... | 74 |
| Checking the phase current operate value, $IP>$ | 74 |
| Checking the residual (EF) current operate value $IN>$ | |
| set below $IP>$ | 75 |
| Checking the re-trip and back-up times..... | 75 |
| Verifying the <i>RetripMode</i> | 75 |
| Verifying the case <i>RetripMode = No CB Pos Check</i> | 76 |

Table of contents

| | |
|---|----|
| Verifying the function mode <i>Current&Contact</i> | 76 |
| Checking the case with fault current below set value <i>I>BlkCont</i> | 77 |
| Checking the phase current operate value, <i>IP></i> | 77 |
| Completing the test..... | 78 |
| Stub protection STBPTOC..... | 78 |
| Measuring the operate limit of set values..... | 78 |
| Completing the test..... | 79 |
| Pole discordance protection CCRPLD..... | 79 |
| Verifying the settings..... | 79 |
| Completing the test..... | 79 |
| Broken conductor check BRCPTOC | 80 |
| Measuring the operate and time limit of set values..... | 80 |
| Completing the test..... | 80 |
| Directional underpower protection GUPPDUP | 81 |
| Verifying the settings..... | 81 |
| Completing the test..... | 82 |
| Directional overpower protection GOPPDOP | 83 |
| Verifying the settings..... | 83 |
| Completing the test..... | 84 |
| Testing voltage protection functions..... | 84 |
| Two step undervoltage protection UV2PTUV | 84 |
| Verifying the setting..... | 84 |
| Completing the test..... | 85 |
| Two step overvoltage protection OV2PTOV | 85 |
| Verifying the settings..... | 85 |
| Completing the test..... | 85 |
| Two step residual overvoltage protection ROV2PTOV | 85 |
| Verifying the settings..... | 86 |
| Completing the test..... | 86 |
| Loss of voltage check LOVPTUV | 86 |
| Measuring the operate limit of set values..... | 86 |
| Completing the test..... | 87 |
| Testing frequency protection functions..... | 87 |
| Underfrequency protection SAPTUF | 87 |
| Verifying the settings..... | 87 |
| Completing the test..... | 88 |
| Overfrequency protection SAPTOF | 88 |
| Verifying the settings..... | 89 |
| Completing the test..... | 89 |
| Rate-of-change frequency protection SAPFRC | 90 |
| Verifying the settings..... | 90 |
| Completing the test..... | 90 |

| | |
|---|-----|
| Testing secondary system supervision functions..... | 91 |
| Current circuit supervision CCSRDIF | 91 |
| Verifying the settings..... | 91 |
| Completing the test..... | 91 |
| Fuse failure supervision SDDRFUF..... | 91 |
| Checking that the binary inputs and outputs operate as expected | 92 |
| Measuring the operate value for the negative sequence function | 92 |
| Measuring the operate value for the zero-sequence function | 93 |
| Checking the operation of the du/dt and di/dt based function | 94 |
| Completing the test..... | 94 |
| Testing control functions..... | 94 |
| Synchrocheck, energizing check, and synchronizing SESRSYN..... | 95 |
| Testing the synchronizing function..... | 96 |
| Testing the synchrocheck check..... | 97 |
| Testing the energizing check..... | 99 |
| Testing the voltage selection..... | 101 |
| Completing the test..... | 101 |
| Autorecloser SMBRREC | 101 |
| Preparation of the verification | 103 |
| Switching the autorecloser function to <i>On</i> and <i>Off</i> | 104 |
| Verifying the autorecloser function SMBRREC | 104 |
| Checking the reclosing conditions | 105 |
| Completing the test..... | 106 |
| Autorecloser STBRREC | 106 |
| Preparation of the verification..... | 108 |
| Switching the auto-reclosing function <i>On</i> and <i>Off</i> | 109 |
| Verifying the auto-reclosing function..... | 109 |
| Checking the reclosing conditions..... | 110 |
| Checking the influence of the INHIBIT signal..... | 110 |
| Check closing onto a fault..... | 110 |
| Checking the influence of CB not ready for reclosing..... | 110 |
| Checking the influence of synchrocheck (at three-phase reclosing)..... | 110 |
| Restoring equipment..... | 111 |
| Completing the test..... | 111 |
| Testing scheme communication functions..... | 111 |
| Scheme communication logic for distance or overcurrent protection ZCPSCH | 111 |
| Testing permissive underreaching..... | 112 |

Table of contents

| | |
|---|-----|
| Testing permissive overreaching..... | 112 |
| Testing blocking scheme..... | 112 |
| Checking of unblocking logic..... | 113 |
| Completing the test..... | 113 |
| Current reversal and weak-end infeed logic for distance protection ZCRWPSCH | 113 |
| Current reversal logic..... | 114 |
| Weak-end infeed logic at permissive schemes..... | 114 |
| Testing conditions..... | 115 |
| Completing the test..... | 115 |
| Current reversal and weak-end infeed logic for distance protection ZCWSPSCH | 116 |
| Current reversal logic..... | 116 |
| Weak-end infeed logic at permissive schemes..... | 116 |
| Testing conditions..... | 117 |
| Completing the test..... | 117 |
| Local acceleration logic ZCLCPLAL..... | 118 |
| Verifying the settings..... | 118 |
| Completing the test..... | 118 |
| Scheme communication logic for residual overcurrent protection ECPSCH | 118 |
| Testing the directional comparison logic function..... | 119 |
| Completing the test..... | 120 |
| Current reversal and weak-end infeed logic for residual overcurrent protection ECRWPSCH | 120 |
| Testing the current reversal logic..... | 121 |
| Testing the weak-end infeed logic..... | 121 |
| Completing the test..... | 123 |
| Testing logic functions..... | 123 |
| Tripping logic SMPPTRC | 123 |
| Three phase operating mode..... | 123 |
| Circuit breaker lockout..... | 124 |
| Completing the test..... | 124 |
| Tripping logic SPTPTRC | 124 |
| 1ph/3ph operating mode..... | 125 |
| Circuit breaker lockout..... | 126 |
| Completing the test..... | 126 |
| Testing monitoring functions..... | 126 |
| Event counter CNTGGIO..... | 126 |
| Fault locator LMBRFLO..... | 126 |
| Completing the test..... | 127 |
| Measuring the operate limit..... | 127 |
| Testing metering functions..... | 128 |
| Pulse counter PCGGIO..... | 128 |

| | |
|--|------------|
| Exit test mode..... | 128 |
| Section 7 Commissioning and maintenance of the fault clearing system..... | 129 |
| Commissioning and maintenance of the fault clearing system..... | 129 |
| Installation and commissioning..... | 129 |
| Commissioning tests..... | 130 |
| Periodic maintenance tests..... | 130 |
| Visual inspection..... | 131 |
| Maintenance tests..... | 131 |
| Section 8 Troubleshooting | 135 |
| Fault tracing..... | 135 |
| Identifying hardware errors..... | 135 |
| Identifying runtime errors..... | 135 |
| Identifying communication errors..... | 135 |
| Checking the communication link operation..... | 136 |
| Checking the time synchronization..... | 136 |
| Running the display test..... | 136 |
| Indication messages..... | 137 |
| Internal faults..... | 137 |
| Warnings..... | 137 |
| Additional indications..... | 138 |
| Correction procedures..... | 138 |
| Changing and setting the password..... | 138 |
| Identifying IED application problems..... | 138 |
| Inspecting the wiring..... | 139 |
| Section 9 Glossary..... | 143 |

Section 1 Introduction

1.1 This manual

The commissioning manual contains instructions on how to commission the IED. The manual can also be used by system engineers and maintenance personnel for assistance during the testing phase. The manual provides procedures for checking of external circuitry and energizing the IED, parameter setting and configuration as well as verifying settings by secondary injection. The manual describes the process of testing an IED in a substation which is not in service. The chapters are organized in chronological order in which the IED should be commissioned.

1.2 Intended audience

This manual addresses the personnel responsible for commissioning, maintenance and taking the IED in and out of normal service.

The commissioning personnel must have a basic knowledge of handling electronic equipment. The commissioning and maintenance personnel must be well experienced in using protection equipment, test equipment, protection functions and the configured functional logics in the IED.

1.3 Product documentation

1.3.1 Product documentation set

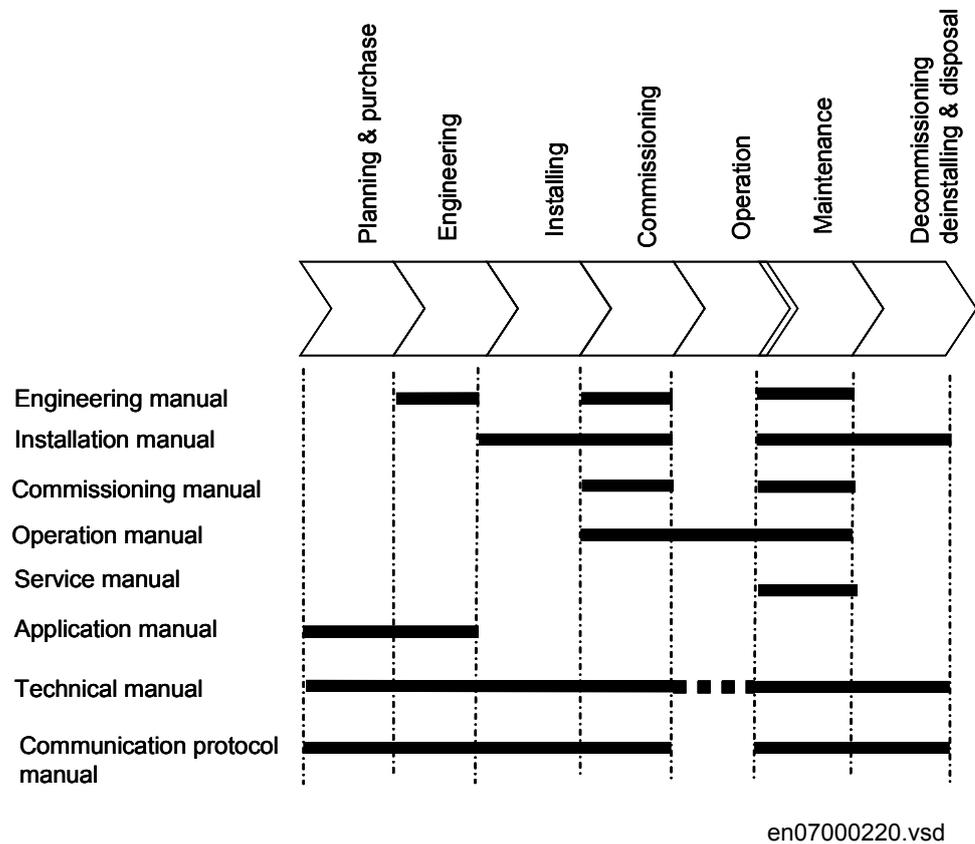


Figure 1: The intended use of manuals in different lifecycles

The engineering manual contains instructions on how to engineer the IEDs using the different tools in PCM600. The manual provides instructions on how to set up a PCM600 project and insert IEDs to the project structure. The manual also recommends a sequence for engineering of protection and control functions, LHMI functions as well as communication engineering for IEC 60870-5-103, IEC 61850 and DNP3.

The installation manual contains instructions on how to install the IED. The manual provides procedures for mechanical and electrical installation. The chapters are organized in chronological order in which the IED should be installed.

The commissioning manual contains instructions on how to commission the IED. The manual can also be used by system engineers and maintenance personnel for assistance during the testing phase. The manual provides procedures for checking of external circuitry and energizing the IED, parameter setting and configuration as

well as verifying settings by secondary injection. The manual describes the process of testing an IED in a substation which is not in service. The chapters are organized in chronological order in which the IED should be commissioned.

The operation manual contains instructions on how to operate the IED once it has been commissioned. The manual provides instructions for monitoring, controlling and setting the IED. The manual also describes how to identify disturbances and how to view calculated and measured power grid data to determine the cause of a fault.

The service manual contains instructions on how to service and maintain the IED. The manual also provides procedures for de-energizing, de-commissioning and disposal of the IED.

The application manual contains application descriptions and setting guidelines sorted per function. The manual can be used to find out when and for what purpose a typical protection function can be used. The manual can also be used when calculating settings.

The technical manual contains application and functionality descriptions and lists function blocks, logic diagrams, input and output signals, setting parameters and technical data sorted per function. The manual can be used as a technical reference during the engineering phase, installation and commissioning phase, and during normal service.

The communication protocol manual describes a communication protocol supported by the IED. The manual concentrates on vendor-specific implementations.

The point list manual describes the outlook and properties of the data points specific to the IED. The manual should be used in conjunction with the corresponding communication protocol manual.



The service manual is not available yet.

1.3.2

Document revision history

| Document revision/date | Product series version | History |
|------------------------|------------------------|---------------|
| -/February 2011 | 1.1 | First release |

1.3.3

Related documents

| Documents related to REL650 | Identity number |
|-----------------------------|------------------|
| Application manual | 1MRK 506 325-UEN |
| Technical manual | 1MRK 506 326-UEN |
| Commissioning manual | 1MRK 506 327-UEN |

Table continues on next page

| Documents related to REL650 | Identity number |
|-----------------------------|------------------|
| Product Guide, configured | 1MRK 506 328-BEN |
| Type test certificate | 1MRK 506 328-TEN |

| 650 series manuals | Identity number |
|--|------------------|
| Communication protocol manual, DNP3 | 1MRK 511 241-UEN |
| Communication protocol manual, IEC 61850 | 1MRK 511 242-UEN |
| Communication protocol manual, IEC 60870-5-103 | 1MRK 511 243-UEN |
| Point list manual, DNP3 | 1MRK 511 244-UEN |
| Engineering manual | 1MRK 511 245-UEN |
| Operation manual | 1MRK 500 093-UEN |
| Installation manual | 1MRK 514 014-UEN |

1.4 Symbols and conventions

1.4.1 Safety indication symbols



The electrical warning icon indicates the presence of a hazard which could result in electrical shock.



The warning icon indicates the presence of a hazard which could result in personal injury.



The caution icon indicates important information or warning related to the concept discussed in the text. It might indicate the presence of a hazard which could result in corruption of software or damage to equipment or property.



The information icon alerts the reader of important facts and conditions.



The tip icon indicates advice on, for example, how to design your project or how to use a certain function.

Although warning hazards are related to personal injury, it is necessary to understand that under certain operational conditions, operation of damaged

equipment may result in degraded process performance leading to personal injury or death. Therefore, comply fully with all warning and caution notices.

1.4.2 Manual conventions

Conventions used in IED manuals. A particular convention may not be used in this manual.

- Abbreviations and acronyms in this manual are spelled out in the glossary. The glossary also contains definitions of important terms.
- Push button navigation in the LHMI menu structure is presented by using the push button icons, for example:
To navigate between the options, use  and .
- HMI menu paths are presented in bold, for example:
Select **Main menu/Settings**.
- LHMI messages are shown in Courier font, for example:
To save the changes in non-volatile memory, select Yes and press .
- Parameter names are shown in italics, for example:
The function can be enabled and disabled with the *Operation* setting.
- The ^ character in front of an input or output signal name in the function block symbol given for a function, indicates that the user can set an own signal name in PCM600.
- The * character after an input or output signal name in the function block symbol given for a function, indicates that the signal must be connected to another function block in the application configuration to achieve a valid application configuration.

Section 2 Available functions



Note that not all functions included in the tables below have commissioning information available.

2.1 Main protection functions

| IEC 61850/ Function block name | ANSI | Function description | Line Distance | | |
|--------------------------------------|------|--|-------------------------------|------------------------------|-------------------------|
| | | | REL650 (A01) 3Ph/1CB, quad | REL650 (A05) 3Ph/1CB, mho | REL650 (A11) 1Ph/1CB |
| Impedance protection | | | | | |
| ZQDPDIS | 21 | Five zone distance protection, quadrilateral characteristic | 1 | | 1 |
| FDPSPDIS | 21 | Phase selection with load encroachment, quadrilateral characteristic | 1 | | 1 |
| ZMOPDIS | 21 | Five zone distance protection, mho characteristic | | 1 | |
| FMPSPDIS | 21 | Faulty phase identification with load encroachment for mho | | 1 | |
| ZDNRDIR | 21 | Directional impedance quadrilateral and mho | 1 | 1 | 1 |
| PPLPHIZ | | Phase preference logic | 1 | 1 | 1 |
| ZMRPSB | 68 | Power swing detection | 1 | 1 | 1 |
| ZCVPSOF | | Automatic switch onto fault logic, voltage and current based | 1 | 1 | 1 |

2.2 Back-up protection functions

| IEC 61850/ Function block name | ANSI | Function description | Line Distance | | |
|--------------------------------------|------|--|-------------------------------|------------------------------|-------------------------|
| | | | REL650 (A01) 3Ph/1CB, quad | REL650 (A05) 3Ph/1CB, mho | REL650 (A11) 1Ph/1CB |
| Current protection | | | | | |
| PHPIOC | 50 | Instantaneous phase overcurrent protection | 1 | 1 | |
| SPTPIOC | 50 | Instantaneous phase overcurrent protection | | | 1 |

Table continues on next page

Section 2 Available functions

1MRK 506 327-UEN -

| IEC 61850/ Function block name | ANSI | Function description | Line Distance | | |
|--------------------------------------|---------|---|-------------------------------|------------------------------|-------------------------|
| | | | REL650 (A01) 3Ph/1CB, quad | REL650 (A05) 3Ph/1CB, mho | REL650 (A11) 1Ph/1CB |
| OC4PTOC | 51/67 | Four step directional phase overcurrent protection | 1 | 1 | |
| OC4SPTOC | 51/67 | Four step phase overcurrent protection | | | 1 |
| EFPIOC | 50N | Instantaneous residual overcurrent protection | 1 | 1 | 1 |
| EF4PTOC | 51N/67N | Four step directional residual overcurrent protection | 1 | 1 | 1 |
| SDEPSDE | 67N | Sensitive directional residual overcurrent and power protection | 1 | 1 | 1 |
| UC2PTUC | 37 | Time delayed 2-step undercurrent protection | 1 | 1 | 1 |
| LPTTR | 26 | Thermal overload protection, one time constant | 1 | 1 | 1 |
| CCRBFR | 50BF | Breaker failure protection | 1 | 1 | |
| CSPRBRF | 50BF | Breaker failure protection | | | 1 |
| STBPTOC | 50STB | Stub protection | 1 | 1 | 1 |
| CCRPLD | 52PD | Pole discordance protection | 1 | 1 | 1 |
| BRCPTOC | 46 | Broken conductor check | 1 | 1 | 1 |
| GUPPDUP | 37 | Directional underpower protection | 1 | 1 | 1 |
| GOPPDOP | 32 | Directional overpower protection | 1 | 1 | 1 |
| DNSPTOC | 46 | Negative sequence based overcurrent function | 1 | 1 | 1 |
| Voltage protection | | | | | |
| UV2PTUV | 27 | Two step undervoltage protection | 1 | 1 | 1 |
| OV2PTOV | 59 | Two step overvoltage protection | 1 | 1 | 1 |
| ROV2PTOV | 59N | Two step residual overvoltage protection | 1 | 1 | 1 |
| LOVPTUV | 27 | Loss of voltage check | 1 | 1 | 1 |
| Frequency protection | | | | | |
| SAPTUF | 81 | Underfrequency function | 2 | 2 | 2 |
| SAPTOF | 81 | Overfrequency function | 2 | 2 | 2 |
| SAPFRC | 81 | Rate-of-change frequency protection | 2 | 2 | 2 |

2.3 Control and monitoring functions

| IEC 61850/Function block name | ANSI | Function description | Line Distance | | |
|-------------------------------------|------|--|-------------------------------|------------------------------|-------------------------|
| | | | REL650 (A01) 3Ph/1CB, quad | REL650 (A05) 3Ph/1CB, mho | REL650 (A11) 1Ph/1CB |
| Control | | | | | |
| SESRSYN | 25 | Synchrocheck, energizing check, and synchronizing | 1 | 1 | 1 |
| SMBRREC | 79 | Autorecloser | 1 | 1 | |
| STBRREC | 79 | Autorecloser | | | 1 |
| QCBAY | | Bay control | 1 | 1 | 1 |
| LOCREM | | Handling of LR-switch positions | 1 | 1 | 1 |
| LOCREMCTRL | | LHMI control of Permitted Source To Operate (PSTO) | 1 | 1 | 1 |
| SLGGIO | | Logic Rotating Switch for function selection and LHMI presentation | 15 | 15 | 15 |
| VSGGIO | | Selector mini switch extension | 20 | 20 | 20 |
| DPGGIO | | IEC 61850 generic communication I/O functions double point | 16 | 16 | 16 |
| SPC8GGIO | | Single point generic control 8 signals | 5 | 5 | 5 |
| AUTOBITS | | AutomationBits, command function for DNP3.0 | 3 | 3 | 3 |
| I103CMD | | Function commands for IEC60870-5-103 | 1 | 1 | 1 |
| I103IEDCMD | | IED commands for IEC60870-5-103 | 1 | 1 | 1 |
| I103USR CMD | | Function commands user defined for IEC60870-5-103 | 4 | 4 | 4 |
| I103GENCMD | | Function commands generic for IEC60870-5-103 | 50 | 50 | 50 |
| I103POSCMD | | IED commands with position and select for IEC60870-5-103 | 50 | 50 | 50 |
| Secondary system supervision | | | | | |
| CCSRDIF | 87 | Current circuit supervision | 1 | 1 | 1 |
| SDDRFUF | | Fuse failure supervision | 1 | 1 | 1 |
| TCSSCBR | | Breaker close/trip circuit monitoring | 3 | 3 | 3 |
| Logic | | | | | |
| SMPPTRC | 94 | Tripping logic | 1 | 1 | |
| SPTPTRC | 94 | Tripping logic | | | 1 |
| TMAGGIO | | Trip matrix logic | 12 | 12 | 12 |
| OR | | Configurable logic blocks, OR gate | 283 | 283 | 283 |
| INVERTER | | Configurable logic blocks, Inverter gate | 140 | 140 | 140 |
| PULSETIMER | | Configurable logic blocks, Pulse timer | 40 | 40 | 40 |
| GATE | | Configurable logic blocks, Controllable gate | 40 | 40 | 40 |
| XOR | | Configurable logic blocks, exclusive OR gate | 40 | 40 | 40 |
| LOOPDELAY | | Configurable logic blocks, loop delay | 40 | 40 | 40 |

Table continues on next page

Section 2 Available functions

1MRK 506 327-UEN -

| IEC 61850/Function block name | ANSI | Function description | Line Distance | | |
|-------------------------------|------|---|-------------------------------|------------------------------|-------------------------|
| | | | REL650 (A01) 3Ph/1CB, quad | REL650 (A05) 3Ph/1CB, mho | REL650 (A11) 1Ph/1CB |
| TIMERSET | | Configurable logic blocks, timer function block | 40 | 40 | 40 |
| AND | | Configurable logic blocks, AND gate | 280 | 280 | 280 |
| SRMEMORY | | Configurable logic blocks, set-reset memory flip-flop gate | 40 | 40 | 40 |
| RSMEMORY | | Configurable logic blocks, reset-set memory flip-flop gate | 40 | 40 | 40 |
| FXDSIGN | | Fixed signal function block | 1 | 1 | 1 |
| B16I | | Boolean 16 to Integer conversion | 16 | 16 | 16 |
| B16FCVI | | Boolean 16 to Integer conversion with logic node representation | 16 | 16 | 16 |
| IB16A | | Integer to Boolean 16 conversion | 16 | 16 | 16 |
| IB16FCVB | | Integer to Boolean 16 conversion with logic node representation | 16 | 16 | 16 |
| Monitoring | | | | | |
| CVMMXN | | Measurements | 6 | 6 | 6 |
| CMMXU | | Phase current measurement | 10 | 10 | 10 |
| VMMXU | | Phase-phase voltage measurement | 6 | 6 | 6 |
| CMSQI | | Current sequence component measurement | 6 | 6 | 6 |
| VMSQI | | Voltage sequence measurement | 6 | 6 | 6 |
| VNMMXU | | Phase-neutral voltage measurement | 6 | 6 | 6 |
| CNTGGIO | | Event counter | 5 | 5 | 5 |
| DRPRDRE | | Disturbance report | 1 | 1 | 1 |
| AxRADR | | Analog input signals | 4 | 4 | 4 |
| BxRBDR | | Binary input signals | 6 | 6 | 6 |
| SPGGIO | | IEC 61850 generic communication I/O functions | 64 | 64 | 64 |
| SP16GGIO | | IEC 61850 generic communication I/O functions 16 inputs | 16 | 16 | 16 |
| MVGGIO | | IEC 61850 generic communication I/O functions | 16 | 16 | 16 |
| MVEXP | | Measured value expander block | 66 | 66 | 66 |
| LMBRFLO | | Fault locator | 1 | 1 | 1 |
| SPVNZBAT | | Station battery supervision | 1 | 1 | 1 |
| SSIMG | 63 | Insulation gas monitoring function | 1 | 1 | 1 |
| SSIML | 71 | Insulation liquid monitoring function | 1 | 1 | 1 |
| SSCBR | | Circuit breaker condition monitoring | 1 | 1 | 1 |
| I103MEAS | | Measurands for IEC60870-5-103 | 1 | 1 | 1 |
| I103MEASUSR | | Measurands user defined signals for IEC60870-5-103 | 3 | 3 | 3 |
| I103AR | | Function status auto-recloser for IEC60870-5-103 | 1 | 1 | 1 |
| I103EF | | Function status earth-fault for IEC60870-5-103 | 1 | 1 | 1 |
| I103FLTPROT | | Function status fault protection for IEC60870-5-103 | 1 | 1 | 1 |

Table continues on next page

| IEC 61850/Function block name | ANSI | Function description | Line Distance | | |
|-------------------------------|------|---|-------------------------------|------------------------------|-------------------------|
| | | | REL650 (A01) 3Ph/1CB, quad | REL650 (A05) 3Ph/1CB, mho | REL650 (A11) 1Ph/1CB |
| I103IED | | IED status for IEC60870-5-103 | 1 | 1 | 1 |
| I103SUPERV | | Supervision status for IEC60870-5-103 | 1 | 1 | 1 |
| I103USRDEF | | Status for user defined signals for IEC60870-5-103 | 20 | 20 | 20 |
| Metering | | | | | |
| PCGGIO | | Pulse counter logic | 16 | 16 | 16 |
| ETPMTR | | Function for energy calculation and demand handling | 3 | 3 | 3 |

2.4 Designed to communicate

| IEC 61850/Function block name | ANSI | Function description | Line Distance | | |
|-------------------------------|------|--|-------------------------------|------------------------------|-------------------------|
| | | | REL650 (A01) 3Ph/1CB, quad | REL650 (A05) 3Ph/1CB, mho | REL650 (A11) 1Ph/1CB |
| Station communication | | | | | |
| | | IEC 61850 communication protocol, LAN1 | 1 | 1 | 1 |
| | | DNP3.0 for TCP/IP communication protocol, LAN1 | 1 | 1 | 1 |
| IEC61870-5-103 | | IEC60870-5-103 serial communication via ST | 1 | 1 | 1 |
| GOOSEINTLKRCV | | Horizontal communication via GOOSE for interlocking | 59 | 59 | 59 |
| GOOSEBINRCV | | GOOSE binary receive | 4 | 4 | 4 |
| ETHFRNT ETHLAN1 GATEWAY | | Ethernet configuration of front port, LAN1 port and gateway | | | |
| GOOSEDPRCV | | GOOSE function block to receive a double point value | 32 | 32 | 32 |
| GOOSEINTRCV | | GOOSE function block to receive an integer value | 32 | 32 | 32 |
| GOOSEMVRCV | | GOOSE function block to receive a mesurand value | 16 | 16 | 16 |
| GOOSESRCV | | GOOSE function block to receive a single point value | 64 | 64 | 64 |
| Scheme communication | | | | | |
| ZCPSCH | 85 | Scheme communication logic for distance or overcurrent protection | 1 | 1 | 1 |
| ZCRWPSCH | 85 | Current reversal and weak-end infeed logic for distance protection | 1 | 1 | |
| ZCWSPSCH | 85 | Current reversal and weak-end infeed logic for distance protection | | | 1 |

Table continues on next page

| IEC 61850/Function block name | ANSI | Function description | Line Distance | | |
|-------------------------------|------|--|-------------------------------|------------------------------|-------------------------|
| | | | REL650 (A01) 3Ph/1CB, quad | REL650 (A05) 3Ph/1CB, mho | REL650 (A11) 1Ph/1CB |
| ZCLCPLAL | | Local acceleration logic | 1 | 1 | 1 |
| ECPSCH | 85 | Scheme communication logic for residual overcurrent protection | 1 | 1 | 1 |
| ECRWPSCH | 85 | Current reversal and weak-end infeed logic for residual overcurrent protection | 1 | 1 | 1 |

2.5 Basic IED functions

| IEC 61850/Function block name | Function description | |
|---|--|----|
| Basic functions included in all products | | |
| INTERRSIG | Self supervision with internal event list | 1 |
| SELSUPEVLST | Self supervision with internal event list | 1 |
| SNTP | Time synchronization | 1 |
| TIMESYNCHGEN | Time synchronization | 1 |
| DTSBEGIN, DTSEND, TIMEZONE | Time synchronization, daylight saving | 1 |
| IRIG-B | Time synchronization | 1 |
| SETGRPS | Setting group handling | 1 |
| ACTVGRP | Parameter setting groups | 1 |
| TESTMODE | Test mode functionality | 1 |
| CHNGLCK | Change lock function | 1 |
| TERMINALID | IED identifiers | 1 |
| PRODINF | Product information | 1 |
| PRIMVAL | Primary system values | 1 |
| SMAI_20_1-12 | Signal matrix for analog inputs | 2 |
| 3PHSUM | Summation block 3 phase | 12 |
| GBASVAL | Global base values for settings | 6 |
| ATHSTAT | Authority status | 1 |
| ATHCHCK | Authority check | 1 |
| FTPACCS | FTP access with password | 1 |
| DOSFRNT | Denial of service, frame rate control for front port | 1 |
| DOSLAN1 | Denial of service, frame rate control for LAN1 | 1 |
| DOSSCKT | Denial of service, socket flow control | 1 |

Section 3 Starting up

3.1 Factory and site acceptance testing

Testing the proper IED operation is carried out at different occasions, for example:

- Acceptance testing
- Commissioning testing
- Maintenance testing

This manual describes the workflow and the steps to carry out the commissioning testing.

Factory acceptance testing (FAT) is typically done to verify that the IED and configuration meets the requirements by the utility or industry. This test is the most complex and in depth, as it is done to familiarize the user to a new protection or to verify a new configuration. The complexity of this testing depends on several factors.

- New IED type
- New configuration
- Pre-configured
- Modified existing configuration

Site acceptance testing (SAT or commissioning testing) is typically done to verify that the new installed IED is correctly set and connected to the power system. SAT requires that the acceptance testing has been performed and that the application configuration is verified.

Maintenance testing is a periodical verification that the IED is healthy and has correct settings depending on changes in the power system. There are also other types of maintenance testing.

3.2 Commissioning checklist

Before starting up commissioning at site, check that the following items are available.

- Single line diagram
- Protection block diagram
- Circuit diagram
- Setting list and configuration
- RJ-45 Ethernet cable (CAT 5)
- Three-phase test kit or other test equipment depending on the complexity of the configuration and functions to be tested.

- PC with PCM600 installed along with the connectivity packages corresponding to the IED used
- Administration rights on the PC to set up IP addresses
- Product documentation (engineering manual, installation manual, commissioning manual, operation manual, technical manual and communication protocol manual)

3.3 Checking the power supply

Check that the auxiliary supply voltage remains within the permissible input voltage range under all operating conditions. Check that the polarity is correct before powering the IED.

3.4 Energizing the IED

3.4.1 Checking the IED operation

Check all connections to external circuitry to ensure that the installation was made correctly, before energizing the IED and carrying out the commissioning procedures.

Energize the power supply of the IED to start it up. This could be done in number of ways, from energizing a whole cubicle to energizing a single IED. Set the IED time if no time synchronization source is configured. Check also the self-supervision function in **Main menu/Diagnostics/Internal events** or **Main menu/Diagnostics/IED status/General** menu in local HMI to verify that the IED operates properly.

3.4.2 IED start-up sequence

The following sequence is expected when the IED is energized.

- The green Ready LED starts instantly flashing and the ABB logo is shown on the LCD.
- After approximately 30 seconds, "Starting" is shown on the LCD.
- Within 90 seconds, the main menu is shown on the LCD and the green Ready LED shows a steady light, which indicates a successful startup.



The start-up times depend on the size of the application configuration. Application configuration with less functionality means shorter start-up times.

If the green Ready LED continues to flash after startup, the IED has detected an internal error. Navigate via **Main menu/Diagnostics/IED status/General** to investigate the fault.

3.5 Setting up communication between PCM600 and the IED

The communication between the IED and PCM600 is independent of the used communication protocol within the substation or to the NCC.

The communication media is always Ethernet and the used protocol is TCP/IP.

Each IED has an Ethernet interface connector on the front and on the rear side. The Ethernet connector can be used for communication with PCM600.

When an Ethernet-based station protocol is used, PCM600 communication can use the same Ethernet port and IP address.

For the connection of PCM600 to the IED, two basic variants have to be considered.

- Direct point-to-point link between PCM600 and the IED front port.
- Indirect link via a station LAN or from remote via a network.

The physical connection and the IP address must be configured in both cases to enable communication.

The communication procedures are the same in both cases.

1. If needed, set the IP address for the IEDs.
2. Set up the PC or workstation for a direct link (point-to-point), or
3. Connect the PC or workstation to the LAN/WAN network.
4. Configure the IED IP addresses in the PCM600 project for each IED to match the IP addresses of the physical IEDs.

Setting up IP addresses

The IP address and the corresponding mask must be set via the LHMI for each available Ethernet interface in the IED. Each Ethernet interface has a default factory IP address when the complete IED is delivered. This is not given when an additional Ethernet interface is installed or an interface is replaced.

- The default IP address for the IED front port is 10.1.150.3 and the corresponding subnetwork mask is 255.255.255.0, which can be set via the local HMI path **Main menu/Configuration/Communication/TCP-IP configuration/1:ETHFRNT**.
- The default IP address for the IED rear port is 192.168.1.10 and the corresponding subnetwork mask is 255.255.255.0, which can be set via the

local HMI path **Main menu/Configuration/Communication/TCP-IP configuration/1:ETHLAN1** and **Rear OEM - port CD**.



The front and rear port IP addresses cannot belong to the same subnet or communication will fail. It is recommended to change the IP address of the front port, if the front and rear port are set to the same subnet.

Setting up the PC or workstation for point-to-point access to IEDs front port

A special cable is needed to connect two physical Ethernet interfaces together without a hub, router, bridge or switch in between. The Tx and Rx signal wires must be crossed in the cable to connect Tx with Rx on the other side and vice versa. These cables are known as null-modem cables or cross-wired cables. The maximum length should be about 2 m. The connector type is RJ-45.

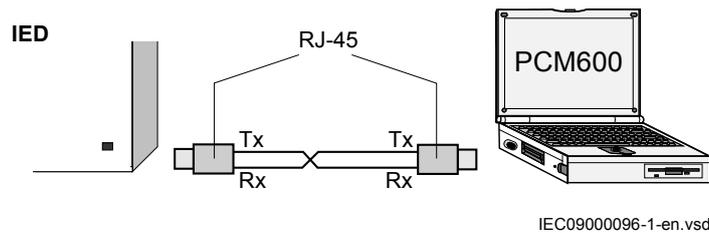


Figure 2: Point-to-point link between IED and PCM600 using a null-modem cable


The following description is an example valid for standard PCs using Microsoft Windows operating system. The example is taken from a Laptop with one Ethernet interface.



Administrator rights are requested to change the PC communication setup. Some PCs have the feature to automatically detect that Tx signals from the IED are received on the Tx pin on the PC. Thus straight (standard) Ethernet cable can be used.

When a computer is connected to the IED and the setting *DHCP*Server is set to *On* via the local HMI path **Main menu/Configuration/Communication/TCP-IP configuration/1:ETHFRNT/DHCP**Server, the IEDs DHCP server for the front port assigns an IP address for the computer. The computer must be configured to obtain its IP address automatically as described in the following procedure.

1. Select **Network Connections** in the PC.

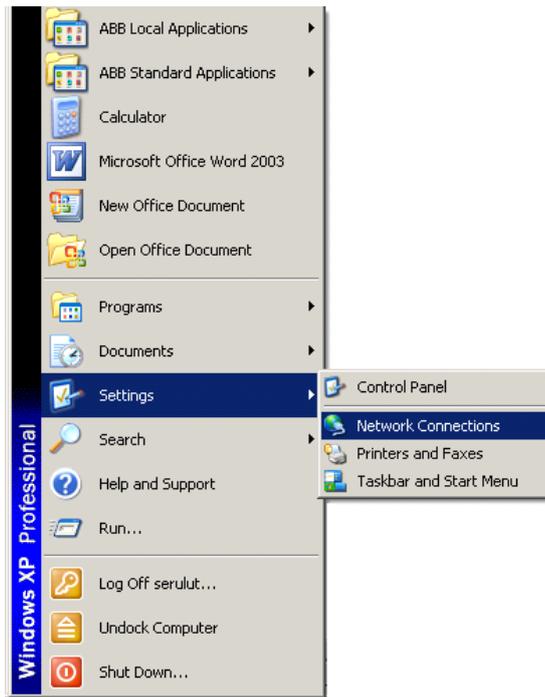

IEC09000355-1-en.vsd

Figure 3: Select: Network connections


2. Select **Properties** in the status window.



IEC09000356-1-en.vsd

Figure 4: Right-click Local Area Connection and select Properties


3. Select the TCP/IP protocol from the list of configured components using this connection and click **Properties**.

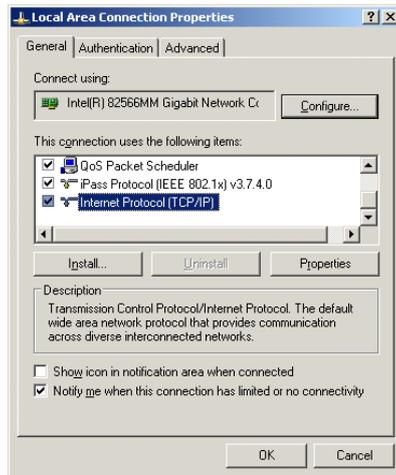

IEC09000357-1-en.vsd

Figure 5: Select the TCP/IP protocol and open Properties


4. Select **Obtain an IP address automatically** if the parameter *DHCP*Server is set to *On* in the IED.

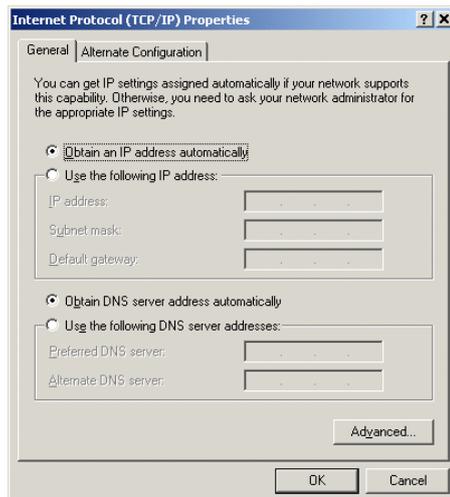

IEC09000358-1-en.vsd

Figure 6: Select: Obtain an IP address automatically

5. Select **Use the following IP address** and define *IP address* and *Subnet mask* if the front port is used and if the *IP address* is not set to be obtained automatically by the IED, see [Figure 7](#). The IP address must be different from the IP address chosen for the IED.

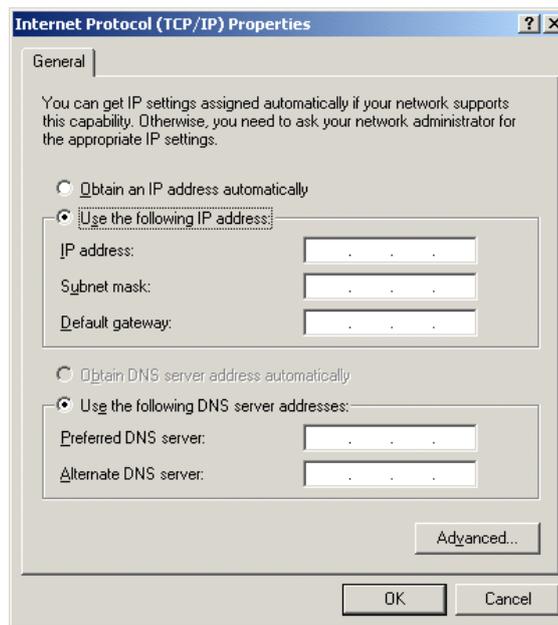

IEC09000658-1-en.vsd

Figure 7: Select: Use the following IP address

6. Close all open windows and start PCM600.

Setting up the PC to access the IED via a network

This task depends on the used LAN/WAN network. PC and IED must belong to the same subnetwork.

3.6

Writing an application configuration to the IED



Ensure that the IED includes the correct application configuration according to project specifications.

The application configuration is created using PCM600 and then written to the IED. Establish a connection between PCM600 and the IED when an application configuration must be written to the IED.

When writing an application configuration to the IED, the IED is automatically set in the configuration mode. When the IED is set in the configuration mode, all functions are blocked. The red Trip LED on the IED flashes, and the green Ready LED is lit while the IED is in the configuration mode. When the writing procedure has completed, the IED is automatically set into normal mode.

After writing an application configuration to the IED, the IED makes an application restart or a complete IED restart, when necessary.



Be sure to set the correct technical key in the IED and PCM600 to prevent writing an application configuration to a wrong IED.



See the engineering manual for information on how to create or modify an application configuration and how to write to the IED.

3.7

Checking CT circuits

Check that the wiring is in strict accordance with the supplied connection diagram.



Correct possible errors before continuing to test the circuitry.

- Primary injection test to verify the current ratio of the CT, the correct wiring up to the protection IED and correct phase sequence connection (that is L1, L2, L3.)
- CT secondary loop resistance measurement to confirm that the current transformer secondary loop DC resistance is within specification and that there are no high resistance joints in the CT winding or wiring.
- Earthing check of the individual CT secondary circuits to verify that each three-phase set of main CTs is properly connected to the station earth and only at one electrical point.
- Insulation resistance check.



CT and VT connectors are pre-coded, and the CT and VT connector markings are different. For more information, see the installation manual.



Both the primary and the secondary sides must be disconnected from the line and the IED when plotting the excitation characteristics.

3.8

Checking VT circuits

Check that the wiring is in strict accordance with the supplied connection diagram.



Correct possible errors before continuing to test the circuitry.

Test the circuitry.

- Polarity check
- VT circuit voltage measurement (primary injection test)
- Earthing check
- Phase relationship
- Insulation resistance check

The polarity check verifies the integrity of circuits and the phase relationships. The check must be performed as close to the IED as possible.

The primary injection test verifies the VT ratio and the wiring all the way from the primary system to the IED. Injection must be performed for each phase-to-neutral circuit and each phase-to-phase pair. In each case, voltages in all phases and neutral are measured.

3.9

Checking the RTXP test switch

The RTXP test switch is designed to provide the means of safe testing of the IED. This is achieved by the electromechanical design of the test switch and test plug handle. When the test plug handle is inserted, it first blocks the trip and alarm circuits then it short circuits the CT secondary circuit and opens the VT secondary circuits making the IED available for secondary injection.

When pulled out, the test handle is mechanically stopped in half withdrawn position. In this position, the current and voltage enter the protection, but the alarm and trip circuits are still isolated. Before removing the test handle, check that no trip or alarms are present in the IED.

Not until the test handle is completely removed, the trip and alarm circuits are restored for operation.



By pulling in all cables, verify that the contact sockets have been crimped correctly and that they are fully inserted. Never do this with current circuits in service.

Current circuit

1. Verify that the contacts are of current circuit type.
2. Verify that the short circuit jumpers are located in the correct slots.

Voltage circuit

1. Verify that the contacts are of voltage circuit type.
2. Check that no short circuit jumpers are located in the slots dedicated for voltage.

Trip and alarm circuits

1. Check that the correct types of contacts are used.

3.10 Checking binary input and output circuits

3.10.1 Binary input circuits

Preferably, disconnect the binary input connector from the binary input cards. Check all connected signals so that both input level and polarity are in accordance with the IED specifications.

3.10.2 Binary output circuits

Preferably, disconnect the binary output connector from the binary output cards. Check all connected signals so that both load and polarity are in accordance with IED specifications.

3.11 Checking optical connections

Check that the Tx and Rx optical connections are correct.



An IED equipped with optical connections requires a minimum depth of 180 mm for plastic fiber cables and 275 mm for glass fiber cables. Check the allowed minimum bending radius from the optical cable manufacturer.

Section 4 Establishing connection and verifying the IEC 61850 station communication

4.1 Setting the station communication

To enable IEC 61850 station communication:

- The IEC 61850-8-1 station communication functionality must be on in the local HMI. Navigate to **Main menu/Configuration/Communication/Station communication/1:IEC61850-8-1** and set the parameter *Operation* to *On*.
- To enable GOOSE communication the *Operation* parameter for the corresponding GOOSE function blocks (GOOSEBINRCV and GOOSEINTLKRCV) must be set to *On* in the application configuration.
- To enable GOOSE communication via the front port the parameter *GOOSE* in **Main menu/Configuration/Communication/Station communication/IEC61850-8-1** must be set to *Front*. To enable GOOSE communication via rear port the parameter *GOOSE* must be set to *LAN1*.

4.2 Verifying the communication

Connect your PC to the nearby switch and ping the connected IED and the Substation Master PC, to verify that the communication is working (up to the transport layer).

The best way to verify the communication up to the application layer is to use a protocol analyzer, for example, an Ethereal that is connected to the substation bus, and monitor the communication."

Section 5 Testing IED operation

5.1 Preparing the IED to verify settings

If a test switch is included, start preparation by making the necessary connections to the test switch. This means connecting the test equipment according to a specific and designated IED terminal diagram.

Put the IED into the test mode to facilitate the test of individual functions and prevent unwanted operation caused by other functions. The test switch should then be connected to the IED.

Verify that analog input signals from the analog input module are measured and recorded correctly by injecting currents and voltages required by the specific IED.

To make testing even more effective, use PCM600. PCM600 includes the Signal monitoring tool, which is useful in reading the individual currents and voltages, their amplitudes and phase angles. In addition, PCM600 contains the Disturbance handling tool. The content of reports generated by the Disturbance handling tool can be configured which makes the work more efficient. For example, the tool may be configured to only show time tagged events and to exclude analog information and so on.

Check the disturbance report settings to ensure that the indications are correct.

For test functions and test and signal parameter names, see the technical manual. The correct initiation of the disturbance recorder is made on start and/or release or trip from a function. Also check that the wanted recordings of analogue (real and calculated) and binary signals are achieved.

The IEDs in the 650 series can have between 1 to 4 individual parameter setting groups prepared with full sets of different parameters for all functions. The purpose of these groups is to be able to handle different power system load conditions to optimize the parameters settings of the different functions for these different power systems conditions (for example summer/winter and day/night).



Parameters can be entered into different setting groups. Make sure to test functions for the same parameter setting group. If needed, repeat the tests for all different setting groups used. The difference between testing the first parameter setting group and the remaining is that there is no need for testing the connections.

During testing, observe that the right testing method, that corresponds to the actual parameters set in the activated parameter setting group, is used.

In the local HMI the sensitive directional earth fault protection SDEPSDE parameter group 4 is active indicated by the * next to #4 and the test of the SDEPSDE must be performed according to the instructions given for the setting *OpMode* and setting value *3I03U0cosfi*.

Set and configure the function(s) before testing. Most functions are highly flexible and permit a choice of functional and tripping modes. The various modes are checked at the factory as part of the design verification. In certain cases, only modes with a high probability of coming into operation need to be checked when commissioned to verify the configuration and settings.

Requirements for testing the function.

- Calculated settings
- Valid configuration diagram for the IED
- Valid terminal diagram for the IED
- Technical manual
- Three-phase test equipment

Content of the technical manual.

- Application and functionality summaries
- Function blocks
- Logic diagrams
- Input and output signals
- A list of setting parameters
- Technical data for the function

The test equipment should be able to provide a three-phase supply of currents and three-phase voltage. The magnitude and angle of currents (and voltages) should be possible to vary. Check that the IED is prepared for test before starting the test session. Consider the logic diagram of the function when performing the test.

The response from a test can be viewed in different ways.

- Binary output signals
- Service values in the local HMI (logical signal or phasors)
- A PC with PCM600 (configuration software) in debug mode



Do not switch off the auxiliary power supply to the IED before changes such as setting parameter or local/remote control state changes are saved.

A mechanism for limiting the number of writings per time period is included in the IED to prevent the flash memory to be worn out due to too many writings. As a consequence it may take up to an hour to save changes. If the auxiliary power is interrupted before a change is saved, that change is lost.

5.2 Activating test mode

Put the IED into the test mode before testing. The test mode blocks all functions in the IED, and the individual functions to be tested can be unblocked to prevent unwanted operation caused by other functions. In this way, it is possible to test slower back-up measuring functions without the interference from faster measuring functions. Test mode is indicated when the yellow Start LED flashes.

Procedure

1. Select **Main menu/Tests/IED test mode/1:TESTMODE**
2. Set parameter *TestMode* to *On*.
3. Save the changes.
As a consequence, the yellow Start LED starts flashing as a reminder and remains flashing until the test mode is switched off.

5.3 Preparing the connection to the test equipment

The IED can be equipped with a test switch of type RTXP8, RTXP18 or RTXP24. The test switch and its associated test plug handle (RTXH8, RTXH18 or RTXH24) are a part of the COMBITEST system, which provides secure and convenient testing of the IED.

When using the COMBITEST, preparations for testing are automatically carried out in the proper sequence, that is, for example, blocking of tripping circuits, short circuiting of CT's, opening of voltage circuits, making IED terminals available for secondary injection. Terminals 1 and 8, 1 and 18 as well as 1 and 12 of the test switches RTXP8, RTXP18 and RTXP24 respectively are not disconnected as they supply DC power to the protection IED.

The RTXH test-plug handle leads may be connected to any type of test equipment or instrument. When a number of protection IEDs of the same type are tested, the test-plug handle only needs to be moved from the test switch of one protection IED to the test switch of the other, without altering the previous connections.

Use COMBITEST test system to prevent unwanted tripping when the handle is withdrawn, since latches on the handle secure it in the half withdrawn position. In this position, all voltages and currents are restored and any reenergizing transients are given a chance to decay before the trip circuits are restored. When the latches are released, the handle can be completely withdrawn from the test switch, restoring the trip circuits to the protection IED.

If a test switch is not used, take measures according to provided circuit diagrams.



Never disconnect the secondary connection of a current transformer circuit without short-circuiting the transformer's secondary winding. Operating a current transformer with the secondary

winding open will cause a massive potential build up that may damage the transformer and injure humans.

5.4 Connecting test equipment to the IED

Connect the test equipment according to the IED specific connection diagram and the needed input and output signals for the function under test. An example of a connection is shown in figure 8.

Connect the current and voltage terminals. Pay attention to the current polarity. Make sure that the connection of input and output current terminals and the connection of the residual current conductor is correct. Check that the input and output logical signals in the logic diagram for the function under test are connected to the corresponding binary inputs and outputs of the IED under test.



To ensure correct results, make sure that the IED as well as the test equipment are properly earthed before testing.

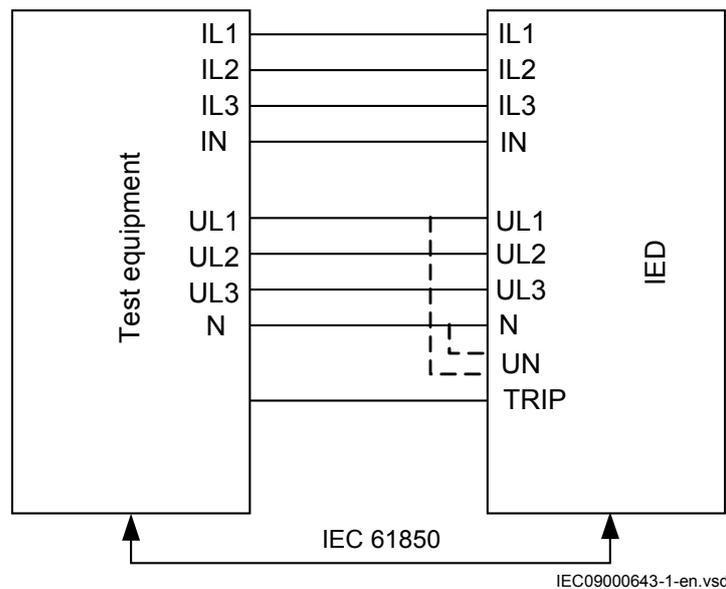


Figure 8: Connection example of the test equipment to the IED when test equipment is connected to the transformer input module

5.5 Releasing the function to be tested

Release or unblock the function to be tested. This is done to ensure that only the function or the chain of functions to be tested are in operation and that other functions are prevented from operating. Release the tested function(s) by setting the corresponding *Blocked* parameter under Function test modes to *No* in the local HMI.

When testing a function in this blocking feature, remember that not only the actual function must be activated, but the whole sequence of interconnected functions (from measuring inputs to binary output contacts), including logic must be activated. Before starting a new test mode session, scroll through every function to ensure that only the function to be tested (and the interconnected ones) have the parameters *Blocked* and eventually *EvDisable* set to *No* and *Yes* respectively. Remember that a function is also blocked if the BLOCK input signal on the corresponding function block is active, which depends on the configuration. Ensure that the logical status of the BLOCK input signal is equal to 0 for the function to be tested. Event function blocks can also be individually blocked to ensure that no events are reported to a remote station during the test. This is done by setting the parameter *EvDisable* to *Yes*.



Any function is blocked if the corresponding setting in the local HMI under **Main menu/Tests/Function test modes** menu remains *On*, that is, the parameter *Blocked* is set to *Yes* and the parameter *TestMode* under **Main menu/Tests/IED test mode** remains active. All functions that were blocked or released in a previous test mode session, that is, the parameter *Test mode* is set to *On*, are reset when a new test mode session is started.

Procedure

1. Click the **Function test modes** menu.
The Function test modes menu is located in the local HMI under **Main menu/Tests/Function test modes**.
2. Browse to the function instance that needs to be released.
3. Set parameter *Blocked* for the selected function to *No*.

5.6 Verifying analog primary and secondary measurement

Verify that the connections are correct and that measuring and scaling is done correctly. This is done by injecting current and voltage to the IED.



Apply input signals as needed according to the actual hardware and the application configuration made in PCM600.

1. Inject a symmetrical three-phase voltage and current at rated value.
2. Compare the injected value with the measured values.
The voltage and current phasor menu in the local HMI is located under **Main menu/Measurements/Analog primary values** and **Main menu/Measurements/Analog secondary values**.
3. Compare the frequency reading with the set frequency and the direction of the power.
The frequency and active power are located under **Main menu/Tests/Function status/Monitoring/CVMMXN/1:CVMMXN/Outputs**. Then navigate to the bottom of the list to find the frequency.



Check both analog primary and secondary values, because then the CT and VT ratios entered into the IED are also checked.

- These checks shall be repeated for Analog primary values.
4. Inject an unsymmetrical three-phase voltage and current, to verify that phases are correctly connected.

If some setting deviates, check the analog input settings under

Main menu/Configuration/Analog modules

Measured values such as current and voltages as well as active, reactive and apparent power, power factor phase angles as well as positive and negative and zero sequence currents and voltages are available in the local HMI under **Main menu/Tests/Function status/Monitoring**.

Navigate to the measurement function that contains the quantity to be checked.

Table 1: *Measurement functions*

| Function | Quantity | Description |
|----------|--|----------------------------|
| CMMXU | IL1 to IL3 | amplitude, range and angle |
| CMSQI | 3I ₀ ; I1 and I2 | amplitude, range and angle |
| CVMMXN | S; P; Q; PF; I _{lag} ; I _{lead} ; U; I and f | amplitude, range and angle |
| VMMXU | UL12 to UL31 i.e. phase-to-phase | amplitude, range and angle |
| VMSQI | 3U ₀ ; U1 and U2 | amplitude, range and angle |
| VNMMXU | UL1 to UL3 i.e. phase-to-neutral | amplitude, range and angle |

Also the Signal Monitoring tool in PCM600 can be used to read the measured values. In many cases it is more convenient to use PCM600 since, among many things, reports on measured values can be exported from the Signal Monitoring tool to other tools (for example, MS Excel) for further analysis.

5.7 Testing protection functionality

Each protection function must be tested individually by secondary injection.

- Verify operating levels (trip) and timers.
- Verify alarm and blocking signals.
- Use the disturbance handling tool in PCM600 to evaluate that the protection function has received the correct data and responded correctly (signaling and timing).
- Use the event viewer tool in PCM600 to check that only expected events have occurred.

Section 6 Testing functionality

6.1 Testing disturbance report

6.1.1 Introduction

The following sub-functions are included in the disturbance report function:

- Disturbance recorder
- Event list
- Event recorder
- Fault locator
- Trip value recorder
- Indications

If the disturbance report is set on, then its sub-functions are also set up and so it is not possible to only switch these sub-functions off. The disturbance report function is switched off (parameter *Operation = Off*) in PCM600 or the local HMI under **Main menu/Settings/IED Settings/Monitoring/Disturbance report/1:DRPRDRE**.

6.1.2 Disturbance report settings

When the IED is in test mode, the disturbance report can be made active or inactive. If the disturbance recorder is turned on during test mode, recordings will be made. When test mode is switched off all recordings made during the test session are cleared.

Setting *OpModeTest* for the control of the disturbance recorder during test mode are located on the local HMI under **Main menu/Settings/IED Settings/Monitoring/Disturbance report/1:DRPRDRE**.

6.2 Identifying the function to test in the technical reference manual

Use the technical manual to identify function blocks, logic diagrams, input and output signals, setting parameters and technical data.

6.3 Testing impedance protection functions

6.3.1 Five zone distance protection, quadrilateral characteristic ZQDPDIS

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ZQDPDIS are available on the local HMI under **Main menu/Tests/Function status/Impedance/ZQDPDIS(21,Z<)/1:ZQDPDIS**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

Consider releasing Zone 1, the Phase selection with load encroachment, quadrilateral characteristic FDPSPDIS and the Tripping logic SMPPTRC.

Measure operating characteristics during constant current conditions. Keep the measured current as close as possible to its rated value or lower. But make sure it is higher than the set minimum operating current.

Ensure that the maximum continuous current in an IED does not exceed four times its rated value, if the measurement of the operating characteristics runs under constant voltage conditions.

The test procedure has to take into consideration that the shaped load encroachment characteristic is active. It is therefore necessary to check the setting. To verify the settings with the shaped load encroachment characteristic the test should be carried out according to figures [9](#) and [10](#) and tables [2](#) and [3](#).

To verify the settings the following fault types should be tested:

- One phase-to-phase fault
- One phase-to-earth fault

The shape of the operating characteristic depends on the values of the setting parameters.

The angles a (angle on blinder in second quadrant for forward direction), b (load angle determining the load impedance area), c (angle to blinder in fourth quadrant for forward direction), d (line angle) and e (angle for earth compensation factor KN) in the figures below are adjusted with the parameters *ArgNegRes*, *ArgLd*, *ArgDir*, *LineAng* and *KNAng* respectively.

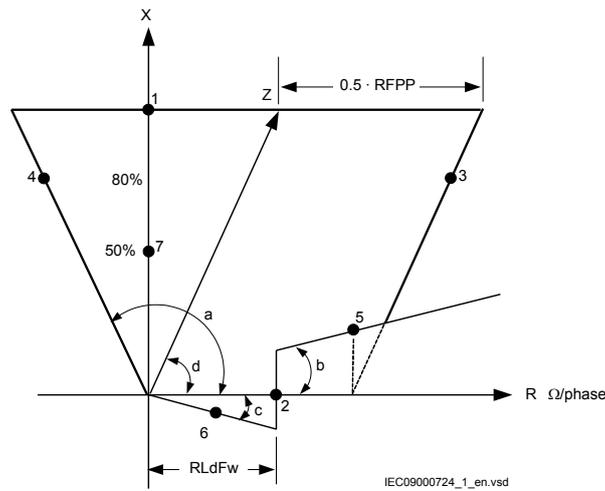


Figure 9: Distance protection characteristic with test points for phase-to-phase measurements

Table 2: Test points for phase-to-phase loops L1-L2 (Ohm/phase)

| Test point | Reach | Set value | Comments |
|------------|-------|---|----------|
| 1 | X | $Z \cdot \sin(\text{LineAng})$ | |
| | R | 0 | |
| 2 | X | 0 | |
| | R | RLdFw | |
| 3 | X | $0.8 \cdot Z \cdot \sin(\text{LineAng})$ | |
| | R | $0.8 \cdot Z \cdot \cos(\text{LineAng}) + \text{RFPP}/2$ | |
| 4 | X | $0.8 \cdot Z \cdot \sin(\text{LineAng})$ | |
| | R | $-0.8 \cdot Z \cdot \sin(\text{LineAng}) \cdot \tan(\text{ArgNegRes}-90)$ | |
| 5 | X | $0.5 \cdot \text{RFPP} \cdot \tan(\text{ArgLd})$ | |
| | R | $0.5 \cdot \text{RFPP}$ | |
| 6 | X | $-0.5 \cdot \text{RLdFw} \cdot \tan(\text{ArgDir})$ | |
| | R | $0.5 \cdot \text{RLdFw}$ | |
| 7 | X | $0.5 \cdot Z \cdot \sin(\text{LineAng})$ | |
| | R | 0 | |

Table 2 is used in conjunction with figure 9.

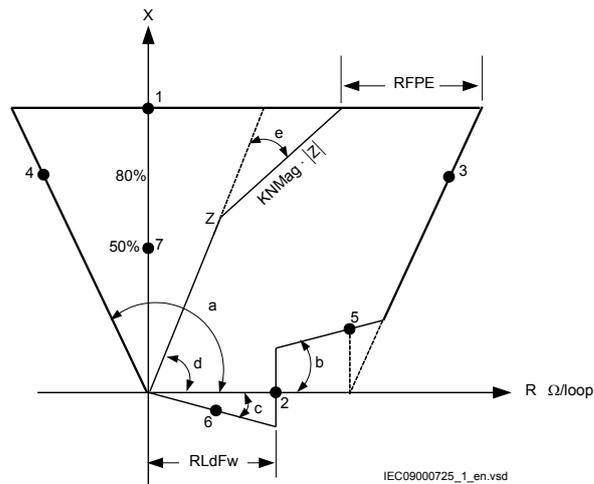


Figure 10: Distance protection characteristic with test points for phase-to-earth measurements

Table 3 is used in conjunction with figure 10.

Table 3: Test points for phase-to-earth L3-E (Ohm/Loop)

| Test point | Reach | Value | Comments |
|------------|-------|---|----------|
| 1 | X | $Z \cdot \sin(\text{LineAng}) + \text{KNMag} \cdot Z \cdot \sin(\text{LineAng} + \text{KNAng})$ | |
| | R | 0 | |
| 2 | X | 0 | |
| | R | RLdFw | |
| 3 | X | $0.8(Z \cdot \sin(\text{LineAng}) + \text{KNMag} \cdot Z \cdot \sin(\text{LineAng} + \text{KNAng}))$ | |
| | R | $0.8(Z \cdot \cos(\text{LineAng}) + \text{KNMag} \cdot Z \cdot \cos(\text{LineAng} + \text{KNAng})) + \text{RFPE}$ | |
| 4 | X | $0.8(Z \cdot \sin(\text{LineAng}) + \text{KNMag} \cdot Z \cdot \sin(\text{LineAng} + \text{KNAng}))$ | |
| | R | $-(0.8(Z \cdot \sin(\text{LineAng}) + \text{KNMag} \cdot Z \cdot \sin(\text{LineAng} + \text{KNAng})) \cdot \tan(\text{ArgNegRes}-90))$ | |
| 5 | X | $\text{RFPE} \cdot \tan(\text{ArgLd})$ | |
| | R | RFPE | |
| 6 | X | $-0.5 \text{RLdFw} \cdot \tan(\text{ArgDir})$ | |
| | R | 0.5 RLdFw | |
| 7 | X | $0.5(Z \cdot \sin(\text{LineAng}) + \text{KNMag} \cdot Z \cdot \sin(\text{LineAng} + \text{KNAng}))$ | |
| | R | 0 | |

6.3.1.1 Measuring the operating limit of set values with shaped load encroachment characteristics

1. Subject the IED to healthy normal load conditions for at least two seconds.
2. Apply the fault condition and slowly decrease the measured impedance to find the operating value of the phase-to-phase fault L1-L2 for zone 1 according to test point 1 in figure 9 and table 2. Compare the result of the measurement with the set value.
3. Repeat steps 1 to 2 to find the operating value for the remaining test points. Observe that the zones that are not tested have to be blocked and the zone that is tested has to be released.
4. Repeat steps 1 to 3 to find the operating value for the phase-to-earth fault L3-E according to figure 10 and table 3



Test point 6 is intended to test the directional line of impedance protection. Since directionality is a common function for all 5 measuring zones, it is only necessary to test point 6 once, in the forward direction. Directional functionality testing (trip inside, no-trip outside) should always be carried for all impedance zones set with directionality (forward or reverse).

6.3.1.2 Measuring the operate time of distance protection zones

1. Subject the IED to healthy normal load conditions for at least two seconds.
2. Apply the fault condition to find the operating time for the phase-to-phase fault according to test point 7 in figure 9 and table 2 for zone 1. Compare the result of the measurement with the setting $tIPP$.
3. Repeat steps 1 to 2 to find the operating time for the phase-to-earth fault according to test point 7 in figure 10 and table 3. Compare the result of the measurement with the setting $tIPE$.
4. Repeat steps 1 to 2 to find the operating time for all other used measuring zones. Observe that the zones that are not tested have to be blocked and the zone that is tested has to be released.

6.3.1.3 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Impedance/ZQDPDIS(21,Z<)/1:ZQDPDIS** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.3.2 Phase selection with load encroachment, quadrilateral characteristic FDPSPDIS

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for FDPSPDIS are available on the local HMI under **Main menu/Tests/Function status/Impedance/FDPSPDIS/1:FDPSPDIS**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The phase selectors operate on the same measuring principles as the impedance measuring zones. So it is necessary to follow the same principles as for distance protection, when performing the secondary injection tests.

Measure operating characteristics during constant current conditions. Keep the measured current as close as possible to the rated value of its associated input transformer, or lower. But ensure that it is higher than the set minimum operating current.

Ensure that the maximum continuous current of an IED does not exceed four times its rated value, if the measurement of the operating characteristics runs under constant voltage conditions.

To verify the settings the operating points according to figures 11 and 12 should be tested. See also tables 4 and 5 for information.

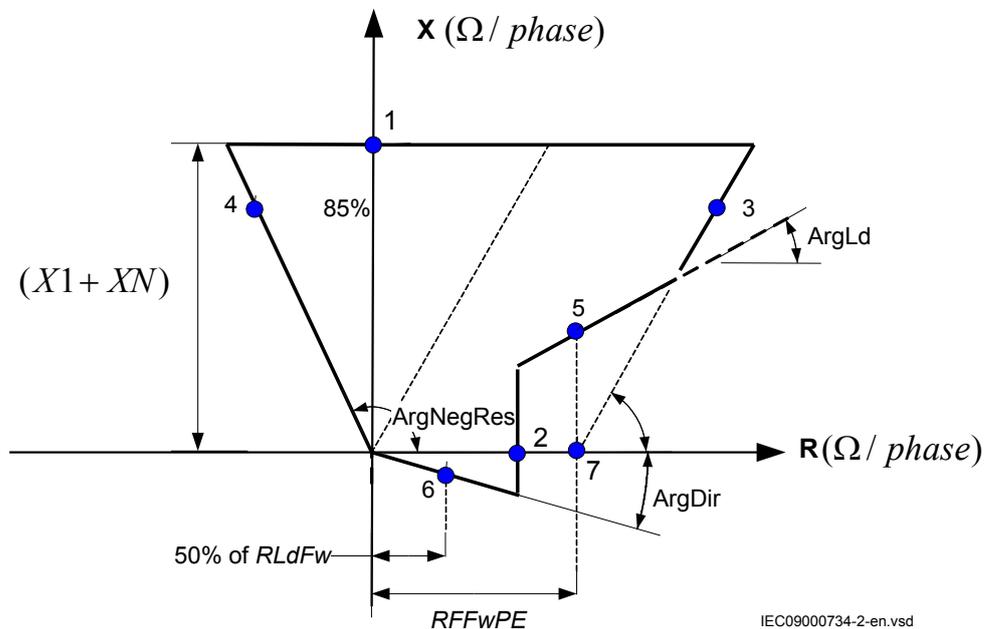


Figure 11: Operating characteristic for phase selection function, forward direction single-phase faults

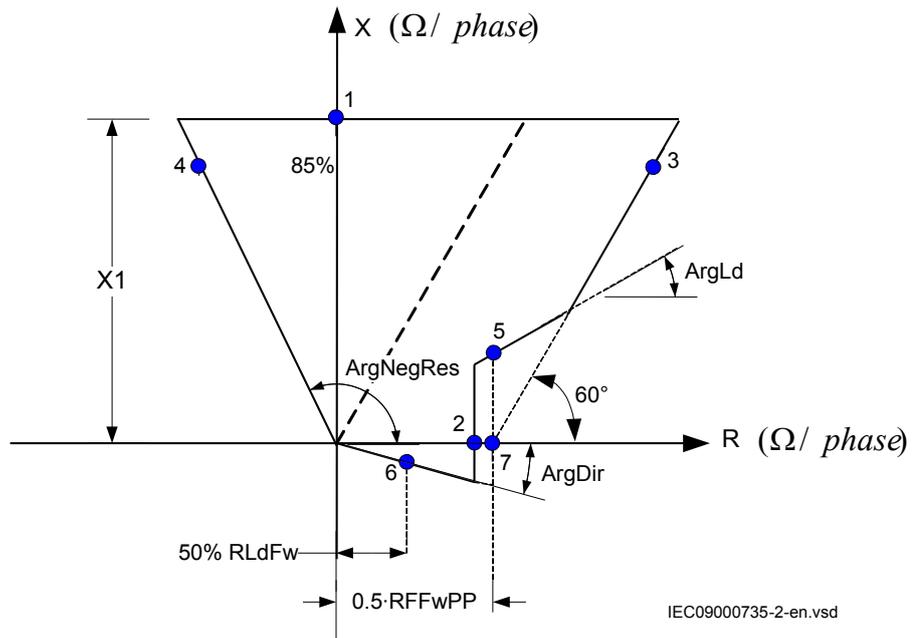


Figure 12: Operating characteristic for phase selection function, forward direction phase-to-phase faults

Table 4: Test points for phase-earth loop L3-E (Ohm/loop)

| Test point | Reach | Value | Comments |
|------------|-------|---|--|
| 1 | X | $[X1+XN]$ | $XN=(X_0-X_1)/3$ |
| | R | 0 | |
| 2 | X | 0 | |
| | R | RLdFw | |
| 3 | X | $0.85 \cdot [X1+XN]$ | $R \approx 0.491 \cdot (X1+XN) + RFFwPE$ |
| | R | $0.85 \cdot [X1+XN] \cdot \tan(60^\circ) + RFFwPE$ | |
| 4 | X | $0.85 \cdot [X1+XN]$ | |
| | R | $-0.85 \cdot [X1+XN] \cdot \tan(\text{ArgNegRes}-90^\circ)$ | |
| 5 | X | $RFFwPE \cdot \tan(\text{ArgLd})$ | |
| | R | RFFwPE | |
| 6 | X | $-0.5 \cdot RLdFw \cdot \tan(\text{ArgDir})$ | |
| | R | $0.5 \cdot RLdFw$ | |

Table 4 is used together with figure 11.

Table 5: Test points for phase-to-phase loops L1–L2 (Ohm/phase)

| Test point | Reach | Value | Comments |
|------------|-------|---|-----------------------|
| 1 | X | X1 | |
| | R | 0 | |
| 2 | X | 0 | |
| | R | RLdFw | |
| 3 | X | $0.85 \cdot X1$ | R=0.491·X1+0.5 RFFwPP |
| | R | $0.85 \cdot X1 \cdot 1/\tan(60^\circ) + 0.5 \text{ RFFwPP}$ | |
| 4 | X | $0.85 \cdot X1$ | |
| | R | $-0.85 \cdot X1 \cdot \tan(\text{AngNegRes} - 90^\circ)$ | |
| 5 | X | $0.5 \cdot \text{RFFwPP} \cdot \tan(\text{ArgLd})$ | |
| | R | $0.5 \cdot \text{RFFwPP}$ | |
| 6 | X | $-0.5 \cdot \text{RLdFw} \cdot \tan(\text{ArgDir})$ | |
| | R | $0.5 \cdot \text{RLdFw}$ | |

Table 5 is used together with figure 12.

6.3.2.1

Measuring the operate limit of set values

- Supply the IED with healthy conditions for at least two seconds.
- Apply the fault condition and slowly decrease the measured impedance to find the operate value for of the phase-to-earth loop L3, test point 1, according to figure 11. Compare the result of the measurement with the expected value according to table 4.
The corresponding binary signals that inform about the operation of the phase selection measuring elements are available in the local HMI under **Main menu/Tests/Function status/Impedance/FDPSDIS**.
- Repeat steps 1 to 2 to find the operate values for the remaining test points according to figure 11 and table 4.



- Repeat steps 1 to 3 to find the operate value for the phase-to-phase fault in L1 — L2 according to figure 12 and table 5.

6.3.2.2

Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Impedance/FDPSDIS/1:FDPSDIS** for the

function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.3.3

Five zone distance protection, mho characteristic function ZMOPDIS

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ZMOPDIS are available on the local HMI under **Main menu/Tests/Function status/Impedance/ZMOPDIS(21,Z<)/1:ZMOPDIS**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

Keep the current constant when measuring operating characteristics. Keep the current as close as possible to its rated value or lower. But make sure it is higher than the set minimum operating current.

Ensure that the maximum continuous current in an IED does not exceed four times its rated value, if the measurement of the operating characteristics runs under constant voltage conditions.

To verify the mho characteristic, at least two points should be tested.

6.3.3.1 Phase-to-phase faults

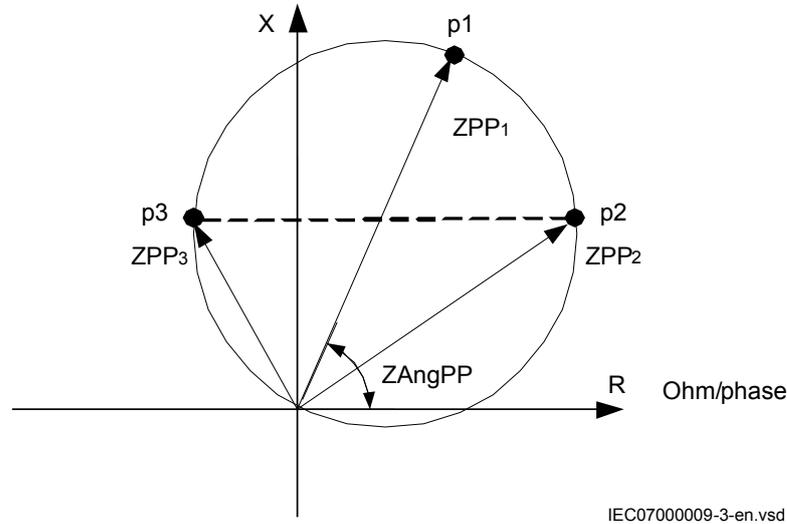


Figure 13: Proposed test points for phase-to-phase fault

| Label | Description |
|---------------|---|
| ZPP1 | The measured impedance for phase-to-phase fault at point 1 (zone reach ZPP) ohm/phase. |
| ZAngPP | The characteristic angel for phase-to-phase fault in degrees. |
| ZPP2 and ZPP3 | The fault impedance for phase-to-phase fault at the boundary for the zone reach at point 2 and 3. |


Table 6: Test points for phase-to-phase

| Test points | R | X |
|-------------|---|----------------------------|
| 1 | $ZPP \cdot \cos(ZAngPP)$ | $ZPP \cdot \sin(ZAngPP)$ |
| 2 | $ZPP/2 + \Delta R = ZPP/2 \cdot (1 + \cos(ZAngPP))$ | $ZPP/2 \cdot \sin(ZAngPP)$ |
| 3 | $ZPP/2 - \Delta R = ZPP/2 \cdot (1 - \cos(ZAngPP))$ | $ZPP/2 \cdot \sin(ZAngPP)$ |

Change the magnitude and angle of phase-to-phase voltage to achieve impedances at test points p1, p2 and p3. For each test point, observe that the output signals, START and STLx are activated where x refers to the actual phase to be tested. After the timer tPP for the actual zone has elapsed, also the signals TRIP and TRx shall be activated.

6.3.3.2 Phase-to-earth faults

For simplicity, the same test points as for phase-to-phase faults are proposed, but considering new impedance values.

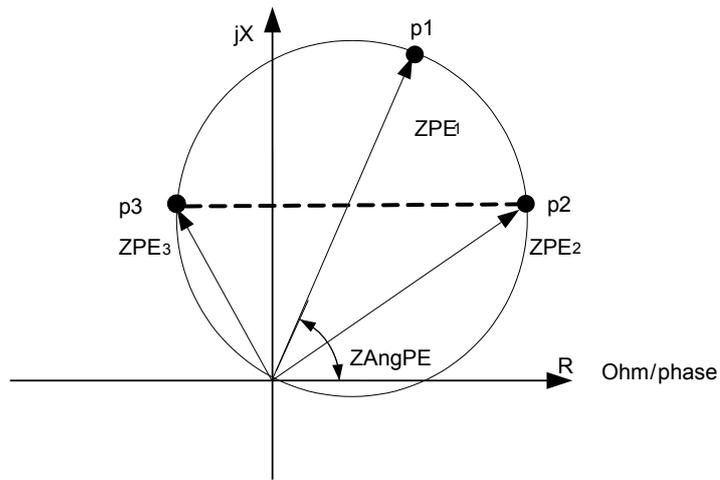

en07000010.vsd

Figure 14: Proposed test points for phase-to-earth faults

| Label | Description |
|---------------|---|
| ZPE1 | The measured impedance for phase-to-earth fault at point 1 (zone reach ZPE) ohm/phase. |
| ZAngPE | The characteristic angel for phase-to-earth fault in degrees. |
| ZPE2 and ZPE3 | The fault impedance for phase-to-earth fault at the boundary for the zone reach at point 2 and 3. |

Table 7: Test points for phase-to-phase loops L1-L2 (Ohm/Loop)

| Test points | Set | Comments |
|-------------|---|----------------------------|
| 1 | $ZPE \cdot \cos(ZAngPE)$ | $ZPE \cdot \sin(ZAngPE)$ |
| 2 | $ZPE/2 + \Delta R = (ZPE/2) \cdot (1 - \cos(ZAngPE))$ | $ZPE/2 \cdot \sin(ZAngPE)$ |
| 3 | $ZPE/2 - \Delta R = ZPE/2 \cdot (1 - \cos(ZAngPE))$ | $ZPE/2 \cdot \sin(ZAngPE)$ |

Check also in the same way as for phase-to-earth fault for each test point that the output signals START and STLx are activated where x refers to the actual phase to be tested. After the timer tPE for the zone has elapsed, also the signals TRIP and TRx shall be activated.

6.3.4

Faulty phase identification with load encroachment FMPSPDIS

There is no specific test routine for this function. The function is tested in conjunction with other impedance (mho) functions.

6.3.5 Phase preference logic PPLPHIZ

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for PPLPHIZ are available on the local HMI under **Main menu/Tests/Function status/Impedance/PPLPHIZ/1:PPLPHIZ**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The Phase preference logic function PPLPHIZ is tested with a three-phase testing equipment for distance protections. PPLPHIZ is tested in co-operation with the Five zone distance protection, quadrilateral characteristic function ZQDPDIS. The distance protection and the phase preference logic shall be set to values according to the real set values to be used. The test is made by means of injection of voltage and current where the amplitude of both current and voltage and the phase angle between the voltage and current can be controlled.

During the test the following binary signals (outputs) shall be monitored:

- Trip signal from distance protection
 - Start signal from phase preference logic
1. Connect the test set for injection of voltage and current.
 2. Inject voltages and currents corresponding to a phase-to-phase to earth fault within zone 1 of the distance protection function. In the test one of the current inputs (one of the faulted phases) is disconnected. The remaining current is the fault current out on the protected line. All combinations of two phase-to-earth faults with one phase current are tested. The result shall be according to table 8. It should be checked that the fault will give phase-to-phase voltage, phase-to-earth voltage, zero-sequence voltage and phase current so that the conditions set for the logic are fulfilled.
 3. The same test is done for a phase-to-phase fault in zone 2.

Table 8: *Operation at different combinations of faults and operation mode*

| OperMode | Fault type/Faulted phase current to the IED | | | | | |
|-----------|---|-----------|-----------|-----------|-----------|-----------|
| | L1L2N/IL1 | L1L2N/IL2 | L2L3N/IL2 | L2L3N/IL3 | L3L3N/IL1 | L3L1N/IL3 |
| No Filter | Trip | Trip | Trip | Trip | Trip | Trip |
| No Pref | Trip | Trip | Trip | Trip | Trip | Trip |
| 1231c | Trip | No Trip | Trip | No Trip | No Trip | Trip |
| 1321c | No Trip | Trip | No Trip | Trip | Trip | No Trip |
| 123a | Trip | No Trip | Trip | No Trip | Trip | No Trip |
| 132a | Trip | No Trip | No Trip | Trip | Trip | No Trip |
| 213a | No Trip | Trip | Trip | No Trip | Trip | No Trip |
| 231a | No Trip | Trip | Trip | No Trip | No Trip | Trip |
| 312a | Trip | No Trip | No Trip | Trip | No Trip | Trip |
| 321a | No Trip | Trip | No Trip | Trip | No Trip | Trip |

6.3.5.1 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No*, under **Main menu/Tests/Function test modes/<Function group>/<Function>/<1:Function>** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.3.6 Power swing detection ZMRPSB

The aim is to verify that the settings of the Power swing detection function ZMRPSB is according to the setting table and to verify that ZMRPSB operates as expected.

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ZMRPSB are available on the local HMI under **Main menu/Tests/Function status/Impedance/ZMRPSB(68)/1:ZMRPSB**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.


Before starting this process, all impedance measuring zones shall be set and in operation. Test the outer resistive boarder in forward and reverse direction, *RLdOutFw* and *RLdOutRv* and the inner reactive boarder in forward and reverse direction *X1InFw* and *X1InRv*. See figure [15](#).

The corresponding resistive boarder for the inner resistive boundary and outer resistive boundary is calculated automatically from the setting of *kLdRFw* and *kLdRRv*.

The inner zone of ZMRPSB must cover all zones to be blocked by ZMRPSB by at least 10% margin.

The test is mainly divided into two parts, one which aim is to verify that the settings are in accordance to the selective plane and a second part to verify the operation of ZMRPSB. The proposed test points for validation of the settings are numbered according to figure [15](#)

Test of the interactions or combinations that are not configured are not considered in this instruction.

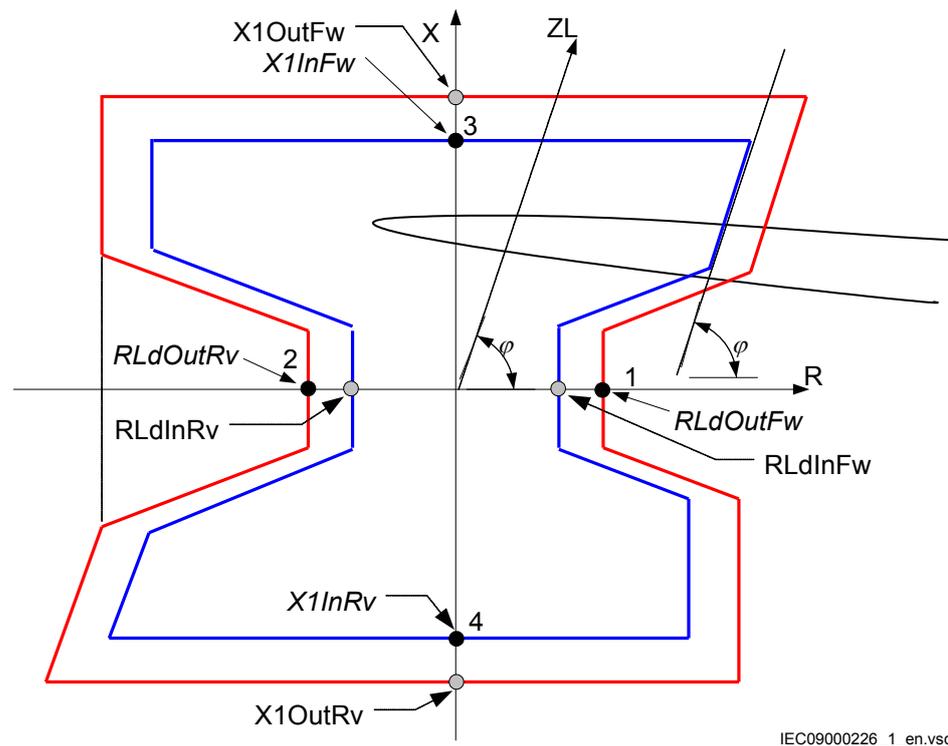

IEC09000226_1_en.vsd

Figure 15: *Operating principle and characteristic of the power swing detection function (settings parameters in italic)*

Where:

$$RLdInFw = RLdOutFw \cdot kLdRFw$$

$$RLdInRv = RLdOutRv \cdot kLdRRv$$

$$X1OutFw = X1InFw + (RLdOutFw - RLdInFw)$$

$$X1OutRv = X1InRv + (RLdOutFw - RLdInFw)$$

6.3.6.1

Verifying the settings

Preconditions

The following output signal shall be configured to binary output available: ZOUT, measured impedance within outer impedance boundary.

1. Keep the measured current as close as possible to its rated value or lower. Keep it constant during the test, but ensure that it is higher than the set minimum operating current.
2. Ensure that the maximum continuous current of the IED does not exceed four times its rated value, if the measurement of the operating characteristics runs under constant voltage conditions.
3. Make the necessary connections and settings of the test equipment for test of point 1 according to figure 15.
4. Decrease the measured three-phase impedance slowly and observe the operation value for the signal ZOUT.
5. Compare the operation value with the setting table value.
6. Do the necessary change of the setting of the test equipment and repeat step 4 and step 5 for point 2, 3 and 4 according to figure 15.

6.3.6.2 Testing the power swing detection function ZMRPSB

Preconditions

The following output signal shall be configured to a binary output: ZOUT, measured impedance within outer impedance boundary, ZIN, measured impedance within inner impedance boundary and START, power swing detection.

1. Slowly decrease the measured impedance in all three phases until the START signal gets activated.
2. Increase the measured voltages to their rated values.
3. Decrease instantaneously voltages in all three phases to the values, which are approximately 20% lower than the voltage that gives the set value $RLLIn$ at the predefined test current.
4. The START signal must not appear.
5. Increase the measured voltages to their rated values.

6.3.6.3 Testing the $tR1$ timer

Preconditions

- The input IOCHECK, residual current ($3I_0$) detection used to inhibit start output is configured to the output signal STPE on the phase selection with load encroachment, quadrilateral characteristic function FDPSPDIS.
- The input BLKI02, block inhibit of start output for subsequent residual current detection is connected to FALSE.

1. Program the test equipment for a single phase-to-earth fault and energize FDPSPDIS and check that the input BLOCK on the power swing detection function ZMRPSB is activated.
2. Make a test sequence so that a single phase-to-earth fault occurs after that the trajectory of the impedance has passed the outer and inner boundary of

ZMRPSB during power swing. Use the result from test of ZMRPSB above to determine when the fault shall be applied. The earth-fault must be activated before tRI has elapsed.

3. Start the sequence and observe that the START signal will not be activated.

6.3.6.4 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Impedance/ZMRPSB(68)/1:ZMRPSB** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.3.7 Automatic switch onto fault logic, voltage and current based ZCVPSOF

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ZCVPSOF are available on the local HMI under **Main menu/Tests/Function status/Impedance/ZCVPSOF/1:ZCVPSOF**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

Automatic switch onto fault logic, voltage and current based function ZCVPSOF is checked using secondary injection tests together with the Scheme communication logic for distance or overcurrent protection function ZCPSCH and with the dead line detection function (DLD), which is embedded in ZCVPSOF. ZCVPSOF is activated either by the external input BC, or by the internal DLD, which is integrated in the Fuse failure supervision function SDDRFUF. SDDRFUF is done with a pre-fault condition where the phase voltages and currents are at zero. A reverse three-phase fault with zero impedance and a three-phase fault with an impedance corresponding to the whole line is applied. This fault shall cause an instantaneous trip and result in a TRIP indication.

6.3.7.1 External activation of ZCVPSOF

1. Activate the switch onto fault BC input.
During normal operating conditions, the BC input is de-energized.
2. Apply a three-phase fault condition corresponding to a fault at approximately 45% of the line or with an impedance at 50% of used zone setting and current greater than 30% of I_r .
3. Check that the correct trip outputs, external signals and indication are obtained.

6.3.7.2 Automatic initiation of ZCVPSOF

1. Deactivate the switch onto fault BC input.
2. Set current and voltage inputs to 0 for at least 1 second.
3. Apply a three-phase fault condition corresponding to a fault at approximately 45% of the line or with an impedance at 50% of used zone setting and current greater than 30% of I_r .
4. Check that the correct trip outputs, external signals and indication are obtained.

6.3.7.3 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Impedance/ZCVPSOF/1:ZCVPSOF** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4 Testing current protection functions

6.4.1 Instantaneous phase overcurrent protection PHPIOC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for PHPIOC are available on the local HMI under **Main menu/Tests/Function status/Current/PHPIOC(50,I>>)/1:PHPIOC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

To verify the settings the following fault type should be tested:

- Phase-to-earth fault

Ensure that the maximum continuous current, supplied from the current source used for the test of the IED, does not exceed four times the rated current value of the IED.

6.4.1.1 Measuring the operate limit of set values

1. Inject a phase current into the IED with an initial value below that of the setting.
2. Increase the injected current until the TRIP signal appears.
3. Switch the fault current off.



Observe: Do not exceed the maximum permitted overloading of the current circuits in the IED.

4. Compare the measured operating current with the set value.

6.4.1.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/PHPIOC(50,I>>)/1:PHPIOC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.2 Instantaneous phase overcurrent protection SPTPIOC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SPTPIOC are available on the local HMI under **Main menu/Tests/Function status/Current/SPTPIOC(50,I>>)/1:SPTPIOC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

To verify the settings the following fault type should be tested:

- Phase-to-earth fault

Ensure that the maximum continuous current, supplied from the current source used for the test of the IED, does not exceed four times the rated current value of the IED.

1. Inject a phase current into the IED with an initial value below that of the setting.
2. Increase the injected current in the Ln phase until the TRLn (n=1-3) signal appears.
3. Switch the fault current off. Observe to not exceed the maximum permitted overloading of the current circuits in the IED.
4. Compare the measured operating current with the set value.

6.4.2.1 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/SPTPIOC(50,I>>)/1:SPTPIOC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.3 Four step phase overcurrent protection OC4PTOC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for OC4PTOC are available on the local HMI under **Main menu/Tests/Function status/Current/OC4PTOC(51_67,4I>)/1:OC4PTOC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.4.3.1 Verifying the settings

1. Connect the test set for appropriate current injection to the appropriate IED phases.
If there is any configuration logic that is used to enable or block any of the four available overcurrent steps, make sure that the step under test is enabled, for example end fault protection.
Connect the symmetrical three-phase injection current into phases L1, L2 and L3.
2. Connect the test set for the appropriate three-phase voltage injection to the IED phases L1, L2 and L3. The protection shall be fed with a symmetrical three-phase voltage.
3. Set the injected polarizing voltage slightly larger than the set minimum polarizing voltage (default is 5% of U_{Base}) and set the injection current to lag the appropriate voltage by an angle of 55° if forward directional function is selected.
If *1 out of 3* currents for operation is chosen: The voltage angle of phase L1 is the reference.
The voltage angle of phase L1 is the reference.
If reverse directional function is selected, set the injection current to lag the polarizing voltage by an angle equal to 235° (equal to $55^\circ + 180^\circ$).
4. Increase the injected current and note the operated value of the tested step of the function.
5. Decrease the current slowly and note the reset value.
6. If the test has been performed by injection of current in phase L1, repeat the test when injecting current into phases L2 and L3 with polarizing voltage connected to phases L2 respectively L3 (*1 out of 3* currents for operation).
7. If the test has been performed by injection of current in phases L1 – L2, repeat the test when injecting current into phases L2 – L3 and L3 – L1 with appropriate phase angle of injected currents.
8. Block higher set stages when testing lower set stages according to below.
9. Connect a trip output contact to a timer.
10. Set the injected current to 200% of the operate level of the tested stage, switch on the current and check the time delay.
For inverse time curves, check the operate time at a current equal to 110% of the operate current for $txMin$.

11. Check that all trip and start contacts operate according to the configuration (signal matrixes)
12. Reverse the direction of the injected current and check that the protection does not operate.
13. Repeat the above described tests for the higher set stages.
14. Finally check that start and trip information is stored in the event menu.



Check of the non-directional phase overcurrent function. This is done in principle as instructed above, without applying any polarizing voltage.

6.4.3.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/OC4PTOC(51_67,4I>)/1:OC4PTOC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.4 Four step phase overcurrent protection OC4SPTOC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for OC4SPTOC are available on the local HMI under **Main menu/Tests/Function status/Current/OC4SPTOC(51_67,4I>)/1:OC4SPTOC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.4.4.1 Verifying the settings

1. Connect the test set for appropriate current injection to the appropriate IED phases.
If there is any configuration logic that is used to enable/block any of the four available overcurrent steps, make sure that the step under test is enabled, for example end fault protection. Connect the symmetrical three-phase injection current into phases L1, L2 and L3.
2. Connect the test set for the appropriate three-phase voltage injection to the IED phases L1, L2 and L3.
Make sure that the protection is fed with a symmetrical three-phase voltage.
3. Set the injected polarizing voltage slightly larger than the set minimum polarizing voltage (default is 5% of *UBase*) and set the injection current to lag the appropriate voltage by an angle of about 55° if forward directional function is selected.

- If 1 of 3 currents for operation is chosen: The voltage angle of phase L1 is the reference.
- If reverse directional function is selected, set the injection current to lag the polarizing voltage by an angle equal to 235° (equal to $55^\circ + 180^\circ$).
4. Increase the injected current and note the operated value of the tested step of the function.
 5. Decrease the current slowly and note the reset value.
 6. If the test has been performed by injection of current in phase L1, repeat the test when injecting current into phases L2 and L3 with polarizing voltage connected to phases L2 respectively L3 (1 of 3 currents for operation).
 7. If the test has been performed by injection of current in phases L1 – L2, repeat the test when injecting current into phases L2 – L3 and L3 – L1 with appropriate phase angle of injected currents.
 8. Block higher set stages when testing lower set stages according to below.
 9. Connect a trip output contact to a timer.
 10. Set the injected current to 200% of the operate level of the tested stage, switch on the current and check the time delay.
For inverse time curves, check the operate time at a current equal to 110% of the operate current for t_{nMin} .
 11. Check that all trip and start contacts operate according to the configuration (signal matrixes).
 12. Reverse the direction of the injected current and check that the protection does not operate.
 13. Repeat the above-described tests for the higher set stages.
 14. Finally check that start and trip information is stored in the event menu.



Check of the non-directional phase over-current function. This is done in principle as instructed above, without applying any polarizing voltage.

6.4.4.2

Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/OC4SPTOC(51_67,4I>)/1:OC4SPTOC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.5

Instantaneous residual overcurrent protection EFPIOC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for EFPIOC are available on the local HMI under **Main menu/Tests/Function status/Current/EFPIOC(50N,IN>>)/1:EFPIOC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

To verify the settings the following fault type should be tested:

- Phase-to-earth fault

Ensure that the maximum continuous current, supplied from the current source used for the test of the IED, does not exceed four times the rated current value of the IED.

6.4.5.1 Measuring the operate limit of set values

1. Inject a phase current into the IED with an initial value below that of the setting.
2. Increase the injected current in the Ln or in the neutral (summed current input) phase until the TRIP signal appears.
3. Switch the fault current off.
Observe to not exceed the maximum permitted overloading of the current circuits in the IED
4. Compare the measured operating current with the set value.

6.4.5.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/EFPIOC(50N,IN>>)/1:EFPIOC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.6 Four step residual overcurrent protection EF4PTOC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for EF4PTOC are available on the local HMI under **Main menu/Tests/Function status/Current/EF4PTOC(51N67N,4IN>)/X:EF4PTOC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.4.6.1 Four step directional residual overcurrent protection

1. Connect the test set for single current injection to the appropriate IED terminals.

- Connect the injection current to terminals L1 and neutral, or to terminals N and neutral.
2. Set the injected polarizing voltage slightly larger than the set minimum polarizing voltage (default 1% of U_r) and set the injection current to lag the voltage by an angle equal to the set reference characteristic angle (*AngleRCA*) if the forward directional function is selected.
If reverse directional function is selected, set the injection current to lag the polarizing voltage by an angle equal to $RCA + 180^\circ$.
 3. Increase the injected current and note the value at which the studied step of the function operates.
 4. Decrease the current slowly and note the reset value.
 5. If the test has been performed by injection of current in phase L1, repeat the test when injecting current into terminals L2 and L3 with a polarizing voltage connected to terminals L2 respectively L3.
 6. Block lower set steps when testing higher set steps according to the instructions that follow.
 7. Connect a trip output contact to a timer.
 8. Set the injected current to 200% of the operate level of the tested step, switch on the current and check the time delay.
For inverse time curves, check the operate time at a current equal to 110% of the operate current for *txMin*.
 9. Check that all trip and start contacts operate according to the configuration (signal matrixes)
 10. Reverse the direction of the injected current and check that the step does not operate.
 11. Check that the protection does not operate when the polarizing voltage is zero.
 12. Repeat the above described tests for the higher set steps.
 13. Finally, check that start and trip information is stored in the event menu.

6.4.6.2 Four step non-directional residual overcurrent protection

1. Do as described in "[Four step directional residual overcurrent protection](#)", but without applying any polarizing voltage.

6.4.6.3 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/EF4PTOC(51N67N,4IN>)/X:EF4PTOC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.7 Sensitive directional residual overcurrent and power protection SDEPSDE

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SDEPSDE are available on the local HMI under **Main menu/Tests/Function status/Current/SDEPSDE(67N,IN<->)/1:SDEPSDE**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

Figure 8 shows the principal connection of the test set during the test of the sensitive directional residual overcurrent protection. Observe that the polarizing voltage is equal to $-3U_0$.

6.4.7.1 Measuring the operate and time limit for set values

Operation mode $3I_0 \cdot \cos\varphi$


Procedure

1. Set the polarizing voltage to $1.2 \cdot UNRel>$ and the phase angle between voltage and current to the set characteristic angle ($RCADir$), the current lagging the voltage.
Take setting $RCAComp$ into consideration if not equal to 0 .
2. Measure that the operate current of the set directional element is equal to the $INcosPhi>$ setting.
The I Dir ($I_0 \cos(\text{Angle})$) function activates the START and STDIRIN output.
3. Measure with angles $\varphi = RCADir \pm 45^\circ$ that the measuring element operates when $I_0 \cos(RCADir - \varphi) = I_0 \cos(\pm 45) = INcosPhi>$.
4. Compare the result with the set value.
Take the set characteristic into consideration, see figure 16 and figure 17.
5. Measure the operate time of the timer by injecting a current two times the set $INcosPhi>$ value and the polarizing voltage $1.2 \cdot UNRel>$.

$$T_{inv} = kSN \cdot Sref / 3I_{0test} \cdot \cos(\varphi)$$

(Equation 1)

6. Compare the result with the expected value.
The expected value depends on whether definite or inverse time was selected.
7. Set the polarizing voltage to zero and increase until the boolean output signal UNREL is activated, which is visible in the Application Configuration in PCM600 when the IED is in online mode. Compare the voltage with the set value $UNRel>$.
8. Continue to test another function or complete the test by setting the test mode to *Off*.

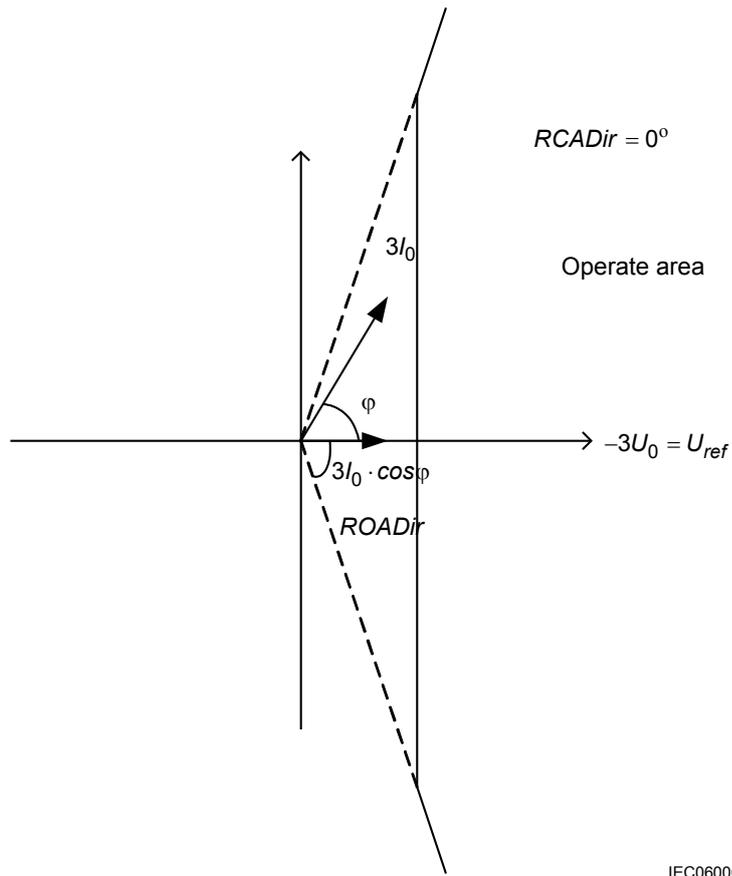

IEC06000650_2_en.vsd

Figure 16: Characteristic with ROADir restriction

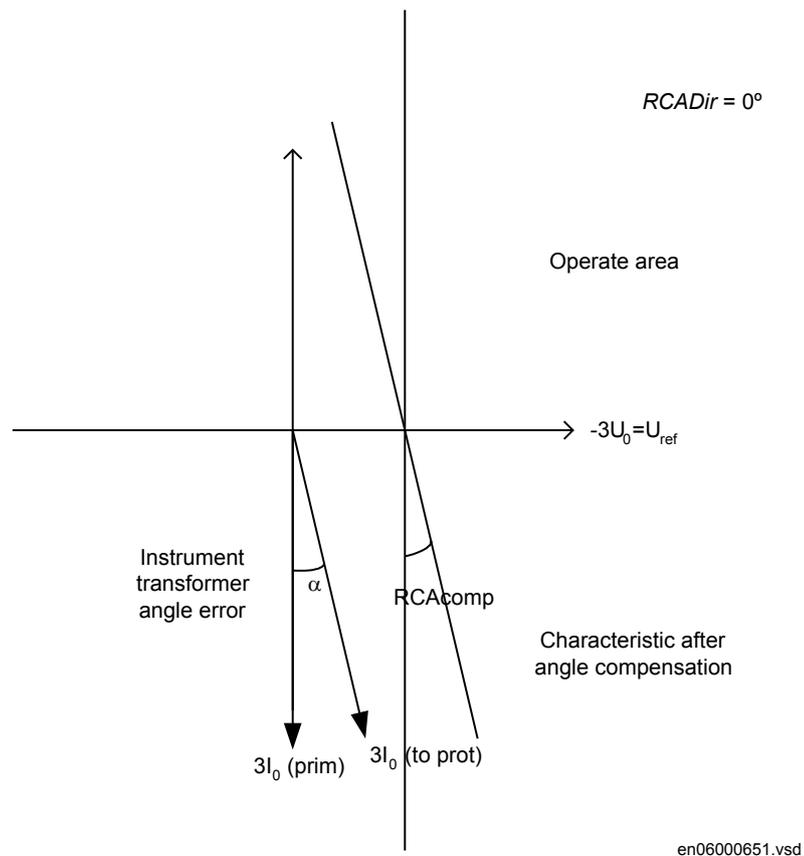


Figure 17: Explanation of RCAcomp

Operation mode $3I_0 \cdot 3U_0 \cdot \cos\varphi$

1. Set the polarizing voltage to $1.2 \cdot UN_{Rel}$ and the phase angle between voltage and current to the set characteristic angle ($RCADir$), the current lagging the voltage.
2. Measure that the operate power is equal to the SN setting for the set directional element.
Note that for operation, both the injected current and voltage must be greater than the set values IN_{Rel} and UN_{Rel} respectively.
The function activates the START and STDIRIN outputs.
3. Measure with angles $\varphi = RCADir \pm 45^\circ$ that the measuring element operates when $3I_0 \cdot 3U_0 \cdot \cos(RCADir - \varphi) = 3I_0 \cdot 3U_0 \cdot \cos(\pm 45) = SN$.
4. Compare the result with the set value. Take the set characteristic into consideration, see figure 16 and figure 17.
5. Measure the operate time of the timer by injecting $1.2 \cdot UN_{Rel}$ and a current to get two times the set SN operate value.

$$T_{inv} = kSN \cdot S_{ref} / 3I_{0test} \cdot 3U_{0test} \cdot \cos(\varphi)$$

(Equation 2)

6. Compare the result with the expected value.
The expected value depends on whether definite or inverse time was selected.
7. Continue to test another function or complete the test by setting the test mode to *Off*.

Operation mode $3I_0$ and φ

1. Set the polarizing voltage to $1.2 \cdot UNRel>$ and the phase angle between voltage and current to the set characteristic angle (*RCADir*), the current lagging the voltage.
2. Measure that the operate power is equal to the *INDir>* setting for the set directional element.



Note that for operation, both the injected current and voltage must be greater than the set values *INRel>* and *UNRel>* respectively.

The function activates the START and STDIRIN output.

3. Measure with angles φ around *RCADir +/- ROADir*.
4. Compare the result with the set values, refer to figure 18 for example characteristic.
5. Measure the operate time of the timer by injecting a current to get two times the set *SN>* operate value.

$$T_{inv} = kSN \cdot S_{ref} / 3I_{0test} \cdot 3U_{0test} \cdot \cos(\varphi)$$

(Equation 3)

6. Compare the result with the expected value.
The expected value depends on whether definite or inverse time was selected.
7. Continue to test another function or complete the test by setting the test mode to *Off*.

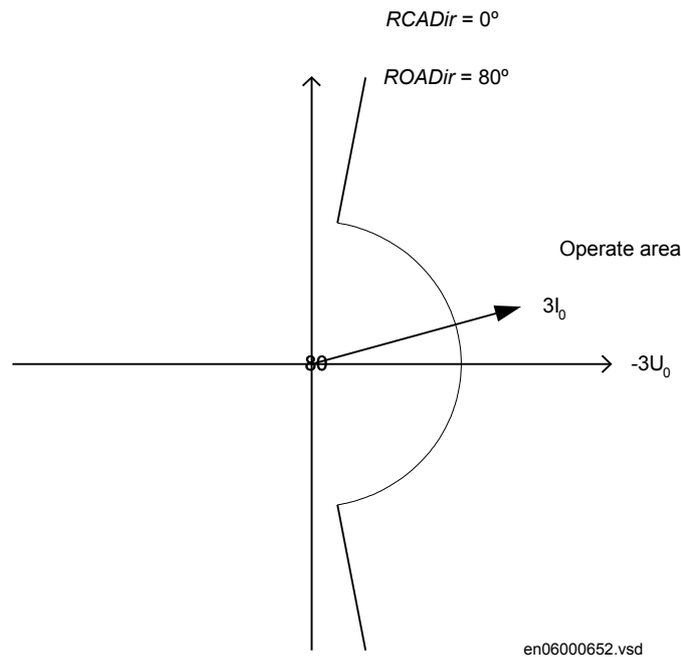


Figure 18: Example characteristic

Non-directional earth fault current protection

Procedure

1. Measure that the operate current is equal to the *INNonDir*> setting.
The function activates the START and STDIRIN output.
2. Measure the operate time of the timer by injecting a current to get two times the set *INNonDir*> operate value.
3. Compare the result with the expected value.
The expected value depends on whether definite time *tINNonDir* or inverse time was selected.
4. Continue to test another function or complete the test by setting the test mode to *Off*.

Residual overvoltage release and protection

Procedure

1. Measure that the operate voltage is equal to the *UN*> setting.
The function activates the START and STUN signals.
2. Measure the operate time by injecting a voltage 1.2 times set *UN*> operate value.
3. Compare the result with the set *tUN* operate value.
4. Inject a voltage $0.8 \cdot UNRel$ > and a current high enough to operate the directional function at the chosen angle.
5. Increase the voltage until the directional function is released.
6. Compare the measured value with the set *UNRel*> operate value.

6.4.7.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/SDEPSDE(67N,IN<->)/1:SDEPSDE** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.8 Thermal overload protection, one time constant LPTTR

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for LPTTR are available on the local HMI under **Main menu/Tests/Function status/Current/LPTTR(26,T>)/1:LPTTR**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

Check that the input logical signal BLOCK is logical zero and that on the local HMI, the logical signal TRIP, START and ALARM are equal to logical zero.

6.4.8.1 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/LPTTR(26,T>)/1:LPTTR** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.9 Breaker failure protection CCRBRF

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for CCRBRF are available on the local HMI under **Main menu/Tests/Function status/Current/CCRBRF(50BF)/1:CCRBRF**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The Breaker failure protection function CCRBRF should normally be tested in conjunction with some other function that provides a start signal. An external START signal can also be used.

To verify the settings in the most common back-up trip mode *1 out of 3*, it is sufficient to test phase-to-earth faults.

At mode *2 out of 4* the phase current setting, $IP>$ can be checked by single-phase injection where the return current is connected to the summated current input. The value of residual (earth fault) current IN set lower than $IP>$ is easiest checked in back-up trip mode *1 out of 4*.

6.4.9.1

Checking the phase current operate value, $IP>$

Check the current level $IP>$ where setting *FunctionMode=Current* and setting *BuTripMode=1 out of 3* or *2 out of 4* as set under **Main menu/Settings/IED Settings/Current/CCRBRF(50BF)/1:CCRBRF**.

1. Apply the fault condition, including START of CCRBRF, with a current below set $IP>$.
2. Repeat the fault condition and increase the current in steps until a trip occurs.
3. Compare the result with the set $IP>$.
4. Disconnect AC and START input signals.



Note! If *NoI>check* or *Retrip off* is set, only back-up trip can be used to check set $IP>$.

6.4.9.2

Checking the residual (earth fault) current operate value $IN>$ set below $IP>$

Check the low set $IN>$ current where setting *FunctionMode = Current* and setting *BuTripMode = 1 out of 4* as set under **Main menu/Settings/IED Settings/Current/CCRBRF(50BF)/1:CCRBRF**.

1. Apply the fault condition, including START of CCRBRF, with a current just below set $IN>Pickup_N$.
2. Repeat the fault condition and increase the current in steps until trip appears.
3. Compare the result with the set $IN>$.
4. Disconnect AC and START input signals.

6.4.9.3

Checking the re-trip and back-up times

The check of the set times can be made in connection with the check of operate values above.

Choose the applicable function and trip mode, such as *FunctionMode = Current* and setting *RetripMode = No CBPos*. Check as set under **Main menu/Settings/IED Settings/Current/CCRBRF(50BF)/1:CCRBRF**.

1. Apply the fault condition, including start of CCRBRF, well above the set current value. Measure time from START of CCRBRF.
2. Check the re-trip $t1$ and back-up trip times $t2$.
3. Disconnect AC and START input signals.

6.4.9.4 Verifying the re-trip mode

Choose the mode below, which corresponds to the actual case.

In the cases below it is assumed that *FunctionMode* = *Current* as set under **Main menu/Settings/IED Settings/Current/CCRBRF(50BF)/1:CCRBRF**.

Checking the case without re-trip, *RetripMode* = *Retrip Off*

1. Set *RetripMode* = *Retrip Off*.
2. Apply the fault condition, including start of CCRBRF, well above the set current value.
3. Verify that no re-trip, but back-up trip is achieved after set time.
4. Disconnect AC and START input signals.

Checking the re-trip with current check, *RetripMode* = *CB Pos Check*

1. Set *RetripMode* = *CB Pos Check*.
2. Apply the fault condition, including start of CCRBRF, well above the set current value.
3. Verify that re-trip is achieved after set time $t1$ and back-up trip after time $t2$
4. Apply the fault condition, including start of CCRBRF, with current below set current value.
5. Verify that no re-trip, and no back-up trip is obtained.
6. Disconnect AC and START input signals.

Checking re-trip without current check, *RetripMode* = *No CBPos Check*

1. Set *RetripMode* = *No CBPos Check*.
2. Apply the fault condition, including start of CCRBRF, without any current.
3. Verify that re-trip is achieved after set time $t1$, and back-up trip after time $t2$.
4. Apply the fault condition, including start of CCRBRF, with current below set current value.
5. Verify that re-trip is achieved after set time $t1$, but no back-up trip is obtained.
6. Disconnect AC and START input signals.

6.4.9.5 Verifying the back-up trip mode

In the cases below it is assumed that *FunctionMode* = *Current* is selected.

Checking that back-up tripping is not achieved at normal CB tripping

Use the actual tripping modes. The case below applies to re-trip with current check.

1. Apply the fault condition, including start of CCRBRF, with phase current well above set value IP .
2. Arrange switching the current off, with a margin before back-up trip time, $t2$. It may be made at issue of re-trip command.
3. Check that re-trip is achieved, if selected, but no back-up trip.
4. Disconnect AC and START input signals.

The normal mode $BuTripMode = 1$ out of 3 should have been verified in the tests above. In applicable cases the modes 1 out of 4 and 2 out of 4 can be checked. Choose the mode below, which corresponds to the actual case.

Checking the case $BuTripMode = 1$ out of 4

It is assumed that the earth-fault current setting $IN>$ is below phase current setting $IP>$.

1. Set $BuTripMode = 1$ out of 4.
2. Apply the fault condition, including start of CCRBRF, with one-phase current below set $IP>$ but above $IN>$. The residual earth fault should then be above set $IN>$.
3. Verify that back-up trip is achieved after set time. If selected, re-trip should also appear.
4. Disconnect AC and START input signals.

Checking the case $BuTripMode = 2$ out of 4

The earth-fault current setting $IN>$ may be equal to or below phase-current setting $IP>$.

1. Set $BuTripMode = 2$ out of 4.
2. Apply the fault condition, including start of CCRBRF, with one-phase current above set $IP>$ and residual (earth fault) above set $IN>$. It can be obtained by applying a single-phase current.
3. Verify that back-up trip is achieved after set time. If selected, re-trip should also appear.
4. Apply the fault condition, including start of CCRBRF, with at least one-phase current below set $IP>$ and residual (earth fault) above set $IN>$. The current may be arranged by feeding three- (or two-) phase currents with equal phase angle (I_0 -component) below $IP>$, but of such value that the residual (earth fault) current ($3I_0$) will be above set value $IN>$.
5. Verify that back-up trip is not achieved.
6. Disconnect AC and START input signals.

6.4.9.6 Verifying the case *RetripMode = Contact*

It is assumed that re-trip without current check is selected, *RetripMode = Contact*.

1. Set *FunctionMode = Contact*
2. Apply input signal for CB closed to input CBCLDL1 (2 or 3)CBCLD
3. Apply input signal, for start of CCRBRF. The value of current could be low.
4. Verify that phase-selection re-trip and back-up trip are achieved after set times.
5. Disconnect the start signal. Keep the CB closed signal.
6. Apply input signal, for start of CCRBRF. The value of current could be low.
7. Arrange disconnection of CB closed signal well before set back-up trip time t_2 .
8. Verify that back-up trip is not achieved.
9. Disconnect injected AC and START input signals.

6.4.9.7 Verifying the function mode *Current&Contact*

To be made only when *FunctionMode = Current&Contact* is selected.

Checking the case with fault current above set value *IP>*

The operation shall be as in *FunctionMode = Current*.

1. Set *FunctionMode = Current&Contact*.
2. Leave the inputs for CB close inactivated. These signals should not influence.
3. Apply the fault condition, including start of CCRBRF, with current above the set *IP>* value.
4. Check that the re-trip, if selected, and back-up trip commands are achieved.
5. Disconnect injected AC and START input signals.

Checking the case with fault current below set value *I>BlkCont*

The case shall simulate a case where the fault current is very low and operation will depend on CB position signal from CB auxiliary contact. It is suggested that re-trip without current check is used, setting *RetripMode = No CBPos Check*.

1. Set *FunctionMode = Current&Contact*.
2. Apply input signal for CB closed to relevant input or inputs CBCLDL1 (2 or 3)
3. Apply the fault condition with input signal(s) for start of CCRBRF. The value of current should be below the set value *I>BlkCont*
4. Verify that phase-selection re-trip (if selected) and back-up trip are achieved after set times. Failure to trip is simulated by keeping the signal(s) CB closed activated.
5. Disconnect the AC and the START signal(s). Keep the CB closed signal(s).
6. Apply the fault and the start again. The value of current should be below the set value *I>BlkCont*.

7. Arrange disconnection of BC closed signal(s) well before set back-up trip time t_2 . It simulates a correct CB tripping.
8. Verify that back-up trip is not achieved. Re-trip can appear for example, due to selection "Re-trip without current check".
9. Disconnect injected AC and START input signals.

6.4.9.8 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/CCRBRF(50BF)/X:CCRBRF** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.10 Breaker failure protection CSPRBRF

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for CSPRBRF are available on the local HMI under **Main menu/Tests/Function status/Current/CSPRBRF(50BF)/1:CSPRBRF**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

Breaker failure protection CSPRBRF should normally be tested in conjunction with some other function that provides a start signal. An external START signal can also be used.

To verify the settings in the most common back-up trip mode *1 out of 3* it is sufficient to test phase-to-earth-faults.

At mode *2 out of 4* the Phase current setting, $IP>$ can be checked by single phase injection where the return current is connected to the summed current input. The value of residual (EF) current IN set lower than $IP>$ is easiest checked in backup trip mode *1 out of 4*.

6.4.10.1 Checking the phase current operate value, $IP>$

Check the current level $IP>$ where setting *FunctionMode* = *Current* and setting *BuTripMode* = *1 out of 3* or *2 out of 4* as set under **Main menu/Settings/IED Settings/Current/CSPRBRF(50BF)/1:CSPRBRF**.

1. Apply the fault condition, including START of CSPRBRF, with a current below set $IP>$.
2. Repeat the fault condition and increase the current in steps until a trip occurs.
3. Compare the result with the set $IP>$.
4. Disconnect AC and START input signals.



If “No I> check” or “Retrip off” is set, only back-up trip can be used to check set $IP>$.

6.4.10.2 Checking the residual (EF) current operate value $IN>$ set below $IP>$

Check the low set $IN>$ current where setting $FunctionMode = Current$ and setting $BuTripMode = 1$ out of 4 as set under **Main menu/Settings/IED Settings/Current/CSPRBRF(50BF)1:CSPRBRF**.

1. Apply the fault condition, including start of CSPRBRF , with a current just below set $IN>$.
2. Repeat the fault condition and increase the current in steps until trip appears.
3. Compare the result with the set $IN>$.
4. Disconnect AC and start input signals.

6.4.10.3 Checking the re-trip and back-up times

The check of the set times can be made in connection with the check of operate values above. Choose the applicable function and trip mode, such as $FunctionMode = Current$ and setting $RetripMode = No CBPos Check$ as set under **Main menu/Settings/IED Settings/CSPRBRF(50BF)/Current/1:CSPRBRF**.

1. Apply the fault condition, including start of CSPRBRF, well above the set current value. Measure time from start of CSPRBRF.
2. Check the re-trip $t1$ and back-up trip times $t2$.
3. Disconnect AC and start input signals.

6.4.10.4 Verifying the *RetripMode*

1. Choose the mode below, which corresponds to the actual case. In the cases below it is assumed that $FunctionMode = Current$ as set under **Main menu/Settings/IED Settings/Current/CSPRBRF(50BF)1:CSPRBRF**
2. Continue with the cases shown below.

Checking the re-trip with current check, *RetripMode = CB Pos Check*

1. Set $RetripMode = CB Pos Check$ check.
2. Apply the fault condition, including start of CSPRBRF, well above the set current value.
3. Verify that retrip is achieved after set time $t1$ and back-up trip after time $t2$
4. Apply the fault condition, including start of CSPRBRF, with current below set current value.
5. Verify that no re-trip, and no back-up trip is obtained.
6. Disconnect AC and start input signals.

Checking the case without re-trip, *RetripMode = Retrip Off*

1. Set *RetripMode = Retrip Off*.
2. Apply the fault condition, including start of C SPRBRF , well above the set current value.
3. Verify that no re-trip, but back-up trip is achieved after set time.
4. Disconnect AC and start input signals.

Checking re-trip without current check, *RetripMode = No CBPos Check*

1. Set *RetripMode = No CBPos Check*.
2. Apply the fault condition, including start of C SPRBRF , well above the set current value.
3. Verify that re-trip is achieved after set time $t1$, and back-up trip after time $t2$.
4. Apply the fault condition, including start of C SPRBRF , with current below set current value.
5. Verify that re-trip is achieved after set time $t1$, but no back-up trip is obtained.
6. Disconnect AC and start input signals.

6.4.10.5

Verifying the case *RetripMode = No CB Pos Check*

It is assumed that re-trip without current check is selected, *RetripMode = No CB Pos Check*.

1. Set *FunctionMode = Contact*.
2. Apply input signal for CB closed to input CBCLD.
3. Apply input signal, for start of C SPRBRF . The value of current could be low.
4. Verify that re-trip and back-up trip are achieved after set times.
5. Disconnect the start signal. Keep the CB closed signal.
6. Apply input signal, for start of C SPRBRF . The value of current could be low.
7. Arrange disconnection of CB closed signal well before set back-up trip time $t2$.
8. Verify that back-up trip is not achieved.
9. Disconnect injected AC and start input signals.

6.4.10.6

Verifying the function mode *Current&Contact*

- To be made only when *FunctionMode = Current&Contact* is selected.
- Checking the case with fault current above set value $IP>$.
- The operation shall be as in *FunctionMode = Current&Contact*.

1. Set *FunctionMode = Current&Contact*.
2. Leave the inputs for CB close inactivated. These signals should not influence.
3. Apply the fault condition, including start of CSPRBRF, with current above the set *IP>* value.
4. Check that the re-trip, if selected, and back-up trip commands are achieved.
5. Disconnect injected AC and start input signals.

6.4.10.7

Checking the case with fault current below set value *I>BlkCont*

The case shall simulate a case where the fault current is very low and operation will depend on CB position signal from CB auxiliary contact. It is suggested that retrip without current check is used; setting *RetripMode = No CBPos Check*.

1. Set *FunctionMode = Current & Contact* check.
2. Apply input signal for CB closed to relevant input or inputs CBCLDL1, CBCLDL2, or CBCLDL3
3. Apply the fault condition with input signal(s) for start of CSPRBRF. The value of current should be below the set value *I>BlkCont*.
4. Verify that phase-selection re-trip (if selected) and back-up trip are achieved after set times. Failure to trip is simulated by keeping the signal(s) CB closed activated.
5. Disconnect the AC and the start signal(s). Keep the CB closed signal(s).
6. Apply the fault and the start again. The value of current should be below the set value *I>BlkCont*.
7. Arrange disconnection of BC closed signal(s) well before set back-up trip time *t2*. It simulates a correct CB tripping.
8. Verify that back-up trip is not achieved. Re-trip can appear for example, due to selection "Re-trip without current check".
9. Disconnect injected AC and start of input signals.

6.4.10.8

Checking the phase current operate value, *IP>*

Check the low set *IP>* current where setting *FunctionMode = Current* and setting *BuTripMode = 1 out of 3* or *2 out of 4* as set under **Main menu/Settings/IED Settings/Current/CSPRBRF(50BF)/1:CSPRBRF**.

1. Apply the fault condition, including start of CSPRBRP, with a current just below set *IP>*.
2. Repeat the fault condition and increase the current in steps until trip appears.
3. Compare the result with the set *IP>*.
4. Disconnect AC and start input signals.



If *NoI> check* or *Retrip off* is set, only back-up trip can be used to check set *IP>*.

6.4.10.9 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/CSPRBRF(50BF)/1:CSPRBRF** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.11 Stub protection STBPTOC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Logical signals for STBPTOC protection are available on the local HMI under **Main menu/Tests/Function status/Current/STBPTOC(50STB)/1:STBPTOC/Inputs or Outputs**

Values of the logical signals for STBPTOC are available on the local HMI under **Main menu/Tests/Function status/Current/STBPTOC(50STB,I>)/1:STBPTOC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.4.11.1 Measuring the operate limit of set values

1. Check that the input logical signals BLOCK and RELEASE and the output logical signal TRIP are all logical zero.
2. Activate the input RELEASE on the STBPTOC function block
3. For a short while inject a current (fault current) in one phase to about 110% of the set operating current, and switch the current off.
Observe to not exceed the maximum permitted overloading of the current circuits in the IED.
4. Switch the fault current on and measure the operating time of STBPTOC. Use the TRIP signal from the configured binary output to stop the timer. The operation should be instantaneously.
5. Activate the input BLOCK on the STBPTOC function block.
6. Switch on the fault current (110% of the setting).
No TRIP signal should appear.
7. Switch off the fault current.
8. For a short while inject a current (fault current) in same phase to about 90% of the set operating current, and switch the current off.
9. Switch the fault current on.
No TRIP signal should appear.
10. Switch the fault current off.
11. Reset the RELEASE binary input.
12. Switch the fault current on.

- No TRIP signal should appear.
13. Switch the fault current off.

6.4.11.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/STBPTOC(50STB,I>)/1:STBPTOC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.12 Pole discordance protection CCRPLD

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for CCRPLD are available on the local HMI under **Main menu/Tests/Function status/Current/CCRPLD(52PD)/X:CCRPLD**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.4.12.1 Verifying the settings

1. When CCRPLD is set for external, set setting *ContSel* to *On* under **Main menu/Settings/IED Settings/Current/CCRPLD/1:CCRPLD** to activate the logic that detects pole discordance when external pole discordance signaling is used (input EXTPDIND) in the application configuration.
2. Activate the input EXTPDIND on CCRPLD function block, and measure the operating time of CCRPLD.
3. Compare the measured time with the set value *tTrip*.
4. Reset the EXTPDIND input.
5. When CCRPLD is set for unsymmetrical current detection with CB monitoring, set setting *CurrSel* under **Main menu/Settings/IED Settings/Current/CCRPLD/1:CCRPLD** to *On*.
Use the TRIP signal from the configured binary output to stop the timer.
6. Repeat point 4 and 5 using OPENCMD instead of CLOSECMD. Set all three currents to 110% of *CurrRelLevel*. Activate CLOSECMD.
NO TRIP signal should appear due to symmetrical condition.

6.4.12.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/CCRPLD(52PD)/X:CCRPLD** for the

function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.13 Broken conductor check BRCPTOC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for BRCPTOC are available on the local HMI under **Main menu/Tests/Function status/Current/BRCPTOC(46,lub)/X:BRCPTOC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.4.13.1 Measuring the operate and time limit of set values

1. Check that the input logical signal BLOCK to the BRCPTOC function block is logical zero and note on the local HMI that the output signal TRIP from the BRCPTOC function block is equal to the logical 0.
2. Set the measured current (fault current) in one phase to about 110% of the set operating current $IP>$.
Observe to not exceed the maximum permitted overloading of the current circuits in the terminal.
3. Switch on the fault current and measure the operating time of BRCPTOC. TRIP is controlled by Gate 13 in the configuration.
Use the TRIP signal from the configured binary output to stop the timer.
4. Compare the measured time with the set value $tOper$.
5. Activate the BLOCK binary input.
6. Switch on the fault current (110% of the setting) and wait longer than the set value $tOper$.
No TRIP signal should appear.
7. Switch off the fault current.
8. Set the measured current (fault current) in same phase to about 90% of the set operating current $IP>$. Switch off the current.
9. Switch on the fault current and wait longer than the set value $tOper$.
No TRIP signal should appear.
10. Switch off the fault current.

6.4.13.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/BRCPTOC(46,lub)/X:BRCPTOC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.14 Directional underpower protection GUPPDUP

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for GUPPDUP are available on the local HMI under **Main menu/Tests/Function status/Current/GUPPDUP(37,P<)/1:GUPPDUP**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.4.14.1 Verifying the settings

The underpower protection shall be set to values according to the real set values to be used.

The test is made by means of injection of voltage and current where the amplitude of both current and voltage and the phase angle between the voltage and current can be controlled. During the test the analog outputs of active and reactive power shall be monitored.

1. Connect the test set for injection of voltage and current corresponding to the mode to be used in the application. If a three-phase test set is available this could be used for all the modes. If a single-phase current/voltage test set is available the test set should be connected to a selected input for one-phase current and voltage.

Use the formulas stated in [Table 9](#) for the different calculation modes used. The set mode *Mode* can be found on the local HMI under **Main menu/Settings/IED Settings/Current/GUPPDUP(37,P<)/1:GUPPDUP/General**.

Table 9: Calculation modes

| Set value: <i>Mode</i> | Formula used for complex power calculation |
|------------------------------|--|
| L1, L2, L3 | $\bar{S} = \bar{U}_{L1} \cdot \bar{I}_{L1}^* + \bar{U}_{L2} \cdot \bar{I}_{L2}^* + \bar{U}_{L3} \cdot \bar{I}_{L3}^*$ <p style="text-align: right;">(Equation 4)</p> |
| Arone | $\bar{S} = \bar{U}_{L1L2} \cdot \bar{I}_{L1}^* - \bar{U}_{L2L3} \cdot \bar{I}_{L3}^*$ <p style="text-align: right;">(Equation 5)</p> |
| PosSeq | $\bar{S} = 3 \cdot \bar{U}_{PosSeq} \cdot \bar{I}_{PosSeq}^*$ <p style="text-align: right;">(Equation 6)</p> |
| L1L2 | $\bar{S} = \bar{U}_{L1L2} \cdot (\bar{I}_{L1}^* - \bar{I}_{L2}^*)$ <p style="text-align: right;">(Equation 7)</p> |
| Table continues on next page | |

| Set value: <i>Mode</i> | Formula used for complex power calculation |
|------------------------|---|
| L2L3 | $\bar{S} = \bar{U}_{L2L3} \cdot (\bar{I}_{L2}^* - \bar{I}_{L3}^*)$ <p style="text-align: right;">(Equation 8)</p> |
| L3L1 | $\bar{S} = \bar{U}_{L3L1} \cdot (\bar{I}_{L3}^* - \bar{I}_{L1}^*)$ <p style="text-align: right;">(Equation 9)</p> |
| L1 | $\bar{S} = 3 \cdot \bar{U}_{L1} \cdot \bar{I}_{L1}^*$ <p style="text-align: right;">(Equation 10)</p> |
| L2 | $\bar{S} = 3 \cdot \bar{U}_{L2} \cdot \bar{I}_{L2}^*$ <p style="text-align: right;">(Equation 11)</p> |
| L3 | $\bar{S} = 3 \cdot \bar{U}_{L3} \cdot \bar{I}_{L3}^*$ <p style="text-align: right;">(Equation 12)</p> |

2. Adjust the injected current and voltage to the set values in % of *IBase* and *UBase* (converted to secondary current and voltage). The angle between the injected current and voltage shall be set equal to the set direction *Angle1*, angle for stage 1 (equal to 0° for low forward power protection and equal to 180° for reverse power protection). Check that the monitored active power is equal to 100% of rated power and that the reactive power is equal to 0% of rated power.
3. Change the angle between the injected current and voltage to *Angle1* + 90°. Check that the monitored active power is equal to 0% of rated power and that the reactive power is equal to 100% of rated power.
4. Change the angle between the injected current and voltage back to 0°. Decrease the current slowly until the START1 signal, start of stage 1, is activated.
5. Increase the current to 100% of *IBase*.
6. Switch the current off and measure the time for activation of TRIP1, trip of stage 1.
7. If a second stage is used, repeat steps [2](#) to [6](#) for the second stage.

6.4.14.2

Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/GUPPDUP(37,P<)/1:GUPPDUP** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.4.15 Directional overpower protection GOPPDOP

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for GOPPDOP are available on the local HMI under **Main menu/Tests/Function status/Current/GOPPDOP(32,P>)/X:GOPPDOP**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.4.15.1 Verifying the settings

The overpower protection shall be set to values according to the real set values to be used. The test is made by means of injection of voltage and current where the amplitude of both current and voltage and the phase angle between the voltage and current can be controlled. During the test the analog outputs of active and reactive power shall be monitored.

1. Connect the test set for injection of voltage and current corresponding to the mode to be used in the application. If a three phase test set is available this could be used for all the modes. If a single phase current/voltage test set is available the test set should be connected to a selected input for one phase current and voltage.
Use the formulas stated in [Table 9](#) for the different calculation modes used. The set mode *Mode* can be found under **Main menu/Settings/IED Settings/Current/GOPPDOP(32,P>)/1:GOPPDOP/General**.
2. Adjust the injected current and voltage to the set rated values in % of *IBase* and *UBase* (converted to secondary current and voltage). The angle between the injected current and voltage shall be set equal to the set direction *Angle1*, angle for stage 1 (equal to 0° for low forward power protection and equal to 180° for reverse power protection). Check that the monitored active power is equal to 100% of rated power and that the reactive power is equal to 0% of rated power.
3. Change the angle between the injected current and voltage to *Angle1* + 90°. Check that the monitored active power is equal to 0% of rated power and that the reactive power is equal to 100% of rated power.
4. Change the angle between the injected current and voltage back to *Angle1* value. Increase the current slowly from 0 until the START1 signal, start of stage 1, is activated. Check the injected power and compare it to the set value *Power1*, power setting for stage 1 in % of *Sbase*.
5. Increase the current to 100% of *IBase* and switch the current off.
6. Switch the current on and measure the time for activation of TRIP1, trip of stage 1.
7. If a second stage is used, repeat steps [2](#) to [6](#) for the second stage.

6.4.15.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Current/GOPPDOP(32,P>)/X:GOPPDOP** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.5 Testing voltage protection functions

6.5.1 Two step undervoltage protection UV2PTUV

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for UV2PTUV are available on the local HMI under **Main menu/Tests/Function status/Voltage/UV2PTUV(27,2U<)/1:UV2PTUV**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.5.1.1 Verifying the setting

Verification of START value and time delay to operate for Step1

1. Check that the IED settings are appropriate, especially the START value, the definite time delay and the *1 out of 3* operation mode.
2. Supply the IED with three-phase voltages at their rated values.
3. Slowly decrease the voltage in one of the phases, until the START signal appears.
4. Note the operate value and compare it with the set value.
5. Increase the measured voltage to rated load conditions.
6. Check that the START signal resets.
7. Instantaneously decrease the voltage in one phase to a value about 20% lower than the measured operate value.
8. Measure the time delay for the TRIP signal, and compare it with the set value.

Extended testing

1. The test above can now be repeated for step [2](#).
2. The tests above can be repeated for *2 out of 3* and for *3 out of 3* operation mode.
3. The tests above can be repeated to check security, that is, the START and operate signals, that are not supposed to appear, - do not.
4. The tests above can be repeated to check the time to reset.
5. The tests above can be repeated to test the inverse time characteristic.

6.5.1.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Voltage/UV2PTUV(27,2U<)/1:UV2PTUV** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.5.2 Two step overvoltage protection OV2PTOV

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for OV2PTOV are available on the local HMI under **Main menu/Tests/Function status/Voltage/OV2PTOV(59,2U>)/1:OV2PTOV**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.5.2.1 Verifying the settings

1. Apply single-phase voltage below the set value $U1 >$.
2. Slowly increase the voltage until the ST1 signal appears.
3. Note the operate value and compare it with the set value.
4. Switch the applied voltage off.
5. Set and apply about 20% higher voltage than the measured operate value for one phase.
6. Measure the time delay for the TR1 signal and compare it with the set value.
7. Repeat the test for step [2](#).

6.5.2.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Voltage/OV2PTOV(59,2U>)/1:OV2PTOV** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.5.3 Two step residual overvoltage protection ROV2PTOV

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ROV2PTOV are available on the local HMI under **Main menu/Tests/Function status/Voltage/ROV2PTOV(59N,2UN>)/**

1:ROV2PTOV. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.5.3.1 Verifying the settings

1. Apply the single-phase voltage either to a single phase voltage input or to a residual voltage input with the start value below the set value $UI >$.
2. Slowly increase the value until ST1 appears.
3. Note the operate value and compare it with the set value.
4. Switch the applied voltage off.
5. Set and apply about 20% higher voltage than the measured operate value for one phase.
6. Measure the time delay for the TR1 signal and compare it with the set value.
7. Repeat the test for step [2](#).

6.5.3.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Voltage/ROV2PTOV(59N,2UN>)/1:ROV2PTOV** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.5.4 Loss of voltage check LOVPTUV

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for LOVPTUV are available on the local HMI under **Main menu/Tests/Function status/Voltage/LOVPTUV(27,U<)/1:LOVPTUV**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.5.4.1 Measuring the operate limit of set values

1. Check that the input logical signals BLOCK, CBOPEN and BLKU are logical zero.
2. Supply a three-phase rated voltage in all three phases and note on the local HMI that the TRIP logical signal is equal to the logical 0.
3. Switch off the voltage in all three phases.
After set t_{Trip} time a TRIP signal appears on the corresponding binary output or on the local HMI.



Note that TRIP at this time is a pulse signal, duration should be according to set *tPulse*.

4. Inject the measured voltages to their rated values for at least set *tRestore* time.
5. Activate the CBOPEN binary input.
6. Simultaneously disconnect all the three-phase voltages from the IED.
No TRIP signal should appear.
7. Inject the measured voltages to their rated values for at least set *tRestore* time.
8. Activate the BLKU binary input.
9. Simultaneously disconnect all the three-phase voltages from the *tRestore*.
No TRIP signal should appear.
10. Reset the BLKU binary input.
11. Inject the measured voltages to their rated values for at least set *tRestore* time.
12. Activate the BLOCK binary input.
13. Simultaneously disconnect all the three-phase voltages from the terminal.
No TRIP signal should appear.
14. Reset the BLOCK binary input.

6.5.4.2

Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Voltage/LOVPTUV(27,U<)/1:LOVPTUV** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.6

Testing frequency protection functions

6.6.1

Underfrequency protection SAPTUF

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SAPTUF are available on the local HMI under **Main menu/Tests/Function status/Frequency/SAPTUF(81,f<)/X:SAPTUF**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.6.1.1

Verifying the settings

Verification of START value and time delay to operate

1. Check that the IED settings are appropriate, especially the START value and the definite time delay.
2. Supply the IED with three-phase voltages at their rated values.
3. Slowly decrease the frequency of the applied voltage, until the START signal appears.
4. Note the operate value and compare it with the set value.
5. Increase the frequency until rated operating levels are reached.
6. Check that the START signal resets.
7. Instantaneously decrease the frequency of the applied voltage to a value about 20% lower than the operate value.
8. Measure the time delay of the TRIP signal, and compare it with the set value.

Extended testing

1. The test above can be repeated to check the time to reset.
2. The tests above can be repeated to test the frequency dependent inverse time characteristic.

Verification of the low voltage magnitude blocking

1. Check that the IED settings are appropriate, especially the *StartFrequency* and the *tDelay* and the *MinValFreqMeas* in the SMAI preprocessing function.
2. Supply the IED with three-phase voltages at rated values.
3. Slowly decrease the magnitude of the applied voltage, until the BLKDMAGN signal appears.
4. Note the voltage magnitude value and compare it with the SMAI set value *MinValFreqMeas*.
5. Slowly decrease the frequency of the applied voltage, to a value below *StartFrequency*.
6. Check that the START signal does not appear.
7. Wait for a time corresponding to *tDelay*, and check that the TRIP signal does not appear.

6.6.1.2

Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Frequency/SAPTUF(81,f<)/X:SAPTUF** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.6.2

Overfrequency protection SAPTOF

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SAPTOF are available on the local HMI under **Main menu/Tests/Function status/Frequency/SAPTOF(81,f>)/X:SAPTOF**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.6.2.1

Verifying the settings

Verification of START value and time delay to operate

1. Check that the settings in the IED are appropriate, especially the START value and the definite time delay.
2. Supply the IED with three-phase voltages at their rated values.
3. Slowly increase the frequency of the applied voltage, until the START signal appears.
4. Note the operate value and compare it with the set value.
5. Decrease the frequency to rated operating conditions.
6. Check that the START signal resets.
7. Instantaneously increase the frequency of the applied voltage to a value about 20% higher than the operate value.
8. Measure the time delay for the TRIP signal, and compare it with the set value.

Extended testing

1. The test above can be repeated to check the time to reset.

Verification of the low voltage magnitude blocking

1. Check that you have appropriate settings in the IED, especially the *StartFrequency*, *TtDelay* and the *MinValFreqMeas* in the SMAI preprocessing function
2. Supply the IED with three-phase voltages at their rated values.
3. Slowly decrease the magnitude of the applied voltage, until the BLKDMAGN signal appears.
4. Note the voltage magnitude value and compare it with the set value, *MinValFreqMeas*.
5. Slowly increase the frequency of the applied voltage, to a value above *StartFrequency*.
6. Check that the START signal does not appear.
7. Wait for a time corresponding to *tDelay*, and make sure that the TRIP signal does not appear.

6.6.2.2

Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Frequency/SAPTOF(81,f>)/X:SAPTOF** for the

function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.6.3 Rate-of-change frequency protection SAPFRC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SAPFRC are available on the local HMI under **Main menu/Tests/Function status/Frequency/SAPFRC(81,df/dt)/X:SAPFRC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

6.6.3.1 Verifying the settings

Verification of START value and time delay to operate

1. Check that the appropriate settings are available in the IED, especially the START value and the definite time delay. Set *StartFreqGrad*, to a rather small negative value.
2. Supply the IED with three-phase voltages at their rated values.
3. Slowly decrease the frequency of the applied voltage, with an increasing rate-of-change that finally exceeds the setting of *StartFreqGrad*, and check that the START signal appears.
4. Note the operate value and compare it with the set value.
5. Increase the frequency to rated operating conditions, and zero rate-of-change.
6. Check that the START signal resets.
7. Instantaneously decrease the frequency of the applied voltage to a value about 20% lower than the nominal value.
8. Measure the time delay for the TRIP signal, and compare it with the set value.

Extended testing

1. The test above can be repeated to check a positive setting of *StartFreqGrad*.
2. The tests above can be repeated to test the RESTORE signal, when the frequency recovers from a low value.

6.6.3.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Frequency/SAPFRC(81,df/dt)/X:SAPFRC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.7 Testing secondary system supervision functions

6.7.1 Current circuit supervision CCSRDIF

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

The Current circuit supervision function CCSRDIF is conveniently tested with the same three-phase test set as used when testing the measuring functions in the IED.

The condition for this procedure is that the setting of I_{MinOp} is lower than the setting of $I_{p>Block}$.

6.7.1.1 Verifying the settings

1. Check the input circuits and the operate value of the I_{MinOp} current level detector by injecting current, one phase at a time.
2. Check the phase current blocking function for all three phases by injection current, one phase at a time. The output signals shall reset with a delay of 1 second when the current exceeds $1.5 \cdot I_{Base}$.
3. Inject a current $0.9 \cdot I_{Base}$ to phase L1 and a current $0.15 \cdot I_{Base}$ to the reference current input IREFSMPL.
4. Decrease slowly the current to the reference current input and check that blocking is obtained when the current is about $0.1 \cdot I_{Base}$.

6.7.1.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Secondary system supervision/CCSRDIF(87,INd)/X:CCSRDIF** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.7.2 Fuse failure supervision SDDRFUF

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SDDRFUF are available on the local HMI under **Main menu/Tests/Function status/Secondary system supervision/SDDRFUF/1:SDDRFUF**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The verification is divided in two main parts. The first part is common to all fuse failure supervision options, and checks that binary inputs and outputs operate as expected according to actual configuration. In the second part the relevant set operate values are measured.

6.7.2.1 Checking that the binary inputs and outputs operate as expected

1. Simulate normal operating conditions with the three-phase currents in phase with their corresponding phase voltages and with all of them equal to their rated values.
2. Connect the nominal dc voltage to the DISCPOS binary input.
 - The signal BLKU should appear with almost no time delay.
 - No signals BLKZ and 3PH should appear on the IED.
 - Only the distance protection function can operate.
 - Undervoltage-dependent functions must not operate.
3. Disconnect the dc voltage from the DISCPOS binary input terminal.
4. Connect the nominal dc voltage to the MCBOP binary input.
 - The BLKU and BLKZ signals should appear without any time delay.
 - All undervoltage-dependent functions must be blocked.
5. Disconnect the dc voltage from the MCBOP binary input terminal.
6. Disconnect one of the phase voltages and observe the logical output signals on the binary outputs of the IED. BLKU and BLKZ signals should simultaneously appear.
BLKU and BLKZ signals should simultaneously appear.
7. After more than 5 seconds disconnect the remaining two-phase voltages and all three currents.
 - There should be no change in the high status of the output signals BLKU and BLKZ.
 - The signal 3PH will appear.
8. Establish normal voltage and current operating conditions simultaneously and observe the corresponding output signals.
They should change to logical 0 as follows:
 - Signal 3PH after about 25ms
 - Signal BLKU after about 50ms
 - Signal BLKZ after about 200ms

6.7.2.2 Measuring the operate value for the negative sequence function

Measure the operate value for the negative sequence function.

1. Simulate normal operating conditions with the three-phase currents in phase with their corresponding phase voltages and with all of them equal to their rated values.
2. Slowly decrease the measured voltage in one phase until the BLKU signal appears.
3. Record the measured voltage and calculate the corresponding negative-sequence voltage according to the equation.
Observe that the voltages in the equation are phasors.

$$3 \cdot \overline{U}_2 = \overline{U}_{L1} + a^2 \cdot \overline{U}_{L2} + a \cdot \overline{U}_{L3}$$

(Equation 13)

Where:

$$\overline{U}_{L1} \quad \overline{U}_{L2} \quad \text{and} \quad \overline{U}_{L3} \quad = \text{the measured phase voltages}$$

$$a = 1 \cdot e^{j \frac{2 \cdot \pi}{3}} = -0,5 + j \frac{\sqrt{3}}{2}$$

4. Compare the result with the set value (consider that the set value $3U_2$ is in percentage of the base voltage U_{Base}) of the negative-sequence operating voltage.

6.7.2.3

Measuring the operate value for the zero-sequence function

Measure the operate value for the zero-sequence function.

1. Simulate normal operating conditions with the three-phase currents in phase with their corresponding phase voltages and with all of them equal to their rated values.
2. Slowly decrease the measured voltage in one phase until the BLKU signal appears.
3. Record the measured voltage and calculate the corresponding zero-sequence voltage according to the equation.
Observe that the voltages in the equation are phasors.

$$3 \cdot \overline{U}_0 = \overline{U}_{L1} + \overline{U}_{L2} + \overline{U}_{L3}$$

(Equation 16)

Where:

$$\overline{U}_{L1}, \overline{U}_{L2} \text{ and } \overline{U}_{L3} \quad = \text{the measured phase voltages.}$$

4. Compare the result with the set value (consider that the set value $3U_0$ is in percentage of the base voltage of the zero-sequence operating voltage).

6.7.2.4 Checking the operation of the du/dt and di/dt based function

Check the operation of the du/dt and di/dt based function.

1. Simulate normal operating conditions with the three-phase currents in phase with their corresponding phase voltages and with all of them equal to their rated values.
2. Connect the nominal dc voltage to the CBCLOSED binary input.
3. Change the voltages and currents in all three phases simultaneously.
The voltage change should be greater than set $DU>$ and the current change should be less than the set $DI<$.
 - The BLKU and BLKZ signals appear without any time delay. The BLKZ signal will be activated, only if the internal deadline detection is not activated at the same time.
 - 3PH should appear after 5 seconds, if the remaining voltage levels are lower than the set $UDLD<$ of the DLD function.
4. Apply normal conditions as in step 3.
The BLKU, BLKZ and 3PH signals should reset, if activated, see step 1 and 3.
5. Change the voltages and currents in all three phases simultaneously.
The voltage change should be greater than set $DU>$ and the current change should be greater than the set $DI<$.
The BLKU, BLKZ and 3PH signals should not appear.
6. Disconnect the dc voltage to the CBCLOSED binary input.
7. Apply normal conditions as in step 1.
8. Repeat step 3.
9. Connect the nominal voltages in all three phases and feed a current below the operate level in all three phases.
10. Keep the current constant. Disconnect the voltage in all three phases simultaneously.
The BLKU, BLKZ and 3PH signals should not appear.

6.7.2.5 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Secondary system supervision/SDDRFUF/1:SDDRFUF** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.8 Testing control functions



The save of persistent parts of function block states/values to persistent memory uses an exponential back-off algorithm, which rapidly increases the time between save operations when there are

frequent changes in such states/values. This means, that when e.g. a pulse counter is exercised periodically, the time between saves of its counter value to persistent memory will occur more and more seldom until there is one hour between save operations. If the IED is restarted by turning auxiliary power off and back on, then up to one hour of counter value increments will be lost. This back-off algorithm is necessary to avoid wearing out the FLASH memory that is used to save the states/values. When changing parameter values using LHMI or PST, there is a save of this type of memory before rebooting, so in this case normally no information is lost. When there are long periods of inactivity, the time between save operations decreases slowly again, until it reaches the minimum time between saves, which is approximately once per second. After commissioning is complete, the possible loss of information should not be an issue, since in normal operation an IED is switched off extremely seldom. But during certain tests, if the IED is rebooted, then data of this kind will sometimes revert back to old values.

6.8.1 Synchrocheck, energizing check, and synchronizing SESRSYN

This section contains instructions on how to test the synchrocheck and energizing check for single CB.

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SESRSYN are available on the local HMI under **Main menu/Tests/Function status/Control/SESRSYN(25,SYNC)/X:SESRSYN**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

At commissioning and periodical checks, the functions shall be tested with the used settings. To test a specific function, it might be necessary to change some setting parameters, for example:

- *AutoEnerg = On/Off/DLLB/DBLL/Both*
- *ManEnerg = Off*
- *Operation = Off/On*
- Activation of the voltage selection function if applicable

The tests explained in the test procedures below describe the settings, which can be used as references during testing before the final settings are specified. After testing, restore the equipment to the normal or desired settings.

A secondary injection test set with the possibility to individually alter the phase angle and amplitude of the voltage is needed. The test set must also be able to generate different frequencies on different outputs.



The description below applies for a system with a nominal frequency of 50 Hz but can be directly transferred to 60 Hz. SESRSYN can be set to use different phases, phase to earth or phase to phase. Use the set voltages instead of what is indicated below.

Figure 19 shows the general test connection principle, which can be used during testing. This description describes the test of the version intended for one bay.

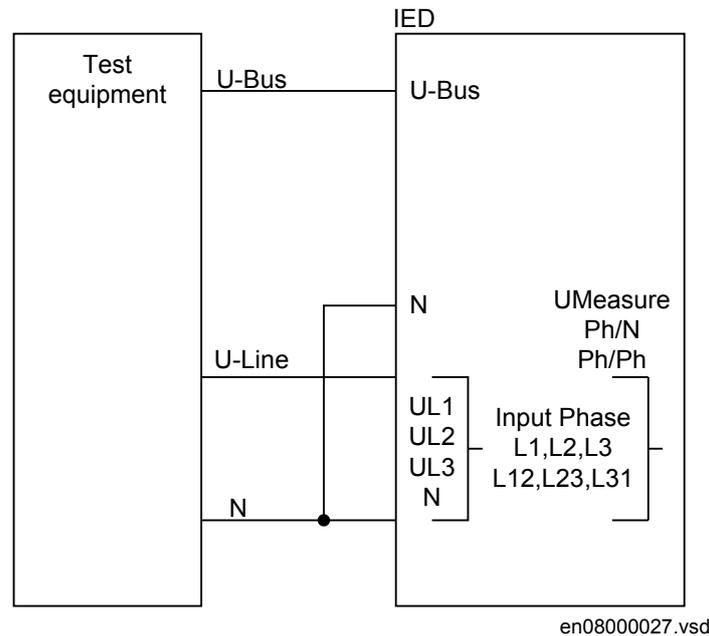


Figure 19: General test connection with three-phase voltage connected to the line side

6.8.1.1

Testing the synchronizing function

This section is applicable only if the synchronizing function is included.

The voltage inputs used are:

| | |
|--------|---|
| U-Line | UL1, UL2 or UL3 voltage inputs on the IED |
| U-Bus | Bus voltage input on the IED |

Testing the frequency difference

The frequency difference is in the example set at 0.20 Hz on the local HMI, and the test should verify that operation is achieved when the *FreqDiffMax* frequency difference is lower than 0.20 Hz. The test procedure below will depend on the settings used.

1. Apply voltages
 - 1.1. U-Line = 100% *UBase* and f-line = 50.0 Hz
 - 1.2. U-Bus = 100% *UBase* and f-bus = 50.2 Hz
2. Check that a closing pulse is submitted and at closing angle less than 2 degrees from phase equality. Modern test sets will evaluate this automatically.
3. Repeat with
 - 3.1. U-Bus = 100% *UBase* and f-bus = 50.25 Hz
 - 3.2. Verify that the function does not operate when frequency difference is above limit.
4. Repeat with different frequency differences for example, 100 mHz with f-bus nominal and line leading and for example 20 mHz (or just above *FreqDiffMin*) to verify that independent of frequency difference the closing pulse occurs within 2 degrees.
5. Verify that the closing command is not issued when the frequency difference is less than the set value *FreqDiffMin*.

6.8.1.2

Testing the synchrocheck check

During the test of SESRSYN for a single bay arrangement, these voltage inputs are used:

| | |
|--------|--|
| U-Line | UL1, UL2 or UL3 voltage input on the IED |
| U-Bus | Bus voltage input on the IED |

Testing the voltage difference

Set the voltage difference at 15% *UBase* on the local HMI, and the test should check that operation is achieved when the voltage difference *UDiffSC* is lower than 15% *UBase*.

The settings used in the test shall be final settings. The test shall be adapted to site setting values instead of values in the example below.

Test with no voltage difference between the inputs.

Test with a voltage difference higher than the set *UDiffSC*


1. Apply voltages U-Line (for example) = 80% U_{Base} and U-Bus = 80% U_{Base} .
2. Check that the AUTOSYOK and MANSYOK outputs are activated.
3. The test can be repeated with different voltage values to verify that the function operates within the set $UDiffSC$. Check with both U-Line and U-Bus respectively lower than the other.
4. Increase the U-Bus to 110% U_{Base} , and the U-Line = 90% U_{Base} and also the opposite condition.
5. Check that the two outputs for manual and auto synchronism are not activated.

Testing the phase angle difference

The phase angle differences $PhaseDiffM$ and $PhaseDiffA$ respectively are set to their final settings and the test should verify that operation is achieved when the phase angle difference is lower than this value both leading and lagging.

Test with no voltage difference

1. Apply voltages U-Line (for example) = 100% U_{Base} and U-Bus = 100% U_{Base} , with a phase difference equal to 0 degrees and a frequency difference lower than $FreqDiffA$ and $FreqDiffM$
2. Check that the AUTOSYOK and MANSYOK outputs are activated.
The test can be repeated with other phase difference values to verify that the function operates for values lower than the set ones, $PhaseDiffM$ and $PhaseDiffA$. By changing the phase angle on the voltage connected to U-Bus, between $\pm d\phi$ degrees, the user can check that the two outputs are activated for a phase difference lower than the set value. It should not operate for other values. See figure 20.

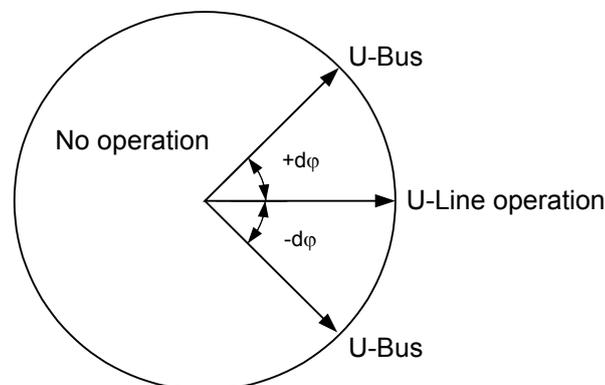

en05000551.vsd

Figure 20: Test of phase difference.

3. Change the phase angle between $+d\phi$ and $-d\phi$ and verify that the two outputs are activated for phase differences between these values but not for phase differences outside, see figure 20.

Testing the frequency difference

The frequency difference test should verify that operation is achieved when the *FreqDiffA* and *FreqDiffM* frequency difference is lower than the set value for manual and auto synchronizing check, *FreqDiffA* and *FreqDiffM* respectively and that operation is blocked when the frequency difference is bigger.

Test with frequency difference = 0 mHz

Test with a frequency difference outside the set limits for manual and auto synchronizing check respectively.

1. Apply voltages U-Line equal to 100% *UBase* and U-Bus equal to 100% *UBase*, with a frequency difference equal to 0 mHz and a phase difference lower than the set value.
2. Check that the AUTOSYOK and MANSYOK outputs are activated.
3. Apply voltage to the U-Line equal to 100% *UBase* with a frequency equal to 50 Hz and voltage U-Bus equal to 100% *UBase*, with a frequency outside the set limit.
4. Check that the two outputs are not activated. The test can be repeated with different frequency values to verify that the function operates for values lower than the set ones. If a modern test set is used, the frequency can be changed continuously.

Testing the reference voltage

1. Use the same basic test connection as in figure [19](#).
The voltage difference between the voltage connected to U-Bus and U-Line should be 0%, so that the AUTOSYOK and MANSYOK outputs are activated first.
2. Change the U-Line voltage connection to U-Line2 without changing the setting on the local HMI. Check that the two outputs are not activated.

6.8.1.3

Testing the energizing check

During the test of the energizing check function for a single bay arrangement, these voltage inputs are used:

| | |
|--------|--|
| U-Line | UL1, UL2 or UL3 voltage input on the IED |
| U-Bus | Bus voltage input on the IED |

General

When testing the energizing check function for the applicable bus, arrangement shall be done for the energizing check functions. The voltage is selected by activation of different inputs in the voltage selection logic.

The test shall be performed according to the settings for the station. Test the alternatives below that are applicable.

Testing the dead line live bus (DLLB)

The test should verify that the energizing check function operates for a low voltage on the U-Line and for a high voltage on the U-Bus. This corresponds to the energizing of a dead line to a live bus.

1. Apply a single-phase voltage 100% *UBase* to the U-Bus, and a single-phase voltage 30% *UBase* to the U-Line.
2. Check that the AUTOENOK and MANENOK outputs are activated.
3. Increase the U-Line to 60% *UBase* and U-Bus to be equal to 100% *UBase*. The outputs should not be activated.
4. The test can be repeated with different values on the U-Bus and the U-Line.

Testing the dead bus live line (DBLL)

The test should verify that the energizing check function operates for a low voltage on the U-Bus and for a high voltage on the U-Line. This corresponds to an energizing of a dead bus to a live line.

1. Verify the local HMI settings *AutoEnerg* or *ManEnerg* to be *DBLL*.
2. Apply a single-phase voltage of 30% *UBase* to the U-Bus and a single-phase voltage of 100% *UBase* to the U-Line.
3. Check that the AUTOENOK and MANENOK outputs are activated.
4. Decrease the U-Line to 60% *UBase* and keep the U-Bus equal to 30% *UBase*. The outputs should not be activated.
5. The test can be repeated with different values on the U-Bus and the U-Line.

Testing both directions (DLLB or DBLL)

1. Verify the local HMI settings *AutoEnerg* or *ManEnerg* to be *Both*.
2. Apply a single-phase voltage of 30% *UBase* to the U-Line and a single-phase voltage of 100% *UBase* to the U-Bus.
3. Check that the AUTOENOK and MANENOK outputs are activated.
4. Change the connection so that the U-Line is equal to 100% *UBase* and the U-Bus is equal to 30% *UBase*. The outputs should still be activated.
5. The test can be repeated with different values on the U-Bus and the U-Line.

Testing the dead bus dead line (DBDL)

The test should verify that the energizing check function operates for a low voltage on both the U-Bus and the U-Line, that is, closing of the breaker in a non-energized system. Test is valid only when this function is used.

1. Verify the local HMI setting *AutoEnerg* to be *Off* and *ManEnerg* to be *DBLL*.
2. Set the parameter *ManEnergDBDL* to *On*.
3. Apply a single-phase voltage of 30% *UBase* to the U-Bus and a single-phase voltage of 30% *UBase* to the U-Line.

4. Check that the MANENOK output is activated.
5. Increase the U-Bus to 80% *UBase* and keep the U-Line equal to 30% *UBase*. The outputs should not be activated.
6. Repeat the test with *ManEnerg* set to *DLLB* with different values on the U-Bus and the U-Line voltage.

6.8.1.4 Testing the voltage selection

Testing the voltage selection for single CB arrangements

This test should verify that the correct voltage is selected for the measurement in the energizing check function used in a double-bus arrangement. Apply a single-phase voltage of 100% *UBase* to the U-Line and a single-phase voltage of 100% *UBase* to the U-Bus.

If the UB1/2OK inputs for the fuse failure are used, they must be activated, during tests below. Also verify that deactivation prevents operation and gives an alarm.

1. Connect the signals above to binary inputs and binary outputs.
2. Connect the voltage inputs to the analog inputs used for each bus or line depending of the type of busbar arrangement and verify that correct output signals are generated.

6.8.1.5 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Control/SESRSYN(25,SYNC)/X:SESRSYN** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.8.2 Autorecloser SMBRREC

Verification of the Autorecloser function SMBRREC can be considered to consist of two parts.

- One part to verify the internal logic and timing of the function
- One part to verify its interaction with the protection system

This section deals with verification of SMBRREC itself. However, it is practical to start SMBRREC by activating a protection function, for example, by secondary injection tests.

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SMBRREC are available on the local HMI under **Main menu/Tests/Function status/Control/SMBRREC(79,0->1)/**

X:SMBRREC. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The purpose of verification before commissioning is to check that entered selections, setting parameters and configuration render the intended result. The function is flexible with many options and facilities. At commissioning only the selections and settings intended for use are verified. If one chooses to reduce some time settings in order to speed up verification, be careful to set the parameters at intended operational values at the end of the verification procedure. One such parameter is the *tReclaim* time and could result in a long delay of reclosing shots, for example, shot 2 and later ones.

The verification test is performed together with protection and trip functions. Figure 21 illustrates a suggested testing arrangement, where the circuit-breaker (CB) is simulated by an external bi-stable relay (BR), for example a relay type RXMVB2 or RXMD or Breaker Simulator of ABB. The following manual switches are used:

- Switch or push-button to close (SC)
- Switch or push-button to trip (ST)
- Switch for CB ready condition (SRY)

If no bi-stable relay or breaker simulator is available, replace it with two self-reset auxiliary relays and use a self-holding connection.

Use a secondary injection IED test set to operate the protection function. The test set shall be switched off when a trip signal is given or when the BR comes to open position to simulate real conditions.

The CB simulation can be made more elaborate, including simulation of the operating gear condition, CBREADY of either the type ready for a Close-Open (CO) cycle, or the type ready for an Open-Close -Open (OCO) cycle.

The CB condition CBREADY of a type, CO, shall be high (true) until a closing operation is performed. It then goes low (false) for a recharging time of about 5 - 10s. After that it is high again.

A CB condition CBREADY of a type, OCO shall be high (true) before and during tripping (Start reclosing). During tripping it goes low for a recharging time, for example, 10s. It may thus be low at the instant of reclosing. After each Open or Close operation it may need a recharging period before it goes high again.

In the example of CB simulation arrangement, the CBREADY condition is simulated by a manual switch, SRY.

Information and material for the verification:

- Protection or control unit, IED, configured and with settings entered.
- Configuration diagram for the IED
- Terminal diagram for the IED, or plant circuit diagram including the IED
- Technical reference manual for the IED

- IED test set for secondary injection
- Means to indicate, measure and record operation and times, for example an event recording facility
- A bi-stable relay (BR) or two auxiliary relays to simulate a CB
- Two push-buttons (SC, ST) to operate the BR and a change-over switch (SRY) to simulate CBREADY
- Possibly a switch simulation the synchronizing check SESRSYN condition

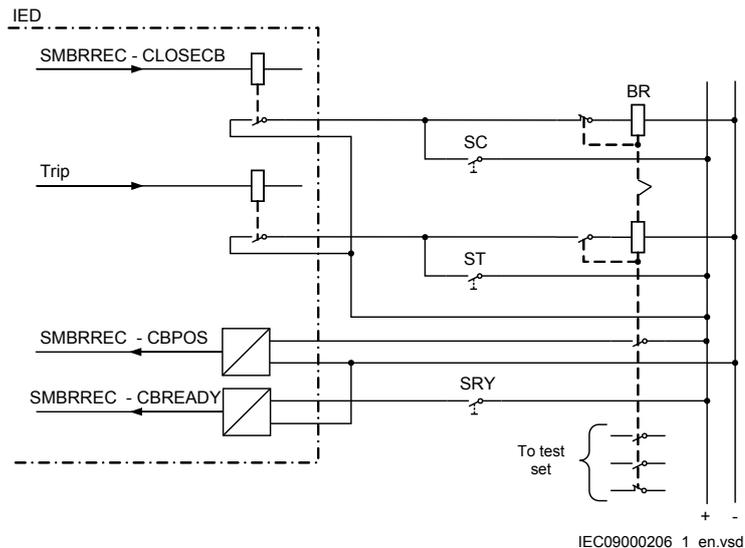


Figure 21: Simulating the CB operation by a bi-stable relay/breaker simulator and manual switches

6.8.2.1

Preparation of the verification

1. Check the function settings on the local HMI under **Main menu/Settings/IED Settings/Control/SMBRREC(79,0->1)/1:SMBRREC**
If any timer settings are reduced to speed up or facilitate the testing, they shall be set to normal after testing. A temporary label on the IED can be a reminder to restore normal settings after which a verification test should be performed.
2. Decide if a synchronizing check function SESRSYN shall be included in the test.
If SESRSYN as an internal function or external device is not operated by the injection, it may be connected as a permanent high signal or controlled by a switch.
3. Read and make notes of the reclosing operation counters on the local HMI under **Main menu/Tests/Function status/Control/SMBRREC(79,0->1)/1:SMBRREC**
Possibly reset the counters to *Zero*. Counters are reset in the reset menu.
4. Make arrangements for the simulation of the CB, for example as in figure 21.
5. Make arrangements for indication, recording and time measurements.

The signals for CBPOS, START, CLOSECB, READY and other relevant signals should preferably be arranged for event recording with time tagging. If that is not possible, other means of time measurement and recording should be arranged.

6.8.2.2 Switching the autorecloser function to *On* and *Off*

1. Set the *Operation* setting to *Off* and check the state.
2. Set the *Operation* setting to *On* and check the state, including SETON and READY.
The CB should be closed and ready.
3. If external control Off/On is connected, check that it works.
Set *Operation* to *ExternalCtrl* and use that control to switch On and Off, and check the state of the function.

6.8.2.3 Verifying the autorecloser function SMBRREC

Select the test cases to be run according to what is applicable to the particular application. It can be, for example, three-phase single-shot reclosing or two-shot reclosing. Below, a case with three-phase single-shot reclosing is described.

1. Set *Operation* = *On*.
2. If the autorecloser function SMBRREC is not to be operated, ensure that the SMBRREC input is activated. If SMBRREC is to be included, ensure that it is supplied with the appropriate AC quantities.
3. Simulate CB closed position by closing switch SC to make the BR relay start.
4. Simulate CBREADY by closing the switch SRY, and leave it closed.
5. Inject AC quantities to give a trip to the BR and to the START input.
Observe and preferably record the operation. The BR relay shall trip and reclose (start). After reclosing, the SRY switch can be opened for about 5s and then closed again.
The autoreclosing open time and the sequence should be checked, for example in the event recording. Check also the operation indications (disturbance report) and the operation counters on the local HMI under **Main menu/Tests/Function status/SMBRREC(79,0->1)/1:SMBRREC**
Should the operation not be as expected, this should be investigated. It could be caused by an inappropriate setting or missing condition such as CBREADY (or SMBRREC at three-phase reclosing).
6. Repeat the sequence by simulating a permanent fault.
Shortly after the reclosing shot, a new fault is applied. If a single-shot reclosing program is selected, there shall be one reclosing operation and then blocking of SMBRREC for the set Reclaim time.
Before a new reclosing sequence can be run, the CBREADY and CBPOS (CB closed) must be set manually.

6.8.2.4 Checking the reclosing conditions

When checking the influence of a releasing condition it is suggested to first run a sequence with the condition fulfilled. When the condition signal is removed, and a new sequence is run, it indicates that the result was due to the changed condition. In case of a blocking signal the procedure should be similar. Start without the blocking or inhibit signal, and then run a sequence with the blocking or inhibit signal added.

Checking the influence of the INHIBIT signal

1. Check that the autorecloser function SMBRREC is operative, for example, by making a reclosing shot without the INHIBIT signal.
2. Apply a fault and thereby a START signal. At the same time, or during the open time, apply a signal to the input INHIBIT.
3. Check that the reclosing sequence is interrupted and no reclosing takes place.

Check closing onto a fault

1. Check that the autorecloser function SMBRREC is operative, for example by making a reclosing shot.
Keep the CBREADY signal high.
2. Set the breaker simulating relay BR in Open position.
3. Close the BR relay and apply immediately a fault and thereby a START signal.
4. Check that no reclosing takes place.

Checking the influence of CB not ready for reclosing

1. Check that the autorecloser function SMBRREC is operative, for example by making a reclosing shot.
Keep the CB simulator BR closed. Remove the CBREADY signal by opening SRY.
2. Apply a fault and thereby a START signal.
3. Check that no reclosing takes place.

Checking the influence of synchronizing check (at three-phase reclosing)

1. Check that the autorecloser function SMBRREC is operative, for example, by making a three-phase reclosing shot with the synchronizing check condition.
Remove the SMBRREC signal.
2. Apply a fault causing three-phase trip and thereby a START signal.
3. Wait for the t_{Sync} time out limit.
Check that no reclosing is made.

Restoring equipment

After the tests, restore the equipment to normal or desired state. Check the following items in particular:

1. Check the operation counters.
Reset the counters to zero, if that is the user's preference. The counter reset function is found on the local HMI under **Main menu/Clear/Clear counters/SMBRREC(79,0->1)**
2. Restore settings that may have been modified for the tests back to normal.
3. Disconnect the test switch, CB simulating arrangement and test circuits.
Reconnect any links or connection terminals, which may have been opened for the tests.
4. Reset indications, alarms and disturbance recordings.
Clearing of the disturbance report must be done via the Disturbance Handling in PCM600.

6.8.2.5

Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Control/SMBRREC(79,0->1)/X:SMBRREC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.8.3

Autorecloser STBRREC

Verification of the automatic reclosing function can be considered to consist of two parts; one part to verify the internal logic and timing of the function and one part to verify its interaction with the protection system. This section deals with verification of the auto-reclosing function itself. However, it is practical to start start the autoreclosing function by activating a protection function, for example, by secondary injection tests.

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for STBRREC are available on the local HMI under **Main menu/Tests/Function status/Control/STBRREC(79,0->1)/1:STBRREC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The purpose of verification before commissioning is to check that entered selections, setting parameters and configuration render the intended result. The function is flexible with many options and facilities. At commissioning only the selections and settings intended for use are verified. If one chooses to reduce some time settings in order to speed up verification, be careful to set the parameters at intended operational values at the end of the verification procedure. One such

parameter is the reclaim Reclaim time and could result in a long delay of reclosing shots, for example, shot 2 and later ones.

The verification test is performed together with protection and trip functions. Figure 22 illustrates a suggested testing arrangement, where the circuit-breaker (CB) is simulated by an external bi-stable relay (BR), for example a relay type RXMVB2 or RXMD or Breaker Simulator of ABB.

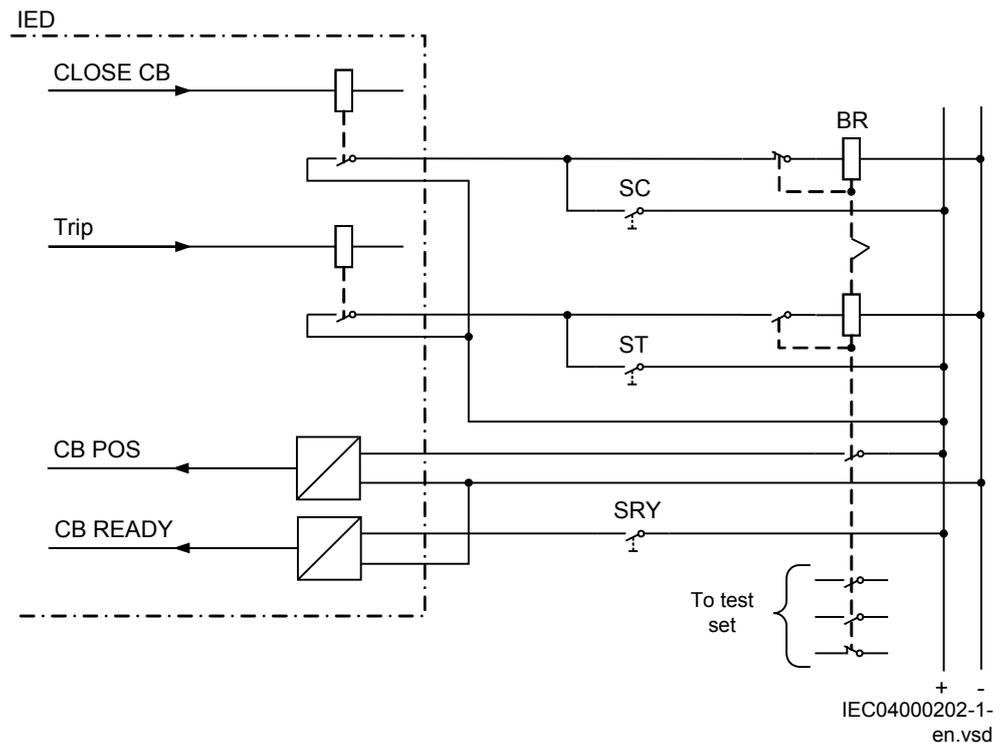


Figure 22: Simulating the CB operation by a bi-stable relay/breaker simulator and manual switches

The following manual switches are used:

- Switch or push-button to close (SC)
- Switch or push-button to trip (ST)
- Switch for CB ready condition (SRY)

If no bi-stable relay or breaker simulator is available, replace it with two self-reset auxiliary relays and use a self-holding connection.

Use a secondary injection IED test set to operate the protection function. The test set shall be switched off when a trip signal is given or when the BR comes to open position to simulate real conditions.

The CB simulation can be made more elaborate, including simulation of the operating gear condition, CBREADY of either the type ready for a Close-Open (CO) cycle, or the type ready for an Open-Close -Open (OCO) cycle.

The CB condition CBREADY of a type, CO, shall be high (true) until a closing operation is performed. It then goes low (false) for a recharging time of about 5 -10 s. After that it is high again.

A CB condition CBREADY of a type, OCO shall be high (true) before and during tripping (Start start reclosing). During tripping it goes low for a recharging time, for example, 10 s. It may thus be low at the instant of reclosing. After each Open or Close operation it may need a recharging period before it goes high again.

In the example of CB simulation arrangement, the CBREADY condition is simulated by a manual switch, SRY.

Information and material for the verification:

- Protection or control unit, Intelligent electronic device (IED), configured and with settings entered
- Configuration diagram for the IED
- Terminal diagram for the IED, or plant circuit diagram including the IED
- Technical reference manual for the IED
- IED test set for secondary injection
- Means to indicate, measure and record operation and times, e.g. an event recording facility
- A bi-stable relay (BR) or two auxiliary relays to simulate a CB
- Two push-buttons (SC, ST) to operate the BR and a change-over switch (SRY) to simulate CBREADY
- Possibly a switch simulation the Synchrocheck SESRSYN condition.

6.8.3.1

Preparation of the verification

1. Check the function settings. In the HMI tree they are found under **Main menu/Settings/IED Settings/Control/STBRREC(79,0->1)/1:STBRREC**
If any timer settings are reduced to speed-up or facilitate the testing, they shall be set to normal after testing. A temporary label on the unit can be a reminder to restore normal settings after which a verification test should be performed.
2. Decide if a synchronization check (SYNC) shall be included in the test.
If SYNC as an internal function or external device is not operated by the injection, it may be connected as a permanent high signal or controlled by a switch.
3. Read and make notes of the reclosing operation counters. Local HMI tree **Main menu/Tests/Function status/Control/STBRREC(79,0->1)/1:STBRREC**

Possibly reset the counters to zero. Counters are reset in the RESET menu. Make arrangements for the simulation of the CB, for example, as in figure 13.

4. Make arrangements for indication, recording and time measurements. The signals for CBPOS, START, TR3P, CLOSECB, READY and other relevant signals should preferably be arranged for event recording with time tagging. If that is not possible, other means of time measurement and recording should be arranged.

6.8.3.2 Switching the auto-reclosing function *On* and *Off*

1. Set the *Operation* setting to *Off* and check the state.
2. Set the *Operation* setting to *On* and check the state, including SETON and READY.
The CB should be closed and ready.
3. If external control *On/Off* is connected, check that it works.
4. Set *Operation* to *ExternalCtrl*, and use that control to switch *On* and *Off*, and check the state of the function.

6.8.3.3 Verifying the auto-reclosing function

Select the test cases to be run according to what is applicable to the particular application. It can be, for example, three-phase single-shot reclosing or two-shot reclosing. Below a case with three-phase single-shot reclosing is described.

1. Set *Operation* = *On*.
2. If SYNC is not to be operated, ensure that the SYNC input is activated. If the SESRSYN function is to be included, ensure that SESRSYN is supplied with the appropriate AC quantities.
3. Simulate CB closed position by closing switch SC to make the BR relay start.
4. Simulate CBREADY by closing the switch SRY, and leave it closed.
5. Inject AC quantities to give a trip to the BR and to the START input. Observe and preferably record the operation. The BR relay shall trip and reclose (start). After reclosing, the SRY switch can be opened for about 5 s and then closed again.
The auto-reclosing open time and the sequence should be checked, for example in the event recording. Check also the operation indications (disturbance report) and the operation counters. **Main menu/Tests/Function status/STBRREC (79, 0->1)/1:STBRREC**
Should the operation not be as expected, this should be investigated. It could be caused by an inappropriate setting or missing condition such as CBREADY (or SYNC at three-phase reclosing).
6. Repeat the sequence by simulating a permanent fault. Shortly after the reclosing shot a new fault is applied. If a single-shot reclosing program is selected, there shall be one reclosing operation and then blocking of the auto-reclosing function for the set Reclaim time. Before a new reclosing sequence can be run, the CBREADY and CBPOS (CB closed) must be set manually.

6.8.3.4 Checking the reclosing conditions

When checking the influence of a releasing condition it is suggested to first run a sequence with the condition fulfilled. When the condition signal is removed, and a new sequence is run, it indicates that the result was due to the changed condition. In case of a blocking signal the procedure should be similar. Start without the blocking or inhibit signal, and then run a sequence with the blocking or inhibit signal added.

6.8.3.5 Checking the influence of the INHIBIT signal

1. Check that the auto-reclosing function is operative, for example, by making a reclosing shot without the INHIBIT signal.
2. Apply a fault and thereby a START signal. At the same time, or during the open time, apply a signal to the input INHIBIT.
3. Check that the reclosing sequence is interrupted and no reclosing takes place.

6.8.3.6 Check closing onto a fault

1. Check that the closing function is operative, for example by making a reclosing shot.
Keep the CBREADY signal high.
2. Set the breaker simulating relay BR in Open position.
3. Close the BR relay and apply immediately a fault and thereby a START signal.
4. Check that no reclosing takes place.

6.8.3.7 Checking the influence of CB not ready for reclosing

1. Check that the auto-reclosing function is operative, for example by making a reclosing shot.
Keep the CB simulator BR closed. Remove the CBREADY signal by opening SRY.
2. Apply a fault and thereby a START signal.
3. Check that no reclosing takes place.

6.8.3.8 Checking the influence of synchrocheck (at three-phase reclosing)

1. Check that the auto-reclosing function is operative, for example, by making a three-phase reclosing shot with the synchrocheck condition.
Remove the SYNC signal.
2. Apply a fault causing three-phase trip and thereby a START and a TR3P signal.
3. Wait for the t_{Sync} time out limit.

Check that no reclosing is made.

6.8.3.9 Restoring equipment

After the tests, restore the equipment to normal or desired state. Check the following items in particular.

1. Check the operation counters.
Reset the counters to zero, if that is the user's preference. The counter reset function is found in the HMI under **Main menu/Clear/Clear counters/STBRREC (79, 0->1)**
2. Restore settings that may have been modified for the tests back to normal.
3. Disconnect the test switch, CB simulating arrangement and test circuits.
Reconnect any links or connection terminals, which may have been opened for the tests.
4. Reset indications, alarms and disturbance recordings.
Clearing of the disturbance report must be done via PCM600 using the Disturbance Handling tool.

6.8.3.10 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Control/STBRREC(79,0->1)/1:STBRREC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.9 Testing scheme communication functions

6.9.1 Scheme communication logic for distance or overcurrent protection ZCPSCH

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ZCPSCH are available on the local HMI under **Main menu/Tests/Function status/Scheme communication/ZCPSCH(85)/1:ZCPSCH**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

Check the scheme logic during the secondary injection test of the impedance or overcurrent protection functions.

Activating of the different zones verifies that the CS signal is issued from the intended zones. The CS signal from the independent tripping zone must have a *tSendMin* minimum time.

Check the tripping function by activating the CR and CRG inputs with the overreaching zone used to achieve the CACC signal.

It is sufficient to activate the zones with only one type of fault with the secondary injection.

6.9.1.1 Testing permissive underreaching

1. Activate the receive (CR) signal in the IED.
2. Apply healthy normal load conditions to the IED for at least two seconds.
3. Apply a fault condition within the permissive zone.
4. Check that correct trip outputs, external signals, and indications are obtained for the actual type of fault generated.
5. Check that other zones operate according to their zone timers and that the send (CS) signal is obtained only for the zone configured to generate the actual signal.
6. Deactivate the receive (CR) signal in the IED.
7. Check that the trip time complies with the zone timers and that correct trip outputs, external signals, and indications are obtained for the actual type of fault generated.

6.9.1.2 Testing permissive overreaching

1. Activate the receive (CR) signal in the IED.
2. Apply healthy normal load conditions to the IED for at least two seconds.
3. Apply a fault condition within the permissive zone.
4. Check that correct trip outputs, external signals, and indication are obtained for the actual type of fault generated.
5. Check that the other zones operate according to their zone timer and that the send (CS) signal is obtained only for the zones that are configured to give the actual signal. Also the zone connected to CS underreach is giving CS in this mode.
6. Deactivate the IED receive (CR) signal.
7. Apply healthy normal load conditions to the IED for at least two seconds.
8. Apply a fault condition within the permissive zone.
9. Check that trip time complies with the zone timers and that correct trip outputs, external signals, and indications are obtained for the actual type of fault generated.

6.9.1.3 Testing blocking scheme

1. Deactivate the receive (CR) signal of the IED.
2. Apply healthy normal load conditions to the IED for at least two seconds.
3. Apply a fault condition within the forward directed zone used for scheme communication tripping.
4. Check that correct trip outputs and external signals are obtained for the type of fault generated and that the operate time complies with the t_{Coord} timer (plus relay measuring time).
5. Check that the other zones operate according to their zone times and that a send (CS) signal is only obtained for the reverse zone.
6. Activate the IED receive (CR) signal.
7. Apply a fault condition in the forward directed zone used for scheme communication tripping.
8. Check that the no trip from scheme communication occurs.
9. Check that the trip time from the forward directed zone used for scheme communication tripping complies with the zone timer and that correct trip outputs, external signals, and indications are obtained for the actual type of fault generated.

6.9.1.4 Checking of unblocking logic

Check the unblocking function (if the function is required) when checking the communication scheme.

Command function with continuous unblocking (*Unblock = 1*) Procedure

1. Activate the guard input signal (CRG) of the IED.
2. Using the scheme selected, check that a signal accelerated trip (TRIP) is obtained when the guard signal is deactivated.

6.9.1.5 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Scheme communication/ZCPSCH(85)/1:ZCPSCH** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.9.2 Current reversal and weak-end infeed logic for distance protection ZCRWPSCH

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ZCRWPSCH are available on the local HMI under **Main menu/Tests/Function status/Scheme communication/ZCRWPSCH(85)/1:ZCRWPSCH**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The current reversal logic and the weak-end infeed functions are tested during the secondary-injection test of the impedance or overcurrent protection zones together with the scheme communication logic for the distance protection function ZCPSCH.

6.9.2.1

Current reversal logic

It is possible to check the delay of the CS send signal with $tDelayRev$ by changing from a reverse to a forward fault.

By continuously activating the CR input and changing from a reverse to a forward fault, the delay $tDelayRev$ can be checked.

Checking of current reversal



The reverse zone timer must not operate before the forward zone fault is applied. The user might need to increase the reverse zone timer setting during testing of current reversal.



The forward zone timer must be set longer than the $tDelayRev$ setting.

1. Activate the receive (CRL) signal.
2. Set the healthy condition to an impedance at 50% of the reach of the reverse zone connected to IRVL.
3. After the start condition is obtained for reverse zone, apply a fault at 50% of the reach of the forward zone connected to WEIBLK2.
4. Check that correct trip outputs and external signals are obtained for the type of fault generated.

The operation time should be about the $tDelayRev$ setting longer than the carrier accelerated trip (TRIP) previously recorded for permissive scheme communication.

5. Restore the forward and reverse zone timer to its original setting.

6.9.2.2

Weak-end infeed logic at permissive schemes

1. Check the blocking of the echo with the injection of a CRL signal >40ms after a reverse fault is applied.
2. Measure the duration of the echoed CS signal by applying a CRL receive signal.
3. Check the trip functions and the voltage level for trip by reducing a phase voltage and applying a CRL receive signal.

6.9.2.3 Testing conditions

Only one type of fault is sufficient, with the current reversal and weak-end infeed logic for distance protection function ZCRWPSCH. Apply three faults (one in each phase). For phase L1-N fault, set these parameters:

Table 10: Phase L1-N parameter values

| Phase | I (Amps) | Phase-angle (Deg) | V (Volts) | Phase-angle (Deg) |
|-------|----------|-------------------|----------------------|-------------------|
| L1 | 0 | 0 | Set less than $UPN<$ | 0 |
| L2 | 0 | 240 | 63 | 240 |
| L3 | 0 | 120 | 63 | 120 |

Change all settings cyclically for other faults (L2-N and L3-N).

Weak-end infeed set for echo and trip

1. Apply input signals according table [10](#).
2. Activate the receive (CR) signal.
3. After the IED has operated, turn off the input signals.
4. Check that trip, send signal, and indication are obtained.
(note: a 200mS pulse)
5. Apply input signals according table [10](#).
6. Activate the receive (CR) signal.
7. After the IED has operated turn off the input signals.
8. Check that the send signal is obtained.

6.9.2.4 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Scheme communication/ZCRWPSCH(85)/1:ZCRWPSCH** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.9.3 Current reversal and weak-end infeed logic for distance protection ZCWSPSCH

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ZCWSPSCH are available on the local HMI under **Main menu/Tests/Function status/Scheme communication/ZCWSPSCH(85)/1:ZCWSPSCH**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The current reversal logic and the weak-end infeed functions are tested during the secondary injection test of the impedance or overcurrent protection zones together with the Scheme communication logic for the distance protection function ZCPSCH.

6.9.3.1 Current reversal logic

It is possible to check the delay of the CS send signal with $tDelayRev$ by changing from a reverse to a forward fault.

By continuously activating the CR input and changing from a reverse to a forward fault, the delay $tDelayRev$ can be checked.

Checking of current reversal

The reverse zone timer must not operate before the forward zone fault is applied. The user might need to increase the reverse zone timer setting during testing of current reversal.



The forward zone timer must be set longer than the $tDelayRev$ setting.

1. Activate the receive (CRL) signal.
2. Set the healthy condition to an impedance at 50% of the reach of the reverse zone connected to IRVL.
3. After the start condition is obtained for reverse zone, apply a fault at 50% of the reach of the forward zone connected to WEIBLK2.
4. Check that correct trip outputs and external signals are obtained for the type of fault generated.

The operation time should be about the $tDelayRev$ setting longer than the carrier accelerated trip (TRIP) previously recorded for permissive scheme communication.

5. Restore the forward and reverse zone timer to its original setting.

6.9.3.2 Weak-end infeed logic at permissive schemes

1. Check the blocking of the echo with the injection of a CRL signal >40 ms after a reverse fault is applied.
2. Measure the duration of the echoed CS signal by applying a CRL receive signal.
3. Check the trip functions and the voltage level for trip by reducing a phase voltage and applying a CRL receive signal.

6.9.3.3 Testing conditions

Only one type of fault is sufficient, with the Current reversal and weak-end infeed logic for distance protection function ZCWSPSCH. Apply three faults (one in each phase). For phase *L1-N* fault, set these parameters:

Table 11: Phase L1-N parameter values

| Phase | I (Amps) | Phase-angle (Deg) | V (Volts) | Phase-angle (Deg) |
|-------|----------|-------------------|----------------------------|-------------------|
| L1 | 0 | 0 | Set less than <i>UPN</i> < | 0 |
| L2 | 0 | 240 | 63 | 240 |
| L3 | 0 | 120 | 63 | 120 |

Change all settings cyclically for other faults (*L2-N* and *L3-N*).

Weak-end infeed set for echo and trip.

1. Apply input signals according to [table 11](#).
2. Activate the receive (CR) signal of the terminal.
3. After the relay has operated, turn off the input signals.
4. Check that trip, send signal, and indication are obtained (note: a 200ms pulse).
5. Apply input signals according to [table 11](#).
6. Activate the receive (CR) signal of the terminal.
7. After the relay has operated turn off the input signals.
8. Check that the send signal is obtained.

6.9.3.4 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Scheme communication/ZCWSPSCH(85)/1:ZCWSPSCH** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.9.4 Local acceleration logic ZCLCPLAL

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ZCLCPLAL are available on the local HMI under **Main menu/Tests/Function status/Scheme communication/ZCLCPLAL/1:ZCLCPLAL**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The logic is checked during the secondary injection test of the impedance measuring zones.

6.9.4.1 Verifying the settings

1. Provide the IED with conditions equivalent to normal load for at least two seconds.
2. Deactivate the conditions for accelerated function.
3. Apply a phase-to-earth fault at 100% of line impedance.
4. Check that the fault is tripped with the second zone time delay.
5. Provide the IED with conditions equivalent to normal load for at least two seconds.
6. Activate the condition for accelerated function either by the autorecloser or by the loss-of-load.
7. Apply a phase-to-earth fault at 100% of line impedance.
8. Check that the fault is tripped instantaneously.

6.9.4.2 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Scheme communication/ZCLCPLAL/1:ZCLCPLAL** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.9.5 Scheme communication logic for residual overcurrent protection ECPSCH

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ECPSCH are available on the local HMI under **Main menu/Tests/Function status/Scheme communication/ECPSCH(85)/**

1:ECPSCH. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

Before testing the communication logic for residual overcurrent protection function ECPSCH, the four step residual overcurrent protection function EF4PTOC has to be tested according to the corresponding instruction. Once this is done, continue with the instructions below.

If the current reversal and weak-end infeed logic for earth-fault protection is included, proceed with the testing according to the corresponding instruction after the testing the communication logic for residual overcurrent protection. The current reversal and weak-end-infeed functions shall be tested together with the permissive scheme.

6.9.5.1

Testing the directional comparison logic function

Blocking scheme

1. Inject the polarizing voltage $3U_0$ at 5% of U_{Base} where the current is lagging the voltage by 65° .
2. Inject current (65° lagging the voltage) in one phase at about 110% of the set operating current, and switch the current off with the switch.
3. Switch the fault current on and measure the operating time of the communication logic.
Use the TRIP signal from the configured binary output to stop the timer.
4. Compare the measured time with the set value t_{Coord} .
5. Activate the CR binary input.
6. Check that the CRL output is activated when the CR input is activated.
7. Switch the fault current on (110% of the set operating current) and wait longer than the set value t_{Coord} .



No TRIP signal should appear.

8. Switch the fault current off.
9. Reset the CR binary input.
10. Activate the BLOCK digital input.
11. Switch the fault current on (110% of the set operating current) and wait for a period longer than the set value t_{Coord} .



No TRIP signal should appear.

12. Switch the fault current and the polarizing voltage off.
13. Reset the BLOCK digital input.

Permissive scheme

1. Inject the polarizing voltage $3U_0$, which is 5% of U_{Base} where the current is lagging the voltage by 65° .
2. Inject current (65° lagging the voltage) into one phase at about 110% of the set operating current, and switch the current off with the switch.
3. Switch the fault current on, (110% of the set operating current) and wait longer than the set value t_{Coord} .



No TRIP signal should appear, and the CS binary output should be activated.

4. Switch the fault current off.
5. Activate the CR binary input.
6. Switch the fault current on (110% of the set operating current) and measure the operating time of the ECPSCH logic.
Use the TRIP signal from the configured binary output to stop the timer.
7. Compare the measured time with the setting for t_{Coord} .
8. Activate the BLOCK digital input.
9. Switch the fault current on (110% of the set operating current) and wait for a period longer than the set value t_{Coord} .



No TRIP signal should appear.

10. Switch the fault current and the polarizing voltage off.
11. Reset the CR binary input and the BLOCK digital input.

6.9.5.2

Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Scheme communication/ECPSCH(85)/1:ECPSCH** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.9.6

Current reversal and weak-end infeed logic for residual overcurrent protection ECRWPSCH

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for ECRWPSCH are available on the local HMI under **Main menu/Tests/Function status/Scheme communication/ECRWPSCH(85)/**

1:ECRWPSCH. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

First, test the four step residual overcurrent protection function EF4PTOC and then the current reversal and weak-end infeed logic according to the corresponding instructions. Then continue with the instructions below.

6.9.6.1

Testing the current reversal logic

1. Inject the polarizing voltage $3U_0$ to 5% of U_{Base} and the phase angle between voltage and current to 155° , the current leading the voltage.
2. Inject current (155° leading the voltage) in one phase to about 110% of the set operating current of the four step residual overcurrent protection ($IN > Dir$).
3. Check that the IRVL output is activated after the set time ($t_{PickUpRev}$).
4. Abruptly reverse the current to 65° lagging the voltage, to operate the forward directional element.
5. Check that the IRVL output still is activated after the reversal with a time delay that complies with the setting ($t_{DelayRev}$).
6. Switch off the polarizing voltage and the current.

6.9.6.2

Testing the weak-end infeed logic

If setting $WEI = Echo$

1. Inject the polarizing voltage $3U_0$ to 5% of U_{Base} and the phase angle between voltage and current to 155° , the current leading the voltage.
2. Inject current (155° leading the voltage) in one phase to about 110% of the setting operating current ($IN > Dir$).
3. Activate the CRL binary input.



No ECHO and CS should appear.

4. Abruptly reverse the current to 65° lagging the voltage, to operate the forward directional element.



No ECHO and CS should appear.

5. Switch off the current and check that the ECHO and CS appear on the corresponding binary output or on the local HMI, about 200ms after resetting the directional element.
6. Switch off the CRL binary input.

7. Activate the BLOCK binary input.
8. Activate the CRL binary input.



No ECHO and CS should appear.

9. Switch off the polarizing voltage and reset the BLOCK and CRL binary input.

If setting *WEI = Echo & Trip*

1. Inject the polarizing voltage $3U_0$ to about 90% of the setting ($3U_0$) operating voltage.
2. Activate the CRL binary input.



No ECHO, CS and TRWEI outputs should appear.

3. Increase the injected voltage to about 110% of the setting ($3U_0$) operating voltage.
4. Activate the CRL binary input.
5. Check that the ECHO, CS and TRWEI appear on the corresponding binary output or on the local HMI.
6. Reset the CRL binary input.
7. Activate the BLOCK binary input.
8. Activate the CRL binary input.



No ECHO, CS and TRWEI outputs should appear.

9. Reset the CRL and BLOCK binary input.
10. Inject the polarizing voltage $3U_0$ to about 110% of the setting ($3U_0$) and adjust the phase angle between the voltage and current to 180° AngLRCA setting, the current leading the voltage.
11. Inject current in one phase to about 110% of the setting operating current ($IN > Dir$).
12. Activate the CRL binary input.



No ECHO and TRWEI should appear.

13. Abruptly reverse the current to 65° lagging the voltage, to operate the forward directional element.



No ECHO and TRWEI should appear.

14. Switch the current off and check that the ECHO, CS and TRWEI appear on the corresponding binary output or on the local HMI, about 200ms after resetting the directional element.
15. Switch the polarizing voltage off and reset the CRL binary input.

6.9.6.3

Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Scheme communication/ECRWPSCH(85)/1:ECRWPSCH** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.10

Testing logic functions

6.10.1

Tripping logic SMPPTRC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SMPPTRC are available on the local HMI under **Main menu/Tests/Function status/Logic/SMPPTRC(94,1->0)/X:SMPPTRC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

This function is functionality tested together with other protection functions (earth-fault overcurrent protection, and so on) within the IED. It is recommended that the function is tested together with the autorecloser function, or when a separate external unit is used for reclosing purposes. The testing is preferably done in conjunction with the protection system and autorecloser function.

6.10.1.1

Three phase operating mode

1. Check that *AutoLock* and *TripLockout* are both set to *Off*.
2. Initiate a three-phase fault
An adequate time interval between the faults should be considered, to overcome a reclaim time caused by the possible activation of the Autorecloser function SMBRREC. The function must issue a three-phase trip in all cases,

when trip is initiated by any protection or some other built-in or external function. The functional TRIP output signal must always appear.

6.10.1.2 Circuit breaker lockout

The following tests should be carried out when the built-in lockout function is used in addition to possible other tests, which depends on the complete configuration of an IED.

1. Check that *AutoLock* and *TripLockout* are both set to *Off*.
2. Initiate a three-phase fault.
The functional output TRIP should be active at each fault. The output CLLKOUT must not be set.
3. Activate the automatic lockout function, set *AutoLock* = *On* and repeat. Beside the TRIP outputs, CLLKOUT should be set.
4. Reset the lockout signal by shortly thereafter activating the reset lockout (RSTLKOUT) signal.
5. Activate the TRIP signal lockout function, set *TripLockout* = *On* and repeat. The output TRIP must be active and stay active after each fault, CLLKOUT must be set.
6. Repeat. Reset the lockout.
All functional outputs should reset.
7. Deactivate the TRIP signal lockout function, set *TripLockout* = *Off* and the automatic lockout function, set *AutoLock* = *Off* if not needed.

6.10.1.3 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Logic/SMPPTRC(94,1->0)/X:SMPPTRC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.10.2 Tripping logic SPTPTRC

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for SPTPTRC are available on the local HMI under **Main menu/Tests/Function status/Logic/SPTPTRC(94,1->0)/1:SPTPTRC**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

This function is functionality tested together with other protection functions (earth-fault overcurrent protection, and so on) within the IED. It is recommended that the function is tested together with the autorecloser function, or when a separate

external unit is used for reclosing purposes. The testing is preferable done in conjunction with the protection system and autorecloser function.

6.10.2.1 1ph/3ph operating mode

In addition to various other tests, the following tests should be performed. They depend on the complete configuration of an IED.

1. Make sure that *TripLockout* and *AutoLock* are both set to *Off*.
2. Initiate different single-phase-to-earth faults one at a time.
Single-phase tripping will only be allowed when an auto-reclose attempt will follow. Autorecloser STBRREC has functionality such as the long trip time, CB ready and so on, which can prevent a proper single-phase tripping and auto reclose. To bypass this problem the fault initiation should be with a test set and with the auto reclose in full service with a test set connected to the distance protection function. Consider using an adequate time interval between faults, to overcome a reclaim time of which is activated by the autorecloser function. Only a single-phase trip should occur for each separate fault and only one of the trip outputs (TRLn) should be activated at a time. Functional outputs TRIP and TR1P should be active during each fault. No other outputs should be active.
3. Initiate different phase-to-phase and three-phase faults.
Consider using an adequate time interval between faults, to overcome a reclaim time which is activated by the STBRREC function. A three-phase trip should occur for each separate fault and all of the trips. Functional outputs TRIP, all TRLn and TR3P should be active at each fault. No other outputs should be active.
4. Initiate a single-phase-to-earth fault and switch it off immediately when the trip signal is issued for the corresponding phase.
5. Initiate the same fault once again within the reclaim time of the used autorecloser function.
A single-phase fault shall be given at the first fault. A three-phase trip must be initiated for the second fault. Check that the corresponding trip signals appear after both faults. Functional outputs TRIP, TRLn and TR1P should be active during first fault. No other outputs should be active. Functional outputs TRIP, all TRLn and TR3P should be active during second fault.
6. Initiate a single-phase-to-earth fault and switch it off immediately when the trip signal is issued for the corresponding phase.
7. Initiate the second single-phase-to-earth fault in one of the remaining phases. This shall be within the time interval, shorter than *tEvolvingFault*(default setting 2.0 s) and shorter than the dead-time of the autorecloser function, when included in the protection scheme. Check that the second trip is a three-phase trip and that a three-phase autoreclosing attempt is given after the three-phase dead time. Functional outputs TRIP, TRLn and TR1P should be active during first fault. No other outputs should be active. Functional outputs TRIP, all TRLn and TR3P should be active during second fault.

6.10.2.2 Circuit breaker lockout

The following tests should be carried out when the built-in lockout function is used in addition to possible other tests, which depends on the complete configuration of an IED.

1. Check that *AutoLock* and *TripLockout* are both set to *Off*.
2. Initiate a three-phase fault
The functional output TRIP should be active at each fault. The output CLLKOUT must not be set.
3. Activate the automatic lockout function, set *AutoLock* = *On* and repeat.
4. Reset the lockout signal by shortly thereafter activating the reset lockout (RSTLKOUT) signal.
5. Activate the TRIP signal lockout function, set *TripLockout* = *On* and repeat.
The output TRIP must be active and stay active after each fault, CLLKOUT must be set.
6. Repeat. Reset the lockout.
All functional outputs should reset.
7. Deactivate the TRIP signal lockout function, set *TripLockout* = *Off* and the automatic lockout function, set *AutoLock* = *Off*.

6.10.2.3 Completing the test

Continue to test another function or end the testing by setting the parameter *TestMode* to *Off* under **Main menu/Tests/IED test mode/1:TESTMODE**. If another function is tested, then set the parameter *Blocked* to *No* under **Main menu/Tests/Function test modes/Logic/SPTPTRC(94,1->0)/1:SPTPTRC** for the function, or for each individual function in a chain, to be tested next. Remember to set the parameter *Blocked* to *Yes*, for each individual function that has been tested.

6.11 Testing monitoring functions

6.11.1 Event counter CNTGGIO

The event counter function CNTGGIO can be tested by connecting a binary input to the counter under test and from outside apply pulses to the counter. The speed of pulses must not exceed 10 per second. Normally the counter will be tested in connection with tests on the function that the counter is connected to, such as trip logic. When configured, test it together with the function that operates it. Trig the function and check that the counter result is the same the number of operations.

6.11.2 Fault locator LMBRFLO

Prepare the IED for verification of settings as outlined in [5.1 "Preparing the IED to verify settings"](#).

Values of the logical signals for LMBRFLO are available on the local HMI under **Main menu/Tests/Function status/Monitoring/LMBRFLO/1:LMBRFLO**. The Signal Monitoring in PCM600 shows the same signals that are available on the local HMI.

The Fault locator function LMBRFLO depends on other functions to work properly, that is, phase selection information from distance protection function and analog information supplied by the trip value recorder function. Check that proper binary start and phase selection signals are connected and voltage and current signals are configured (parameter settings).

The result is displayed on the local HMI or via PCM600. Distances to faults for the last 100 recorded disturbances can be found on the local HMI under **Main menu/Tests/Function status/Monitoring/LMBRFLO/1:LMBRFLO/Outputs**

If PCM600 is used, the result is displayed on the recording list after upload, including loop selection information.

Table 12: Test settings

| Parameter | Condition |
|-------------------------|---|
| I | Higher than 30% I_r |
| Healthy conditions | $U = 63,5 \text{ V}$, $I = 0 \text{ A}$ & $ZF = 0^\circ$ |
| Impedance $ Z $ | Test point Note: <ul style="list-style-type: none"> • $Z_x \leq (X_0 + 2 \cdot X_1)/3$ For single-phase faults • $Z_x \leq X_1$ For three and two phase faults • $Z_x \leq (X_0 + 2 \cdot X_1 \cdot X_M)/3$ For single-phase fault with mutual zero-sequence current |
| Impedance angle $Z\Phi$ | Test angle <ul style="list-style-type: none"> • $Z\Phi \arctan[(X_0 + 2 \cdot X_1) / (R_0 + 2R_1)]$ For single-phase faults • $Z\Phi \arctan(X_1/R_1)$ For two-phase faults |

6.11.2.1 Completing the test

6.11.2.2 Measuring the operate limit

1. Set the test point ($|Z|$ fault impedance and $Z\Phi$ impedance phase angle) for a condition that meets the requirements in table [12](#).
2. Subject the IED to healthy normal load conditions for at least two seconds.
3. Apply a fault condition.
Check that the distance-to-fault value displayed on the HMI complies with equations [18](#), [19](#) and [20](#) (the error should be less than five percent):

$$p = \frac{Z_x}{X1} \cdot 100$$

(Equation 18)

in % for two- and three-phase faults

$$p = \frac{3 \cdot Z_x}{X0 + 2 \cdot X1} \cdot 100$$

(Equation 19)

in % for single-phase-to-earth faults

$$p = \frac{3 \cdot Z_x}{X0 + 2 \cdot X1 \pm XM} \cdot 100$$

(Equation 20)

in % for single-phase-to-earth faults with mutual zero sequence current.

Where:

- p = the expected value of a distance to fault in percent
- Z_x = set test point on the test set
- X0 = set zero-sequence reactance of a line
- X1 = set positive-sequence reactance of a line
- XM = set mutual zero-sequence impedance of a line

6.12 Testing metering functions

6.12.1 Pulse counter PCGGIO

The test of the Pulse counter function PCGGIO requires the Parameter Setting tool in PCM600 or an appropriate connection to the local HMI with the necessary functionality. A known number of pulses with different frequencies are connected to the pulse counter input. The test should be performed with settings *Operation = On* or *Operation = Off* and the function blocked or unblocked. The pulse counter value is then checked in PCM600 or on the local HMI.

6.13 Exit test mode

The following procedure is used to return to normal operation.

1. Navigate to the test mode folder.
2. Change the *On* setting to *Off*. Press the 'E' key and the left arrow key.
3. Answer *YES*, press the 'E' key and exit the menu.

Section 7 Commissioning and maintenance of the fault clearing system

7.1 Commissioning and maintenance of the fault clearing system

About this chapter

This chapter discusses maintenance tests and other periodic maintenance measures.

7.1.1 Installation and commissioning

The protection IED is in an on-guard situation where the IED can be inactive for several years and then suddenly be required to operate within fractions of a second. This means that maintenance testing with certain time intervals should be performed to detect failures of the protection IED or the surrounding circuits. This is a complement to the advanced self supervision in the modern protection IED.

IEDs are not expected to deteriorate with usage but extreme conditions, such as mechanical shocks, AC or DC transients, high ambient temperatures, and high air humidity always have a certain likelihood of causing damages.

Delivered equipment undergoes extensive testing and quality control in the ABB manufacturing program. All types of IEDs and their integral components have been subject to extensive laboratory testing during the development and design work. Prior to series production of a specific IED, it is type tested according to national and international standards. Each individual IED in normal production is individually tested and calibrated before delivery.

Protection IEDs installed in an apparatus cubicle shall be checked in various ways before delivery. Insulation test (to check for bad wiring) and complete testing of all equipment with injection of currents and voltages is performed.

During the design of the station, certain steps shall be taken to limit the risk of failures, for example, all IED coils are connected to negative potential to earth to prevent contact corrosion due to electrolyte.

Certain circuits are continuously supervised to improve their availability. Examples of such supervisions are:

Commissioning and maintenance of the fault clearing system

- Trip circuit supervision
- Protection DC supply supervision
- DC system earth fault supervision
- Busbar protection CT-circuit supervision

Protection IEDs shall be encapsulated according to environment requirements. In tropical climates, cubicles are provided with glass-door and ventilation louvres. Heaters for anti-condensation, often thermostatically controlled, are provided. Cubicle power-loss is limited not to exceed protection IED temperature limits, which is 55°C according to the IEC standard.

7.1.2 Commissioning tests

During commissioning all protection functions shall be verified with the setting values used at each plant. The commissioning tests must include verification of all circuits by green-lining the circuit diagrams and the configuration diagrams for the used functions.

Further, the settings for protection functions are tested and recorded carefully as outlined for the future periodic maintenance tests.

The final testing includes primary verification of all directional functions where load currents is checked on the local HMI and in PCM600. The amplitudes and angles of all currents and voltages should be checked and the symmetry verified.

Directional functions have information about the measured direction and, for example, measured impedance. These values must be checked and verified as correct with the export or import of power available.

Finally, final trip tests must be performed. This involves activation of protection functions or tripping outputs with the circuit breaker closed and the tripping of the breaker verified. When several breakers are involved, each breaker must be checked individually and it must be verified that the other involved breakers are not tripped at the same time.

7.1.3 Periodic maintenance tests

The periodicity of all tests depends on several factors, for example the importance of the installation, environment conditions, simple or complex equipment, static or electromechanical IEDs, and so on.

The normal maintenance praxis of the user should be followed. However ABB proposal is to test:

Every second to third year

Commissioning and maintenance of the fault clearing system

- Visual inspection of all equipment.
- Removal of dust on ventilation louvres and IEDs if necessary.
- Periodic maintenance test for protection IEDs of object where no redundant protections are provided.

Every four to six years

- Periodic maintenance test for protection IEDs of objects with redundant protection system.



First maintenance test should always be carried out after the first half year of service.



When protection IEDs are combined with built-in control, the test interval can be increased drastically, up to for instance 15 years, because the IED continuously reads service values, operates the breakers, and so on.

7.1.3.1

Visual inspection

Prior to testing, the protection IEDs should be inspected to detect any visible damage that may have occurred (for example, dirt or moisture deposits, overheating). Should burned contacts be observed when inspecting the IEDs, a diamond file or an extremely fine file can be used to polish the contacts. Emery cloth or similar products must not be used as insulating grains of abrasive may be deposited on the contact surfaces and cause failure.

Make sure that all IEDs are equipped with covers.

7.1.3.2

Maintenance tests

To be made after the first half year of service, then with the cycle as proposed above and after any suspected maloperation or change of the IED setting.

Testing of protection IEDs shall preferably be made with the primary circuit de-energized. The IED cannot protect the circuit during testing. Trained personnel may test one IED at a time on live circuits where redundant protection is installed and de-energization of the primary circuit is not allowed.

ABB protection IEDs are preferably tested by aid of components from the COMBITEST testing system described in information B03-9510 E. Main components are RTXP 8/18/24 test switch located to the left in each protection IED and RTXH 8/18/24 test handle, which is inserted in test switch at secondary testing. All necessary operations such as opening of trip circuits, short-circuiting of current circuits and opening of voltage circuits are automatically performed in the

Commissioning and maintenance of the fault clearing system

right order to allow for simple and safe secondary testing even with the object in service.

Preparation

Before starting maintenance testing, the test engineers should scrutinize applicable circuit diagrams and have the following documentation available:

- Test instructions for protection IEDs to be tested
- Test records from previous commissioning and maintenance tests
- List of valid settings
- Blank test records to fill in measured values

Recording

It is of utmost importance to carefully record the test results. Special test sheets covering the frequency of test, date of test and achieved test values should be used. IED setting list and protocols from previous tests should be available and all results should be compared for differences. At component failures, spare equipment is used and set to the requested value. A note of the exchange is made and the new measured values are recorded. Test records for several years of testing should be stored in a common file for a station, or a part of a station, to give a simple overview of the period of testing and achieved test values. These test records are valuable when analysis of service disturbances shall be done.

Secondary injection

The periodic maintenance test is done by secondary injection from a portable test set. Each protection shall be tested according to the secondary injection test information for the specific protection IED. Only the setting values adopted shall be checked for each protection function. If the discrepancy between obtained value and requested set value is too big the setting should be adjusted, the new value recorded and a note should be made in the test record.

Alarm test

When inserting the test handle the alarm and event signalling is normally blocked. This is done in the IED by setting the event reporting to *Off* during the test. This can be done when the test handle is inserted or the IED is set to test mode from the local HMI. At the end of the secondary injection test it should be checked that the event and alarm signalling is correct by activating the events and performing some selected tests.

Self supervision check

Once secondary testing has been completed, it should be checked that no self-supervision signals are activated continuously or sporadically. Especially check the time synchronization system, GPS or other, and communication signals, both station communication and remote communication, for example, the line differential communication system.

Trip circuit check

When the protection IED undergoes an operational check, a tripping pulse is normally obtained on one or more of the output contacts and preferably on the test switch. The healthy circuit is of utmost importance for the protection operation. If the circuit is not provided with a continuous trip-circuit supervision, it is possible to check that circuit is really closed when the test-plug handle has been removed by using a high-ohmic voltmeter and measuring between the plus and the trip output on the panel. The measurement is then done through the tripping magnet of the circuit breaker and therefore the complete tripping circuit is checked.



Note, that the breaker must be closed.



Please observe that the test system does not have its built-in security during this test. If the instrument should be set on Amp instead of Volts, the circuit breaker naturally is tripped, therefore, greatest care is necessary.

Trip circuit from trip IEDs to circuit breaker is often supervised by trip-circuit supervision. It can then be checked that a circuit is healthy by opening tripping output terminals in the cubicle. When the terminal is opened, an alarm shall be achieved on the signal system after a delay of some seconds.



However, remember to close the circuit directly after the test and tighten the terminal carefully!

Measurement of service currents

After a maintenance test it is recommended to measure the service currents and service voltages recorded by the protection IED. The service values are checked on the local HMI or in PCM600. Ensure that the correct values and angles between voltages and currents are recorded. Also check the direction of directional functions such as Distance and directional overcurrent functions.

For transformer differential protection, the achieved differential current value is dependent on the tap changer position and can vary between less than 1% up to perhaps 10% of rated current. For line differential functions, the capacitive charging currents can normally be recorded as a differential current.

The zero-sequence current to earth-fault protection IEDs should be measured. The current amounts normally very small but normally it is possible to see if the current circuit is "alive".

The neutral-point voltage to an earth-fault protection IED is checked. The voltage is normally 0.1 to 1V secondary. However, voltage can be considerably higher due

to harmonics. Normally a CVT secondary can have around 2.5 - 3% third-harmonic voltage.

Restoring

Maintenance is very important to improve the availability of the protection system by detecting failures before the protection is required to operate. There is however little point in testing healthy equipment and then putting it back into service with an open terminal, with a removed fuse or open miniature circuit breaker with an open connection, wrong setting, and so on.

Thus a list should be prepared of all items disturbed during test so that all can be put back into service quickly and without overlooking something. It should be put back into service item by item and signed by the responsible engineer.

Section 8 Troubleshooting

8.1 Fault tracing

8.1.1 Identifying hardware errors

1. Check the module with an error.
 - Check the general IED status in **Main menu/Diagnostics/IED status/General** for a faulty hardware module.
 - Check the history of changes in internal event list in **Main menu/Diagnostics/Internal Events**.
2. Inspect the IED visually.
 - Inspect the IED visually to find any physical error causes.
 - If you can find some obvious physical damage, contact ABB for repair or replacement actions.
3. Check whether the error is external or internal.
 - Check that the error is not caused by external origins.
 - Remove the wiring from the IED and test the input and output operation with an external test device.
 - If the problem remains, contact ABB for repair or replacement actions.

8.1.2 Identifying runtime errors

1. Check the error origin from IED's internal event list **Main menu/Diagnostics/IED status/General**.
2. Reboot the IED and recheck the supervision events to see if the fault has cleared.
3. In case of persistent faults, contact ABB for corrective actions.

8.1.3 Identifying communication errors

Communication errors are normally communication interruptions or synchronization message errors due to communication link breakdown.

- Check the IEC61850 and DNP3 communication status in internal event list in **Main menu/Diagnostics/IED Status/General**.
- In case of persistent faults originating from IED's internal faults such as component breakdown, contact ABB for repair or replacement actions.

8.1.3.1 Checking the communication link operation

There are several different communication links on the product. First check that all communication ports that are used for communication are turned on.

1. Check the front communication port RJ-45.
 - 1.1. Check that the uplink LED is lit with a steady green light. The uplink LED is located on the LHMI above the RJ-45 communication port on the left. The port is used for direct electrical communication to a PC connected via a crossed-over Ethernet cable.
 - 1.2. Check the communication status of the front port via the LHMI in **Main menu/Test/Function status/Communication/1:DOSFRNT/Outputs**. Check that the *LINKUP* value is 1, that is, the communication is working. When the value is 0, there is no communication link.



The rear port connector X0 is used for connecting an external HMI to the IED. If the *LINKUP* value is 0 for front port, there is no communication link via port X0. Do not use rear port connector X0 if the IED is equipped with an LHMI.

2. Check the communication status of the rear port X1 via the LHMI in **Main menu/Test/Function status/Communication/1:DOSLAN1/Outputs**. The X1 communication port on the rear side of the IED is for optical Ethernet via LC connector or electrical via RJ-45 connector of the IEC 61850-8-1 station bus communication.
 - Check that the *LINKUP* value is 1, that is, the communication is working. When the value is 0, there is no communication link.

8.1.3.2 Checking the time synchronization

- Select **Main menu/Diagnostics/IED status/General** and check the status of the time synchronization on **Time Synch**. The *Time synch* value is *Ready* when the synchronization is in order. Note that the time synchronization source has to be activated. Otherwise the value is always *Ready*.

8.1.4 Running the display test

To run the display test, either use the push buttons or start the test via the menu.

- Select **Main menu/Tests/LED test**.
 - Press  or simultaneously  and .
- All the LEDs are tested by turning them on simultaneously. The display shows a set of patterns so that all the pixels are activated. After the test, the display returns to normal state.

8.2 Indication messages

8.2.1 Internal faults

When the Ready LED indicates an internal fault by flashing, the message associated with the fault is found in the internal event list in the LHMI menu **Main menu/Diagnostics/Internal events**. The message includes the date, time, description and signal state for the fault. The internal event list is not updated dynamically. The list is updated by leaving the **Internal events** menu and then selecting it again. The current status of the internal fault signals can also be checked via the LHMI in **Main menu/Diagnostics/IED status**.

Different actions are taken depending on the severity of the fault. After the fault is found to be permanent, the IED stays in internal fault mode. The IED continues to perform internal tests during the fault situation.

When a fault appears, the fault indication message is to be recorded and stated when ordering service.

Table 13: *Internal fault indications*

| Fault indication | Additional information |
|---|---|
| Internal Fault Real Time Clock Error | Hardware error with the real time clock. |
| Internal Fault Runtime Exec. Error | One or more of the application threads are not working properly. |
| Internal Fault SW Watchdog Error | This signal will be activated when the terminal has been under too heavy load for at least 5 minutes. |
| Internal Fault Runtime App Error | One or more of the application threads are not in an expected state. |
| Internal Fault File System Error | A file system error has occurred. |
| Internal Fault TRM-Error | A TRM card error has occurred. The instance number is displayed at the end of the fault indication. |
| Internal Fault COM-Error | A COM card error has occurred. The instance number is displayed at the end of the fault indication. |
| Internal Fault PSM-Error | A PSM card error has occurred. The instance number is displayed at the end of the fault indication. |

8.2.2 Warnings

The warning message associated with the fault is found in the internal event list in the LHMI menu **Main menu/Diagnostics/Internal events**. The message includes the date, time, description and signal state for the fault. The current status of the

internal fault signals can also be checked via the LHMI in **Main menu/Diagnostics/IED status/General**.

When a fault appears, record the fault indication message and state it when ordering service.

Table 14: *Warning indications*

| Warning indication | Additional information |
|----------------------------|--|
| Warning IEC 61850 Error | IEC 61850 has not succeeded in some actions such as reading the configuration file, startup etc. |
| Warning DNP3 Error | Error in DNP3 communication. |

8.2.3 Additional indications

The additional indication messages do not activate internal fault or warning.

The messages are listed in the LHMI menu under the event list. The signal status data is found under the IED status and in the internal event list.

Table 15: *Additional indications*

| Warning indication | Additional information |
|------------------------|--|
| Time Synch Error | Source of the time synchronization is lost or time system has made a time reset. |
| BATTERY1 Error | Auxiliary power is disconnected. |
| Settings Changed | Settings have been changed. |
| Setting Groups Changed | Setting group has been changed. |

8.3 Correction procedures

8.3.1 Changing and setting the password

The password can only be set with PCM600.



For more information, see PCM600 documentation.

8.3.2 Identifying IED application problems

Navigate to the appropriate menu in the LHMI to identify possible problems.

- Check that the function is on.
- Check that the correct setting group (1 to 4) is activated.
- Check the blocking.
- Check the mode.
- Check the measurement value.
- Check the connection to trip and disturbance recorder functions.
- Check the channel settings.

8.3.2.1

Inspecting the wiring

The physical inspection of wiring connections often reveals the wrong connection for phase currents or voltages. However, even though the phase current or voltage connections to IED terminals might be correct, wrong polarity of one or more measurement transformers can cause problems.

- Check the current or voltage measurements and their phase information from **Main menu/Measurements/Analog primary values** or **Analog secondary voltages**.
- Check that the phase information and phase shift between phases is correct.
- Correct the wiring if needed.
 - Change the parameter *Negation* in **Configuration/Analog modules/3PhaseAnalogGroup/1:SMAI_20_n** (n= the number of the SMAI used).



Changing the *Negation* parameter is not recommended without special skills.

- In PCM600, change the parameter *CTStarPointn* (n= the number on the current input) under the parameter settings for each current input.
- Check the actual state of the connected binary inputs.
 - In LHMI, select **Main menu/Tests/Binary input values/Binary input modules**. Then navigate to the board with the actual binary input to be checked.
 - With PCM600, right-click the product and select **Signal Monitoring**. Then navigate to the actual I/O board and to the binary input in question. The activated input signal is indicated with a yellow-lit diode.
- Measure output contacts using the voltage drop method of applying at least the minimum contact load given for the output relays in the technical data, for example 100 mA at 24 V AC/DC.



Output relays, especially power output relays, are designed for breaking high currents. Due to this, layers of high resistance may appear on the surface of the contacts. Do not determine proper functionality of connectivity or contact resistance by measuring with a regular hand-held ohm meter.

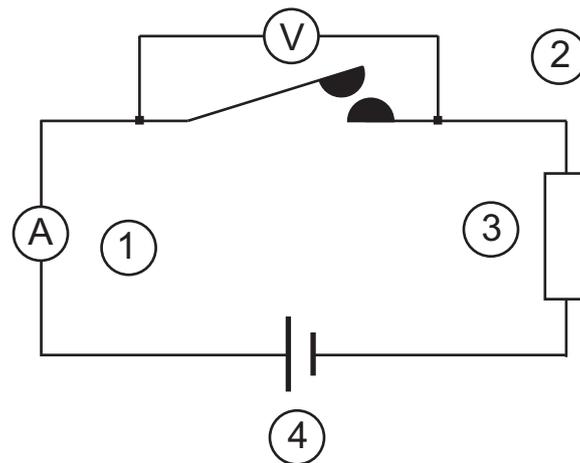


Figure 23: Testing output contacts using the voltage drop method

- 1 Contact current
- 2 Contact voltage drop
- 3 Load
- 4 Supply voltage

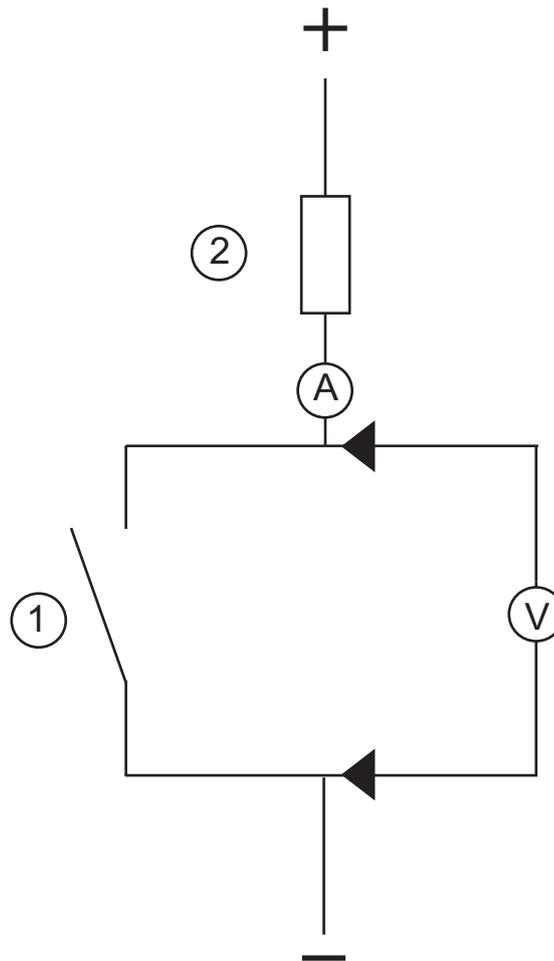


Figure 24: Testing a trip contact

- 1 Trip contact under test
- 2 Current limiting resistor

- To check the status of the output circuits driving the output relay via the LHMI, select **Main menu/Tests/Binary output values/Binary output modules** and then navigate to the board with the actual binary output to be checked.
- Test and change the relay state manually.
 1. To set the IED to test mode, select **Main menu/Tests/IED testmode1:TESTMODE/TestMode** and set the parameter to *On*.
 2. To operate or force the output relay to operate, select and then navigate to the board with the actual binary output relay to be operated/forced.
 3. Select the BOn_PO to be operated/forced and use  and  or  to operate the actual output relay.
In PCM600, only the result of these operations can be checked by right-clicking the product and selecting Signal Monitoring tool and then

navigating to the actual I/O-board and the binary input in question. The activated output signal is indicated with a yellow-lit diode. Each BOn_PO is represented by two signals. The first signal in LHMI is the actual value 1 or 0 of the output, and in PCM600 a lit or dimmed diode. The second signal is the status Normal or Forced. Forced status is only achieved when the BO is set to *Forced* or operated on the LHMI.



Set the parameter *TestMode* to *Off* after completing these tests. The Start LED stops flashing when the relay is no longer in test mode.

An initially high contact resistance does not cause problems as it is reduced quickly by the electrical cleaning effect of fritting and thermal destruction of layers, bringing the contact resistance back to the mOhm range. As a result, practically the full voltage is available at the load.

Section 9 Glossary

| | |
|---------------------------|--|
| AC | Alternating current |
| ACT | Application configuration tool within PCM600 |
| A/D converter | Analog-to-digital converter |
| ADBS | Amplitude deadband supervision |
| AI | Analog input |
| ANSI | American National Standards Institute |
| AR | Autoreclosing |
| ASCT | Auxiliary summation current transformer |
| ASD | Adaptive signal detection |
| AWG | American Wire Gauge standard |
| BI | Binary input |
| BOS | Binary outputs status |
| BR | External bistable relay |
| BS | British Standards |
| CAN | Controller Area Network. ISO standard (ISO 11898) for serial communication |
| CB | Circuit breaker |
| CCITT | Consultative Committee for International Telegraph and Telephony. A United Nations-sponsored standards body within the International Telecommunications Union. |
| CCVT | Capacitive Coupled Voltage Transformer |
| Class C | Protection Current Transformer class as per IEEE/ ANSI |
| CMPPS | Combined megapulses per second |
| CMT | Communication Management tool in PCM600 |
| CO cycle | Close-open cycle |
| Codirectional | Way of transmitting G.703 over a balanced line. Involves two twisted pairs making it possible to transmit information in both directions |
| COMTRADE | Standard format according to IEC 60255-24 |
| Contra-directional | Way of transmitting G.703 over a balanced line. Involves four twisted pairs, two of which are used for transmitting data in both directions and two for transmitting clock signals |

| | |
|--------------------|--|
| CPU | Central processor unit |
| CR | Carrier receive |
| CRC | Cyclic redundancy check |
| CROB | Control relay output block |
| CS | Carrier send |
| CT | Current transformer |
| CVT | Capacitive voltage transformer |
| DAR | Delayed autoreclosing |
| DARPA | Defense Advanced Research Projects Agency (The US developer of the TCP/IP protocol etc.) |
| DBDL | Dead bus dead line |
| DBLL | Dead bus live line |
| DC | Direct current |
| DFC | Data flow control |
| DFT | Discrete Fourier transform |
| DHCP | Dynamic Host Configuration Protocol |
| DIP-switch | Small switch mounted on a printed circuit board |
| DI | Digital input |
| DLLB | Dead line live bus |
| DNP | Distributed Network Protocol as per IEEE/ANSI Std. 1379-2000 |
| DR | Disturbance recorder |
| DRAM | Dynamic random access memory |
| DRH | Disturbance report handler |
| DSP | Digital signal processor |
| DTT | Direct transfer trip scheme |
| EHV network | Extra high voltage network |
| EIA | Electronic Industries Association |
| EMC | Electromagnetic compatibility |
| EMF | (Electric Motive Force) |
| EMI | Electromagnetic interference |
| EnFP | End fault protection |
| EPA | Enhanced performance architecture |
| ESD | Electrostatic discharge |
| FCB | Flow control bit; Frame count bit |

| | |
|----------------------------|---|
| FOX 20 | Modular 20 channel telecommunication system for speech, data and protection signals |
| FOX 512/515 | Access multiplexer |
| FOX 6Plus | Compact time-division multiplexer for the transmission of up to seven duplex channels of digital data over optical fibers |
| G.703 | Electrical and functional description for digital lines used by local telephone companies. Can be transported over balanced and unbalanced lines |
| GCM | Communication interface module with carrier of GPS receiver module |
| GDE | Graphical display editor within PCM600 |
| GI | General interrogation command |
| GIS | Gas-insulated switchgear |
| GOOSE | Generic object-oriented substation event |
| GPS | Global positioning system |
| HDLC protocol | High-level data link control, protocol based on the HDLC standard |
| HFBR connector type | Plastic fiber connector |
| HMI | Human-machine interface |
| HSAR | High speed autoreclosing |
| HV | High-voltage |
| HVDC | High-voltage direct current |
| IDBS | Integrating deadband supervision |
| IEC | International Electrical Committee |
| IEC 60044-6 | IEC Standard, Instrument transformers – Part 6: Requirements for protective current transformers for transient performance |
| IEC 61850 | Substation automation communication standard |
| IEEE | Institute of Electrical and Electronics Engineers |
| IEEE 802.12 | A network technology standard that provides 100 Mbits/s on twisted-pair or optical fiber cable |
| IEEE P1386.1 | PCI Mezzanine Card (PMC) standard for local bus modules. References the CMC (IEEE P1386, also known as Common Mezzanine Card) standard for the mechanics and the PCI specifications from the PCI SIG (Special Interest Group) for the electrical EMF (Electromotive force). |
| IED | Intelligent electronic device |

| | |
|------------------|---|
| I-GIS | Intelligent gas-insulated switchgear |
| Instance | When several occurrences of the same function are available in the IED, they are referred to as instances of that function. One instance of a function is identical to another of the same kind but has a different number in the IED user interfaces. The word "instance" is sometimes defined as an item of information that is representative of a type. In the same way an instance of a function in the IED is representative of a type of function. |
| IP | 1. Internet protocol. The network layer for the TCP/IP protocol suite widely used on Ethernet networks. IP is a connectionless, best-effort packet-switching protocol. It provides packet routing, fragmentation and reassembly through the data link layer. 2. Ingression protection, according to IEC standard |
| IP 20 | Ingression protection, according to IEC standard, level 20 |
| IP 40 | Ingression protection, according to IEC standard, level 40 |
| IP 54 | Ingression protection, according to IEC standard, level 54 |
| IRF | Internal failure signal |
| IRIG-B: | InterRange Instrumentation Group Time code format B, standard 200 |
| ITU | International Telecommunications Union |
| LAN | Local area network |
| LIB 520 | High-voltage software module |
| LCD | Liquid crystal display |
| LDD | Local detection device |
| LED | Light-emitting diode |
| MCB | Miniature circuit breaker |
| MCM | Mezzanine carrier module |
| MVB | Multifunction vehicle bus. Standardized serial bus originally developed for use in trains. |
| NCC | National Control Centre |
| OCO cycle | Open-close-open cycle |
| OCP | Overcurrent protection |
| OLTC | On-load tap changer |
| OV | Over-voltage |
| Overreach | A term used to describe how the relay behaves during a fault condition. For example, a distance relay is overreaching when the impedance presented to it is smaller than the |

| | |
|--------------------|--|
| | apparent impedance to the fault applied to the balance point, that is, the set reach. The relay “sees” the fault but perhaps it should not have seen it. |
| PCI | Peripheral component interconnect, a local data bus |
| PCM | Pulse code modulation |
| PCM600 | Protection and control IED manager |
| PC-MIP | Mezzanine card standard |
| PISA | Process interface for sensors & actuators |
| PMC | PCI Mezzanine card |
| POR | Permissive overreach |
| POTT | Permissive overreach transfer trip |
| Process bus | Bus or LAN used at the process level, that is, in near proximity to the measured and/or controlled components |
| PSM | Power supply module |
| PST | Parameter setting tool within PCM600 |
| PT ratio | Potential transformer or voltage transformer ratio |
| PUTT | Permissive underreach transfer trip |
| RASC | Synchrocheck relay, COMBIFLEX |
| RCA | Relay characteristic angle |
| RFPP | Resistance for phase-to-phase faults |
| RFPE | Resistance for phase-to-earth faults |
| RISC | Reduced instruction set computer |
| RMS value | Root mean square value |
| RS422 | A balanced serial interface for the transmission of digital data in point-to-point connections |
| RS485 | Serial link according to EIA standard RS485 |
| RTC | Real-time clock |
| RTU | Remote terminal unit |
| SA | Substation Automation |
| SBO | Select-before-operate |
| SC | Switch or push button to close |
| SCS | Station control system |
| SCADA | Supervision, control and data acquisition |
| SCT | System configuration tool according to standard IEC 61850 |
| SDU | Service data unit |

| | |
|---------------------------|--|
| SMA connector | Subminiature version A, A threaded connector with constant impedance. |
| SMT | Signal matrix tool within PCM600 |
| SMS | Station monitoring system |
| SNTP | Simple network time protocol – is used to synchronize computer clocks on local area networks. This reduces the requirement to have accurate hardware clocks in every embedded system in a network. Each embedded node can instead synchronize with a remote clock, providing the required accuracy. |
| SRY | Switch for CB ready condition |
| ST | Switch or push button to trip |
| Starpoint | Neutral point of transformer or generator |
| SVC | Static VAr compensation |
| TC | Trip coil |
| TCS | Trip circuit supervision |
| TCP | Transmission control protocol. The most common transport layer protocol used on Ethernet and the Internet. |
| TCP/IP | Transmission control protocol over Internet Protocol. The de facto standard Ethernet protocols incorporated into 4.2BSD Unix. TCP/IP was developed by DARPA for Internet working and encompasses both network layer and transport layer protocols. While TCP and IP specify two protocols at specific protocol layers, TCP/IP is often used to refer to the entire US Department of Defense protocol suite based upon these, including Telnet, FTP, UDP and RDP. |
| TNC connector | Threaded Neill-Concelman, a threaded constant impedance version of a BNC connector |
| TPZ, TPY, TPX, TPS | Current transformer class according to IEC |
| UMT | User management tool |
| Underreach | A term used to describe how the relay behaves during a fault condition. For example, a distance relay is underreaching when the impedance presented to it is greater than the apparent impedance to the fault applied to the balance point, that is, the set reach. The relay does not “see” the fault but perhaps it should have seen it. See also Overreach. |
| U/I-PISA | Process interface components that deliver measured voltage and current values |
| UTC | Coordinated Universal Time. A coordinated time scale, maintained by the Bureau International des Poids et Mesures (BIPM), which forms the basis of a coordinated |

dissemination of standard frequencies and time signals. UTC is derived from International Atomic Time (TAI) by the addition of a whole number of "leap seconds" to synchronize it with Universal Time 1 (UT1), thus allowing for the eccentricity of the Earth's orbit, the rotational axis tilt (23.5 degrees), but still showing the Earth's irregular rotation, on which UT1 is based. The Coordinated Universal Time is expressed using a 24-hour clock, and uses the Gregorian calendar. It is used for aeroplane and ship navigation, where it is also sometimes known by the military name, "Zulu time." "Zulu" in the phonetic alphabet stands for "Z", which stands for longitude zero.

| | |
|-----------------------|---|
| UV | Undervoltage |
| WEI | Weak end infeed logic |
| VT | Voltage transformer |
| X.21 | A digital signalling interface primarily used for telecom equipment |
| 3I_O | Three times zero-sequence current. Often referred to as the residual or the earth-fault current |
| 3U_O | Three times the zero sequence voltage. Often referred to as the residual voltage or the neutral point voltage |

Contact us

ABB AB

Substation Automation Products

SE-721 59 Västerås, Sweden

Phone +46 (0) 21 32 50 00

Fax +46 (0) 21 14 69 18

www.abb.com/substationautomation