


NOTES:

1. **WARNING:** This drawing does not illustrate the installation methods required for hazardous locations. Prior to any installation in a Classified Hazardous Location, verify installation methods by the Control Drawing referenced on the product's name tag and national and local codes.
2. Termination methods for COMM ports 1 and 2 are the same. All notes apply.
3. In this configuration COMM 1 may only be used to communicate with the listed devices. Use COMM 2 for other devices.

The RMC can operate on 12 or 24 volts DC. If using VOUT to power an external device verify that the RMC supply voltage is compatible with the external device.

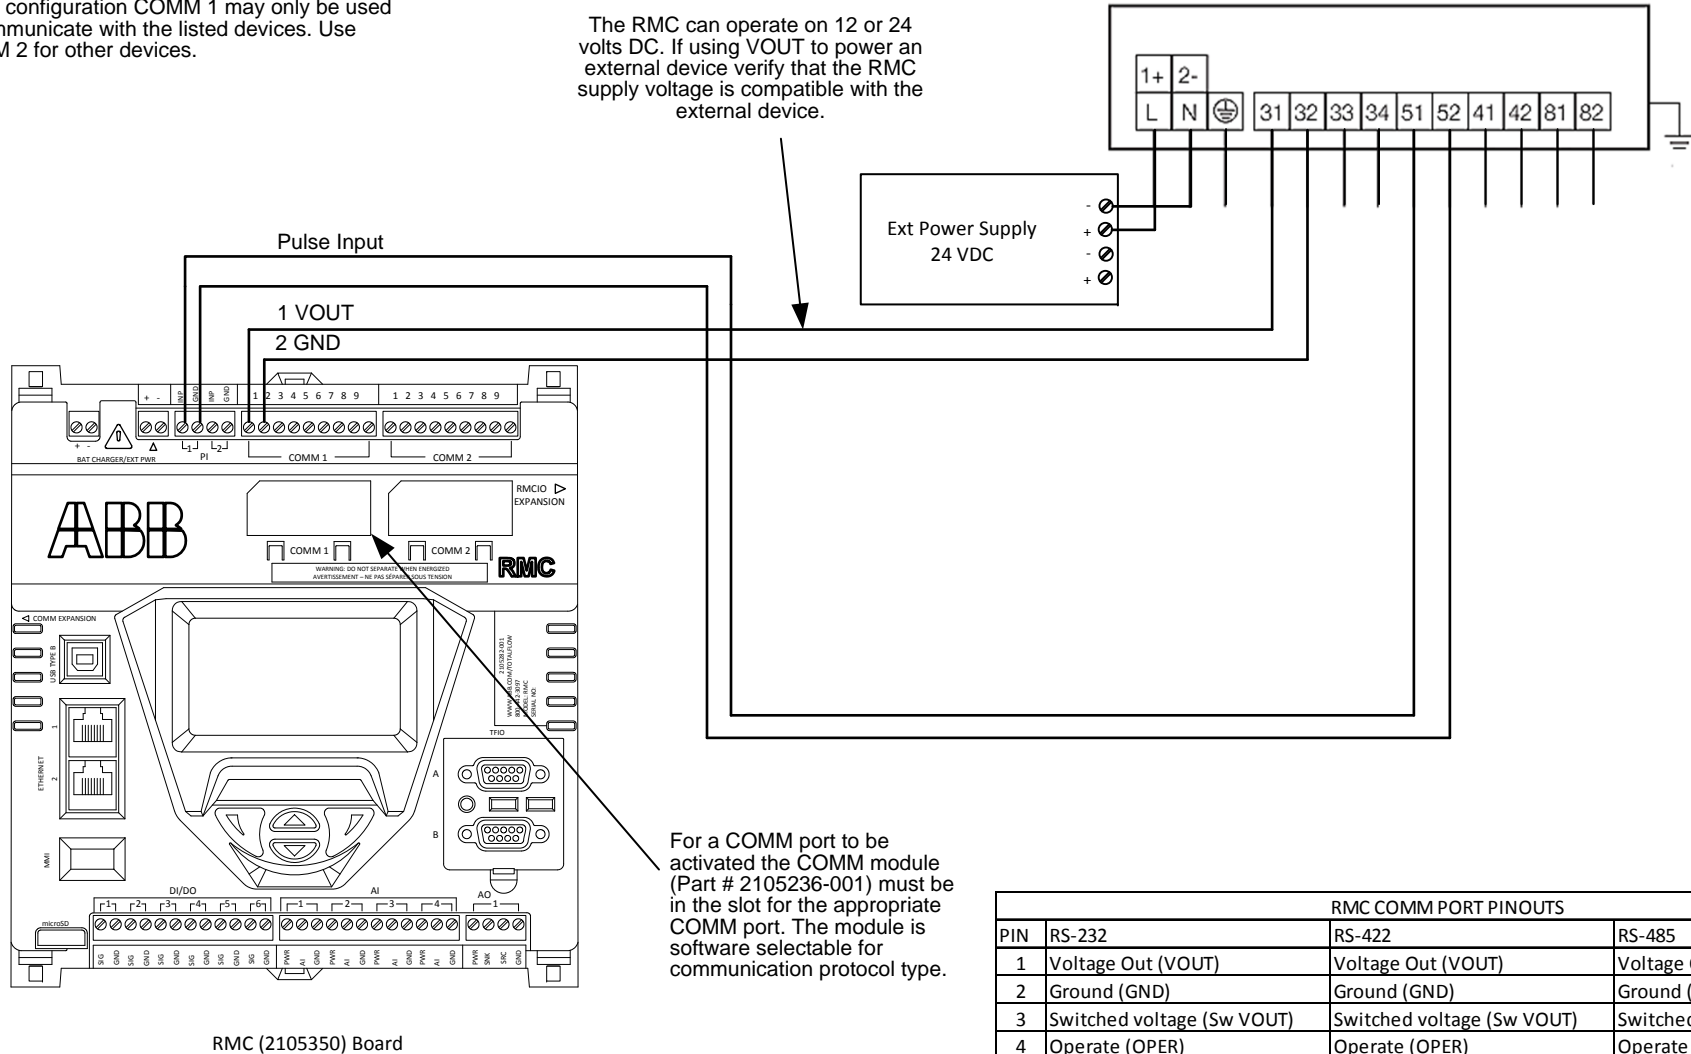

For a COMM port to be activated the COMM module (Part # 2105236-001) must be in the slot for the appropriate COMM port. The module is software selectable for communication protocol type.

RMC (2105350) Board

RMC COMM PORT PINOUTS			
PIN	RS-232	RS-422	RS-485
1	Voltage Out (VOUT)	Voltage Out (VOUT)	Voltage Out (VOUT)
2	Ground (GND)	Ground (GND)	Ground (GND)
3	Switched voltage (Sw VOUT)	Switched voltage (Sw VOUT)	Switched voltage (Sw VOUT)
4	Operate (OPER)	Operate (OPER)	Operate (OPER)
5	Remote request to send (RRTS)	Remote request to send (RRTS)	Remote request to send (RRTS)
6	Request to send (RTS)	Transmit bus+ (TBUS+)	Transmit bus+ (TBUS+)
7	Transmit data (TX)	Transmit bus- (TBUS-)	Transmit bus- (TBUS-)
8	Receive Data (RX)	Receive bus+ (RBUS+)	Not Used
9	Clear to send (CTS)	Receive bus- (RBUS-)	Not Used



TOTALFLOW
Products

ACTION
L36369

DOC TYPE
UD

TITLE
RMC (2105350 BD) TO
ABB FCB CORIOLIS METER

DWG NO.
2105592

REV
AA

SHEET
1 OF 1