

Release Notes

RobotStudio

2019.1

Revision:-

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damages to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Additional copies of this manual may be obtained from ABB.

The original language for this publication is English. Any other languages that are supplied have been translated from English.

© Copyright 2008 - 2019 ABB All rights reserved.
ABB AB
Robotics Products
SE-721 68 Västerås
Sweden

Table of Contents

1 Release Information	5
1.1 General	5
1.2 System recommendation	6
2 What's new in RobotStudio 2019	7
2.1 Changes to naming and licensing	7
2.2 The term 'System' replaced by 'Virtual Controller'	7
2.3 RobotWare must be installed separately	8
2.4 Other changes	8
3 CAD import formats and versions	9
4 Corrections	10
4.1 Corrections made in 2019.1	10
5 Known Limitations	11
5.1 Visual SafeMove	11
5.2 Online	11
5.2.1 Online – Paint	11
5.2.2 Online – Integrated Vision	12
5.3 Offline	14
5.3.1 Conveyor Tracking	16
5.3.2 MultiMove	17
5.3.3 External Axis	17
5.3.4 Network Drives and UNC Paths	17
5.3.5 RAPID	18
5.3.6 Paint	19
5.3.7 Graphics and Geometry	19
5.4 ScreenMaker Limitations	19
6 RobotWare Compatibility	21
6.1 General	21
6.2 RobotWare 5.05 and 5.06 Compatibility	21

Table of Contents

6.3 RobotWare 5.07 Compatibility	21
6.4 RobotWare 5.08 Compatibility	21
6.5 RobotWare 5.10 Compatibility	21
6.6 RobotWare 5.11 Compatibility	21
6.7 RobotWare 5.12 Compatibility	22
6.8 RobotWare 5.13 Compatibility	22
6.9 RobotWare 5.15 Compatibility	23
6.10 RobotWare 6 Compatibility	23
6.11 General Compatibility Limitations	23
6.12 ScreenMaker Compatibility	23
6.13 Support for future RobotWare versions	24

1 Release Information

1.1 General

Release Name

The release name is RobotStudio 2019.1 and the build number is 7.00.8460.0151. Note that non-English manuals are of the 6.08 version. The 6.09/2019.1 manuals are not translated from English.

Release Date

The release date is May 29th, 2019.

Demo stations

The following demo stations are included in this version.

- Demo AW Station
- Demo Solar Simulation
- Demo Exhaust Pipe
- Demo FlexLoader
- SC demo station finished.rspag
- SC demo station start.rspag

They are stored in the Pack & Go format (.rspag) and can be opened with the command Unpack & Work on the Share section of the RobotStudio menu.

ScreenMaker Demo Station and Project

There is a demo station and associated ScreenMaker project available.


- SCM_ExampleProject (*ScreenMaker Project*)
- SCM_ExampleStation (*RobotStudio station*)

These files are found in the 'Addins/ScreenMaker/Samples' folder under the RobotStudio installation folder.

Tutorials

Tutorials are available at the RobotStudio product pages at <http://www.abb.com/roboticssoftware>

Documentation

User documentation for RobotStudio is available from the *Help* button () in the upper-right corner of RobotStudio.

The complete documentation in PDF for RobotWare including RobotStudio is available from the Help menu in RobotStudio for Premium users. Internet connection is required.

1.2 System recommendation

Recommended Software

Operating System	
Microsoft Windows 7 SP1	64-bit edition
Microsoft Windows 10 Anniversary update or later	64-bit edition
ABB RobotWare	6.x

It is recommended to run Windows Update to get the latest updates to Windows prior to installing and running RobotStudio. This applies to any of the operating systems above.



Note

The Windows Firewall will try to block features necessary to run RobotStudio. Make sure to unblock these features when asked (Industrial Robot Discovery Server, RobotStudio StudioAppFramework module, Virtual RobotController (all published by ABB)). The blocking state of a certain program can be viewed and changed at *Start/Control Panel/Windows Security Center/Windows Firewall*. Read more on <http://www.microsoft.com>.

Recommended Hardware

Item	Requirement
CPU	2.0 GHz or faster processor, multiple cores recommended
Memory	8 GB minimum 16 GB or more if working with large CAD models
Disk	10+ GB free space, solid state drive (SSD)
Graphics card ¹	High-performance, DirectX 11 compatible, gaming graphics card from any of the leading vendors. For the Advanced lightning mode Direct3D feature level 10_1 or higher is required.
Screen resolution	1920 x 1080 pixels or higher is recommended
DPI	Normal size (100% / 96 dpi) up to Large size (150% / 144 dpi) Only Normal size supported for Integrated Vision.
Mouse	Three-button mouse
3D Mouse [optional]	Any 3D mouse from 3DConnexion, see http://www.3dconnexion.com .
Virtual Reality Headset	Oculus Rift, HTC Vive or any Windows Mixed Reality Headset. Note that special PC hardware requirements apply when using RobotStudio with VR, see https://www.oculus.com/oculus-ready-pcs/ , https://www.vive.com/us/ready/ , or https://www.microsoft.com/en-us/windows/windows-mixed-reality-devices , respectively.

¹ A note on graphics cards and PC hardware. RobotStudio will not benefit from the additional features of so-called 'Professional' or 'Workstation' graphics cards. The price level of these are at a much higher range than gaming graphics cards with comparable performance. High-end gaming PCs are very suitable for offline programming with RobotStudio. Such a PC will provide good performance for a limited budget.

2 What's new in RobotStudio 2019

2.1 Changes to naming and licensing

Changes in version naming

Starting this year, we will introduce a new version naming scheme for RobotStudio. It will be based on the current year and remove any reference to RobotWare. This will facilitate communication with our support teams and be more readable both for us and for you. This new naming does not change the fact that RobotStudio will continue to support all released versions of RobotWare 5, 6 or 7. It will also allow us to release RobotStudio independently of RobotWare for more frequent quality and feature updates.

Changes in licensing

With RobotStudio 2019 we need to upgrade a vital part of our licensing system in order to:

- Reduce illegal use of our trial licenses
- Prepare our systems for new features
- Ensure a modern and maintainable architecture

Current licenses will continue to run as usual on RobotStudio up to version 6.08 until their expiry. Any future licenses purchased will only be compatible with RobotStudio 2019 and up. On renewal we will ask you to update RobotStudio to its latest version. Finally, current users will be receiving an email in the next few days with new license keys compatible with RobotStudio 2019. If you wish to work immediately on the latest version of RobotStudio 2019, you can! Once again, these new license keys will not affect your current work or existing licenses that will continue to run as usual.

You can always contact ABB Robotics software licensing support via e-mail: softwarefactory_support@se.abb.com, or, your local ABB Robotics Service representative for assistance with this transition process.

2.2 The term '**System**' replaced by '**Virtual Controller**'

Overview


In previous versions of RobotStudio, the term **System** was used to denote the set of RobotWare files that defined the virtual controller setup for the currently used robot and its RobotWare options. This term has been replaced by **Virtual Controller** whenever possible. The function as such is the same.

This applies to several places in the user interface and the user documentation. Also the folders named System in the user documents location and in Solution folders have been renamed.

2.3 RobotWare must be installed separately

Overview

RobotWare is no longer installed with RobotStudio, but have to be installed separately. RobotWare can be downloaded and installed from the RobotApps page in RobotStudio, see screenshot below.

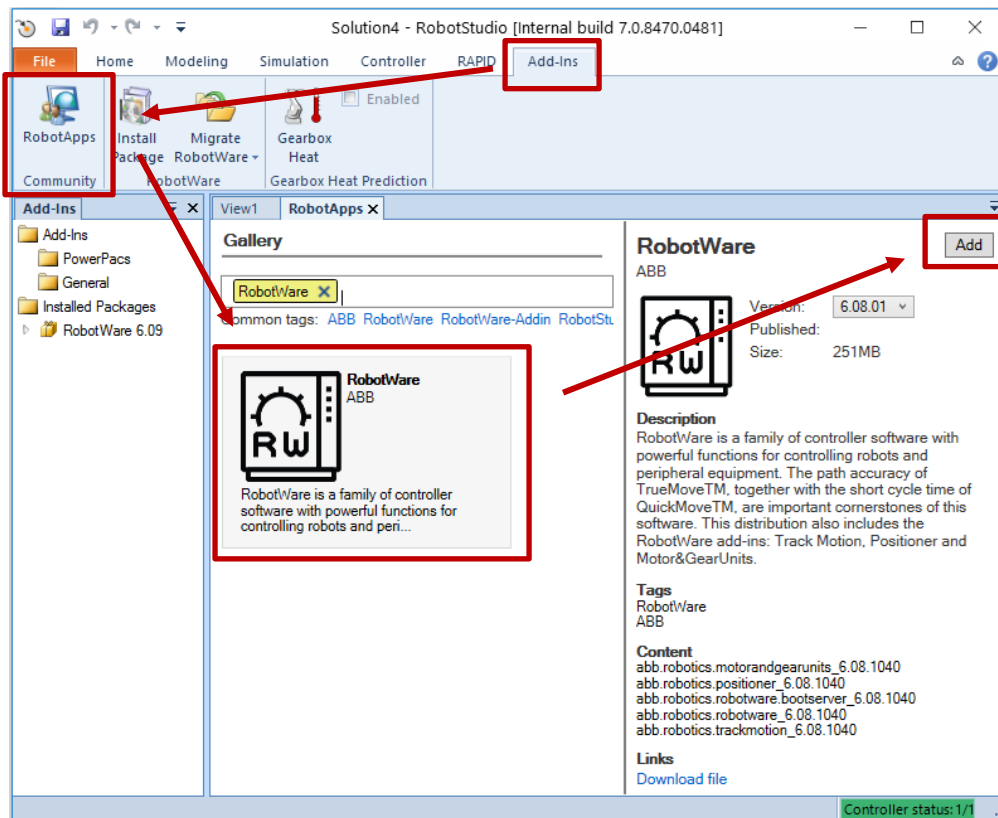

2.4 Other changes

Overview

The linked document describes all new features and changes to RobotStudio 2019.1

https://robotstudiocdn.azureedge.net/documentation/RobotStudio_2019.1_News.pdf

3 CAD import formats and versions

Overview

This section describes the supported CAD formats and versions.

CAD formats

The table below lists all formats and versions supported by RobotStudio

Format	File extensions	Option required
3DStudio	.3ds	-
ACIS, reads versions R1 - 2019 1.0, writes versions R18 - 2019 1.0	.sat, .sab, .asat, .asab	-
CATIA V4, reads versions 4.1.9 to 4.2.4*	.model, .exp, .session	CATIA
CATIA V5/V6, reads versions V5R8 – V5/V6R2019 writes V5R15 – V5/V6R2019*	.CATPart, .CATProduct, .CGR, .3DXML	CATIA
COLLADA 1.4.1	.dae	-
DirectX writes 2.0	.x	-
DXF/DWG, reads versions 2.5 - 2019*	.dxf, .dwg	AutoCAD
FBX writes version 7.5	.fbx	-
IGES, reads up to version 5.3, writes version 5.3*	.igs, .iges	IGES
Inventor, reads V6 – V2019*	.ipt, .iam	Inventor
JT, reads versions 8.x, 9.x and 10 and 10,2*	.jt	JT
LDraw, reads version 1.0.2	.ldr, .ldraw, .mpd	-
NX, reads versions NX 11 – NX 12.0.0*	.prt	NX
OBJ	.obj	-
Parasolid, reads versions 9.0.* – 31.0.x.*	.x_t, .xmt_txt, .x_b, .xmt_bin	Parasolid
Pro/E / Creo, reads versions 16 – Creo 5.0*	.prt, .prt.*, .asm, .asm.*	Creo
Solid Edge, reads versions V18 – ST11*	.par, .asm, .psm	SolidEdge
SolidWorks, reads versions 2003 – 2019 *	.sldprt, .sldasm	SolidWorks
STEP, reads versions AP203, AP214, AP242, writes version AP214 *	stp, step, p21	STEP
STL	stl	-
VDA-FS, reads 1.0 and 2.0, writes 2.0*	vda, vdafs	VDA-FS
VRML, reads VRML2 (VRML1 not supported)	wrl, vrml, vrml2	-

* Supported only in the 64-bit version of RobotStudio.

4 Corrections

Overview

This section lists the corrections made.

4.1 Corrections made in 2019.1

PDDs

ID	Title
9276	Visual SafeMove: The function to automatically generate a zone fails if two geometries are used for the upper arm.
9671	Signal Analyzer: Cannot distinguish joint "J1" from different mechanical units in Excel report.
9672	Signal Analyzer Online: Initial values of motion signals not visualized in beginning of recording.
9824	The function Move Along Path fails for paths defined as LOCAL
10147	Online Monitor: Zoom in / Zoom out commands does not work in Online Monitor.
10192	Failed to save station, when saving to StationBackups folder.
10360	Unable to open HOME folder for virtual controllers
10719	Station Viewer: Unable move forward in simulation with arrow keys
10736	Physics cable creation not working
10913	3D attachment jumps when simulations stopped manually
11021	Mirror Path: Exception if "Receiving Robot" is not set.
11093	RAPID Editor / Modify Position: External axis value are deleted
11094	Joint jog: Lock TCP not using correct tooldata for IRB 5350
11133	Create backup: Fails for long file paths
11141	Problems when using RobotWare 5.13 or lower.
11204	Physics cable is getting longer instead of shorter by using the "Shorter" function
11215 11228	Smart Components / Station Logic: Fatal error when connecting output of LogicGate to I/O input
11219	Pack & Go / Unpack & Work: File size very large if RobotWare Add-In MotorsAndGearUnits added to virtual controller
11226	Jobs / Backup: Fails if white-space included if white space added to beginning or end of name string
11270	RAPID Path Editor: Unable to edit SpotL instructions
11322	Visual SafeMove: Unable to restore safety configuration if LockInfo and ValidationInfo was in wrong order in safety configuration file.
11332	Smart Component Design View / Signals and Connection: Missing child Signals in Expose Child Signal dialog
11335	YuMi AbsAcc Recovery routine is missing in RW6.08.01
11385	Visual SafeMove: SafeMove Report shows internal Function Mappings which are not configured by the user
11391	Physics: Exception when opening station if physics joints are configured between parts of a component group.
11411	Collision avoidance configuration tool: Bad performance when adding many large objects

5 Known Limitations

Overview

This section describes known limitations in RobotStudio.

5.1 Visual SafeMove

Protected checksum may change when upgrading RW from 6.04.0x to 6.05 or 6.06

The protected checksum will change if the input and output modules of the internal device is protected. The reason is that two attributes change order.

No visualization of Safe Range for external axes in Visual SafeMove for SafeMove Basic or Pro

When Safe Range is used to limit the axis range of an external axis such as a track motion, there will be no visual indication of the actual range in the graphic view.

Visual SafeMove windows can be re-opened from the Quick Access Toolbar menu

Any windows that are closed can be re-opened using the Quick Access Toolbar menu, as the command Default Layout does not recover these windows.

SafeMove Tool Zone visualization in Online Monitor for robots with external axes

Only TCP robots and track mounted robots will be visualized in the Online Monitor, no other external axes or positioners.

As a consequence, the Online Monitor may show the robot in a non-violating position, even though the safety controller has detected a safety violation and stopped the robot.

5.2 Online

Individual RAPID tasks cannot be stopped for RobotWare 5.60 and later

When running multitasking systems, it is not possible to start and stop individual tasks with the dropdown menu of the task node in the Controller browser. This is due a restriction introduced with RobotWare 5.60 and later.

However, from RobotWare 6.03 onwards, then RAPID tasks to execute or to stop can be selected from RobotStudio RAPID tab.

FlexPendant Viewer running with automatic reloading

When having FlexPendant Viewer running with automatic reloading of the screens and at the same time jogging the robot with the joystick the robot jogging might halt when the FlexPendant Viewer reloads.

5.2.1 Online – Paint

Backup for Paint systems does not create backup of the PIB for IRC5P with RobotWare 5.xx

The Backup function of RobotStudio does not create a backup of the PIB board of the IRC5P system when running RobotWare 5.xx.

Workaround: Create the backup of the PIB board with the FlexPaint Pendant using an USB-stick.

Go Offline does not work for Paint systems

The Go offline function will not create a working Virtual controller system for Paint system unless the Paint package I/O option is set to Simulated.

5.2.2 Online – Integrated Vision

*RobotStudio may hang for up to 60 seconds when configuring jobs with PatMax 1-50

The user interface of RobotStudio may freeze for up to 60 seconds when configuration Integrated Vision jobs with the tool PatMax 1-50.

Workaround: Use PatMax 1-10 instead.

Remaining error – New Emulators

New camera models have been added to the camera emulator option in RobotStudio 6.04.01. Some of these new models are not yet fully compatible. Our recommendation is to choose a camera model from the 7000 series which is fully compatible with Firmware version 4.10.2.

Emulated cameras not discovered when controller in Motors On

For RobotWare 5.61 onwards, the camera discovery mechanism is disabled when the controller is in Motors On. As a consequence, the camera nodes will not appear in the controller browser.

Workaround: Switch to Manual Reduced Speed and use the Refresh command on the Integrated Vision node in the browser to make the cameras appear.

Information – Camera firmware version and update

The minimum firmware version to be used with Integrated Vision is 4.08. If this version is not available for a specific camera model, then the newest version available shall be used.

There are two important things to know before upgrading a sensor

- The user must make sure to first backup the files on the camera. This can be done using the Rapid snippets for camera backup/restore, or the FlexPendant Explorer.
- The latest available firmware version may vary across sensor types. However, when the firmware update utility presents the latest available version it shows the firmware with the highest version number which may not apply to the sensor to be updated. However, the appropriate firmware will be applied.

Information – The spreadsheet view

The spreadsheet view is not enabled when editing in the in the following modes “Add part location tool”, “Add part inspection tool”. Before entering the spreadsheet mode click for example “Setup Image” or Output to Rapid.

Information – Calibration board without fiducial

When using the calibration boards, checkerboard or board with dots, the user must select the preferred origin by clicking and accepting (press enter) three points on the board. Only after these three points have been selected is it possible to click “calibrate” to execute the calibration.

Information - Use default camera settings

If the camera is not using default communication settings the result may be that RAPID instructions return error code “Communication Error”. The safest method to get default settings is to go to Connect->Add Sensor Right click and select “Show all sensors”. Select the device to reset and click “Apply factory settings” in the lower right corner. The most important settings are:

Telnet port: 23

User: “admin”

Password: “”

Information – User Credentials

It is now possible to create user profiles with different access levels on the camera. For detailed information about this, please refer to the Integrated Vision User Manual.

Remaining error – Save image on camera

It is not possible to save an image on the camera using “Save Image”. This is by design, but the dialog still allows the user to try to do this. The result is that the image is not saved and no error message is given.

Remaining error - Connect button greyed out for no reason

It may sometimes happen that the “Connect” button is greyed out, with the tooltip saying the camera is not on the correct subnet although the IP settings are OK.

Workaround: Restart the Integrated Vision Add-In.

Remaining error – VC started from Controller->Add controller does not detect cameras

A VC that is started from Controller->Add controller does not detect cameras on the network, even if the VC_network_definition.xml is correctly configured and the firewall is turned off. The reason is that the controller is not able to detect new cameras on the network when it is in “Motors On” state. When the VC is started stand-alone in RobotStudio it is automatically set to “Motors On” when started.

Workaround: To allow it to discover cameras, turn the control panel key to manual mode or launch the VC as part of a station.

User tip - Removing cameras from configuration

To remove a configured camera from the list of configured cameras, use the configuration editor. Enter *Configuration->Communication->Application Protocols* and remove the desired camera. Perform a warm start to complete the operation.

User tip – Viewing all cameras present on the network

Connect->Add Sensor is normally used for setting the IP addresses of sensors that are not currently on the correct subnet (192.168.125.X). Since the dialog shows all cameras “seen” by the PC, this dialog is useful when error tracing camera network problems.

If a camera does not appear on the network using the “Add sensor” dialog as suggested above, it is advisable to cycle the power of the camera. If the camera receives power from the controller, then cycle power by turning the mains switch.

User tip – Warm start the controller after changing network settings

Whenever changing the network settings of the camera, either from Connect->Add Sensor or Connect->Network settings, it is important to warm start the controller. If this is not done, RAPID instructions will give the error “Communication Error” and the FTP-mounted camera disk is not accessible. If DHCP address is used and persist, please try a static address instead.

5.3 Offline

The robot IRB 1600ID 1.55 m / 6kg replaced by IRB 1660ID 1.55 m / 6 kg in RobotWare 6.04


The robot IRB 1600ID 1.55 m / 6 kg is not available in RobotWare 6.04 and later. It has been renamed to IRB 1660ID 1.55 m / 6 kg. Virtual controller systems for IRB 1600ID 1.55 m / 6 kg based on RobotWare 6.03 cannot be upgraded to RobotWare 6.04 and later. This means that Pack&Go files for this robot based on RobotWare 6.03 cannot be upgraded to RobotWare 6.04 automatically.

Workaround: Re-build or modify the virtual controller system to use IRB 1660ID 1.55 m / 6 kg instead when using RobotWare 6.04 or later.

FlexPendant and RAPID applications run with logged in user rights

A FlexPendant or RAPID application running on the virtual controller runs with the rights of the logged-in Windows user. RAPID applications running in a background task will start to execute when the Pack&Go file is opened and FlexPendant applications will start to execute when the user starts the Virtual FlexPendant.

A warning message has been added to the Unpack&Work wizard to make the user aware that only Pack&Go files (.rspag) from trusted sources shall be opened.

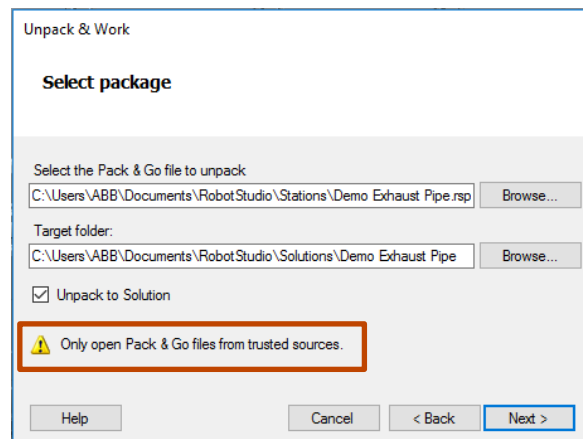

Compatibility of RobotStudio Library and Stations with older RobotStudio versions

RobotStudio is generally **not forwards compatible**, i.e. it is not possible to load stations or libraries created in RobotStudio 6.04 into an earlier version of RobotStudio such as e.g. RobotStudio 5.x, 6.03.02 or earlier. However, RobotStudio is **backwards compatible**, which means stations and libraries created in versions 5.x, 6.03.02 or earlier can be opened in RobotStudio 6.04.

TrueMove path visualization fails for customized zone data.

The TrueMove path visualization function only supports predefined zonedata. It will not work for user defined zonedata.

Backup fails for RobotStudio solutions with SafeMove or Electronic Position Switches

Backups are automatically created for virtual controller systems that are part of a RobotStudio solution when saving the station. For virtual controller systems with the RobotWare options *SafeMove* or *Electronic Positioning Switches* the backup will fail since these systems contain files that are read-only. As a result, an error message is presented in the output window: "<System name>: Backup failed". The station will be successfully saved but there will be no backup created.

Workaround: Ignore the error message "<System name>: Backup failed" and create a manual backup whenever needed. The RobotStudio Option "Enable automatic backup of

controllers in solution" *that is available in* RobotStudio Options -> Robotics -> Virtual Controller" *can be de-selected to disable the backup function.*

IRB 14000 cannot be combined with any other robot

The function system from layout fails if trying to create a MultiMove system where one robot is an IRB 14000. The reason is that the IRB 14000 cannot be combined with any other robot.

Workaround: *Create a separate system for the IRB 14000.*

The Work Envelope function does not support IRB 14000

The function is disabled for the IRB 14000 and cannot be activated.

The 2D work envelope fails for certain robot models

As a result, the generated work envelop may appear distorted.

Update of current selection in the 3D graphics window may be delayed

A problem related to the graphics driver has been observed on certain PCs. The problem is that the update of the current selection in the 3D graphics is delayed until the next redraw.

Workaround: *Add or uncomment the following line in the file RobotStudio.exe.config*

```
<add key="DoublePresentWorkaround" value="true" />
```

Failure to open Pack&Go file to same folder the second time

RobotStudio will prevent Pack&Go files to be opened to the same folder a second time if the station contains VC systems with the EPS or SafeMove option. This is by design to prevent the safety controller configuration file to be accidentally overwritten.

Workaround: *Remove the write protection manually using Windows Explorer.*

Updates of instruction template and code snippets

RobotStudio will not automatically update the user files for instruction templates and code snippets files in the folders:

...\My Documents\RobotStudio\Instruction Templates

...\My Documents\RobotStudio\Code snippets

Workaround: *The user has to manually copy the latest files from*

%ProgramFiles%\ABB Industrial IT\Robotics IT\RobotStudio 5.xx\Instruction Templates,

and

%ProgramFiles%\ABB Industrial IT\Robotics IT\RobotStudio 5.xx\Code Snippets

to the data folder.

IO signals configured with access level 'DEFAULT'

When IO signals are configured with access level 'DEFAULT', only input signals are possible to set/reset from the I/O Simulator and I/O Window. To be able to affect also output signals, set the access level to 'ALL' for them in the Configuration Editor.

VC does not start with RRI option and GSI folder structure missing.

The VC will hang when started with a system containing the RobotWare option *RRI* (Robot Reference Interface) if the GSI folder structure is missing.

Workaround: create GSI Folder before starting the VC inside the HOME directory of the system. See the Application Manual for Robot Reference interface for more information.

System in Guard Stop state in Automatic mode after run-time error

Certain run-time errors may cause the controller system to enter *Guard Stop* state in *Automatic* mode. This is the same behavior as in a physical robot controller system. This typically happens when a run-time error related to Conveyor Tracking occurs. A simulation cannot be started when the controller is in this state.

Workaround: To reset the controller state, open the Control Panel window and first switch to Manual mode, and then back to Automatic mode.

Path handling of instructions with multiple joint targets

The path functions Rotate, Translate, and Mirror do not work as expected with instructions containing via points as jointtargets. The functions will leave the jointtargets as is. Interpolate Path gives an Unknown Error and Tool Compensation reports an error message

Event Manager: Simulation cannot be triggered by analog system signals

The event manager only supports analog station signals, not analog system signals


Conveyor Tracking

*Conveyor objects must be re-added for stations created prior to RS 6.05.

When opening stations with conveyor tracking created prior to RobotStudio 6.05, conveyor objects must be re-added.

Incorrect default values for c1Position and c1Speed for RobotWare 5 with the PaintWare option

The default values for the parameters c1Position and c1Speed may become incorrect for a virtual controller system. The symptom is that its attribute values are all zero, see snapshot below.

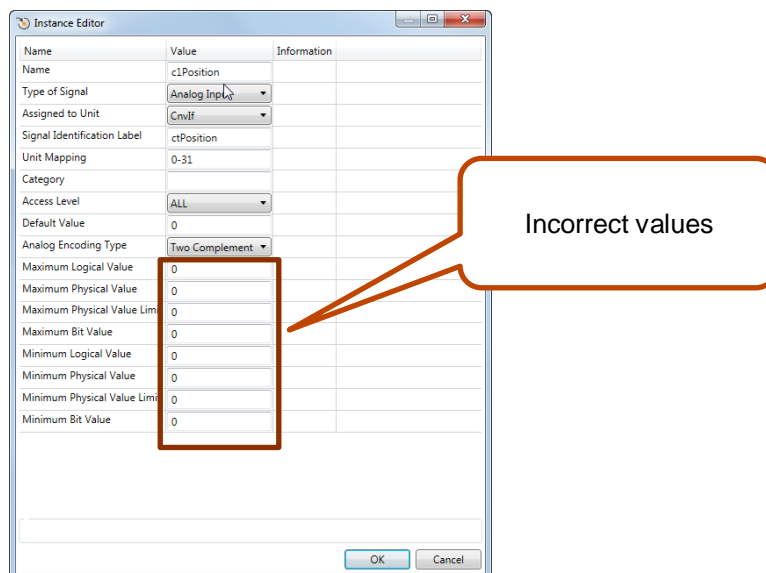

Workaround: Save the following lines to a CFG file named 'TEMP.CFG' or similar and load in the virtual controller followed by a restart.

```
EIO:CFG_1.0:5:0::
#
EIO_SIGNAL:
    -Name "c1Position" -SignalType "AI" -Unit "CnvIf"
```



```
-SignalLabel "ctPosition" -UnitMap "0-31" -Access "ALL"\
-MaxLog 21474.8 -MaxPhys 1 -MaxPhysLimit 1\
-MaxBitVal 2147483647 -MinLog -21474.8 -MinPhys -1 -MinPhysLimit -1\
-MinBitVal -2147483647

-Name "clSpeed" -SignalType "AI" -Unit "CnvIf" -SignalLabel "ctSpeed"\
-UnitMap "32-63" -Access "ALL"\
-MaxLog 21474.8 -MaxPhys 1 -MaxPhysLimit 1\
-MaxBitVal 2147483647 -MinLog -21474.8 -MinPhys -1 -MinPhysLimit -1\
-MinBitVal -2147483647
```

5.3.2 MultiMove

MultiMove error: *'Object reference not set to an instance of an object'*

When the Test Play button is pressed in the MultiMove tool, the following error message may be displayed: *'Object reference not set to an instance of an object'*, but the robot moves and the Status *'Calculation OK'* is displayed. In addition, when *'Create Paths'* is pressed the following message is displayed: *'Can't create paths : Value cannot be null'*, and no paths are created. In the *'Create Paths Settings'*, the WP TCP drop down is empty.

Reason: *Workobject is not set for the current task*

5.3.3 External Axis

Error 50091: *'Restart not possible'* after warm start of a system with external axis

When restarting a system with activated mechanical units the activation state is lost. Then the program can no longer be started from the Virtual FlexPendant, the RAPID Editor or the RAPID Tasks window.

Workaround: *Reset the program pointer ('Program Pointer to Main') before starting the program from the Virtual FlexPendant, the RAPID Editor or the RAPID Tasks window, or, start the program from the Simulation Play button.*

5.3.4 Network Drives and UNC Paths

RobotStudio on computers with roaming user profiles

RobotStudio may fail on PC configurations with roaming user profiles, i.e. when the users' documents folder resides on a server and not on the local disk.

Workaround: *Redefine the 'User Project Folder' to a folder on the local disk (File → Options → General → Files&Folders → User Project Folder).*

Virtual Controller does not support UNC paths

UNC paths cannot be used to locate Virtual Controller systems. Using UNC paths for VC systems will cause the log message *'Failed to initialize FW upgrade framework'* to appear when the system starts. Subsequent attempts to work with the VC such as synchronizing RAPID data will fail.

Creating and starting systems located on a network drive

When using a network drive to store RobotStudio data such as RobotWare systems or the RobotWare mediapool, the following problems may occur

- Virtual controller does not start
- Not possible to open Virtual FlexPendant

Cause: *By default, the .NET Framework does **not** allow execution of code from a remote file system. This means the application may behave unexpectedly if the media used by the system or the system itself resides on a network share.*

Workaround: To resolve this, the user must explicitly grant the required permissions:

1. Open the file Virtual FlexPendant.exe.config located in

C:\Program Files (x86)\ABB Industrial IT\Robotics IT\RobotStudio 5.61\Bin

2. Add the following lines

```
<?xml version="1.0"?>
<configuration>
  <startup useLegacyV2RuntimeActivationPolicy="true">
    <supportedRuntime version="v4.0" sku=".NETFramework,Version=v4.0"/></startup>
    <runtime>                                <!-- THIS IS ONE OF THE NEW LINES!!! -->
      <loadFromRemoteSources enabled="true"/>    <!-- THIS IS ONE OF THE NEW LINES!!! -->
    </runtime>                                <!-- THIS IS ONE OF THE NEW LINES!!! -->
</configuration>
```

The Virtual FlexPendant must be restarted for the changes to take effect.

For further information, see

[http://msdn.microsoft.com/en-us/library/dd409252\(v=vs.100\).aspx](http://msdn.microsoft.com/en-us/library/dd409252(v=vs.100).aspx)



Note

Windows security settings may prevent the file from being directly edited in the default location. Copy the file to your local Documents folder to edit it. Upon completion, you need to manually copy the file back to its original location.

5.3.5 RAPID

Robtargets that are LOCAL to a PROCEDURE cannot be synchronized with RobotStudio

The RobotStudio synchronization engine that translates 3D data of the station to RAPID code and vice versa does not support robtargets that are declared locally to a procedure.

Workaround: Declare the robtargets as global or local to a module instead.

Robtarget names must be unique in RAPID even if they are LOCAL

RobotStudio requires that robtarget names are unique for the RAPID synchronization to work properly, i.e. you cannot have a global robtarget named pMyTarget1 in module A and a local robtarget with the same name in Module B.

Global robtargets cannot be made local through Synchronization to VC

Global robtargets cannot be changed to local through *Synchronization to VC*, the option is disabled (PDD 3140).

Workaround: Change the robtargets to module local in the RAPID Editor and Synchronize to station.

Error Message: Sync. to Station completed with errors

Error Message: Sync to Station completed with errors: New data <name> <type> has same name as existing object in same block <routine>.

When this error message appears, there is a storage type mix-up between data already stored in RS and in the VC. Because of this, and per design, the data is not considered the same data.

Workaround: 1. Ensure all data declarations have the same definition in RS as in RAPID (there is no user interface for this).

2. Sync to station should now work.

3. Sync back to controller, and remember to change the data declarations back to what you want.

5.3.6 Paint

The new conveyor tracking module DSQC2000 is not supported for paint robots.

The new conveyor tracking module DSQC2000 is not supported for paint robots.

Lack of Virtual Controller support for the Paint systems

Paint systems that are configured using the Paint package I/O option Discrete, Compact or Fieldbus, will result in a SysFail state.

Workaround: Re-create the system with the simulated I/O option.

5.3.7 Graphics and Geometry

***First character of part name incorrect when importing assemblies or converting files**

The first character of part or assembly names may become incorrect when importing CAD parts or assemblies into a RobotStudio station. The error only occurs on Windows 7.

Enforce selected graphics device for PCs with multiple graphics cards

For best performance when running RobotStudio on a PC with multiple graphics cards, RobotStudio can be configured to use a specified device. By this option you can ensure maximum performance. This is useful for e.g. Lenovo W540 that has both an integrated Intel graphics device and a discrete NVIDIA card.

Open the file RobotStudio.exe.config that is located in the folders

C:\Program Files (x86)\ABB Industrial IT\Robotics IT\RobotStudio x.y\Bin64
and

C:\Program Files (x86)\ABB Industrial IT\Robotics IT\RobotStudio x.y\Bin
and uncomment the line

```
<add key="GraphicsDeviceType" value="Discrete"/>
```

Valid values are 'Discrete', 'Integrated' and 'Warp' (software renderer).

Note that there are two different files, one for the 32-bit version, and another for the 64-bit version.

Problems when undoing Boolean operations on Geometry

Undoing a Boolean operation might not succeed. To recover from these problems, you need to delete the items that caused the problem.

5.4 ScreenMaker Limitations

A ScreenMaker application may fail to build if the DPI setting is not set to 100%

Certain UI controls in ScreenMaker may fail to build correctly if the DPI setting is not set to 'Smaller – 100%'.

Symptom: The error message caused by this problem will read 'System.Drawing.Font' does not contain a constructor that takes 2 arguments.

Workaround: Set DPI to 100% on your PC.

File changes to FlexPendant applications does not load the changes until a FlexPendant reset

With RobotWare 6.0x the controller's restart will no longer reset the FlexPendant memory. This was part of an effort to improve the restart time of the controller.

This means that after placing a new FlexPendant application file(s) on the FlexPendant unit, you need to manually reset the FlexPendant for it to reload its assets.

To manually reset the FlexPendant you need to use the reset button on the FlexPendant's backside. (See Operating Manual – IRC5 with FlexPendant, 3HAC16590)

Running Routine with Movement

RunRoutine Button control does not always work correct when a routine with movements is called.

As a workaround use instructions like StopMove, StorePath, RestorePath and StartMove to control the movements of the robot.

A Trap routine could be called with a normal button control and in the Trap the above instructions can be used to control the movements of the robot.

PictureBox control as a Widget

If a Picture Box control is created as a widget from a Windows 8 operating system, the control is not shown on the FlexPendant. The behavior is fine with any other operating system like Windows 7.

6 RobotWare Compatibility

6.1 General

Supported RobotWare versions

RobotStudio is distributed with the corresponding version of RobotWare and works with RobotWare 5.07 and later. Please check details below.

6.2 RobotWare 5.05 and 5.06 Compatibility

RobotWare 5.05 and 5.06 including revisions thereof are not supported by RobotStudio 5.15 and later versions. Please use the corresponding version of RobotStudio for managing robot controllers with any of these RobotWare versions.

6.3 RobotWare 5.07 Compatibility

RobotWare 5.07 and its revisions of are supported with the following limitations:

General

The location of the program pointer is not updated in the RAPID Editor during program execution.

Offline

A limitation in the versions 5.07.02, 5.07.03, and, 5.07.04 of RobotWare may cause the Virtual Controller to System Failure state during I-start on certain computers. The problem is due to the ctrl.bin-file not being correctly created.

Workaround: Create an empty ctrl.bin file in the INTERNAL folder of the controller system, and then perform a warm start.



Note

The problem will reappear if the system is I-started.

The virtual controller does not support RobotWare 5.07.08 and RobotWare 5.07.07.

Online

FlexPendant Viewer does not work RobotWare 5.07

6.4 RobotWare 5.08 Compatibility

RobotWare 5.08 and its revisions of are supported with the following limitations:

Offline

RobotWare 5.08 is not supported.

Workaround: Use RobotWare 5.08.01 or later.

6.5 RobotWare 5.10 Compatibility

RobotWare 5.10 and its revisions of are supported with the following limitations:

Offline

Starting a controller will generate internal UAS error in controller error log.

6.6 RobotWare 5.11 Compatibility

RobotWare 5.11 and its revisions of are supported with the following limitations:

Offline

Linear jogging of a robot across joint values that will cause a change of confdata may fail. For example, if the robot is jogged linearly when joint values is passing 90 degrees for axis 1 may cause the robot to stop or to change configuration.

6.7 RobotWare 5.12 Compatibility

RobotWare 5.12 and its revisions of are supported with the following limitations:

Paint backups from RW 5.12.01 not compatible with RW 5.12.02 or later

Restoring a paint system backup from RobotWare 5.12.01 will cause SysFail for RobotWare 5.12.02 or later

Workaround: Add the following parameters to the configuration files

EIO.CFG:

```
EIO_SIGNAL:
    -Name "doMainInMC" -SignalType "DO" -Unit "SysComm" -UnitMap "44"
    -Name "AlHVErrNo" -SignalType "GO" -Unit "SysComm" -UnitMap "150-151" \
    -Access "ALL"
    -Name "AlHVEEn" -SignalType "DO" -Unit "SysComm" -UnitMap "155" \
    -Access "ALL"

EIO_CROSS:
    -Res "AlHVEEn" -Act1 "HVEEnabled"
```

SYS.CFG:

```
CAB_TASK_MODULES:
    -File "INTERNAL:/pntrapid/T_ROB1/cycinfo.sys" -ModName "cycinfo" \
    -Task "T_ROB1"
    -File "INTERNAL:/pntrapid/csvlkup.sys" -ModName "csvlkup" -AllTask \
    -Hidden
```

6.8 RobotWare 5.13 Compatibility

RobotWare 5.13 and its revisions of are supported with the following limitations:

Paint backups from RW 5.12.02, 5.12.03 or RW 5.13 or 5.13.01 not compatible with RW 5.13.02 or RW 5.13.03

There are several changes in the configuration database for I/O (EIO.CFG) and Controller (SYS.CFG) that will cause System Failure if an old backup is loaded. There are also changed in installed RAPID modules. To create a compatible configuration, proceed as follows:

1. Create and start a VC with a RobotWare 5.13.03 system containing the same options as your original backup, but do not load the backup.
2. Save the EIO.CFG and SYS.CFG to file.
3. Compare the saved files with the corresponding files of your backup. (You can use a text file comparison tool for simplification.)
4. Add your system-specific configuration to the general configuration files saved from the 5.13.01-system using a text editor.
5. Replace the files of the original backup with the corresponding modified configuration files.
6. Go through the RAPID modules of the backup and remove the default modules (i.e. those that are not changed by the user).
7. Load the backup and restart the system. You are done.

6.9 RobotWare 5.15 Compatibility

Signal Analyzer Online

The feature Signal Analyzer Online requires RobotWare 5.15.03 or later.

6.10 RobotWare 6 Compatibility

Overview

RobotWare 6.00 and 6.00.01 systems cannot be directly upgraded to RobotWare 6.01. To upgrade a system, you need to create backup and migrate it using the tool '*Migrate Backup or Folder*', then recreate the system and finally, restore the backup.

For this reason, the functions '*Unpack&Work*', '*Go Offline*' and '*New Solution with Station and Robot Controller – From backup*' are blocked to prevent upgrade from RobotWare 6.00 or 6.00.01 to RobotWare 6.01.

RobotStudio, however, is compatible with both RobotWare 6.00 / 6.00.01 and 6.01.

6.11 General Compatibility Limitations

Safety Configuration

Safety configuration of a track motion IRC5 system equipped with a safety controller of type EPS or SafeMove can be done without the need to read track motion parameters manually when using RobotWare 5.11.01 or later. Encrypted parameters needed by the safety controller will be automatically read by EPS Wizard and SafeMove Configurator, respectively.

Configurations

The feature **Configurations** for selecting the robot arm configuration (confdata) may fail, or not present all solutions, in some specific circumstances even when the target is reachable if RobotWare 5.14 or earlier is used.

Workaround: Upgrade to RW5.14.01 or later

6.12 ScreenMaker Compatibility

RobotWare

It is possible to use previous RobotWare versions, but with some limitations.

- ActionTrigger will work only on RobotWare 5.12.02 or later.
- The controls *Button*, *TpsLabel* and *PictureBox* controls was modified in RobotStudio 5.13. The property '*Allow MultipleStates*' of these controls can be accessed from RobotWare 5.13 and later.
- Variant Button will work only on RobotWare 5.14.01 or later
- Conditional Trigger will work only on RobotWare 5.14.01 or later
- Widgets will work only on RobotWare 5.60 or later.

FlexPendant SDK

ScreenMaker should be used with FlexPendant SDK 5.12.02 or later. ScreenMaker allows selection of FlexPendant SDK version when it is launched. If only one version of FlexPendant SDK is available in the system, it is loaded by default.

6.13 Support for future RobotWare versions

RobotStudio 2019.1 supports all future minor revisions of RobotWare 6.09, but no future major releases. For example, RobotStudio 2019.1 will support RobotWare 6.09.01 (if, and when available) but not RobotWare 6.10 or later.