

—
OPTIONS FOR ABB DRIVES

Emergency stop, configurable stop category 0 or 1 (option +Q978) for ACS880-07, -07LC, -17, -17LC, -37, and -37LC drives

User's manual



Emergency stop, configurable stop category 0 or 1 (option +Q978) for ACS880-07, -07LC, -17, -17LC, -37, and -37LC drives

User's manual

Table of contents



1. Safety instructions



4. Electrical installation



7. Start-up and validation test



Table of contents

1 Safety instructions

Contents of this chapter	9
Safety messages	9
Instructions for functional safety circuits	10
Electrical safety precautions	11

2 Introduction to the manual

Contents of this chapter	13
Applicability	13
Target audience	14
Exclusion of liability	14
Quick reference guide for taking a safety function into use	14
Related manuals	14
Terms and abbreviations	16

3 Option description

Contents of this chapter	19
Overview	19
Summary of wirings and settings	20
Operation principle	22
Time schemes with a speed estimate (no safety encoder)	23
Emergency stop, stop category 0	23
Emergency stop, stop category 1 with time monitoring	24
Emergency stop, stop category 1 with ramp monitoring	26
Time schemes with a safety encoder	28
Emergency stop, stop category 0	28
Emergency stop, stop category 1 with time monitoring	29
Emergency stop, stop category 1 with ramp monitoring	32
Operation principle diagrams	33
ACS880-07 drives with frame size R6...R11, ACS880-17 and -37 drives with frame size R8	34
ACS880-17 and -37 drives with frame size R11	35
ACS880-17 and -37 drives with frame size R6i + R6i or R7i + R7i	37
ACS880-07 and -07LC drives with frame size nxDxT + n×R8i	38
ACS880-17, -17LC, -37, and -37LC drives with frame size n×R8i + n×R8i	40
Fault reaction function	41
FSO module	42
Resetting the FSO module	42
FSE-31 module and safety encoder	42
Drive STO function	42

4 Electrical installation

Contents of this chapter	43
Wiring	43
Customer-installed main breaker in ACS880-07LC, -17LC, and -37LC drives	44



5 Parameter settings

Contents of this chapter	45
Competence	45
FSO module parameter settings	45
General parameters	46
Parameters for the STO function	48
Parameters for the SSE function	51
I/O parameters	51
Parameters for Emergency stop, stop category 0	54
Parameters for Emergency stop, stop category 1	54
Changing the stop category from 0 to 1	56
FSE-31 module and safety encoder related parameters	57
Drive parameter settings	58
Additional parameter settings for ACS880-17 and -37 drives with frame size R8 or R11	59
Supply unit parameter settings	59

6 Use of the safety function

Contents of this chapter	61
Activating the safety function	61
Resetting the safety function	62

7 Start-up and validation test

Contents of this chapter	63
Validation of the safety functions	63
Competence	63
Validation procedure	63
Validation test reports	64
Start-up and validation test	64

8 Fault tracing

Contents of this chapter	67
Fault tracing	67
STO circuit connections	67
Other	67
Reporting problems and failures related to safety functions	67

9 Maintenance

Contents of this chapter	69
Safety circuit maintenance	69
Proof test interval	69
Functional safety components	70
Competence	70
Residual risk	71
Intentional misuse	71
Decommissioning	71

10 Technical data

Contents of this chapter	73
--------------------------------	----



Safety data	73
Safety performance with different safety pulse encoders	73
Safety data values	73
ACS880-07 and -07LC drives without the FSE-31 module	74
ACS880-07 and -07LC drives with the FSE-31 module	74
ACS880-17, -17LC, -37, and -37LC drives without the FSE-31 module	75
ACS880-17, -17LC, -37, and -37LC drives with the FSE-31 module	76
ACS880-07LC, -17LC, and -37LC drives without a main breaker	76
Safety component types	76
Safety block diagrams	77
Diagram 1: ACS880-07 drives with frame size R6...R11, ACS880-17 and -37 drives with frame size R8	77
Diagram 2: ACS880-07 and -07LC drives with frame size R8i	78
Diagram 3: ACS880-17, -17LC, -37, -37LC drives with frame size R11 or R6i...R8i	78
Relevant failure modes	78
Fault exclusions	79
Operation delays	79
Ambient conditions	79
Related standards and directives	79
Compliance with the European Machinery Directive	80
Compliance with the Supply of Machinery (Safety) Regulations (UK)	80

Further information



1

Safety instructions

Contents of this chapter

This chapter contains the safety instructions which you must obey when you install, operate and do maintenance on the safety functions of a drive.

Safety messages

These safety messages help to prevent personal injury and damage to the equipment. The hazard levels comply with standard ANSI Z535.6.

The manual uses these warning symbols:



▲DANGER Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



▲WARNING Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



▲CAUTION Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE Is used to address practices not related to physical injury, but which can result in equipment damage.



Instructions for functional safety circuits

This manual does not contain the complete safety instructions of the drive. It only includes the instructions related to the scope of this manual.



▲WARNING Obey these instructions and the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur.

- Only a qualified electrical professional who has sufficient knowledge about functional, machine, and process safety is permitted to install, start up and maintain the safety circuit. All user-made changes are on the user's responsibility.
- The safety function described in this manual does isolate the main or auxiliary circuits from the power supply. Before you do work on the drive, or its main or auxiliary circuits, do the steps in section [Electrical safety precautions \(page 11\)](#).
- Do the validation test of the safety function at the start-up and also after you make changes to the safety circuit.
- Make sure that the functional safety of the machine is maintained in situations where the safety option does not provide protection, for example, during commissioning, system maintenance, fault tracing, or decommissioning.



Electrical safety precautions

These electrical safety precautions are for all persons who do work on the drive, motor cable or motor.



⚠ WARNING Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical installation or maintenance work. Do these steps before you do installation or maintenance work.

1. Prepare for the work.
 - Make sure that you have a work order.
 - Do an on-site risk assessment or job hazard analysis.
 - Make sure that you have the correct tools available.
 - Make sure that the workers are qualified.
 - Select the correct personal protective equipment (PPE).
 - Stop the drive and motor(s).
2. Clearly identify the work location and equipment.
3. Disconnect all possible voltage sources. Make sure that connection is not possible. Lock out and tag out.
 - Open the main disconnecting device of the drive.
 - Open the charging switch if it is present.
 - Open the disconnecter of the supply transformer. (The main disconnecting device in the drive cabinet does not disconnect the voltage from the AC input power busbars of the drive cabinet.)
 - Open the auxiliary voltage switch-disconnector (if it is present), and all other possible disconnecting devices that isolate the drive from dangerous voltage sources.
 - In the liquid cooling unit (if present), open the switch-disconnector of the cooling pumps.
 - If there is a permanent magnet motor connected to the drive, disconnect the motor from the drive with a safety switch or by other means.
 - Open the main isolating device of the drive.
 - Disconnect all dangerous external voltages from the control circuits.
 - After you disconnect power from the drive, wait 5 minutes to let the intermediate circuit capacitors discharge before you continue.
4. Protect other energized parts in the work location against contact and take special precautions when close to bare conductors.
5. Measure that the installation is de-energized. Use a high-quality voltage tester. If the measurement requires that you remove shrouding or other cabinet structures, obey the local laws and regulations applicable to live electrical work. This includes, but is not limited to, electric shock and arc protection.
 - Before and after you measure the installation, verify the operation of the voltage tester on a known voltage source.
 - Make sure that the voltage between the input power terminals of the drive (L1, L2, L3) and the grounding (PE) busbar is zero.
 - Make sure that the voltage between the output power terminals of the drive (U, V, W) and the grounding (PE) busbar is zero.

Important! Repeat the measurement with the DC voltage setting of the voltage tester. Measure between each phase and ground. There is a risk of dangerous DC voltage charging due to leakage capacitances of the motor circuit. This



12 Safety instructions

voltage can remain charged for a long time after the drive power-off. The measurement discharges the voltage.

- Make sure that the voltage between the drive DC busbars and the grounding (PE) busbar is zero.



▲WARNING The busbars inside the cabinet of liquid-cooled drives are partially coated. Measurements made through the coating are potentially unreliable, so only measure at uncoated portions. Note that the coating does not constitute a safe or touch-proof insulation.

6. Install temporary grounding as required by the local regulations.
7. Ask for a permit to work from the person that is responsible for the electrical installation work.





Introduction to the manual

Contents of this chapter

This chapter describes the manual in short and gives some general information for the reader. This chapter also contains a quick reference guide for implementing a safety system.

Applicability

This manual is applicable to ACS880-07, -07LC, -17, -17LC, -37, and -37LC drives which have the option +Q978: Emergency stop, configurable stop category 0 or 1 with opening the main contactor/breaker and STO, with FSO.

Required versions with the FSO-12 module:

- Drives with a UCU-22, -23, or -24 control unit: UCON-22 control board, revision K or later¹⁾
- ACS880 primary control program (AINLX) version 1.80 or later, or ACS880 primary control program (YINLX) version 1.30 or later
- FSO-12 safety functions module: revision C or later
- Drive Composer pro: 1.6 or later.

¹⁾ The control board revision is shown on a sticker on the control unit.

Required versions with the FSO-21 module:

- Drives with a UCU-22, -23, or -24 control unit: UCON-22 control board, revision K or later¹⁾
 - ACS880 primary control program (AINLX) version 2.2 or later, or ACS880 primary control program (YINLX) version 1.30 or later
 - FSO-21 safety functions module: revision D or later
-

- FSE-31 pulse encoder interface module: revision D or later (if used)
- Drive Composer pro: 1.8 or later.

¹⁾ The control board revision is shown on a sticker on the control unit.

This manual shows the default design of the safety circuit ordered with option code +Q978. The actual design can be different from the default design because of customer-defined modifications. Always refer to the documentation delivered with the drive.

Target audience

This manual is intended for people who install, commission, use and service the safety function. Read the manual before working on the unit. You are expected to know the fundamentals of electricity, wiring, electrical components, electrical schematic symbols, and functional safety.

Exclusion of liability

ABB is not responsible for the implementation, verification and validation of the overall safety system. It is the responsibility of the system integrator (or other party) who is responsible for the overall system and system safety.

The system integrator (or other responsible party) must make sure that the entire implementation complies with the instructions in this manual, all relevant standards, directives and local electrical code, and that the system is tested, verified and validated correctly.

Quick reference guide for taking a safety function into use

Task	<input checked="" type="checkbox"/>
Connect the customer-defined wiring (if any). Refer to the wiring instructions in this manual and the circuit diagrams delivered with the drive.	<input type="checkbox"/>
Check and/or set the safety function related parameters (as listed in this manual).	<input type="checkbox"/>
Do the validation test to make sure that the implemented system meets the safety requirements. You can find the instructions for the validation test in this manual and in the FSO module user's manual.	<input type="checkbox"/>
Document the validation test procedure. You can find the guidelines for the validation test report in this manual and in the FSO module user's manual.	<input type="checkbox"/>

Related manuals

Manual	Code
Drive hardware	
ACS880-07 drives (560 to 2800 kW) hardware manual	3AUA0000143261
ACS880-07 drives (45 to 710 kW, 50 to 700 hp) hardware manual	3AUA0000105718
ACS880-07LC drives hardware manual	3AXD50000569786
ACS880-17 drives (160 to 3200 kW) hardware manual	3AXD50000020436
ACS880-17 drives (45 to 400 kW) hardware manual	3AXD50000035158
ACS880-17LC drives hardware manual	3AXD50000250295

Manual	Code
ACS880-37 drives (160 to 3200 kW) hardware manual	3AXD50000020437
ACS880-37 drives (45 to 400 kW) hardware manual	3AXD50000035159
ACS880-37LC drives hardware manual	3AXD50000251407
Drive firmware	
ACS880 primary control program firmware manual (AINLX)	3AUA0000085967
ACS880 primary control program firmware manual (YINLX)	3AXD50001000998
ACS880 diode supply control program firmware manual	3AUA0000103295
ACS880 diode supply control program (YDILX) firmware manual	3AXD50001096489
ACS880 IGBT supply control program firmware manual	3AUA0000131562
ACS880 IGBT supply control program (YISLX and YLHLX) firmware manual	3AXD50001019464
PC tools	
Drive Composer start-up and maintenance PC tool user's manual	3AUA0000094606
Functional safety design tool user's manual	3AXD10000102417
Safety	
Functional safety; Technical guide No. 10	3AUA0000048753
ABB Safety information and solutions	www.abb.com/safety
Options	
ACS-AP-I, -S, -W and ACH-AP-H, -W Assistant control panels user's manual	3AUA0000085685
FSO-12 safety functions module user's manual	3AXD50000015612
FSO-21 safety functions module user's manual	3AXD50000015614
FSE-31 pulse encoder interface module user's manual	3AXD50000016597
Other documents	
Circuit diagrams	Delivered with the drive
Part lists	Delivered with the drive
Safety data report (if ordered with option code +P947)	

You can find manuals on the Internet. See below for the relevant code/link. For more documentation, go to www.abb.com/drives/documents.



[ACS880-07 \(45 to 710 kW\) manuals](#)



[ACS880-07 \(560 to 2800 kW\) manuals](#)



[ACS880-07LC manuals](#)



[ACS880-17 \(45 to 400 kW\) manuals](#)



[ACS880-17 \(160 to 3200 kW\) manuals](#)



[ACS880-17LC manuals](#)



ACS880-37 (45 to 400 kW) manuals



ACS880-37 (160 to 3200 kW) manuals



ACS880-37LC manuals

Terms and abbreviations

Term	Description
Cat.	Classification of the safety-related parts of a control system in respect of their resistance to faults and their subsequent behavior in the fault condition, and which is achieved by the structural arrangement of the parts, fault detection and/or by their reliability. The categories are: B, 1, 2, 3 and 4. (EN ISO 13849-1)
CCF	Common cause failure (EN ISO 13849-1)
D8T	Frame size designation of the diode supply module
DC	Diagnostic coverage (EN ISO 13849-1)
DIIL	Digital input interlock
E-stop	Emergency stop
Frame, frame size	Physical size of the drive or power module
FSE-31	Optional pulse encoder interface module for safety encoder
FSO-12, FSO-21	Optional functional safety modules
HFT	Hardware fault tolerance (IEC 61508)
IGBT	Insulated gate bipolar transistor
Inverter unit	Inverter module(s) under control of one control unit, and related components. One inverter unit typically controls one motor.
modoff	No modulation
NC	Normally closed
PL	Performance level. Levels a...e correspond to SIL (EN ISO 13849-1)
POUS	Prevention of unexpected start-up
SAR	Safe acceleration range
SBC	Safe brake control
SC	Systematic capability (IEC 61508)
SIL	Safety integrity level (1...3) (IEC 61508, IEC 62061, IEC 61800-5-2)
SLS	Safely-limited speed
SS1	Safe stop 1 (IEC/EN 61800-5-2)
SSE	Safe stop emergency
STO	Safe torque off (IEC/EN 61800-5-2)
Stop category	There are three categories of stop functions defined by IEC/EN 60204-1: <ul style="list-style-type: none"> • stop category 0: an uncontrolled stop where power to the machine actuators is removed immediately (for example, STO) • stop category 1: a controlled stop where the machine actuators have power for stopping, after which the power is removed (SS1) • stop category 2: a controlled stop where the machine actuators continue to have power (SS2).
Supply unit	Supply module(s) under control of one control unit, and related components.
T ₁	Proof test interval. Defines the probabilistic failure rate (PFH or PFD _{avg}) for the safety function or subsystem. Performing a proof test at a maximum interval of T ₁ is required to keep the SIL capability valid. The same interval must be followed to keep the PL capability (EN ISO 13849) valid. Note that any T ₁ values given cannot be regarded as a guarantee or warranty.

Term	Description
T_M	Mission time: the period of time covering the intended use of the safety function/device. After the mission time elapses, the safety device must be replaced. Note that any T_M values given cannot be regarded as a guarantee or warranty. (EN ISO 13849-1)
TP	Test pulse

A large, bold, black number '3' is centered within a light grey square with rounded corners.

Option description

Contents of this chapter

This chapter describes the operation and settings of the option +Q978: Emergency stop, configurable stop category 0 or 1 with opening the main contactor/breaker and STO, with FSO.

Overview

Option +Q978 uses the FSO-12 safety functions module (option +Q973) or the FSO-21 safety functions module (option +Q972) for the emergency stop safety function. In this emergency stop option, the drive STO function is activated and the main contactor/breaker is opened.

ABB installs the FSO module, the main contactor (option +F250) or the main breaker (option +F255), and the emergency stop circuit to the drive. ABB sets default parameter values for the option at the factory. The user adjusts the operation of the emergency stop function with the safety parameters at the start-up, for example, sets the stop category (0 or 1). ABB sets stop category 0 at the factory.

If option +L521 is selected, ABB installs the FSO-21 safety functions module and FSE-31 pulse encoder interface module to the drive. With this option, you can use a safety encoder in the application.

Note: The FSO-12 module is not compatible with the FSE-31 module or safety encoders.

Option +Q978 supports these emergency stop functions:

- Emergency stop, stop category 0
This is an uncontrolled stop (IEC/EN 60204-1). When the user pushes the emergency stop button, the Safe torque off (STO) function of the FSO module is activated.
-

20 Option description

This activates the drive STO function and opens the main contactor/breaker. The motor coasts to a stop.

- **Emergency stop, stop category 1**
This is a controlled stop (IEC/EN 60204-1). When the user pushes the emergency stop button, the Safe stop 1 function (SS1) of the FSO module is activated. After the drive decelerates the motor speed to a user-defined zero speed limit, the FSO module activates the drive STO function and opens the main contactor/breaker. The SS1 function can operate in time monitoring or in ramp monitoring mode. In time monitoring mode, the FSO module monitors that a user-defined deceleration time limit is not exceeded. In ramp monitoring mode, the FSO module monitors that the motor decelerates along a user-defined stop ramp.

Note: The safety function request to the FSO module must be active for a minimum of 20 ms.

Note: The main contactor/breaker is controlled with the Safe brake control (SBC) function. For more information on the SBC function, refer to the FSO module user's manual.

To start the drive, the user must release the emergency stop button and then push the emergency stop reset button for 0.3 ... 3 s. This resets the emergency stop circuit, closes the main contactor/breaker and deactivates the drive STO.

The drive main circuit is de-energized while the emergency stop is active and the main contactor/breaker is open, but the auxiliary circuit stays energized. Note that activating the emergency stop function does not isolate the drive or motor from dangerous voltages.

Note: Drives with the Prevention of unexpected start-up (POUS) option (+Q950): If the user activates the POUS function during the emergency stop deceleration ramp, it overrides the emergency stop function. This activates the drive Safe torque off (STO) function, opens the main contactor/breaker and the motor coasts to a stop. For more information on the POUS safety function, refer to [Prevention of unexpected start-up \(option +Q950\) for ACS880-07, -07LC, -17, -17LC, -37, and -37LC drives user's manual \(3AUA0000145922 \[English\]\)](#).

For a detailed description of the STO function, refer to the hardware manual. For more information on the FSO module, refer to the applicable FSO module user's manual.

The design principles of the option +Q978 comply with EN ISO 13850.

The STO and SS1 functions comply with IEC/EN 61800-5-2. For a complete list of related standards and European directives, refer to section [Related standards and directives \(page 79\)](#).

■ Summary of wirings and settings

The wirings and settings of the emergency stop function are:

- The drive has an FSO safety functions module (option +Q973 or +Q972). ABB installs the module at the factory.
 - One emergency stop button is installed on the cabinet door and connected to the FSO module. ABB connects the button at the factory. The customer can add buttons to the emergency stop circuit.
 - One emergency stop reset button is installed on the cabinet door and connected to the FSO module. The reset button also includes an emergency stop indication
-

lamp. ABB connects the button and the indication lamp at the factory. The customer can add reset buttons to the reset circuit.

- The digital output of the FSO module to which the emergency stop indication lamp is connected, is selected as the output for the Stop completed signal. This is an FSO module parameter that ABB sets at the factory by default and the user must check at the start-up.
- The main contactor/breaker is installed inside the cabinet (option +F250 or +F255). The auxiliary safety relay(s) that control the main contactor/breaker is installed inside the cabinet and wired to the FSO module. ABB installs and wires the main contactor/breaker and the auxiliary safety relay(s) at the factory.
- The digital output of the FSO module to which the auxiliary safety relay(s) is connected, is selected as the output for the Safe brake control (SBC) output signal. This is an FSO module parameter that ABB sets at the factory by default and the user must check at the start-up.

Emergency stop, stop category 0:

- The digital inputs of the FSO module to which the emergency stop button is connected, are selected as the inputs for the STO request. This is an FSO module parameter that ABB sets at the factory by default and the user must check at the start-up.

Emergency stop, stop category 1:

The user must set these FSO module parameters at start-up:

- The digital inputs of the FSO module to which the emergency stop button is connected, are selected as the inputs for the SS1 request.
- The SS1 function is set to use either the time monitoring or ramp monitoring mode.
- The stop ramp that is used to decelerate the motor(s) and the monitoring limits (stop ramp time or ramp monitoring limits) are set according to the application requirements.

Additional requirements when a safety encoder is used:

- The drive is equipped with a FSO-21 safety functions module and FSE-31 pulse encoder interface module. If option +L521 is selected, ABB installs the modules at the factory.
 - The motor must be equipped with a safety encoder. The customer installs and connects the safety encoder to the FSE-31 module. The customer must make sure that the required safety integrity (SIL/PL) can be achieved with the safety encoder.
-

Note: The option +Q978 uses the Safe brake control (SBC) function of the FSO module to control the main contactor/breaker. If you use this option, you cannot use the FSO module to control a mechanical brake.

Note: In the option +Q978, the drive STO function is used together with the SBC function of the FSO module, which controls the main contactor/breaker. Thus, every time the drive STO is opened also the main contactor/breaker is opened. For example, if the Safely-limited speed (SLS) function (option +Q965) is included in the drive, the main contactor/breaker is opened after trip limit hits. For more information, see [Safely-limited speed with the encoder interface \(option +Q965\) for ACS880-07, -07LC, -17, -17LC, -37, and -37LC drives user's manual \(3AXD50000019727 \[English\]\)](#).

Operation principle

The operation and configuration of the emergency stop function is slightly different with and without a safety encoder. Only the FSO-21 module supports the safety encoder interface.


Note: The Emergency stop, stop category 1 function uses the SS1 function of the FSO module. The SS1 function uses SAR1 parameters to define the stop ramp. In some situations (for example, in internal fault situations or due to another safety function) the FSO module can activate the Safe stop emergency (SSE) function. The SSE function uses SAR0 parameters to define the stop ramp.

Note: If the FSO module activates the SSE function while the SS1 function is active, the SSE function overrides the SS1 function. Therefore, SAR0 parameters are used instead of SAR1 parameters to define the stop ramp. You must take this into account when you use the SS1 function to implement an emergency stop (stop category 1).

■ Time schemes with a speed estimate (no safety encoder)

Emergency stop, stop category 0

This time scheme diagram illustrates the operation of the Emergency stop, stop category 0 safety function. This option uses the Safe torque off (STO) function of the FSO module.

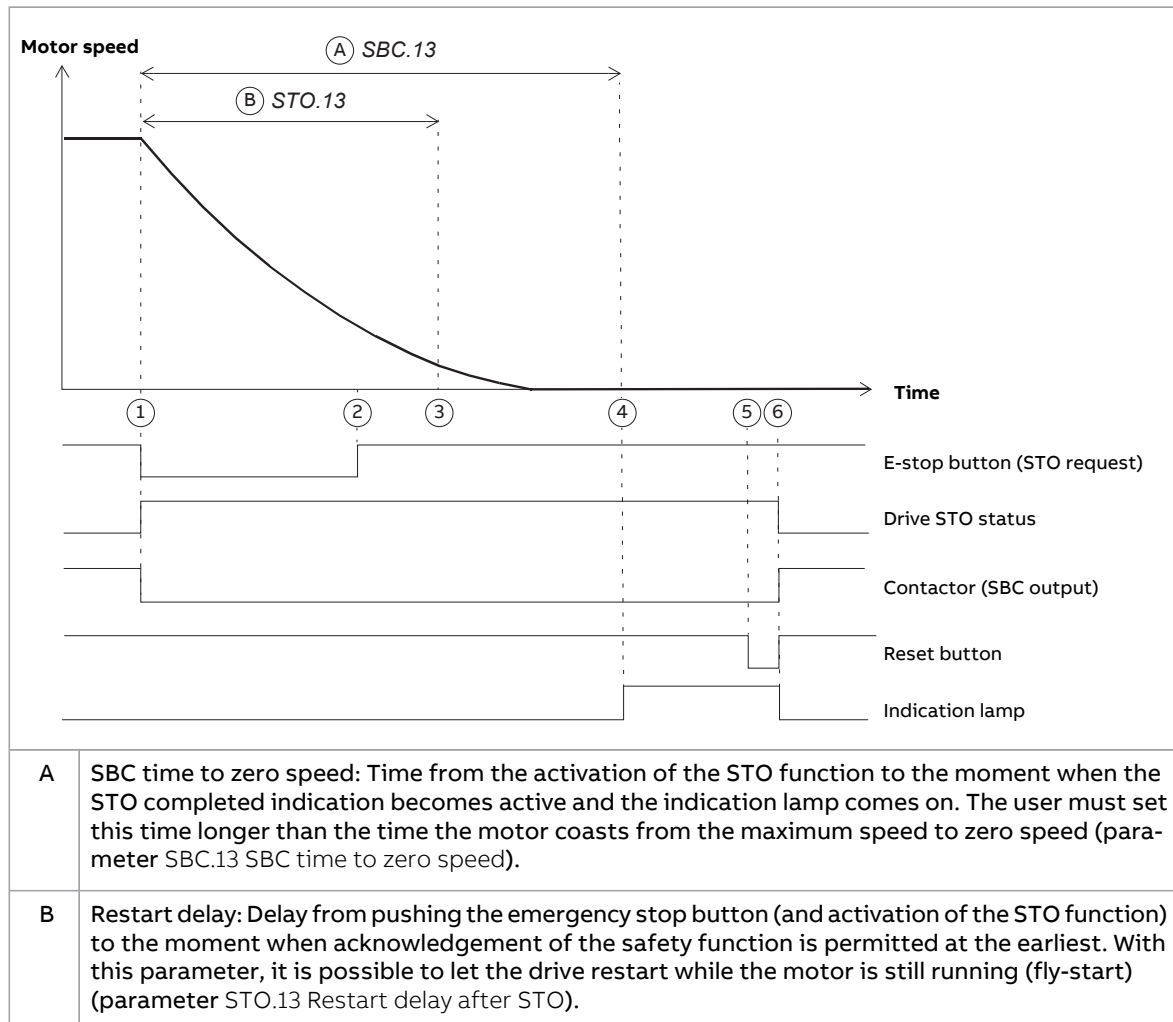


1. The user pushes the emergency stop button. The FSO module activates the drive STO function and opens the main contactor/breaker. The FSO module starts timers for delays A and B.
2. The user releases the emergency stop button.
3. Time B elapsed. Acknowledgement of the STO function is possible.
4. Time A has elapsed. The emergency stop indication lamp comes on.
5. The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
6. The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. The drive is ready for a restart.

Emergency stop, stop category 1 with time monitoring

This time scheme diagram illustrates the operation of the Emergency stop, stop category 1 safety function with time monitoring. This option uses the Safe stop 1 (SS1) function of the FSO module.

Case A: The motor speed reaches the zero speed limit within the user-defined time

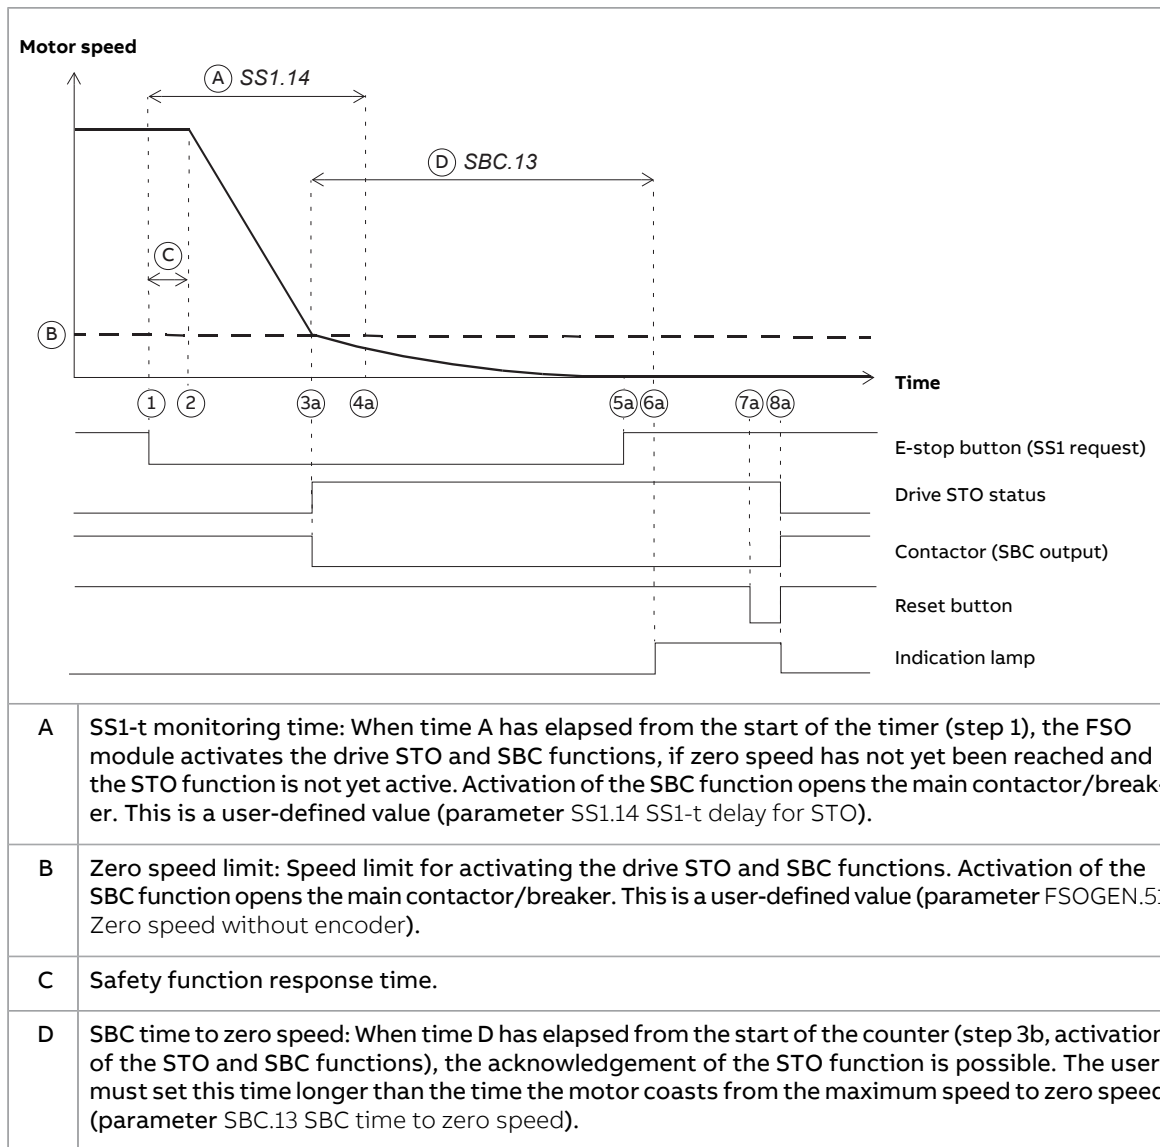

1. The user pushes the emergency stop button (this activates the SS1 function of the FSO module). The FSO module starts a timer for delay A.
2. The drive starts to decelerate the motor along the user-defined stop ramp (SAR1 parameter 200.112 SAR1 ramp time to zero).
3. a) The motor speed goes below the zero speed limit (B). The FSO module activates the drive STO and SBC functions (this opens the main contactor/breaker).


Note: You can set an additional delay for the STO and SBC activation (parameter SS1.15 SS1-r ramp zero speed delay for STO).

4. a) Time A has elapsed. The STO function is already active. In this case, this time has no effect.

5. a) The user releases the emergency stop button.
6. a) Time D has elapsed. The emergency stop indication lamp comes on. Acknowledgement of the STO function is possible.
7. a) The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
8. a) The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. The drive is ready for a restart.

Case B: The motor speed does not reach the zero speed limit within the user-defined time

Time A has elapsed from the emergency stop command (step 1) but the motor speed is higher than the zero speed limit.

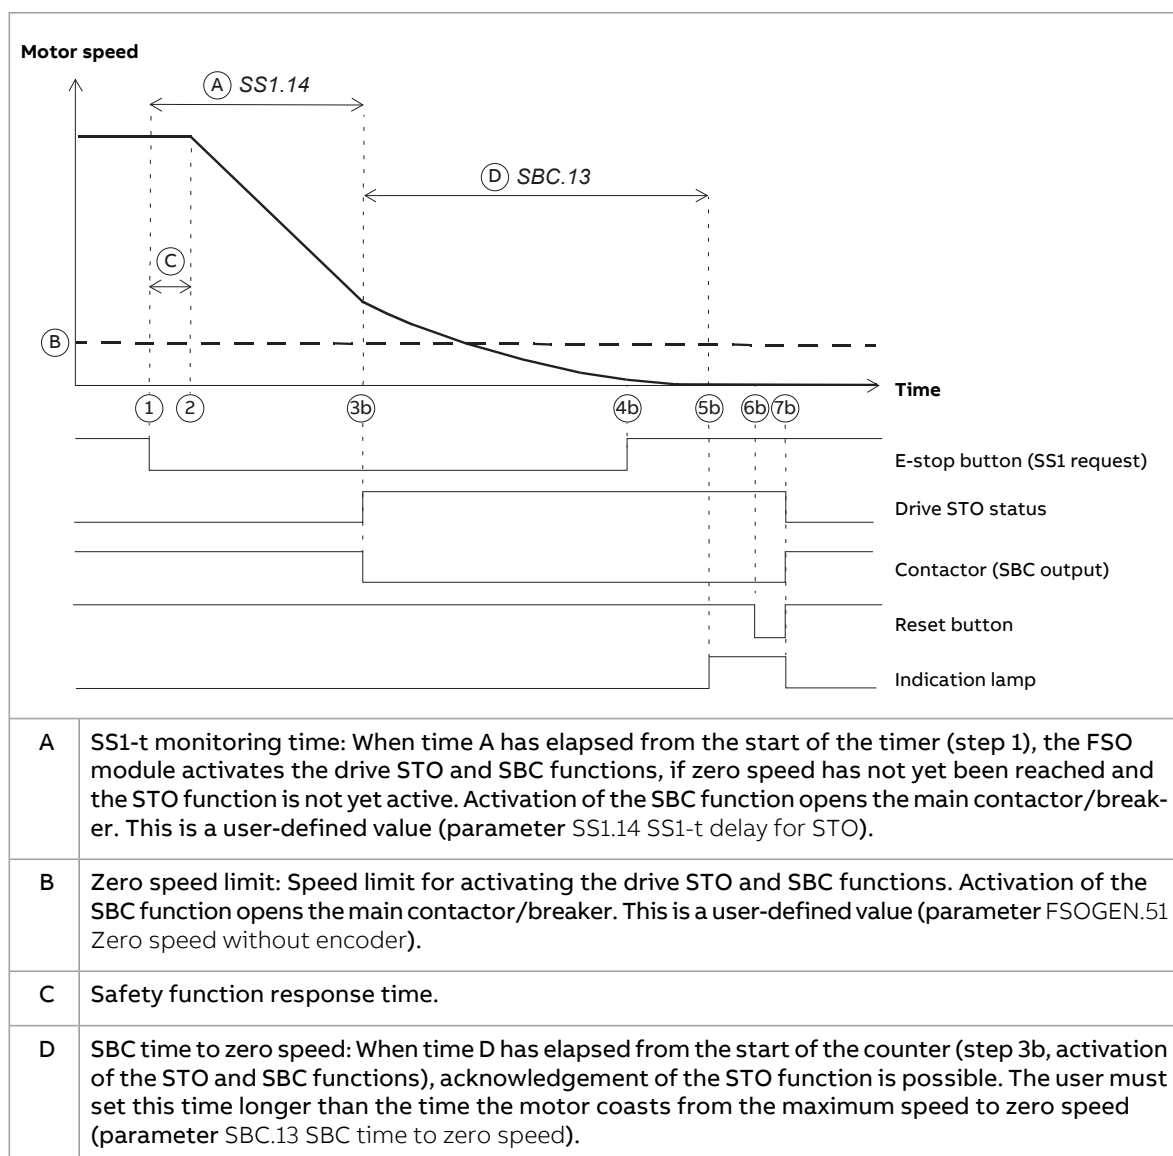

1. The user pushes the emergency stop button (this activates the SS1 function of the FSO module). The FSO module starts a timer for delay A.
2. The drive starts to decelerate the motor along the user-defined stop ramp (SAR1 parameter 200.112 SAR1 ramp time to zero).


26 Option description

3. b) The FSO module activates the drive STO and SBC functions (case B), opens the main contactor/breaker and starts a counter for time D. The motor coasts to a stop.
4. b) The user releases the emergency stop button.
5. b) Time D has elapsed. The emergency stop indication lamp comes on. Acknowledgement of the STO function is possible.
6. b) The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
7. b) The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. If the FSO module is configured to generate a fault after a limit hit (parameter FSOGEN.62), the user must reset the drive before it is ready for a restart.

Emergency stop, stop category 1 with ramp monitoring

This time scheme diagram illustrates the operation of the Emergency stop, stop category 1 safety function with ramp monitoring. This option uses the Safe stop 1 (SS1) function of the FSO module.

Case A: The motor speed reaches the zero speed limit within the user-defined stop ramp monitoring window

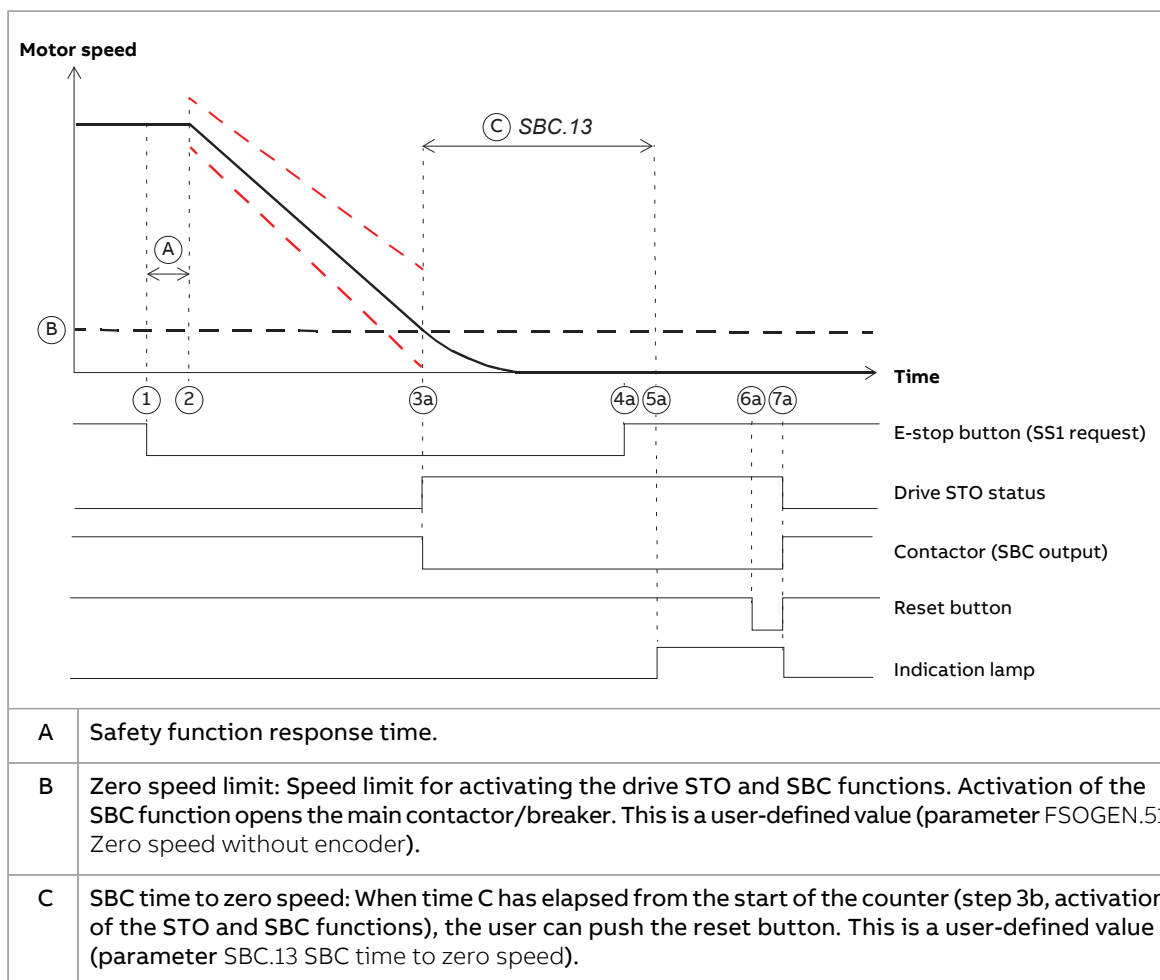


1. The user pushes the emergency stop button (this activates the SS1 function of the FSO module).
2. The drive starts to decelerate the motor along the user-defined stop ramp. The FSO module starts the ramp monitoring (SAR1 parameters 200.112, SARx.21, SARx.22 and SARx.02).
3. a) The motor speed reaches the zero speed limit. The FSO module activates the drive STO and SBC functions (this opens the main contactor/breaker) and stops the ramp monitoring.

Note: You can set an additional delay for the STO and SBC activation (parameter SS1.15 SS1-r ramp zero speed delay for STO).

4. a) The user releases the emergency stop button.
5. a) Time C has elapsed. The emergency stop indication lamp comes on. Acknowledgement of the STO function is possible.
6. a) The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
7. a) The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. The drive is ready for a restart.

Case B: The motor speed does not follow the user-defined stop ramp monitoring window

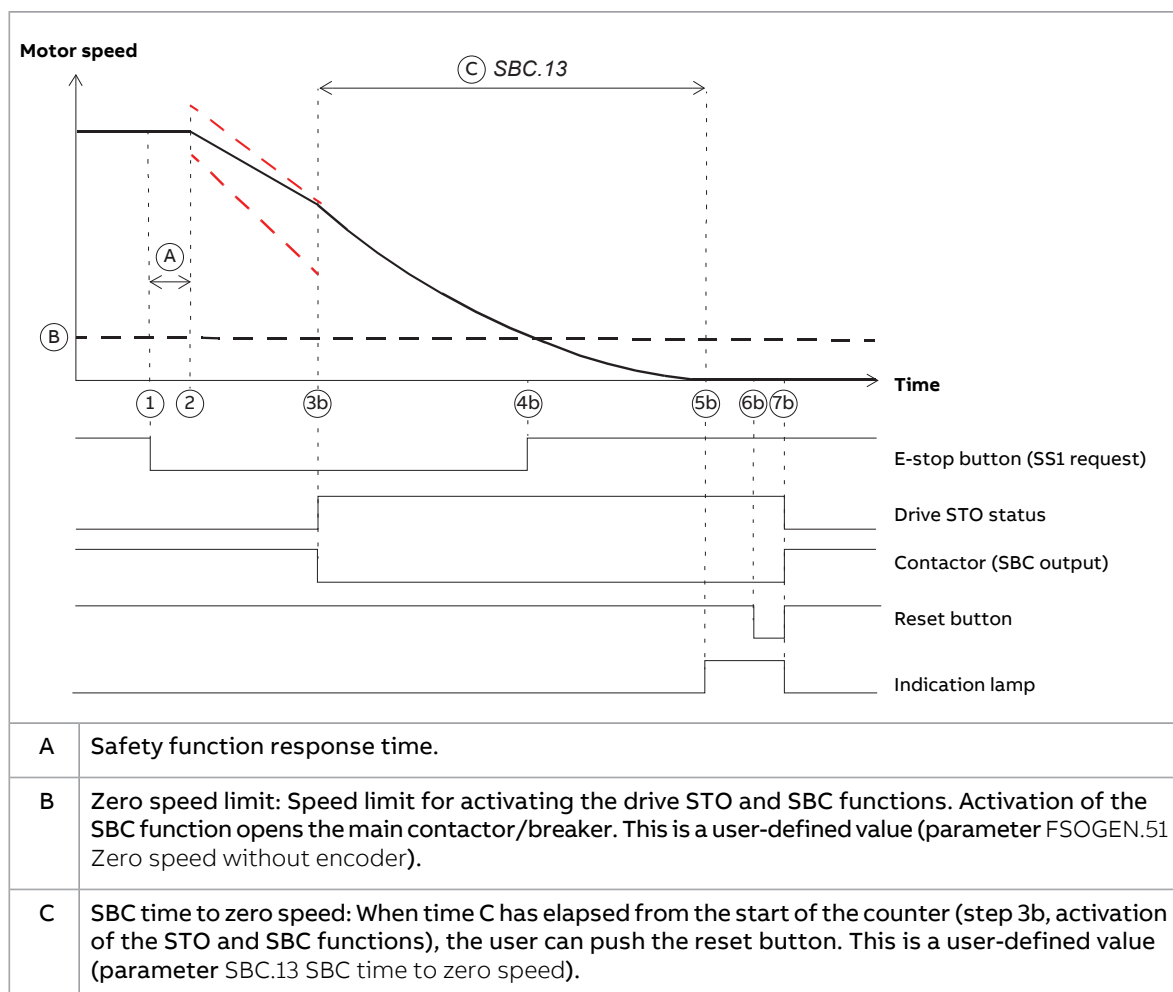


1. The user pushes the emergency stop button (this activates the SS1 function of the FSO module).
2. The drive starts to decelerate the motor along the user-defined stop ramp. The FSO module starts the ramp monitoring (SAR1 parameters 200.112, SARx.21, SARx.22 and SARx.02).
3. b) The FSO module activates the drive STO and SBC functions, opens the main contactor/breaker and stops the ramp monitoring. The FSO module starts a counter for the SBC time to zero speed (C). The motor coasts to a stop.
4. b) The user releases the emergency stop button.
5. b) Time C has elapsed. The emergency stop indication lamp comes on. Acknowledgement of the STO function is possible.
6. b) The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
7. b) The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. If the FSO module is configured to generate a fault after a limit hit (parameter FSOGEN.62), the user must reset the drive before it is ready for a restart.

■ **Time schemes with a safety encoder**

Emergency stop, stop category 0

This time scheme diagram illustrates the operation of the Emergency stop, stop category 0 safety function when a safety encoder is used. This option uses the Safe torque off (STO) function of the FSO-21 module.

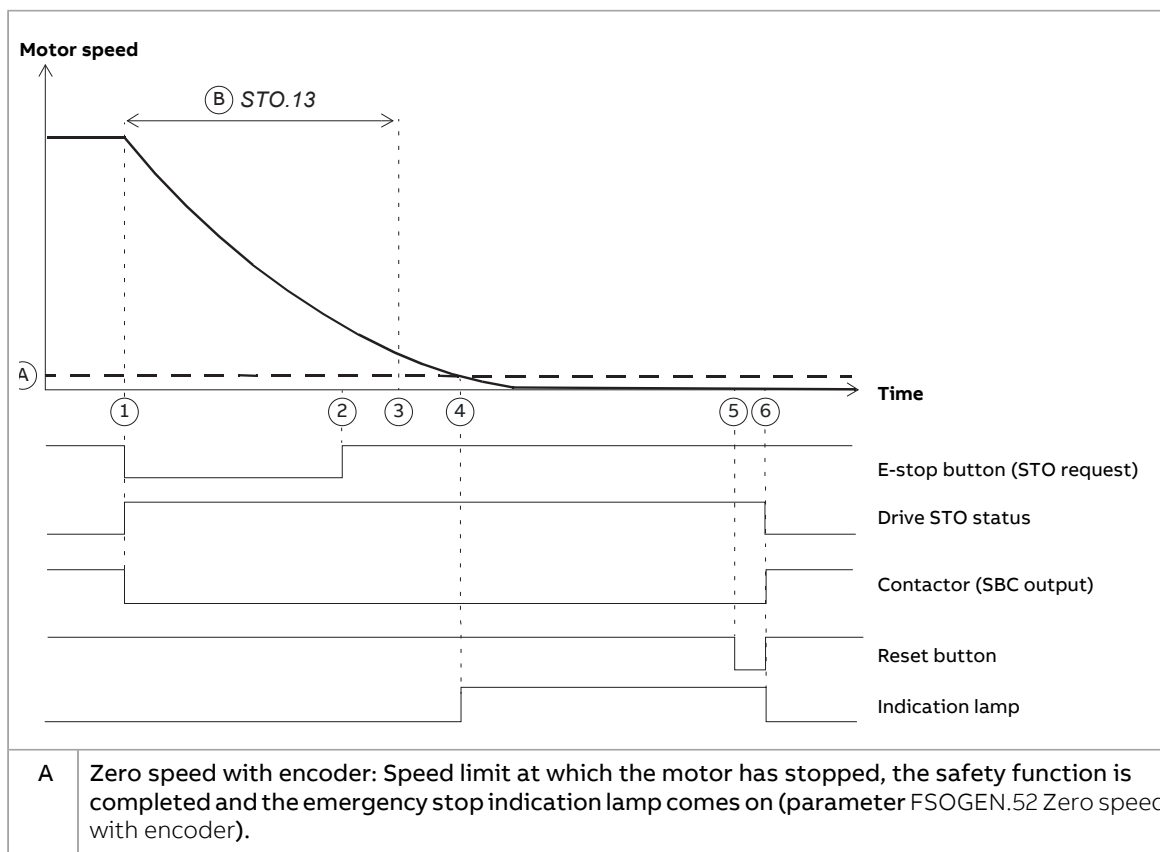


B	Restart delay: Delay from pushing the emergency stop button (and activation of the STO function) to the moment when the acknowledgement of the safety function is permitted at the earliest. With this parameter, it is possible to allow a restart of the drive while the motor is still running (fly-start) (parameter STO.13 Restart delay after STO).
----------	---

1. The user pushes the emergency stop button. The FSO module activates the drive STO function. The FSO module starts a timer for delays A and B.
2. The user releases the emergency stop button.
3. Time B has elapsed. Acknowledgement of the STO function is possible even though the motor is still running. (In this example, the user pushes the reset button in step 5).
4. The motor speed goes below the zero speed limit (A). The emergency stop indication lamp comes on.
5. The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
6. The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. The drive is ready for a restart.

Emergency stop, stop category 1 with time monitoring

This time scheme diagram illustrates the operation of the Emergency stop, stop category 1 safety function with time monitoring when a safety encoder is used. This option uses the Safe stop 1 (SS1) function of the FSO-21 module.

Case A: The motor speed reaches the zero speed limit within the user-defined time

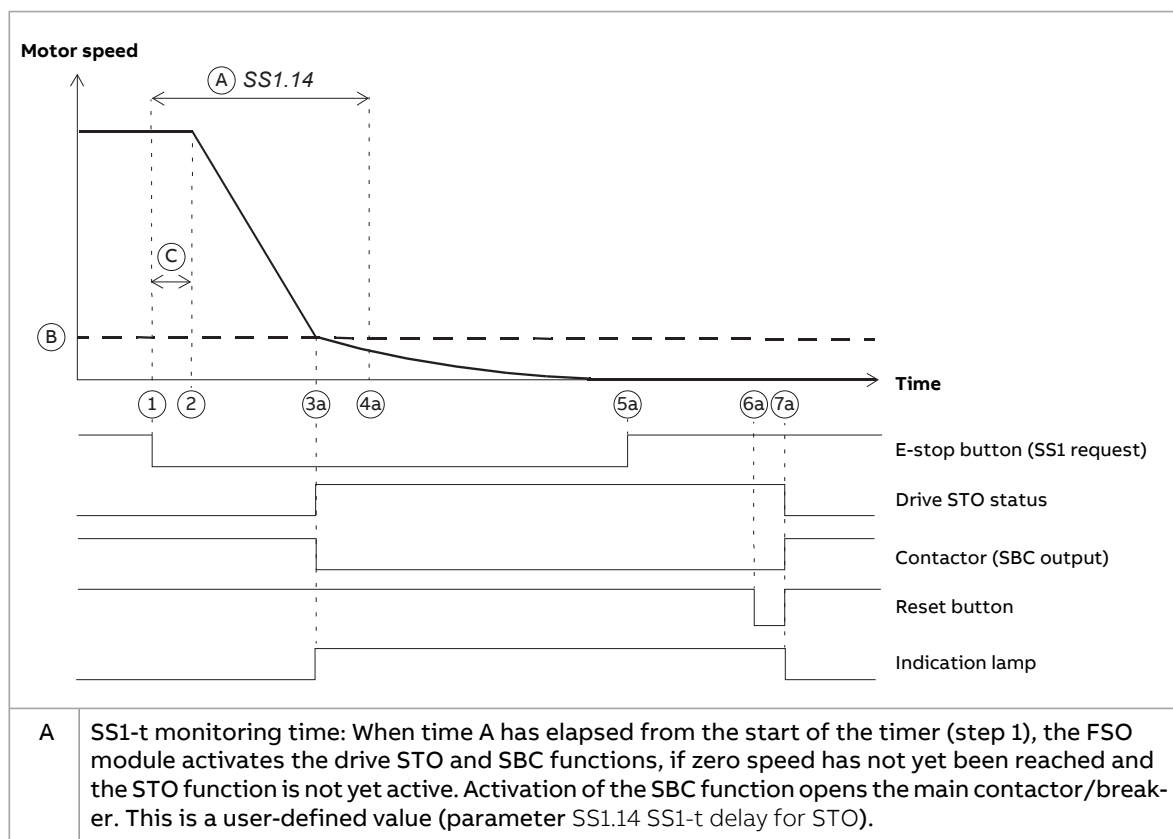

30 Option description

B	Zero speed limit: Speed limit for activating the drive STO and SBC functions. Activation of the SBC function opens the main contactor/breaker. This is a user-defined value (parameter FSO-GEN.52 Zero speed with encoder).
C	Safety function response time.


1. The user pushes the emergency stop button (this activates the SS1 function of the FSO module). The FSO module starts a timer for delay A.
2. The drive starts to decelerate the motor along the user-defined stop ramp (SAR1 parameter 200.112 SAR1 ramp time to zero).
3. a) The motor speed goes below the zero speed limit (B). The FSO module activates the drive STO and SBC functions (this opens the main contactor/breaker). The emergency stop indication lamp comes on. Acknowledgement of the STO function is possible.

Note: You can set an additional delay for the STO and SBC activation (parameter SS1.15 SS1-r ramp zero speed delay for STO).

4. a) Time A has elapsed. The STO function is already active. In this case, this time has no effect.
5. a) The user releases the emergency stop button.
6. a) The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
7. a) The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. The drive is ready for a restart.

Case B: The motor speed does not reach the zero speed limit within the user-defined time

Time A has elapsed from the emergency stop command (step 1) but the motor speed still exceeds the zero speed limit.

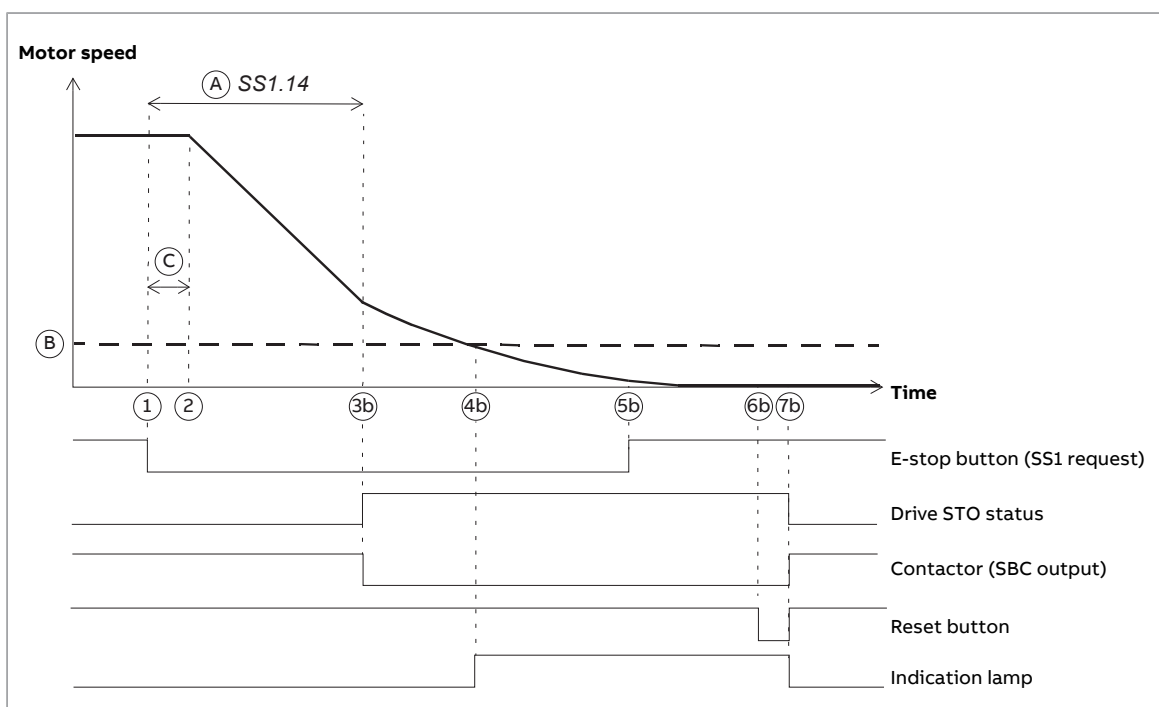


A	SS1-t monitoring time: When time A has elapsed from the start of the timer (step 1), the FSO module activates the drive STO and SBC functions, if zero speed has not yet been reached and the STO function is not yet active. Activation of the SBC function opens the main contactor/breaker. This is a user-defined value (parameter SS1.14 SS1-t delay for STO).
B	Zero speed limit: Speed limit for activating the drive STO and SBC functions. Activation of the SBC function opens the main contactor/breaker. This is a user-defined value (parameter FSO-GEN.52 Zero speed with encoder).
C	Safety function response time.

1. The user pushes the emergency stop button (this activates the SS1 function of the FSO module). The FSO module starts a timer for delay A.
 2. The drive starts to decelerate the motor along the user-defined stop ramp (SAR1 parameter 200.112 SAR1 ramp time to zero).
 3. b) The FSO module activates the drive STO and SBC functions, and opens the main contactor/breaker. The motor coasts to a stop.
 4. b) The motor speed reaches the zero speed limit (B). The emergency stop indication lamp comes on. Acknowledgement of the STO function is possible.
 5. b) The user releases the emergency stop button.
 6. b) The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
 7. b) The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. If the FSO module is configured to generate a fault after a limit hit (parameter FSOGEN.62), the user must reset the drive before it is ready for a restart.
-

Emergency stop, stop category 1 with ramp monitoring

This time scheme diagram illustrates the operation of the Emergency stop, stop category 1 safety function with ramp monitoring when a safety encoder is used. This option uses the Safe stop 1 (SS1) function of the FSO-21 module.

Case A: The motor speed reaches the zero speed limit within the user-defined stop ramp monitoring window

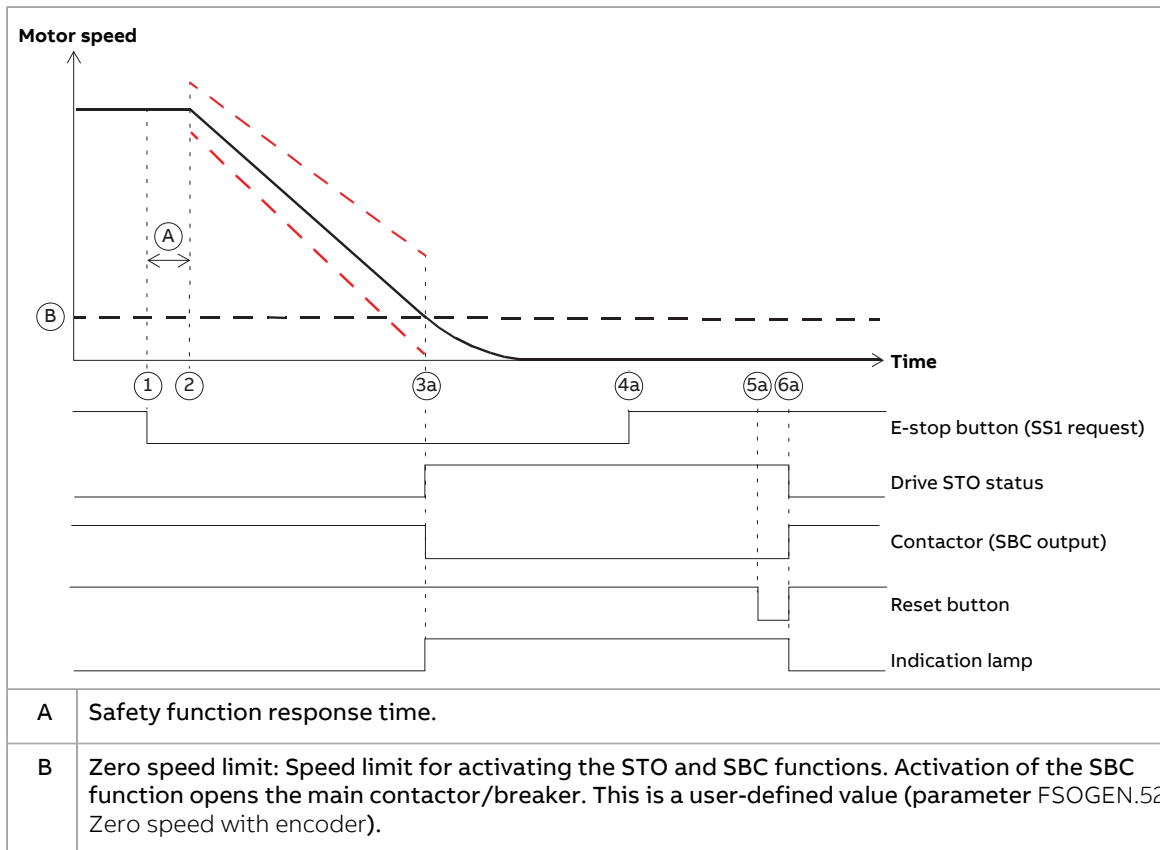


1. The user pushes the emergency stop button (this activates the SS1 function of the FSO module).
2. The drive starts to decelerate the motor along the user-defined stop ramp. The FSO module starts the ramp monitoring (SAR1 parameters 200.112, SARx.21, SARx.22 and SARx.02).
3. a) The motor speed reaches the zero speed limit (B). The FSO module activates the drive STO and SBC functions (this opens the main contactor/breaker) and stops the ramp monitoring. The emergency stop indication lamp comes on. Acknowledgement of the STO function is possible.

Note: You can set an additional delay for the STO and SBC activation (parameter SS1.15 SS1-r ramp zero speed delay for STO).

4. a) The user releases the emergency stop button.
5. a) The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
6. a) The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. The drive is ready for a restart.

Case B: The motor speed does not follow the user-defined stop ramp monitoring window

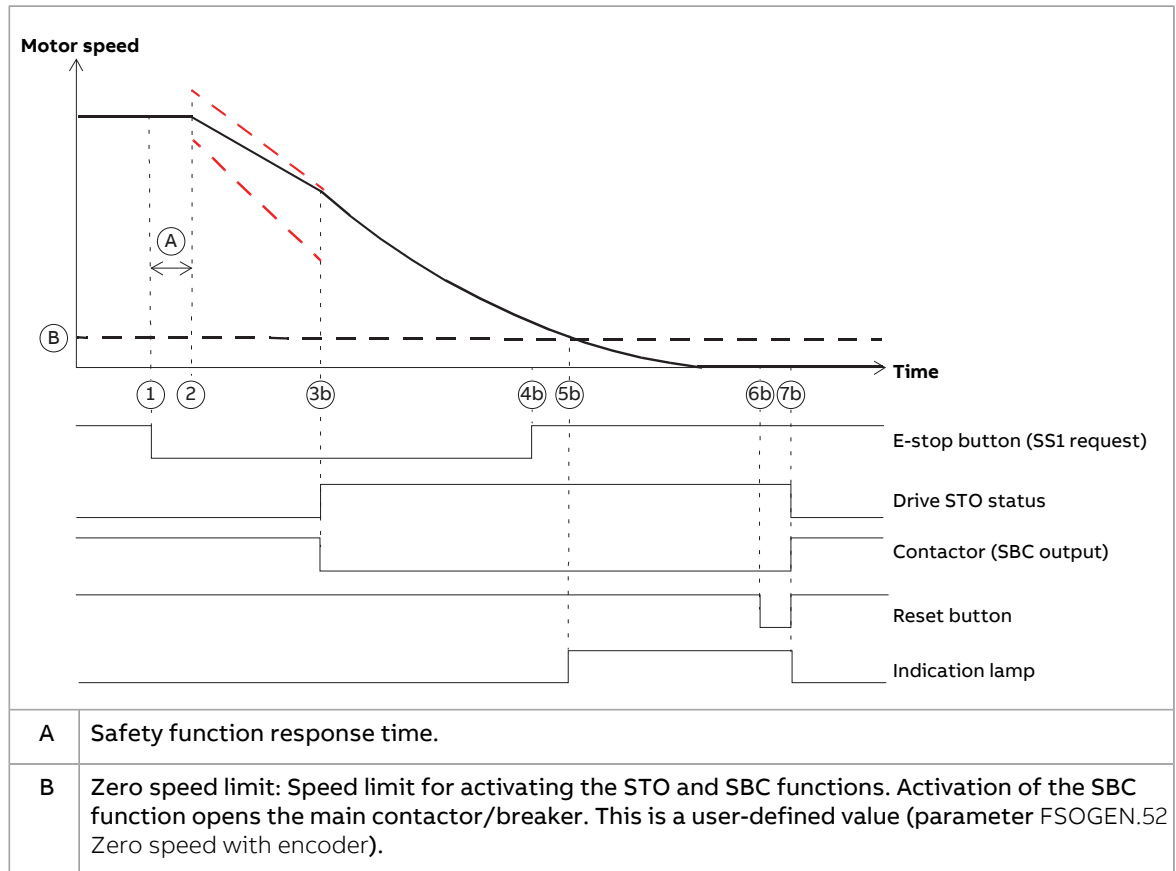

1. The user pushes the emergency stop button (this activates the SS1 function of the FSO module).
2. The drive starts to decelerate the motor along the user-defined stop ramp. The FSO module starts the ramp monitoring (SAR1 parameters 200.112, SARx.21, SARx.22 and SARx.02).
3. b) The FSO module activates the drive STO and SBC functions, opens the main contactor/breaker and stops the ramp monitoring. The motor coasts to a stop.
4. b) The user releases the emergency stop button.
5. b) The motor speed reaches the zero speed limit (B). The emergency stop indication lamp comes on. Acknowledgement of the STO function is possible.
6. b) The user pushes the reset button (this resets the emergency stop circuit and acknowledges the STO function).
7. b) The FSO module deactivates the STO function in the drive and closes the main contactor/breaker. The emergency stop indication lamp goes off. If the FSO module is configured to generate a fault after a limit hit (parameter FSOGEN.62), the user must reset the drive before it is ready for a restart.


■ Operation principle diagrams

These diagrams are example circuit diagrams without the safety encoder interface.

34 Option description

Implementation of main contactor/breaker and charging circuit can vary depending on the product. For a more detailed description, refer to the circuit diagrams delivered with the drive.

ACS880-07 drives with frame size R6...R11, ACS880-17 and -37 drives with frame size R8

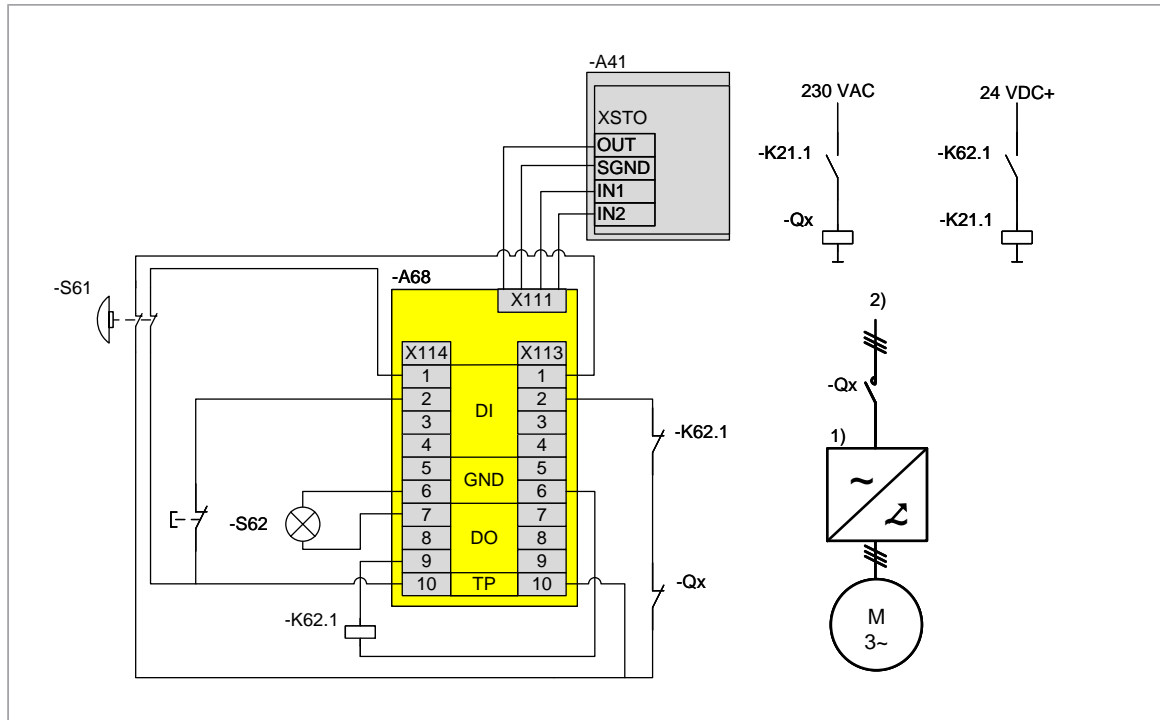


A41	Inverter control unit
A68	FSO-12 or FSO-21 safety functions module
S61	Emergency stop button
S62	Emergency stop reset button with indicator light
K21.1	Safety relay
K62.1	Safety relay
Qx	Main contactor/breaker (Q2 or Q1)
X111	STO connections to inverter control unit
X113, X114	Terminal block in the FSO module
TP	Test pulse(s) for digital input
1)	Drive module
2)	Main circuit

Step	Operation
	Initial status: The drive is in operation and the motor is running.
1	The user activates emergency stop with the emergency stop button [S61]. This activates the safety function in the FSO module.

Step	Operation
2	<p><u>Emergency stop, stop category 0:</u> The FSO module [A68] activates the drive STO function and opens the main contactor/breaker [Qx]. The motor coasts to a stop.</p> <p><u>Emergency stop, stop category 1:</u> The drive decelerates the motor to zero speed. The FSO module [A68] then activates the drive STO function and opens the main contactor/breaker [Qx].</p>
3	The emergency stop reset button indicator light [S62] comes on.
4	<p>Normal operation resumes after the user:</p> <ul style="list-style-type: none"> releases the emergency stop button [S61] to normal (up) position pushes the emergency stop reset button [S62], which resets the emergency stop circuit and closes the main contactor/breaker [Qx] resets the drive if a fault was generated (see FSO parameter FSOGEN.61 STO indication ext request, and drive parameter 31.22 STO indication run/stop) makes sure that the drive has received the start signal (depends on the configuration, see the firmware manual).

ACS880-17 and -37 drives with frame size R11

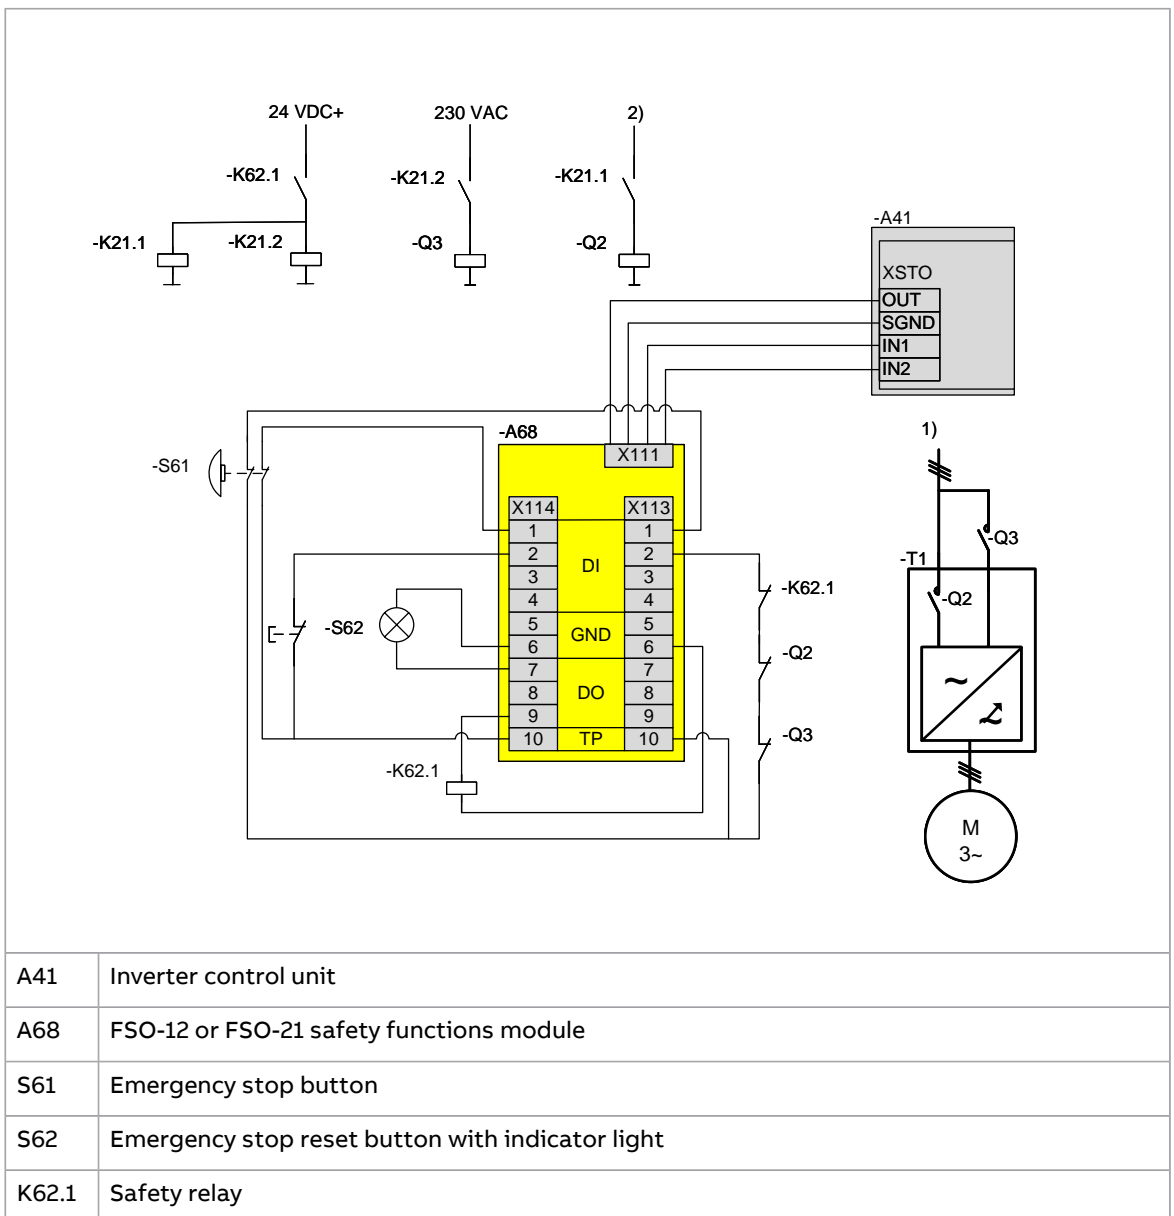


36 Option description

K21.1	Safety relay
K21.2	Safety relay
Q2	Main contactor
Q3	Charging contactor
X111	STO connections to inverter control unit
X113, X114	Terminal block in the FSO module
T1	Drive module R11
TP	Test pulse(s) for digital input
1)	Main circuit
2)	Drive module internal supply

Step	Operation
	Initial status: The drive is in operation and the motor is running.
1	The user activates emergency stop with the emergency stop button [S61]. This activates the safety function in the FSO module.
2	<p><u>Emergency stop, stop category 0</u>: The FSO module [A68] activates the drive STO function, opens the main contactor [Q2], and opens the charging supply contactor [Q3].</p> <p><u>Emergency stop, stop category 1</u>: The drive decelerates the motor to zero speed. The FSO module [A68] then activates the drive STO function, opens the main contactor [Q2], and opens the charging supply contactor [Q3].</p>
3	The emergency stop reset button indicator light [S62] comes on.
4	<p>Normal operation resumes after the user:</p> <ul style="list-style-type: none"> • releases the emergency stop button [S61] to normal (up) position • pushes the emergency stop reset button [S62], which resets the emergency stop circuit and closes the main contactor [Q2] • resets the drive/inverter unit if a fault was generated (see FSO parameter FSOGEN.61 STO indication ext request, and drive parameter 31.22 STO indication run/stop) • makes sure that the drive has received the start signal (depends on the configuration, see the firmware manual).

ACS880-17 and -37 drives with frame size R6i + R6i or R7i + R7i

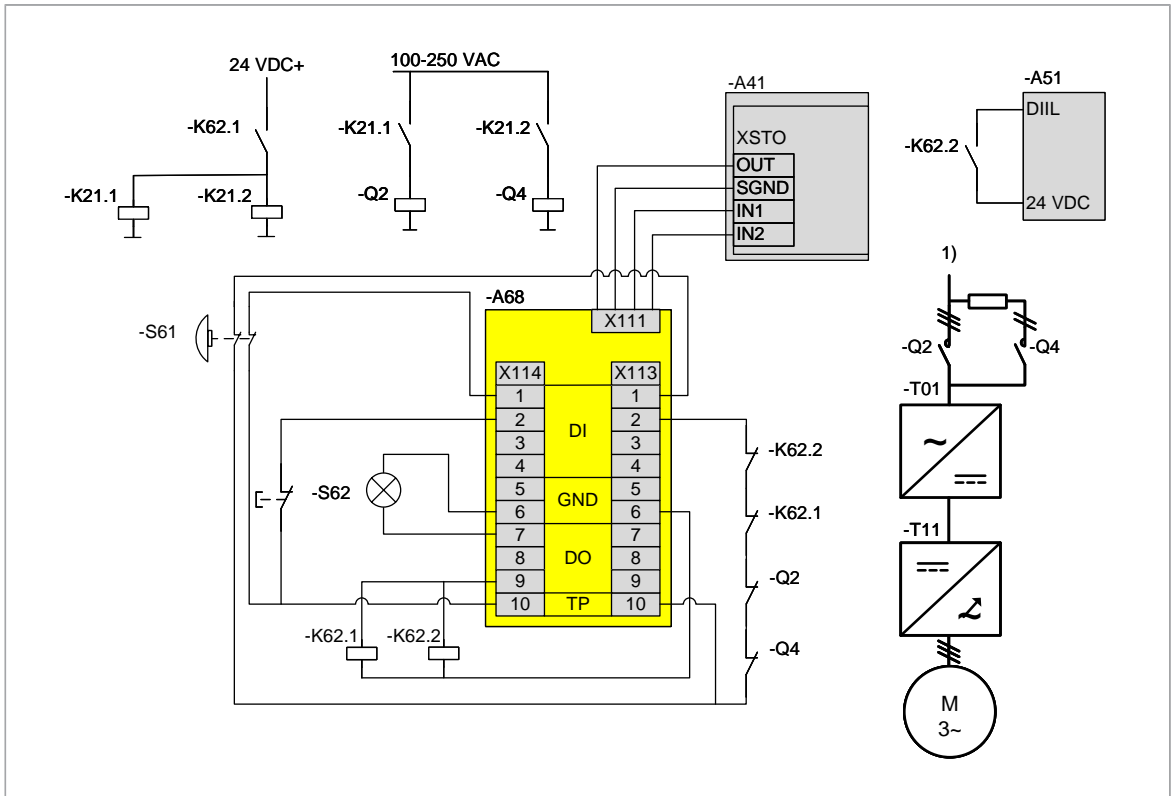


A41	Inverter control unit
A51	Supply control unit
A68	FSO-12 or FSO-21 safety functions module
K21.1	Safety relay
K21.2	Safety relay
K62.1	Safety relay
K62.2	Safety relay
Q2	Main contactor
Q4	Charging contactor
T01	Supply unit
T11	Inverter unit
S61	Emergency stop button
S62	Emergency stop reset button with indicator light
X111	STO connections to inverter control unit
X113, X114	Terminal block in the FSO module
1)	Main circuit

38 Option description

Step	Operation
	Initial status: The drive is in operation and the motor is running.
1	The user activates emergency stop with the emergency stop button [S61]. This activates the safety function in the FSO module.
2	<u>Emergency stop, stop category 0:</u> The FSO module [A68] activates the inverter unit STO function, and opens the main contactor [Q2] and charging contactor [Q4]. <u>Emergency stop, stop category 1:</u> The inverter unit decelerates the motor to zero speed. The FSO module [A68] then activates the inverter unit STO function, and opens the main contactor [Q2] and charging contactor [Q4].
3	The emergency stop reset button indicator light [S62] comes on.
4	Normal operation resumes after the user: <ul style="list-style-type: none"> releases the emergency stop button [S61] to normal (up) position pushes the emergency stop reset button [S62], which resets the emergency stop circuit and closes the main contactor [Q2] resets the drive/inverter unit if a fault was generated (see FSO parameter FSOGEN.61 STO indication ext request, and drive parameter 31.22 STO indication run/stop) makes sure that the drive has received the start signal (depends on the configuration, see the firmware manual).

ACS880-07 and -07LC drives with frame size nxDxT + nXR8i

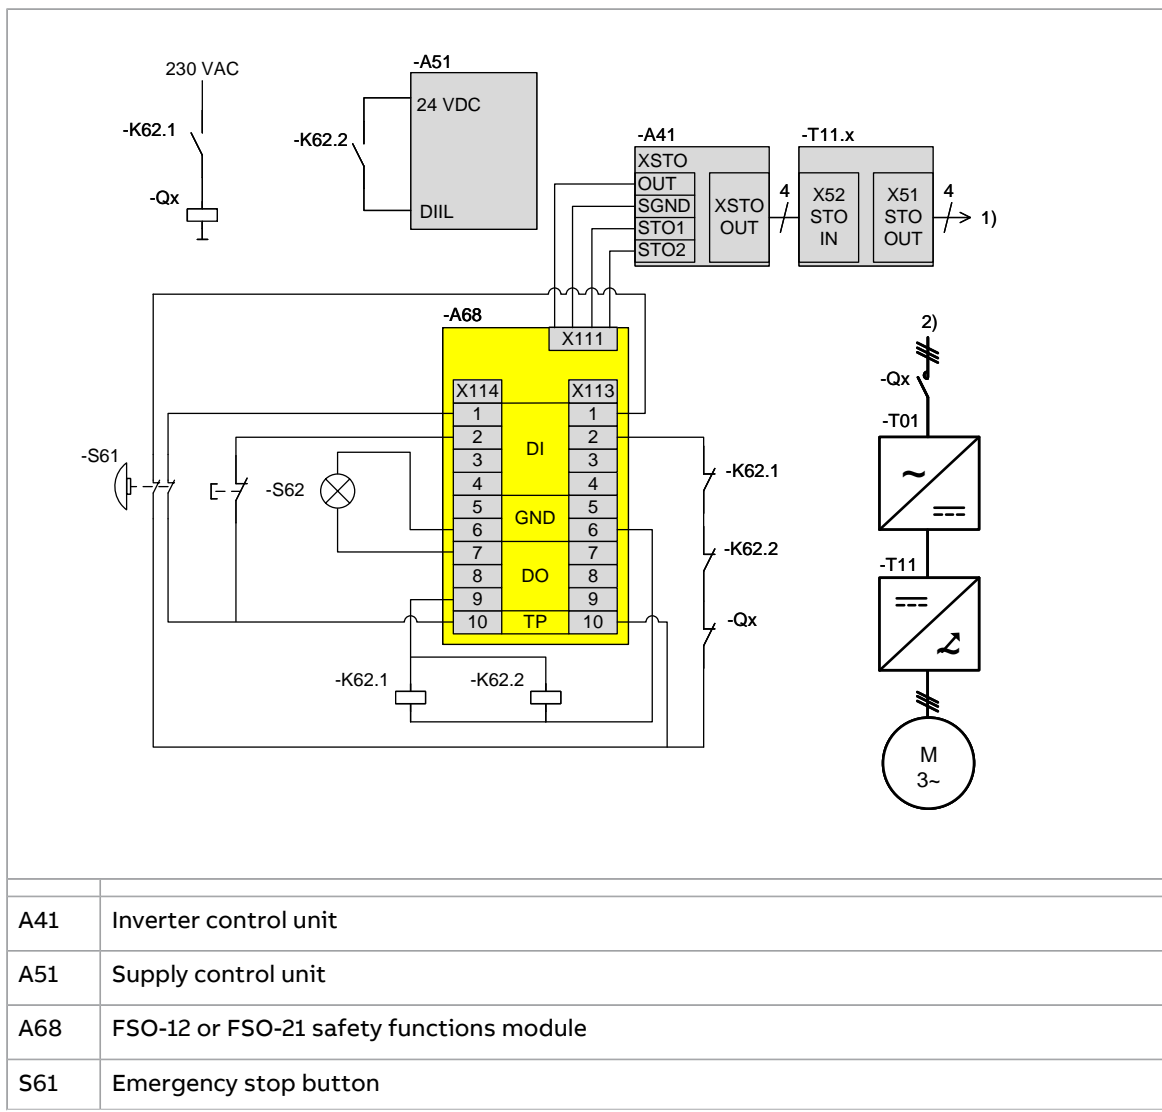


S62	Emergency stop reset button with indicator light
K62.1	Safety relay
K62.2	Safety relay
Qx	Main contactor or breaker
X111	STO connections to inverter control unit
X113, X114	Terminal block in the FSO module
T01	Supply unit
T11	Inverter unit
T11.1- T11.x	Inverter module(s) under inverter unit T11
TP	Test pulse(s) for digital input
1)	To parallel inverter modules (if any)
2)	Main circuit

Step	Operation
	Initial status: The drive is in operation and the motor is running.
1	The user activates emergency stop with the emergency stop button [S61]. This activates the safety function in the FSO module.
2	<u>Emergency stop, stop category 0:</u> The FSO module [A68] activates the drive STO function and opens the main contactor/breaker [Qx]. The motor coasts to a stop. <u>Emergency stop, stop category 1:</u> The drive decelerates the motor to zero speed. The FSO module [A68] then activates the drive STO function and opens the main contactor/breaker [Qx].
3	The emergency stop reset button indicator light [S62] comes on.
4	The DIIL input of the supply control [A51] is de-energized. This gives the emergency stop command to the supply unit.
5	Normal operation resumes after the user: <ul style="list-style-type: none"> • releases the emergency stop button [S61] to normal (up) position • pushes the emergency stop reset button [S62], which resets the emergency stop circuit and closes the main contactor/breaker [Qx] • resets the inverter unit if a fault was generated (see FSO parameter FSOGEN.61 STO indication ext request, and drive parameter 31.22 STO indication run/stop) • makes sure that the drive has received the start signal (depends on the configuration, see the firmware manual).

40 Option description

ACS880-17, -17LC, -37, and -37LC drives with frame size $n \times R8i + n \times R8i$

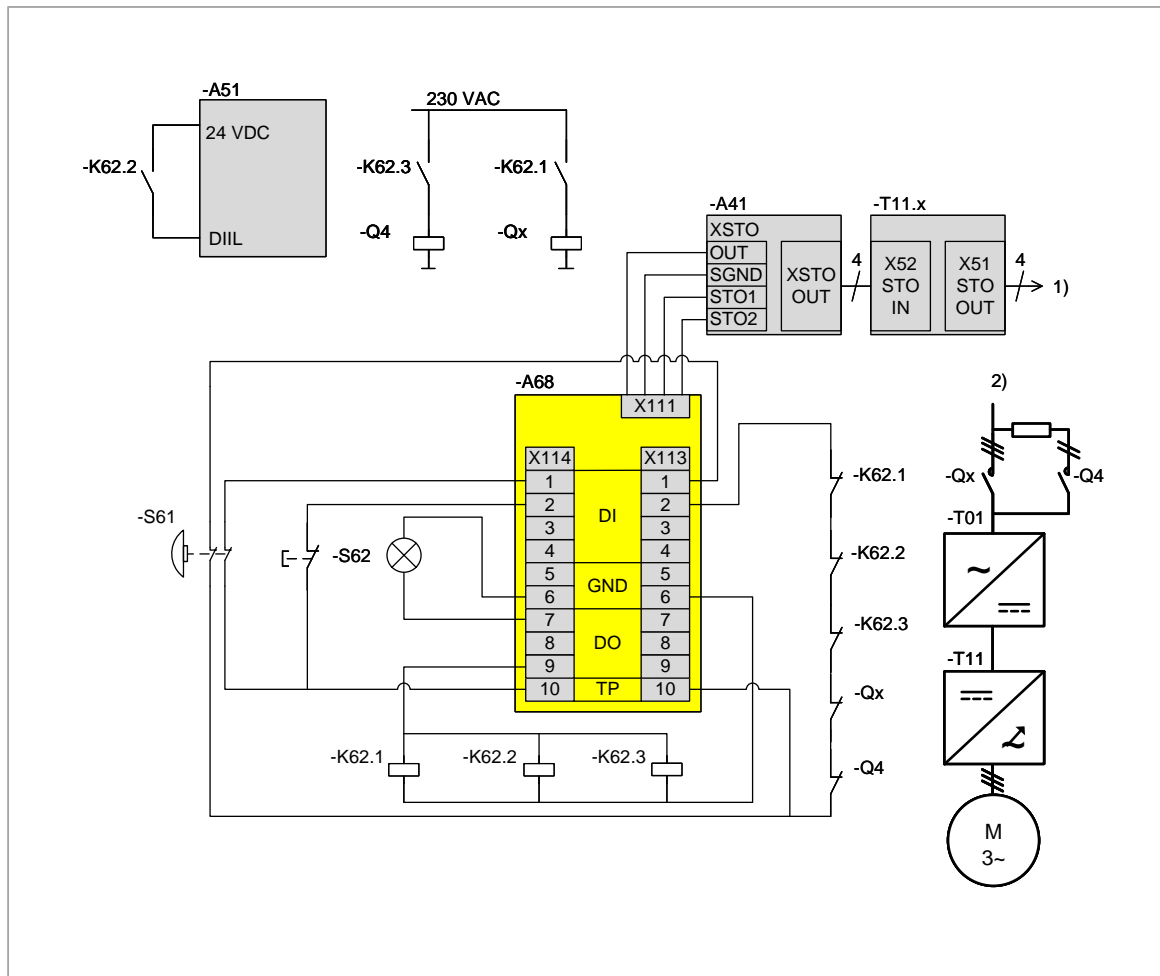

A41	Inverter control unit
A51	Supply control unit
A68	FSO-12 or FSO-21 safety functions module
S61	Emergency stop button
S62	Emergency stop reset button with indicator light
K62.1	Safety relay
K62.2	Safety relay
K62.3	Safety relay
Qx ¹⁾	Main contactor/breaker (Q2 or Q1)
Q4	Charging contactor
X113, X114	Terminal block in the FSO module
X111	STO connections to inverter control unit
T01	Supply unit
T11	Inverter unit

T11.1- T11.x	Inverter module(s) under inverter unit T11
TP	Test pulse(s) for digital input
1)	To parallel inverter modules (if any)
2)	Main circuit

1) Component can also be installed by the customer.

Step	Operation
	Initial status: The drive is in operation and the motor is running.
1	The user activates emergency stop with the emergency stop button [S61]. This activates the safety function in the FSO module.
2	<u>Emergency stop, stop category 0</u> : The FSO module [A68] activates the drive STO function and opens the main contactor/breaker [Qx]. If the emergency stop is activated during charging, the charging contactor [Q4] is also opened. The motor coasts to a stop. <u>Emergency stop, stop category 1</u> : The drive decelerates the motor to zero speed. The FSO module [A68] then activates the drive STO function and opens the main contactor/breaker [Qx]. If the emergency stop is activated during charging, the charging contactor [Q4] is also opened.
3	The emergency stop reset button indicator light [S62] comes on.
4	The DIIL input of the supply control [A51] is de-energized. This gives the emergency stop command to the supply unit.
5	Normal operation resumes after the user: <ul style="list-style-type: none"> • releases the emergency stop button [S61] to normal (up) position • pushes the emergency stop reset button [S62], which resets the emergency stop circuit and closes the main contactor/breaker [Qx] • resets the drive/inverter unit if a fault was generated (see FSO parameter FSOGEN.61 STO indication ext request, and drive parameter 31.22 STO indication run/stop) • makes sure that the drive has received the start signal (depends on the configuration, see the firmware manual).

Fault reaction function

Definition: A safety function requires a “fault reaction function” that tries to initiate a safe state if it detects a failure in the safety system.

This section gives information on the fault reaction functions in the FSO and FSE-31 modules, the safety relay, the safety encoder, and the drive STO.

Examples of different failures:

- a short or open circuit or redundancy failure of the emergency stop button wiring chain
- a missing main contactor/breaker feedback signal
- an internal failure in the FSO module
- an internal failure in the FSE-31 module or the safety encoder
- an internal failure in the drive STO.

■ FSO module

The fault reaction function of the FSO module trips the drive if it detects a failure. The FSO module activates the STO function or the Safe stop emergency (SSE) function. This activates the drive STO function and opens the main contactor/breaker. The drive STO function is active until the fault is repaired.

The FSO module goes into Fail-safe mode. The STATUS/FAULT LED of the FSO module is red until the fault is repaired. To exit the Fail-safe mode, remove the cause of the fault and reset the FSO module.

For more information, refer to the firmware manual and the FSO module user's manual.

Resetting the FSO module

To reset the FSO module:

- switch the power off and on, or
- click the **Reboot FSO** button on the Safety view of the Drive Composer pro PC tool, or
- use parameter 96.09 FSO reboot.

■ FSE-31 module and safety encoder

The fault reaction function depends on the value of FSO parameter S_ENCEN.11 FSE diagnostic failure reaction.

If there is a fault in the FSE-31 module or safety encoder, and parameter S_ENCEN.11 is set to the value STO, the FSO-21 module goes into Fail-safe mode and activates the drive STO function. To exit the Fail-safe mode, remove the cause of the fault and reset the FSO module.

In FSE-31 module faults, the STATUS/FAULT LED of the FSO-21 module is red and the STATUS LED of the FSE-31 module is off. The drive also indicates some FSE-31 module faults.

In safety encoder faults, the STATUS/FAULT LED of the FSO-21 module is red and the ENC STATUS LED of the FSE-31 module is off. The drive also indicates a safety encoder fault. The safety encoder goes into the Safe state. To exit the Safe state, remove the cause of the fault and reboot the safety encoder (for example, switch the power off and on).

For more information, refer to the firmware manual, [FSO-21 safety functions module user's manual \(3AXD50000015614 \[English\]\)](#) and [FSE-31 pulse encoder interface module user's manual \(3AXD50000016597 \[English\]\)](#).

■ Drive STO function

The drive STO function has internal fault diagnostics and a fault reaction function, which causes a fault trip if it detects a redundancy fault of STO control signals or an internal failure. Refer to the hardware and firmware manuals of the drive.

4

Electrical installation

Contents of this chapter

This chapter gives information on the electrical installation of the safety option.

Wiring



▲WARNING Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do installation, commissioning or maintenance work.

One emergency stop button and one reset button are installed on the cabinet door and connected to the drive at the factory. There are double contacts in the emergency stop button and double wiring (redundant two-channel connection) between the button and the FSO module.

There is an extension terminal block [X68] inside the drive cabinet. The tables that follow show the connections between the extension terminal block [X68] and the FSO module connectors [X113] and [X114].

FSO X113	1	2	3	4	5	6	7	8	9	10
X68	3	4	5	6	7	8, 9	10	11	12	13, 14, 15, 16

FSO X114	1	2	3	4	5	6	7	8	9	10
X68	17	18	19	20	21	22, 23	24	25	26	27, 28, 29, 30

If necessary, install additional emergency stop buttons on site. Refer to the circuit diagrams delivered with the drive. Obey these general rules:

1. Use only double-contact buttons approved for emergency stop circuits.
2. Connect the emergency stop buttons with two conductors (two-channel connection). Keep the channels separate.

Note: If you use only one channel in a two-channel implementation, or if the channels are connected together, the cross fault detection of the FSO module detects a redundancy fault and activates the fault reaction function.

Note: If you change the input and the parameter settings in the FSO module into a one-channel implementation, it has an effect on the safety integrity of the safety function. In this case, the safety data that ABB has calculated for the function is not valid.

Note: The safety circuit design can be different when modified according to the customer's safety requirements. Refer to the circuit diagrams delivered with the drive.

3. Use shielded, twisted pair cables. ABB recommends double-shielded cable and gold-plated contacts in the emergency stop button.
4. The maximum permitted cable length between the drive and the emergency stop button is 250 m (820 ft).
5. Obey the general control cable installation instructions given in the drive hardware manual and in the FSO module user's manual.

If necessary, install additional reset buttons and indication lamps for the emergency stop circuit on site. ABB recommends gold-plated NC contacts in the reset button. The maximum permitted cable length between the drive and the reset button (for the whole loop) is 250 m (820 ft). Refer to the circuit diagrams of the delivery. Obey the general control cable installation instructions given in the hardware manual and in the FSO module user's manual.

If you use a safety encoder in the application: Connect the safety encoder to the FSE-31 module on site. Obey the instructions of the encoder manufacturer and these rules:

- Use a double-shielded, twisted pair cable.
- The maximum permitted cable length between the safety encoder and the FSE-31 module is 300 m (980 ft).

For more information, refer to [FSE-31 pulse encoder interface module user's manual \(3AXD50000016597 \[English\]\)](#).

■ Customer-installed main breaker in ACS880-07LC, -17LC, and -37LC drives

ACS880-07LC, -17LC, and -37LC drives can be delivered without a factory-installed main breaker. In these cases, the customer must install and connect the main breaker to the safety circuit as described in the circuit diagrams.



A large, bold, black number '5' is centered within a light grey square with rounded corners.

Parameter settings

Contents of this chapter

This chapter gives the parameters that you must set in the FSO module and the drive.

Competence

The person who configures the safety functions in the FSO module must be a competent person as required by IEC 61508-1 clause 6. In this context, the person must have expertise and knowledge of functional safety, the safety functions and the configuration of the FSO module. ABB has training courses on the FSO module.

FSO module parameter settings

The default parameter values shown below are example values for the safety functions described in this manual. Actual parameter values of the delivery can be different.

Always make sure that:

- the parameter settings agree with the circuit diagrams, and
- the design agrees with the safety requirements of the application.

You must use the Drive Composer pro PC tool to set the FSO module parameters. You also need a password to download the configuration to the FSO module from Drive Composer pro. For the default password of the FSO module, refer to the FSO module user's manual. For more information on Drive Composer pro, refer to [Drive Composer start-up and maintenance PC tool user's manual \(3AUA0000094606 \[English\]\)](#).

Note: When the motor is running, you cannot change the password, adjust parameter values, or upload or download the FSO configuration file.

Note: The FSO module has a factory reset button. The factory reset button clears the configuration and sets the parameters to the factory default values. These values are not the same as the preset values in an FSO module that was ordered as an option (with a plus code). You cannot restart the drive with the factory default values. If you do a factory reset of the FSO module, you must reconfigure the FSO module and set all applicable parameters. For more information on the factory reset, refer to the FSO module user's manual.

When using SS1, SLS or SMS safety functions: The FSO module activates the STO function if the motor speed hits a ramp monitoring limit during the deceleration ramp. The FSO module activates the SSE function if the motor speed hits a trip limit during SLS or SMS monitoring. Thus, you must also configure the STO and SSE functions.

Follow the configuration steps described in the FSO module user's manual, chapter **Configuration**.

There are parameters that you must always set and parameters that are related to some safety functions only. These tables list all the parameters that you must check and set for option +Q978. The example values are applicable only to option +Q978.

■ General parameters

These parameters are common to all safety functions.

Index	Name	Example value	Description
FSOGEN.11	Stop completed output	DO X114:7	Sets the digital output that indicates the completion of any stop function. Active when the FSO module has completed the STO, SSE or SS1 function. For option +Q978, ABB has configured the emergency stop indication lamp to this digital output at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.
FSOGEN.21	Motor nominal speed	1500 rpm	Sets the synchronous motor speed.
FSOGEN.22	Motor nominal frequency	50 Hz	Sets the nominal motor frequency. Must be equal to the value on the motor rating plate.
FSOGEN.41	Power-up acknowledgement	Automatic	Sets the power-up acknowledgement method of the FSO module. Automatic: It is not necessary to push a reset button after energizing the FSO module. The FSO module generates the acknowledgement signal automatically after the power-up. Manual: The FSO module reads the external acknowledgement signal through the digital input defined by parameter FSOGEN.42 Acknowledgement button input. Make sure that the value is Automatic.


Index	Name	Example value	Description
FSOGEN.42	Acknowledgement button input	DI X114:2	<p>Sets the digital input for the acknowledgement signal when parameter FSOGEN.41 Power-up acknowledgement or STO.02 STO acknowledgement is set to Manual.</p> <p>For option +Q978, ABB has configured the emergency stop reset button to this digital input at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.</p>
FSOGEN.51	Zero speed without encoder	90 rpm	<p>Sets the general zero speed limit for safety functions when a safety encoder is not used.</p> <p><u>Emergency stop, stop category 0:</u> This value has no effect in the operation.</p> <p><u>Emergency stop, stop category 1:</u> The FSO module activates the drive STO function and opens the main contactor/breaker when the drive has decelerated the motor speed below this value. Adjust the default value when necessary.</p>
FSOGEN.52	Zero speed with encoder	10 rpm	<p>Sets the general zero speed limit for safety functions when a safety encoder is used.</p> <p><u>Emergency stop, stop category 0:</u> The indication lamp comes on when the motor speed goes below this value. Adjust the default value when necessary.</p> <p><u>Emergency stop, stop category 1:</u> The FSO module activates drive STO function and opens the main contactor/breaker when the drive has decelerated the motor speed below this value. Adjust the default value when necessary.</p> <p>Note: This parameter is used only with FSO-21 and when a safety encoder is used in the application.</p>
FSOGEN.61	STO indication external request	Warning	<p>Sets the type of the indication that the FSO module generates and sends to the drive after external requests that end to a successful activation of the drive STO (STO, SSE or SS1).</p> <p>In the safety functions described in this manual, you can use this indication as the Emergency stop indication message. Adjust the default value when necessary.</p>

48 Parameter settings

Index	Name	Example value	Description
FSOGEN.62	STO indication safety limit	Fault	<p>Sets the type of the indication that the FSO module generates and sends to the drive for limit hits during ramp and time monitoring of safety ramps SAR0 and SAR1.</p> <p><u>Emergency stop, stop category 0:</u> This value has no effect in the operation.</p> <p><u>Emergency stop, stop category 1:</u> When the motor speed does not follow the stop ramp or the time limit is exceeded, the FSO module activates the STO function and generates this user-defined indication.</p> <p>If necessary, adjust the default setting. If you select Fault, you must reset the drive before you can restart it.</p>

■ Parameters for the STO function

These parameters are related to the STO function of the FSO module. The FSO module can activate the STO function in internal fault situations. The Emergency stop, stop category 0 safety function uses this function.

Index	Name	Example value	Description
STO.02	STO acknowledgement	Manual	<p>Sets the acknowledgement method used in the STO, SSE and SS1 functions.</p> <p>Manual: The FSO module reads the external acknowledgement signal through the digital input defined by parameter FSOGEN.42.</p> <p>In the safety functions described in this manual, the user acknowledges the safety function manually with the emergency stop reset button. Make sure that the value is Manual.</p> <p> WARNING If the value is set to Automatic, the FSO module resets the STO function automatically after the user releases the emergency stop button. The drive can restart automatically, if automatic start mode is used. This can be dangerous.</p>
STO.11	STO input A	<p><u>Stop cat. 0:</u> DI X113:1 & X114:1</p> <p><u>Stop cat. 1:</u> None</p>	<p>Sets the digital input that is connected to the primary input of the STO function.</p> <p><u>Emergency stop, stop category 0:</u> For option +Q978, ABB has connected the emergency stop button to this digital input at the factory. Make sure that the setting agrees with the circuit diagrams of the delivery.</p> <p><u>Emergency stop, stop category 1:</u> Make sure that this parameter is set to None. (An external signal cannot start the STO function.)</p>

Index	Name	Example value	Description
STO.13	Restart delay after STO	2000 ms	<p>Sets the time after which the restart of the drive is permitted after the FSO module has activated the drive STO and opened the main contactor/breaker.</p> <p>With this parameter, you can allow a restart of the drive before the motor has stopped (fly-start). This parameter is valid only if the STO function is requested from STO input A (STO.11).</p> <p><u>Emergency stop, stop category 0</u>: Adjust the value when necessary. If you do not want to use the fly-start feature, set this parameter to the same value as parameter SBC.13.</p> <p><u>Emergency stop, stop category 1</u>: This value has no effect.</p>
SBC usage			
SBC.11	STO SBC usage	Delayed brake	<p>Sets how the mechanical brake is used together with the STO function. Mechanical brake usage is always coupled with the STO function.</p> <p>In this manual, it is assumed that you do not use a mechanical brake. Instead, the SBC function is used to control the auxiliary safety relay(s) which is connected to the main contactor/breaker. Make sure that the value is Delayed brake.</p>
SBC.12	STO SBC delay	0	<p>Sets the time after which the FSO module activates the SBC function after it has activated the STO function.</p> <p>In this manual, the SBC function is used to control the main contactor/breaker. It is assumed that you do not use a mechanical brake. When the value is zero, the main contactor/breaker and drive STO circuit are opened at the same time. Make sure that the value is 0.</p>

50 Parameter settings

Index	Name	Example value	Description
SBC.13	SBC time to zero speed	1000 ms	<p>Sets the time after which the motor has stopped and the acknowledgement (and restart of the drive) is allowed after coast stop in the STO, SSE and SS1 functions. Set the value of this parameter to the estimated time in which the motor coasts to a stop from the maximum speed.</p> <p><u>Emergency stop, stop category 0:</u> This parameter sets the time after which the STO function is completed and the indication lamp comes on. Adjust the value when necessary.</p> <p><u>Emergency stop, stop category 1:</u> This parameter is used only when the motor speed does not follow the ramp settings or the time monitoring limit is exceeded and the FSO module activates the STO and SBC functions. Adjust the default value when necessary.</p> <p><u>When a safety encoder is used:</u> This parameter is relevant only if an encoder or FSE-31 module failure occurs. The FSO module goes into the Fail-safe mode and activates the STO and SBC functions (this also opens the main contactor/breaker). For more information, refer to the FSO-21 module user's manual.</p>
SBC.21	SBC output	DO X113:9 & X114:9	<p>Sets the digital output that is connected to the SBC output.</p> <p>In safety functions described in this manual, the SBC function is used to control the auxiliary safety relay(s) that is connected to the main contactor/breaker of the drive by default. This value must be the same as the value of parameter SAFEIO.21. Make sure that the setting corresponds to the circuit diagrams of the delivery.</p>
SBC.22	SBC feedback action	STO	<p>Sets the action that the FSO module takes when there is a problem with the SBC feedback.</p> <p>STO: The FSO module goes into the Fail-safe mode and activates the drive STO.</p>

■ Parameters for the SSE function

These parameters are related to the Safe stop emergency (SSE) function of the FSO module. The FSO module can activate the SSE function in internal fault situations.

Index	Name	Example value	Description
SSE.13	SSE function	Immediate STO or Emergency ramp	<p>Sets the type of the SSE function.</p> <p>Immediate STO: The FSO module activates the drive STO function immediately after the SSE request.</p> <p>Emergency ramp: The FSO module decelerates the motor to zero speed, and then activates the drive STO function. SAR0 parameters define the deceleration ramp. For more information, refer to the FSO module user's manual. Zero speed is defined by parameter FSOGEN.51 Zero speed without encoder or FSOGEN.52 Zero speed with encoder.</p> <p>For option +Q978, ABB sets this parameter to value Immediate STO at the factory. Adjust the default value when necessary.</p>
SBC usage			
SBC.15	SSE/SS1 SBC speed	0 rpm	<p>Sets the absolute speed below which the FSO module activates the brake (SBC) while ramping.</p> <p>0 rpm: The feature is not in use.</p> <p>In the safety functions described in this manual, this feature is not used. The SBC activation is connected to the STO function with parameter SBC.11. Make sure that the value is 0 rpm.</p>

■ I/O parameters

For indication lamps, set the logic state of the corresponding digital output to Active high. For digital inputs and outputs, set the diagnostic pulse setting to On.

Safety relay 1 settings are used to control the main contactor/breaker.

52 Parameter settings

Index	Name	Example value	Description
SAFEIO.21	Safety relay 1 output	DO X113:9 & X114:9	<p>Sets the digital output connected to safety relay 1.</p> <p>For option +Q978, ABB has connected the auxiliary safety relay(s) which controls the main contactor/breaker to this digital output at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.</p> <p>To connect the safety relay to a certain output signal of the FSO module, you must set the same digital outputs in the output parameter for that signal (see parameter SBC.21).</p> <p>Note: This digital output must always be redundant. Otherwise the feedback signal of the safety relay cannot be used (see parameter SAFEIO.22). In the safety functions described in this manual, there is only one physical connection from the FSO I/O to the auxiliary safety relay (DO X114:9), but in this parameter setting, the output must be redundant. Do not use digital output DO X113:9 for any other purpose.</p>
SAFEIO.22	Safety relay 1 feedback	DI X113:2	<p>Sets the digital feedback input of safety relay 1.</p> <p>For option +Q978, ABB has configured the auxiliary safety relay(s) and the main contactor/breaker to this digital input at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.</p>
SAFEIO.23	Safety relay 1 feedback type	Mechanically linked NC contacts	<p>Sets the type of the feedback signal for safety relay 1.</p> <p>Mechanically linked NC contacts: Feedback of the safety relay is NC (normally closed, that is, inverted state compared with the relay). Make sure that the value is Mechanically linked NC contacts.</p>
SAFEIO.33	DI X113:1 diag pulse on/off	On ¹⁾	<p>Sets the diagnostic pulse of digital input X113:1 on or off.</p> <p>On: The input monitors that it receives test pulses.</p> <p>For option +Q978, ABB has configured the emergency stop button to this digital input at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.</p>

Index	Name	Example value	Description
SAFEIO.37	DI X114:1 diag pulse on/off	On ¹⁾	<p>Sets the diagnostic pulse of digital input X114:1 on or off.</p> <p>On: The input monitors that it receives test pulses.</p> <p>For option +Q978, ABB has configured the emergency stop button to this digital input at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.</p>
SAFEIO.38	DI X114:2 diag pulse on/off	On	<p>Sets the diagnostic pulse of digital input X114:2 on or off.</p> <p>On: The input monitors that it receives test pulses.</p> <p>For option +Q978, ABB has configured the emergency stop reset button to this digital input at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.</p>
SAFEIO.55	DO X113:9 diag pulse on/off	On	<p>Sets the diagnostic pulse of digital output X113:9 on or off.</p> <p>On: The output monitors that it receives test pulses.</p> <p>For option +Q978, ABB has configured the auxiliary safety relay(s) to this digital output at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.</p>
SAFEIO.58	DO X114:9 diag pulse on/off	On	<p>Sets the diagnostic pulse of digital output X114:9 on or off.</p> <p>On: The output monitors that it receives test pulses.</p> <p>For option +Q978, ABB has configured the auxiliary safety relay(s) to this digital output at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.</p>
SAFEIO.74	DO X114:7 logic state	Active high	<p>Sets the logic state of digital output X114:7.</p> <p>Active high: The digital output is on when the indicated signal is active.</p> <p>For option +Q978, ABB has configured the emergency stop indication lamp to this digital output at the factory. Make sure that this value corresponds to the actual wiring. Refer to the circuit diagrams of the delivery.</p>

¹⁾ The safety data given in this manual is based on the assumption that this diagnostic measure for the emergency stop button wiring is active (On). If pulsing is disabled, other measures should be considered to ensure sufficient diagnostic coverage of the emergency stop button wiring.

■ Parameters for Emergency stop, stop category 0

The Emergency stop, stop category 0 safety function uses the STO function of the FSO module, refer to section [Parameters for the STO function \(page 48\)](#). There are no additional parameters related to this function.

■ Parameters for Emergency stop, stop category 1

The Emergency stop, stop category 1 safety function uses the SS1 function of the FSO module. Set these parameters only for this function.

Index	Name	Example value	Description
SS1.01	SS1 activity and version	Version 1	Activates or deactivates the SS1 function and shows the version of the SS1 function. Version 1: Activates version 1 of the SS1 function.
SS1.11	SS1 input A	DI X113:1 & X114:1	Sets the digital input that is connected to the primary input of the SS1 function. For option +Q978, ABB has connected the emergency stop button to this input at the factory. Make sure that this value agrees with the wiring. Refer to the circuit diagrams of the delivery. Also make sure that you do not use the same input for other functions at the same time (for example, the STO function).
SS1.13	SS1 type	SS1-r or SS1-t	Sets the method used for the SS1 monitoring. Adjust the default value when necessary. <u>Time monitoring (SS1-t):</u> The FSO module monitors that a user-defined deceleration time limit is not exceeded. See parameter SS1.14. <u>Ramp monitoring (SS1-r):</u> The FSO module monitors that the motor decelerates along a user-defined stop ramp. See SAR1 ramp parameters 200.112, SARx.21, SARx.22 and SARx.02.
SS1.14	SS1-t delay for STO	20000 ms	Sets the SS1-t monitoring time after which the FSO module activates the drive STO and SBC at the latest, if the motor speed has not reached the zero speed limit (parameter FSOGEN.51 or FSOGEN.52) yet. For more information, refer to the operation time scheme diagrams. <u>Time monitoring:</u> This value sets the security delay that the FSO module monitors. Adjust the default value when necessary. <u>Ramp monitoring:</u> This value has no effect in the operation.

Index	Name	Example value	Description
SS1.15	SS1-r ramp zero speed delay for STO	0 ms	<p>Sets an extra delay time for the activation of the drive STO and SBC functions at the zero speed limit in the SS1 function.</p> <p>With this parameter, the FSO module delays the STO activation so that the drive is able to reach the axle zero speed before the FSO module activates the STO function.</p> <p>The delay counter starts when the motor speed reaches the zero speed limit (parameter FSOGEN.51 or FSOGEN.52). After this delay has elapsed, the FSO module activates the drive STO and SBC functions. Activation of the SBC opens the main contactor/breaker. You can use this parameter when the motor rotates a high inertia load.</p> <p>Note: The FSO module activates the drive STO immediately if the drive stops modulating before the delay has passed (that is, the motor actual speed reaches 0 rpm).</p> <p>Adjust the default value when necessary.</p>
SAR1 ramp settings			
200.112	SAR1 ramp time to zero	2000 ms	<p>Sets the target time for the stop ramp SAR1 that is used in the SS1 function. Adjust the default value when necessary.</p> <p>Target time = The time in which the drive decelerates the motor from speed 200.202 SAR speed scaling to zero.</p> <p>Note: With value 0 ms, the drive uses the emergency stop ramp set by drive parameter 23.23. Also in this case, the FSO module only monitors the actual ramp (ramp monitoring or time monitoring).</p>
200.202	SAR speed scaling	1500 rpm	<p>Sets a speed value that the FSO module uses as a reference point in ramp parameter calculations (see SAR1 ramp parameters 200.112, SARx.21, SARx.22 and SARx.02).</p> <p>Adjust the default value when necessary.</p>
SARx.02	SAR initial allowed range	100 ms	<p>Sets the initial allowed range for the SARx ramp. This parameter moves the location of the maximum monitoring ramp forward on the time axis, when monitoring is started. The slope of the ramp stays the same as defined with parameters 200.202 and SARx.12 (SAR0) or SARx.22 (SAR1).</p> <p><u>Time monitoring:</u> This value has no effect in the operation.</p> <p><u>Ramp monitoring:</u> Adjust the default value according to the application requirements.</p>

56 Parameter settings

Index	Name	Example value	Description
SARx.21	SAR1 min ramp time to zero	1000 ms	<p>Sets the minimum ramp time for the SAR1 ramp monitoring.</p> <p><u>Time monitoring</u>: This value has no effect in the operation.</p> <p><u>Ramp monitoring</u>: Sets the minimum deceleration time for the emergency stop. Adjust the default value according to the application requirements.</p> <p>Note: With value 0 ms, the minimum ramp is not monitored.</p>
SARx.22	SAR1 max ramp time to zero	3000 ms	<p>Sets the maximum ramp time for the SAR1 ramp monitoring.</p> <p><u>Time monitoring</u>: This value has no effect in the operation.</p> <p><u>Ramp monitoring</u>: Sets the maximum deceleration time for the emergency stop. Adjust the default value according to the application requirements.</p>
SBC usage			
SBC.15	SSE/SS1 SBC speed	0 rpm	<p>Sets the absolute speed below which the FSO module activates the brake (SBC) while ramping.</p> <p>0 rpm: The feature is not in use.</p> <p>In the safety functions described in this manual, this feature is not used. The SBC activation is connected to the STO function with parameter SBC.11. Make sure that the value is 0 rpm.</p>

■ Changing the stop category from 0 to 1

Stop category 0 is the default setting. This category uses the STO function of the FSO module. Stop category 1 uses the SS1 function of the FSO module.

To change the stop category from 0 to 1:

- set the parameters given in this section
- set the parameters given in section [Parameters for Emergency stop, stop category 1 \(page 54\)](#)
- if necessary, set the applicable parameters given in section [Drive parameter settings \(page 58\)](#).

Index	Name	Preset value (stop cat. 0)	Value in stop cat. 1
STO.11	STO input A	DI X113:1 & X114:1	None
FSOGEN.51	Zero speed without encoder	90 rpm	If you do not use a safety encoder, adjust the default value.
FSOGEN.52	Zero speed with encoder	10 rpm	If you use a safety encoder, adjust the default value.
FSOGEN.62	STO indication safety limit	Fault	Adjust the default value when necessary.

■ FSE-31 module and safety encoder related parameters

Set these parameters when you use a safety encoder in the safety application.

Index	Name	Example value	Description
200.231	FSE 3X act and par version	Version 1	Activates the FSE-31 encoder interface and shows the version of the encoder parameter groups (91 and 92).
200.232	Number of encoders	Single encoder CH1	Shows the number of safety encoders connected to the FSE-31 module.
S_ENCGEN.01	Safe pulse encoder version	Version 1	Activates the safety encoder and shows the version parameter group S_ENCGEN.
S_ENCGEN.11	FSE diagnostic failure reaction	STO	<p>Sets the action taken when there is a problem with the FSE-31 module or the safety encoder.</p> <p>STO: The FSO module goes into Fail-safe mode and activates the drive STO function.</p> <p>No STO: If there are no active safety functions, the FSO module sends a warning to the drive. If there are active safety functions, the FSO module goes into Fail-safe mode.</p> <p>Est switch not active load: With some restrictions, the FSO module sends a warning to the drive and starts to use an estimated value of the motor speed (safe speed estimate). If you select this value, you must also set the parameters related to safe speed estimate. Refer to the FSO-21 module user's manual. Do not select this value in applications with an active load.</p>
S_ENCGEN.14	Enc speed cross comp tolerance	1 rpm	<p>Sets the encoder speed cross comparison tolerance. This defines how much the axle speed of the motor can change within 1 ms.</p> <p>Adjust the default value to agree with the motor.</p> <p>This parameter is used for the encoder diagnostic. It defines how large the difference between the speed information from channel A and B of the encoder can be. If the difference between the speed information channels is larger than the value of this parameter, FSO will safely stop the system (STO).</p> <p>The correct value depends on the configuration (motor and load). Typically this value is 2 ... 10 rpm. A value that is too small will cause an encoder fault (A7D8) and a value that is too large will prevent encoder diagnostic related to this parameter.</p> <p>For more information, refer to the FSO-21 module user's manual.</p>

58 Parameter settings

Index	Name	Example value	Description
S_ENCGEN.41	Gear numerator encoder 1	1	Sets the rotation direction for the safety encoder. With this parameter, you can change the rotation direction of the motor. If necessary, adjust the default value.
91.11	Module 1 type	FSE-31	Sets the type of the safety encoder interface module 1.
91.12	Module 1 location	2	Sets the slot in which the safety encoder interface module 1 is located.
92.01	Encoder 1 type	HTL1	Activates or deactivates the communication with the safety encoder interface module 1 and sets the type for the safety encoder.
92.02	Encoder 1 source	Module 1	Sets the safety encoder interface module that the safety encoder 1 is connected to.
92.10	Pulses/revolution	2048	Sets the number of HTL pulses per revolution for safety encoder 1. Adjust the default value to agree with the safety encoder. Make sure that the value is the same that is shown on the encoder nameplate.
92.17	Accepted pulse freq of encoder 1	300 kHz	Sets the maximum pulse frequency range of encoder 1. Adjust the default value to agree with the motor and safety encoder. You can use this formula to define the value: $r_max \cdot ppr_enc + 10\%$, where <ul style="list-style-type: none"> r_max = the maximum motor speed used in the application (or the motor nominal speed) ppr_enc = Pulses/revolution of the safety encoder (parameter 92.10).

Drive parameter settings

The table that follows gives the parameters related to the safety function in the ACS880 primary control program. The parameters are set at the factory.

No.	Name	Default value ¹⁾	Description
31.22	STO indication run/stop	Warning/Warning	Selects which indications are given when the Safe torque off (STO) function is activated. Warning/Warning is the recommended setting. Note: ABB recommends that you do not set this parameter to Fault/Fault, Fault/Warning, or Fault/Event. These values will cause the drive to trip on a fault each time that the FSO module activates the drive STO function.

¹⁾ Value set by ABB at the factory for the default design.

The table that follows gives the parameters that you must set when you use a safety encoder.

No.	Name	Value	Description
90.41	Motor feedback selection	Encoder 1	Selects the motor speed feedback value used during motor control.

No.	Name	Value	Description
90.45	Motor feed-back fault	Warning	Selects how the drive reacts to loss of measured motor feedback. To configure the drive to trip on encoder faults, set this parameter to value Fault. For more information, refer to the firmware manual.
92.21	Encoder cable fault mode	A+, A-, B+, B-, Z+, Z-	Selects which encoder cable channels and wires are monitored for wiring faults.

The table that follows gives the parameters that you must set when the Emergency stop, stop category 1 function is used, and FSO parameter 200.112 SAR1 ramp time to zero is set to 0.

No.	Name	Value	Description
21.04	Emergency stop mode	Eme ramp stop (Off3)	Selects the way the motor is stopped when an emergency stop command is received.
23.23	Emergency stop time	User-defined	Defines the deceleration rate for emergency stop as the time it would take for the speed to decrease to zero speed from the value of FSO parameter 200.202 SAR speed scaling. Zero speed is defined by FSO parameter FSOGEN.51 Zero speed without encoder or FSOGEN.52 Zero speed with encoder. Set this parameter according to the application requirements.

If FSO parameter 200.112 SAR1 ramp time to zero is set to 0, the drive parameters define the stop ramp that is used in the SS1 function (stop category 1). The FSO module monitors the actual stop ramp (ramp monitoring or time monitoring). For more information, refer to the firmware manual and FSO module user's manual.

Additional parameter settings for ACS880-17 and -37 drives with frame size R8 or R11

The parameters are set at the factory.

The inverter unit parameter settings in the ACS880 primary control program:

- parameter 06.40 LSU CW user bit 0 selection is set to Bit 7 (STO) of 06.18 Start inhibit status word

The supply unit parameter settings in the ACS880 supply control programs:

- parameter 121.05 Emergency stop source is set to Bit12- (user bit 0, inverted value) of 106.01 Main control word

Supply unit parameter settings

This section is applicable to:

- ACS880-07 and -07LC drives with frame size nxDxT + n×R8i
- ACS880-17 and -37 drives with frame size R6i + R6i or R7i + R7i
- ACS880-17, -17LC, -37, and -37LC drives with frame size n×R8i + n×R8i

60 Parameter settings

The table that follows gives the parameters related to the safety function in the ACS880 supply control programs. The parameters are set at the factory.

No.	Name	Default value ¹⁾	Description
121.04	Emergency stop mode	Stop and warning	Selects the way the supply unit is stopped when an emergency stop command is received.
121.05	Emergency stop source	DIIL	Selects the source of the emergency stop signal. This parameter cannot be changed while the supply unit is running.

¹⁾ Value set by ABB at the factory for the default design.

For more information, refer to the applicable firmware manual.



Use of the safety function

Contents of this chapter

This chapter describes the use of the safety function with factory default settings.

Activating the safety function

Activation procedure:

1. Push the emergency stop button [S61]. The emergency stop is activated and the button locks in the “ON” (open) position.
Warning AAA1 FSO STO request (stop category 0) or AAA3 FSO SS1 request (stop category 1) is shown.
When the emergency stop function is completed, these indications are shown:
 - the emergency stop reset button indicator light [S62] on the cabinet door is on, indicating that it is now possible to reset the emergency stop function.
 - AA90 FSO stop completed is indicated.

If configured with parameter 31.22 STO indication run/stop, an indication for Safe torque off is shown when the drive STO is activated.

The indications that the FSO module generates are configurable. For more information, refer to chapter [Parameter settings](#) in this manual and chapter **Fault tracing** in the FSO module user’s manual.

Note: The indication lamp comes on also when the FSO module has completed a stop function after fault situations. Also, the indication lamp comes on momentarily when the drive is started.

Resetting the safety function



WARNING Make sure that the drive does not start accidentally. This can occur after the acknowledgement of the safety function, if a level-triggered start command and the start enable signal are on at the same time.

1. Turn the emergency stop button [S61] until it releases.
2. Push the emergency stop reset button [S62] on the cabinet door for 0.1 ... 3 seconds. The emergency stop reset button indicator light [S62] goes off, and the emergency stop is deactivated.
3. If necessary, reset faults from the drive.
4. If necessary, close the main contactor/breaker.
5. Make sure that the drive receives the start signal.
6. You can now restart the drive.

For more information, refer to the hardware and firmware manuals.

Note: You must also reset the emergency stop safety relay [A61] with the emergency stop reset button [S62] each time after you energize the relay. If you do not reset the relay, you cannot close the main contactor/breaker.

Note: If you switch off the power after you have released the emergency stop button [S61], the drive resets the safety function automatically. In this case, you do not have to push the emergency stop reset button [S62].

7

Start-up and validation test

Contents of this chapter

This chapter describes the start-up, validation test procedure, and validation of the safety function.

Validation of the safety functions

You must do a validation test to make sure that the safety function operates correctly and according to the safety requirements.

■ Competence

The person who does the validation test of the safety function must be a competent person with expertise and knowledge of the safety function and functional safety, as required by IEC 61508-1 clause 6. This person must document and sign the test procedures and report.

■ Validation procedure

You must validate the general settings of the FSO module and the safety encoder (if used) before you validate the safety function. Refer to the FSO module user's manual, chapter **Verification and validation**.

You must do the validation test using the checklist given in this manual and the validation test plan of the complete safety system:

- at the initial start-up of the safety function
 - after changes related to the safety function (wiring, components, safety function-related parameter settings, etc.)
 - after changes related to the power unit or its circuit boards
-



64 Start-up and validation test

- at the proof test of the safety function
- after maintenance work related to the safety function.

The validation test must include at least the following steps:

- you must have a validation test plan
- you must test all commissioned functions for correct operation, from each operation location
- you must document all validation tests
- you must sign and store the validation test report for further reference.

■ Validation test reports

You must store the signed validation test reports in the logbook of the machine. The report must include, as required by the referred standards:


- a description of the safety application (including a figure)
- a description and revisions of safety components that are used in the safety application
- a list of all safety functions that are used in the safety application
- a list of all safety-related parameters and their values
- documentation of start-up activities, references to failure reports and resolution of failures
- the test results for each safety function, checksums, date of the tests, and confirmation by the test personnel.

You must store any new validation test reports done due to changes or maintenance in the logbook of the machine.



Start-up and validation test

You must use the Drive Composer pro PC tool to do the start-up and validation test.

Action	<input checked="" type="checkbox"/>
 ▲WARNING Obey the safety instructions of the drive. If you ignore them, injury or death, or damage to the equipment can occur.	<input type="checkbox"/>
Initial status	
<u>Safety encoder interface:</u> If you use a safety encoder in the safety application, validate the safety encoder interface as described in FSO-21 safety functions module user's manual (3AXD50000015614 [English]) , chapter Verification and validation .	<input type="checkbox"/>
Make sure that the drive is ready for use, that is, you have done the tasks of the drive start-up procedure. Refer to the hardware manual.	<input type="checkbox"/>
Make sure that the FSO STO function is configured and validated. Refer to the FSO module user's manual. Internal monitoring of the FSO module can trigger the STO function even if you have not defined an external request signal. The STO function must be validated before other safety functions. Note: If parameter S_ENCEN.11 is set to Est switch not active load, both STO function with speed estimate and STO function with encoder feedback must be tested - most importantly, the value of parameter STO.14 must be set according to the application requirements.	<input type="checkbox"/>

Action	<input checked="" type="checkbox"/>
Checks and settings with no voltage connected	
Stop the drive and do the steps in section Electrical safety precautions (page 11) before you start the work.	<input type="checkbox"/>
If you made connections to the emergency stop circuit on site (for example, added emergency stop buttons or connected shipping splits of large drives), do a check of the connections against the applicable circuit diagrams.	<input type="checkbox"/>
Inverter units with parallel R8i inverter modules: Make sure that the XSTO.OUT output on the inverter control unit [A41] is chained to the STO inputs of all inverter modules.	<input type="checkbox"/>
Settings with voltage connected	
Close the cabinet doors and power up the drive. Refer to the hardware manual.	<input type="checkbox"/>
Make sure that the parameter settings related to the safety functions are correct. Refer to chapter Parameter settings .	<input type="checkbox"/>
Save the FSO safety file (button Save safety file in the Drive Composer pro PC tool). Note: The FSO safety file is not included in the drive backup process.	<input type="checkbox"/>
Validation test	
ABB recommends that you monitor at least these signals with the Drive Composer PC tool: <ul style="list-style-type: none"> • 01.01 Motor speed used (rpm) • 01.02 Motor speed estimated (rpm) • 01.07 Motor current (A) • 01.10 Motor torque (%) • 06.18 Start inhibit status word • 23.01 Speed ref ramp input (rpm) • 23.02 Speed ref ramp output (rpm) • 90.01 Motor speed for control (rpm) • <u>When using an encoder, also:</u> 90.10 Encoder 1 speed (rpm) • 200.01 FSO speed ch1 (rpm) • 200.02 FSO speed ch2 (rpm) • 200.03 FSO DI status • 200.04 FSO DO status • 200.05 FSO control word 1 • 200.06 FSO control word 2 • 200.07 FSO status word 1 • 200.08 FSO status word 2 • 200.09 Drive status word 1 • 200.10 Drive status word 2 	<input type="checkbox"/>
Make sure that it is safe to start, run and stop the motor during the test.	<input type="checkbox"/>
Start the drive and make sure that the motor is running. If possible, use a motor speed close to the maximum speed of the application.	<input type="checkbox"/>
Push the emergency stop button [S61].	<input type="checkbox"/>
Emergency stop, stop category 0: Make sure that the drive stops the motor by coasting and that the correct warnings and indications are shown.	<input type="checkbox"/>
Emergency stop, stop category 1: Make sure that the drive stops the motor by decelerating and that the correct warnings and indications are shown.	<input type="checkbox"/>
Make sure that the emergency stop reset button indicator light [S62] comes on.	<input type="checkbox"/>
Make sure that the main contactor/breaker opens as described in this manual.	<input type="checkbox"/>
Make sure that the STO function is activated.	<input type="checkbox"/>
Make sure that the correct indications for STO activation are shown (as defined by parameter 31.22).	<input type="checkbox"/>



66 Start-up and validation test

Action	<input checked="" type="checkbox"/>
<p>Make sure that the drive generates none of these faults:</p> <ul style="list-style-type: none"> • STO hardware failure (5090) • Safe torque off 1 loss (FA81) • Safe torque off 2 loss (FA82) <p>If the drive generates these faults, refer to the fault tracing instructions in this manual. If the FSO module generates a fault, refer to the FSO module user's manual, chapter Fault tracing.</p>	<input type="checkbox"/>
<p>Make sure that you cannot close the main contactor/breaker with the operating switch or by other means.</p>	<input type="checkbox"/>
<p>Make sure that you cannot start the drive or motor from any control location. Make sure that the drive or motor does not start when you switch the start signal off and on, or push the start key of the panel when the panel is in local control mode.</p>	<input type="checkbox"/>
<p>Switch off the drive start signal.</p>	<input type="checkbox"/>
<p>Turn the emergency stop button [S61] until it releases and returns to the up position.</p>	<input type="checkbox"/>
<p>Push the emergency stop reset button [S62]. Make sure that:</p> <ul style="list-style-type: none"> • the emergency stop reset button indicator light [S62] goes off • the main contactor/breaker closes • the drive does not restart automatically. 	<input type="checkbox"/>
<p>Power up the drive:</p> <ul style="list-style-type: none"> • If the drive tripped on a fault, reset the faults from the drive • Make sure that the operating switch is set to ON (1) • Switch on the drive start signal. <p>For more information, see the hardware manual.</p>	<input type="checkbox"/>
<p>Restart the drive and motor. Make sure that they operate normally.</p>	<input type="checkbox"/>
<p>Do the test again from each operating location (for each emergency stop button and reset button).</p>	<input type="checkbox"/>
<p>Create a backup file of the drive parameters with the Drive Composer pro PC tool.</p>	<input type="checkbox"/>
<p>Save the FSO safety file with the button Save safety file in the Drive Composer pro PC tool.</p>	<input type="checkbox"/>
<p>Fill in and sign the validation test report. Store the report in the logbook of the machine.</p>	<input type="checkbox"/>





Fault tracing

Contents of this chapter

This chapter provides general diagnostics and troubleshooting tips.

Fault tracing

■ STO circuit connections

Use a voltage tester or multimeter to measure the continuity of the STO circuit connections, if the drive generates one or more of these faults:

- STO hardware failure (5090)
- Safe torque off 1 loss (FA81)
- Safe torque off 2 loss (FA82)

Refer to the circuit diagrams delivered with the drive.

Stop the drive and do the steps in section [Electrical safety precautions \(page 11\)](#) before you start the work.

■ Other

For more fault tracing possibilities, refer to the hardware and firmware manuals of the drive.

Reporting problems and failures related to safety functions

Contact ABB.

A large, bold, black number '9' is centered within a light grey square with rounded corners.

Maintenance

Contents of this chapter

This chapter contains information for the maintenance and decommissioning of the safety function.

Safety circuit maintenance

After the safety function is validated, it must be maintained by:

- periodic proof testing
- replacing the charging contactor before the end of its specified lifetime
- replacing the main contactor/breaker before the end of its specified lifetime.

See the contactor/breaker data sheet or manual.

If you change the wiring or a component after the start-up, replace a power unit or its circuit boards, replace the FSO or FSE-31 module, modify FSO module parameters, or restore parameters to their factory default values:

- Use only ABB-approved spare parts.
- Register the change to the change log for the safety circuit.
- If parameters were restored to the factory default values: Set the parameters related to the safety function.
- Do the validation test of the safety function.
- Document the tests and store the report into the logbook of the machine.

Proof test interval

Proof tests are used to detect failures in the safety function. To do a proof test, use the validation test procedure given in this manual.

Periodic proof testing of the safety function is necessary to maintain the required SIL/PL-level. In high demand mode of operation, the maximum proof test interval is 20 years. In low demand mode of operation, the maximum proof test interval is 1 year (high or low demand as defined in IEC 61508, IEC/EN 62061 and EN ISO 13849-1). Regardless of the mode of operation, it is a good practice to do the proof test for the safety function at least once a year. It is also a good practice to include the proof test for the safety function in the routine maintenance program of the machinery.

The person responsible for the design of the complete safety system should also note the Recommendation of Use CNB/M/11.050 published by the European co-ordination of Notified Bodies for Machinery concerning dual-channel safety-related systems with electromechanical outputs:

- When the safety integrity requirement for the safety function is SIL 3 or PL e (cat. 3 or 4), the proof test for the function must be done at least every month.
- When the safety integrity requirement for the safety function is SIL 2 (HFT = 1) or PL d (cat. 3), the proof test for the function must be done at least every 12 months.

This is a recommendation and depends on the required (not achieved) SIL/PL. For example, contactors, breakers, safety relays, contactor relays, emergency stop buttons, switches, etc. are typically safety devices which have electromechanical outputs. The STO circuit of the drive does not have electromechanical outputs. Also, the FSO and FSE-31 modules do not have electromechanical outputs.

Functional safety components

The mission time of functional safety components is 20 years which equals the time during which failure rates of electronic components remain constant. This applies to the components of the standard Safe torque off circuit as well as any modules, relays and, typically, any other components that are part of functional safety circuits.

The expiry of mission time terminates the certification and SIL/PL classification of the safety function. The following options exist:

- Renewal of the whole drive and all optional functional safety module(s) and components.
- Renewal of the components in the safety function circuit. In practice, this is economical only with larger drives that have replaceable circuit boards and other components such as relays.

Note that some of the components may already have been renewed earlier, restarting their mission time. The remaining mission time of the whole circuit is however determined by its oldest component. Also note that some components connected to the functional safety system such as main and charging contactors or breakers may have a shorter lifespan than 20 years, depending on their usage. These components must be replaced before the end of their lifetime.

Contact your local ABB service representative for more information.

Competence

The person who does the maintenance and proof test activities of the safety function must be a competent person with expertise and knowledge of the safety function and functional safety, as required by IEC 61508-1 clause 6.

Residual risk

The safety functions are used to reduce the recognized hazardous conditions. In spite of this, it is not always possible to eliminate all potential hazards. Thus, the warnings for the residual risks must be given to the operators.

Intentional misuse

The safety circuit is not designed to protect a machine against intentional misuse.

Decommissioning

When you decommission an emergency stop circuit or a drive, make sure that the functional safety of the machine is maintained by other means until the decommissioning is completed.

10

Technical data

Contents of this chapter

This chapter gives the safety data, ambient conditions, and list of standards related to the product.

Safety data

■ Safety performance with different safety pulse encoders

Refer to [FSE-31 pulse encoder interface module user's manual \(3AXD50000016597 \[English\]\)](#).

■ Safety data values

The safety data is valid for the default design of the safety circuit shown in this manual. If the final design is different from the default design, and the customer has ordered safety data calculations (option +P947), ABB calculates the new safety data and delivers it separately to the customer.

The safety data calculations are based on these assumptions on the operation of the main contactor [Q2] and charging contactor [Q4]:

- It is switched at low load current (normal use, ~0%, AC-1).
- It is used for the emergency stop once a month.
- It is used for the ordinary on and off once a week.

The safety data calculations are based on the following assumptions on the operation of the main breaker [Q1]:

- It is switched at low load current (normal use, ~0%, AC-1).
 - It is used for the emergency stop once a month.
 - It is used for the ordinary on and off once a week.
-

The safety data calculations are based on the assumption that the emergency stop is used once a month.

The safety encoder is not included in the calculations, because it is not included in the delivery. Only the FSE-31 module is included in the calculations (if used).

ACS880-07 and -07LC drives without the FSE-31 module

Frame size	SIL	SC	PL	PFH ¹⁾ [1/h]	PFH ²⁾ [1/h]	PFD _{avg}	DC ³⁾ [%]	Cat.	HFT	CCF	T _M [a]	T ₁ ^{4) 5)} [a]
R6...R11	3	3	e	9.6E-08	1.4E-08	5.8E-04	≥90	3	1	80	20	20/5/2
n×R8i with one main contactor or main breaker	3	3	e	9.6E-08	3.2E-08	2.2E-03	≥90	3	1	80	20	20/5/2
n×R8i with two main contactors or main breakers	3	3	e	9.6E-08	5.1E-08	3.9E-03	≥90	3	1	80	20	20/5/2
n×R8i with three main contactors or main breakers	3	3	e	9.6E-08	4.7E-08	5.7E-03	≥90	3	1	80	20	20/5/2
n×R8i with four main contactors or main breakers	3	3	d	1.0E-07	5.8E-08	7.4E-03	≥90	3	1	80	20	20/5/2
3AXD10000097591 M												

1) PFH values according to EN ISO 13849.

2) PFH values according to EN IEC 62061.

3) In low demand mode, DC of electromechanical devices is considered as 0%, and therefore no overall DC value is claimed in low demand mode.

4) See the Recommendation of Use CNB/M/11.050 published by the European co-ordination of notified bodies for lower T₁ requirement.

5) T₁ = 20a is used with high demand mode of operation. T₁ = 1a is used with low demand mode of operation.

Note: Main contactor or main breaker requires T₁=1 a. For other components T₁=2 a is acceptable.

ACS880-07 and -07LC drives with the FSE-31 module

Frame size	SIL	SC	PL	PFH ¹⁾ [1/h]	PFH ²⁾ [1/h]	PFD _{avg}	DC ³⁾ [%]	Cat.	HFT	CCF	T _M [a]	T ₁ ^{4) 5)} [a]
R6...R11	3	3	d	1.1E-07	2.3E-08	4.5E-04	≥90	3	1	80	20	20/5/2
n×R8i with one main contactor or main breaker	3	3	d	1.1E-07	4.1E-08	2.0E-03	≥90	3	1	80	20	20/5/2
n×R8i with two main contactors or main breakers	3	3	d	1.1E-07	6.0E-08	3.8E-03	≥90	3	1	80	20	20/5/2
n×R8i with three main contactors or main breakers	3	3	d	1.1E-07	5.6E-08	5.6E-03	≥90	3	1	80	20	20/5/2

Frame size	SIL	SC	PL	PFH ¹⁾ [1/h]	PFH ²⁾ [1/h]	PFD _{avg}	DC ³⁾ [%]	Cat.	HFT	CCF	T _M [a]	T ₁ ^{4) 5)} [a]
n×R8i with four main contactors or main breakers	3	3	d	1.1E-07	6.7E-08	7.3E-03	≥90	3	1	80	20	20/5/2
3AXD10000097591 M												

1) PFH values according to EN ISO 13849.

2) PFH values according to EN IEC 62061.

3) In low demand mode, DC of electromechanical devices is considered as 0%, and therefore no overall DC value is claimed in low demand mode.

4) See the Recommendation of Use CNB/M/11.050 published by the European co-ordination of notified bodies for lower T₁ requirement.

5) T₁ = 20a is used with high demand mode of operation. T₁ = 1a is used with low demand mode of operation.

Note: Main contactor or main breaker requires T₁=1 a. For other components T₁=2 a is acceptable.

ACS880-17, -17LC, -37, and -37LC drives without the FSE-31 module

Frame size	SIL	SC	PL	PFH ¹⁾ [1/h]	PFH ²⁾ [1/h]	PFD _{avg}	DC ³⁾ [%]	Cat.	HFT	CCF	T _M [a]	T ₁ ^{4) 5)} [a]
R6i...R7i, R11	3	3	e	9.6E-08	1.2E-08	8.2E-04	≥90	3	1	80	20	20/5/2
R8i	3	3	e	9.6E-08	1.4E-08	5.8E-04	≥90	3	1	80	20	20/5/2
n×R8i with one main contactor or main breaker	3	3	e	9.6E-08	3.2E-08	2.4E-03	≥90	3	1	80	20	20/5/2
n×R8i with two main contactors or main breakers	3	3	e	9.6E-08	5.0E-08	4.2E-03	≥90	3	1	80	20	20/5/2
n×R8i with three main contactors or main breakers	3	3	e	9.6E-08	6.0E-08	5.9E-03	≥90	3	1	80	20	20/5/2
n×R8i with four main contactors or main breakers	3	3	d	1.0E-07	7.4E-08	7.7E-03	≥90	3	1	80	20	20/5/2
3AXD10000097591 M												

1) PFH values according to EN ISO 13849.

2) PFH values according to EN IEC 62061.

3) In low demand mode, DC of electromechanical devices is considered as 0%, and therefore no overall DC value is claimed in low demand mode.

4) See the Recommendation of Use CNB/M/11.050 published by the European co-ordination of notified bodies for lower T₁ requirement.

5) T₁ = 20a is used with high demand mode of operation. T₁ = 1a is used with low demand mode of operation.

Note: Main contactor or main breaker requires T₁=1 a. For other components T₁=2 a is acceptable.

ACS880-17, -17LC, -37, and -37LC drives with the FSE-31 module

Frame size	SIL	SC	PL	PFH ¹⁾ [1/h]	PFH ²⁾ [1/h]	PFD _{avg}	DC ³⁾ [%]	Cat.	HFT	CCF	T _M [a]	T ₁ ^{4) 5)} [a]
R6i...R7i, R11	3	3	d	1.1E-07	2.1E-08	6.9E-04	≥90	3	1	80	20	20/5/2
R8	3	3	d	1.1E-07	2.3E-08	4.5E-03	≥90	3	1	80	20	20/5/2
n×R8i with one main contactor or main breaker	3	3	d	1.1E-07	4.1E-08	2.3E-03	≥90	3	1	80	20	20/5/2
n×R8i with two main contactors or main breakers	3	3	d	1.1E-07	5.9E-08	4.0E-03	≥90	3	1	80	20	20/5/2
n×R8i with three main contactors or main breakers	3	3	d	1.1E-07	6.9E-08	5.8E-03	≥90	3	1	80	20	20/5/2
n×R8i with four main contactors or main breakers	3	3	d	1.1E-07	8.3E-08	7.6E-03	≥90	3	1	80	20	20/5/2
3AXD10000097591 M												

¹⁾ PFH values according to EN ISO 13849.

²⁾ PFH values according to EN IEC 62061.

³⁾ In low demand mode, DC of electromechanical devices is considered as 0%, and therefore no overall DC value is claimed in low demand mode.

⁴⁾ See the Recommendation of Use CNB/M/11.050 published by the European co-ordination of notified bodies for lower T₁ requirement.

⁵⁾ T₁ = 20a is used with high demand mode of operation. T₁ = 1a is used with low demand mode of operation.

Note: Main contactor or main breaker requires T₁=1 a. For other components T₁=2 a is acceptable.

ACS880-07LC, -17LC, and -37LC drives without a main breaker

ACS880-07LC, -17LC, and -37LC drives can be delivered without a factory-installed main breaker. In these cases, safety data is delivered separately to the customer.

Note: Customer-installed components are not included in the safety data calculations. These values must be added to the calculations by the customer.

■ Safety component types

Safety component types as defined in IEC 61508-2:

- emergency stop button: type A
- safety relay(s): type A
- main contactor(s): type A
- main breaker: type A.
- FSO module: type B

- FSE module: type B
- drive STO circuit:
 - frame sizes R1...R9 and drives with R6i...R7i inverter modules: type A
 - drives with R6i...R7i inverter modules and UCU-22, -23 or -24 control unit: type B
 - frame sizes R10 and R11 and drives with R8i inverter modules: type B.

■ **Safety block diagrams**

The components that are included in the safety data calculations are shown in the safety block diagram(s). The components not included in the drive delivery are not included in the safety data calculations.

The components that are included in the safety circuit are shown in the safety block diagrams for different drive types.

Diagram 1: ACS880-07 drives with frame size R6...R11, ACS880-17 and -37 drives with frame size R8


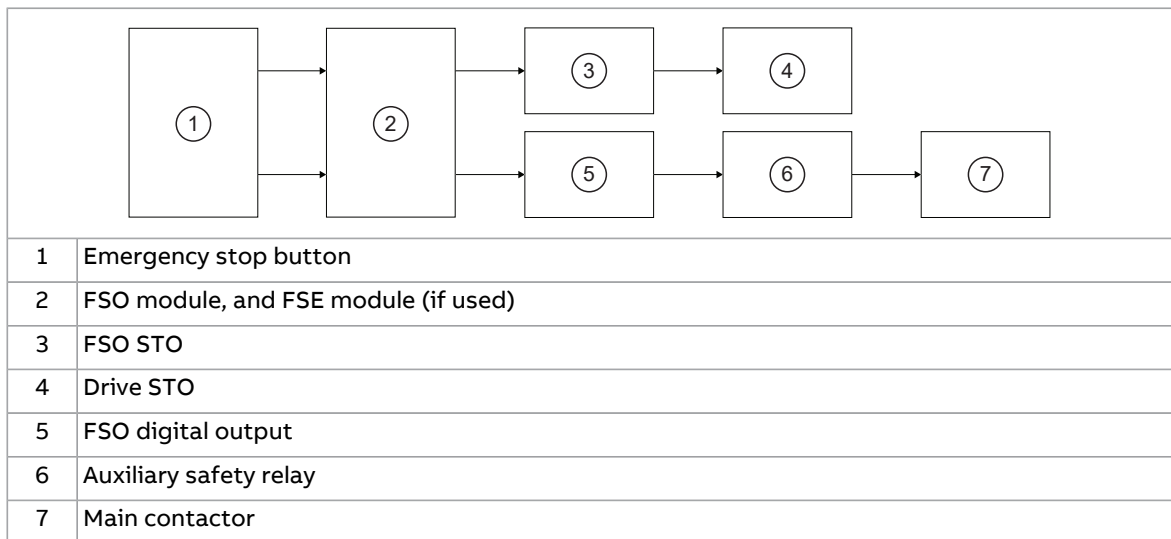


Diagram 2: ACS880-07 and -07LC drives with frame size R8i

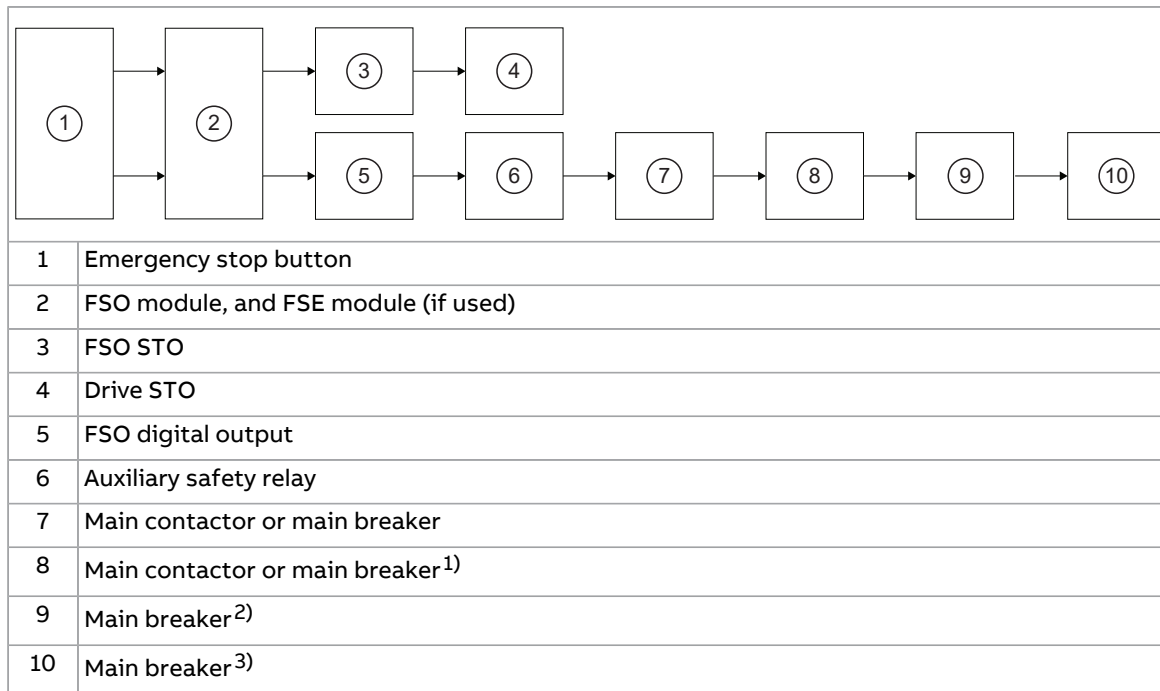


1) Applicable to drives with 2 main contactors or 2...4 main breakers.

2) Applicable to drives with 3...4 main breakers.

3) Applicable to drives with 4 main breakers.

Diagram 3: ACS880-17, -17LC, -37, -37LC drives with frame size R11 or R6i...R8i

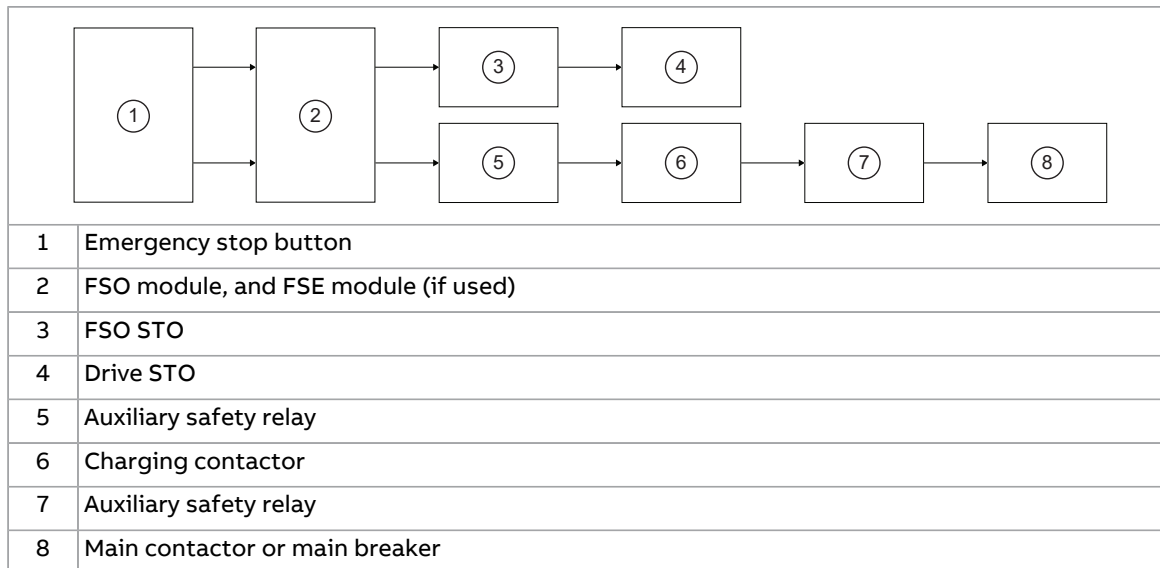

■ **Relevant failure modes**

Relevant failure modes are:

- the main contactor/breaker does not open when requested. (All contactor/breaker failures are considered dangerous.)
- internal failures of the emergency stop button, the FSO module, the FSE module, and the drive STO.

These failures are included in the failure rate value of the function.

The FSO module detects open circuits, short circuits, and redundancy failures of the emergency stop input signal wirings. Similarly, it detects redundancy failures of the emergency stop button when the emergency stop request is on.

■ **Fault exclusions**

Fault exclusions (not considered in the calculations):

- short and open circuits in the cables of the safety circuit inside the cabinet
- short and open circuits in the cabinet terminal blocks of the safety circuits.

■ **Operation delays**

Emergency stop total delay and fault reaction response time (includes the response time of the drive STO):

- Stop category 0: less than 500 ms
- Stop category 1: Emergency stop ramp time + possible STO delay settings + less than 500 ms.

Note: If you use a safety encoder, you must add the delays of the encoder when defining the total response time for the safety function and the fault reaction function.

Ambient conditions

For the environmental limits for the safety functions and the drive, refer to the drive hardware manual and the FSO module user's manual.

Related standards and directives

Standard	Name
IEC 61800-5-2:2016 EN 61800-5-2:2007	Adjustable speed electrical power drive systems - Part 5-2: Safety requirements – Functional
IEC 62061:2021 + AMD1:2024 EN IEC 62061:2021	Safety of machinery – Functional safety of safety-related control systems
EN ISO 13849-1:2023	Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design
EN ISO 13849-2:2012	Safety of machinery - Safety-related parts of control systems - Part 2: Validation
IEC 61508-1:2010	Functional safety of electrical/electronic/programmable electronics safety related systems – Part 1: General requirements
IEC 61508-2:2010	Functional safety of electrical/electronic/programmable electronics safety related systems – Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems
IEC 61511-1:2016 + AMD1:2017	Functional safety – Safety instrumented systems for the process industry sector – Part 1: Framework, definitions, system, hardware and application programming requirements
IEC 61000-6-7:2014	Electromagnetic compatibility (EMC) – Part 6-7: Generic standards – Immunity requirements for equipment intended to perform functions in a safety-related system (functional safety) in industrial locations

Standard	Name
IEC 61326-3-1:2017	Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 3-1: Immunity requirements for safety-related systems and for equipment intended to perform safety-related functions (functional safety) – General industrial applications
EN ISO 13850:2015	Safety of machinery – Emergency stop – Principles for design
2006/42/EC	European Machinery Directive
	Supply of Machinery (Safety) Regulations 2008 (UK)
Other	Machine-specific C-type standards

Compliance with the European Machinery Directive

The drive is an electronic product which is covered by the European Low Voltage Directive. However, the drive internal safety function of this manual is in the scope of the Machinery Directive as a safety component. This function complies with European harmonized standards such as IEC/EN 61800-5-2.



Declaration of conformity according to EU Machinery Directive 2006/42/EU (3AXD10000105027)

Compliance with the Supply of Machinery (Safety) Regulations (UK)

The drive is an electronic product which is covered by the Electrical Equipment (Safety) Regulations. However, the drive internal safety function of this manual is in the scope of the Supply of Machinery (Safety) Regulations as a safety component. This function complies with designated standards such as EN 61800-5-2.



Declaration of conformity according to UK Supply of Machinery (Safety) Regulations 2008 (3AXD10001326695)

Further information

Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to www.abb.com/contact-centers.

Product training

For information on ABB product training, navigate to new.abb.com/service/training.

Providing feedback on ABB manuals

Your comments on our manuals are welcome. Navigate to forms.abb.com/form-26567.

Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet at www.abb.com/drives/documents.



www.abb.com/drives



3AUA0000145920H