


Operating manual

42/61-77 EN

Rev. 00



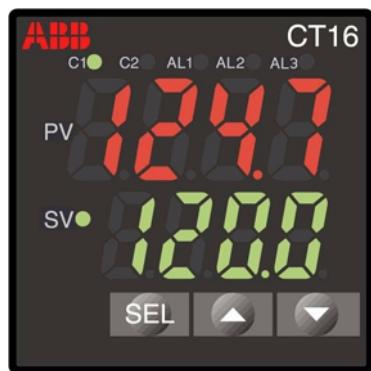

# Instruction Manual

## Micro-controller Model : CT16

### ABB Automation Products GmbH

ABB Automation Products GmbH  
Hoeseler Platz 2  
42579 Heiligenhaus  
Germany

INP-TN1PXR4ABB-E

Operating manual 42/61 -77 EN  
Revision 00  
Edition 02.02

Thank you for your purchasing "ABB Digital Temperature Controller." Please check that the product is exactly the one you ordered and use it according to the following instructions.

#### NOTICE

The contents of this document may be changed in the future without prior notice.  
We paid the utmost care for the accuracy of the contents. However, we are not liable for direct and indirect damages resulting from incorrect descriptions, omission of information, and use of information in this document.

#### Check of specifications and accessories

Before using the controller, check if the type and specifications are as ordered. (A Table of Model code configuration is given in Page 22).

Check that all of the following accessories are included in the package box.

- Temperature controller ----- 1 unit
- Instruction manual ----- 1 copy
- Mounting bracket ----- 1 pce.
- I/V unit (250Ω resistor) ----- 1 pce. (4-20mA DC input type only)

#### The related documents

For details, refer to the following documents.

Contents	Name	Name
Specifications	Catalogue	10/61-1.12
Operation method	MICRO-CONTROLLER (Model : CT16) OPERATION MANUAL	42/61-77
Communication functions	COMMUNICATION FUNCTIONS (MODBUS) INSTRUCTION MANUAL	42/61-78

## Safety Precautions

Before using this product, the user is requested to read the following precautions carefully to ensure the safety. Safety precautions must be taken by every user to prevent accidents.

The safety requirements are classified into "warning" and "caution" according to the following interpretations :

	Warning	Suggesting that the user's mishandling can result in personal death or serious injury.
	Caution	Suggesting that the user's mishandling can result in personal injury or damage to the property.

## ! WARNING

## Over-temperature Protection

"Any control system design should take into account that any part of the system has the potential to fail".

"For temperature control systems, continued heating should be considered the most dangerous condition, and the machine should be designed to automatically stop heating if unregulated due to the failure of the control unit or for any other reason".

The following are the most likely causes of unwanted continued heating:

- 1) Controller failure with heating output constantly on
  - 2) Disengagement of the temperature sensor from the system
  - 3) A short circuit in the thermocouple wiring
  - 4) A valve or switch contact point outside the system is locked to keep the heat switched on.
- In any application where physical injury or destruction of equipment might occur, we recommend the installation of independent safety equipment, with a separate temperature sensor, to disable the heating circuit in case of overheating.
- The controller alarm signal is not designed to function as a protective measure in case of controller failure.

# **1. Warning**

## **1.1 Installation and wiring**

- This controller designed to be installed at the following conditions.

Operating temperature	-10 to +50 [°C ]	
Operating humidity	90%RH or less (Non condensation)	
Oversupply category	II	Conforming to IEC1010-1
Pollution degree	2	

- The controller must be installed such that with the exception of the connection to the mains, creepage and clearance distances shown in the table below are maintained between the temperature probe and any other assemblies which use or generate a voltage shown in the table below.

Failure to maintain these minimum distances would invalidate the EN 61010 safety approval.

Voltage used or generated by any assemblies	Clearance (mm)	Creepage (mm)
Up to 50Vrms or Vdc	0.2	1.2
Up to 100Vrms or Vdc	0.2	1.4
Up to 150Vrms or Vdc	0.5	1.6
Up to 300Vrms or Vdc	1.5	3.0
Above 300Vrms or Vdc	Contact with our sales office.	

- If the voltage shown above exceeds 60Vdc (i.e. hazardous voltage), the basic insulation is required between all terminals of this controller and the ground, and supplementary insulation is required for the alarm output. Required isolation of this controller is as shown below. Be sure to check that the oversupply category of the controller satisfies your requirements before installation.

— : Basic insulation, - - - : Non-insulation, —— : Functional insulation

Mains (Power source)	Measured value input, CT input
	Internal circuit
Control output1 (relay output)	Control output1 (SSR drive output / Current output)
Control output2 (relay output)	Control output2 (SSR drive output / Current output)
Alarm output (ALM1)	Alarm output 1
Alarm output (ALM2)	Alarm output 2
Heater burnout alarm output (HB)	Digital input (DI1, DI2)

- If there is a danger of a serious accident resulting from a failure or a defect in this unit, provide the unit with an appropriate external protective circuit to prevent an accident.
- The unit is normally supplied without a power switch and fuses. Make wiring so that the fuse is placed between the main power supply switch and this controller. (Main power supply: 2 pole breaker, fuse rating: 250V, 1A)
- When wiring the power supply terminal, use insulated cable for use up to 600V.
- To avoid the damage and failure of controller, supply the power voltage fitting to the rating.
- To avoid an electric shock and controller failure, do not turn ON the power before all wiring is completed.
- Be sure to check that the distance is kept to avoid electric shock or firing before turning the power ON.
- Keep away from terminals while the circuit is energized in order to avoid an electric shock and a malfunction.
- Never attempt to disassemble, fabricate, modify, or repair this unit because tampering with the unit may result in a malfunction, electric shock, or a fire.

## 1.2 Maintenance precautions

- Be sure to turn off the power before this controller is installed or removed in order to avoid an electric shock, malfunction, and fault.
- Regular maintenance is recommended a longer service life of this controller. Some parts of this controller have a limited life span, or they will be deteriorated with the lapse of time.
- One-year warranty is guaranteed for this unit including accessories, provided that the controller is properly used.

## 2. Warning

### 2.1 Cautions on installation

Avoid the following places for installation.

- a place where the ambient temperature may reach beyond the range of from 0 to 50°C while in operation.
- a place where the ambient humidity may reach beyond the range of from 45 to 85% RH while in operation.
- a place where a change in the ambient temperature is so rapid as to cause condensation.
- a place where corrosive gases (sulfide gas and ammonia gas, in particular) or combustible gases are emitted.
- a place where the unit is subject directly to vibration or shock.
- a place exposed to water, oil, chemicals, steam and vapor.  
(if immersed with water, take the inspection by ABB to avoid an electrical leakage and firing)
- a place where the unit is exposed to dust, salt air, or air containing iron particles.
- a place where the unit is subject to interference with static electricity, magnetism, and noise.
- a place where the unit is exposed to direct sunlight.
- a place where the heat may be accumulated due to the radiation of heat.

### 2.2 Caution on installation on panel

- Insert the mounting bracket (accessory) from the rear side until the main unit is securely fit into the panel. If there should be a play, tighten two screws lightly until the play is eliminated. (Do not tighten the screws excessively because the mounting bracket can be removed from the stopper by the force.)
- The front side of this controller conforms to NEMA 4X(equivalent with IP66). To ensure the waterproofness between the instrument and the panel, use packings that are provided as accessories in the following manner: (The improper fitting of packings will ruin the waterproofness.)
  - ① As shown in Figure 1, fit a packing to the case of the unit and then insert it in the panel.
  - ② Tighten screws on the fixing frame or fixtures so that no gaps are given between the front of controller and packing and between panels. Check that there are no deviation and deformation of packing as shown in Fig.3.

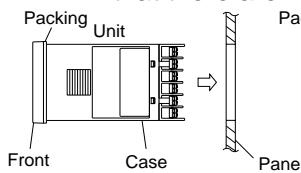


Figure 1

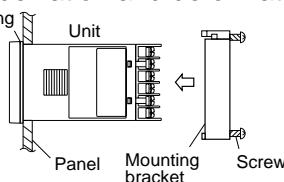


Figure 2


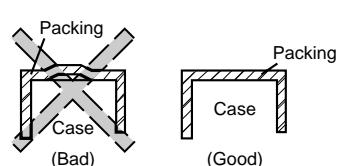


Figure 3

Standard : Vertical mounting, flush on the panel. (The controller is horizontal.)

When mounting the controller on tilted surface, the maximum tilt angle is 30° (degree) from vertical.

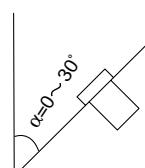

#### (Caution)

- Don't block the openings around the controller, or radiation effect will be reduced.
- Don't block the ventilation openings at the top of the terminal block.

### 2.3 Precautions in wiring connection

- For the thermocouple sensor type, use thermocouple compensation wires for wiring.
- For the RTD type, use a wiring material with a small lead wire resistance and no resistance differentials among three wires.
- Keep input lines away from power line and load line to avoid the influence from noise induced.
- For the input and output signal lines, be sure to use shielded wires and keep them away from each other.
- If a noise level is excessive in the power supply, the additional installation of an insulating transformer and the use of a noise filter are recommended. (example: ZMB22R5-11 Noise Filter manufactured by TDK)  
Make sure that the noise filter is installed to a place such as a panel that is properly grounded. The wiring between the noise filter output terminal and the instrument power supply terminal should be made as short as possible. None of fuses or switches should be installed to the wiring on the noise filter output side because the filter effect will be degraded by such a installation.
- A better anti-noise effect can be expected by using stranded power supply cable for the instrument. (The shorter the stranding pitch is, the better the anti-noise effect can be expected.)
- For the unit with an alarm against a failure (burn-out) in the heater, use the same power line for connection of the power supplies for the heater and the controller.
- A setup time is required for the contact output when the power is turned on. If the contact output is used as a signal for an external interlock circuit, use a delay relay at the same time.
- Use the auxiliary relay since the life is shortened if full capacity load is connected to the output relay. SSR/SSC drive output type is preferred if the output operations occur frequently.  
[Proportional interval] relay output: 30 seconds or more,  
SSR/SSC: one second or more


- If inductive load such as magnetic switches connected as a relay output load, it is recommended to use a varistor to protect a contact from switching surge and keep a longer life.

Model : Siemens S05K150/Q69X3030 (Voltage at relay: 115 V AC)

Siemens S05K300/Q69X3035 (Voltage at relay: 230 V AC)

Where to install : Connect it between contacts of the relay control output.

Example)

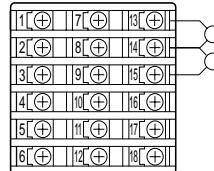

Varistor connection

- The SSR/SSC-driven output, an output of 4 to 20 mA DC, are not electrically insulated from internal circuits.  
Use a non-grounded sensor for resistance bulb or thermocouple.

### 2.4 Requirement for key operation/operation in abnormalities


- Prior to the operation, be sure to check alarm functions, since a failure in the proper setting will result in a failure in the proper output of an alarm in case of an abnormality.
- A display of UUUU or LLLL will appear in case of a break in the input. Be sure to turn off the power when a sensor is replaced.

### 2.5 Others

- Do not use organic solvents such as alcohol and benzine to wipe this controller. Use a neutral detergent for wiping the controller.

## For normal usage

<Reference items>

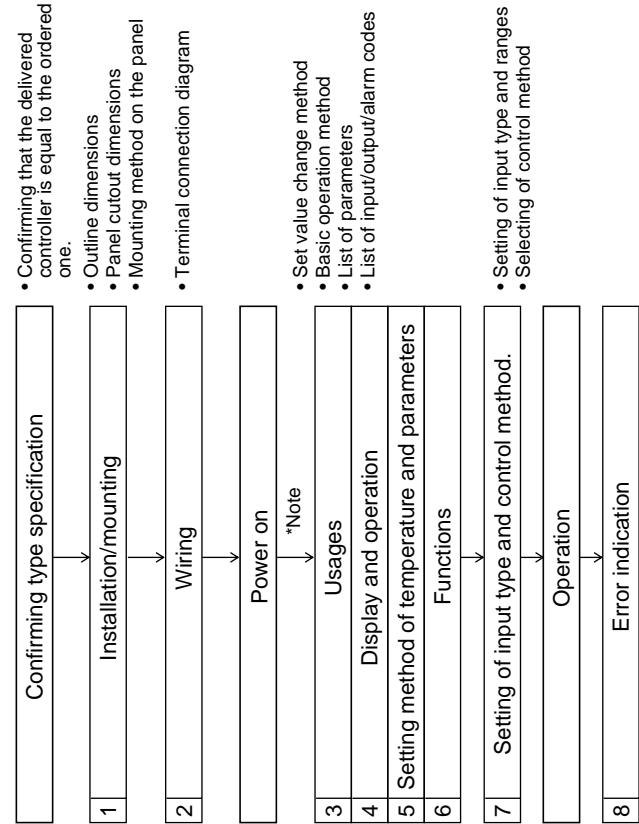

(Note) \*To start the operation, wait for about 30 minutes after the power-on for warm up.

- Do not connect anything to terminals not used.

- Note 1  
Caution on side by side installation

  - With the power supply of 200 VAC or more, a maximum ambient temperature is 45°C.  
(It is recommended to use a fan for cooling.)


Do not connect anything to terminals not used.

תְּנַשֵּׁאָבָרָה אֶת־עֲמָקָם יְמִינָה וְעַד־בְּנֵי־עַמּוֹת

## Caution

### With the power supply of

With the power supply or 200 VAC or more, a maximum ambient temperature is 45°C.  
(It is recommended to use a fan for cooling.)

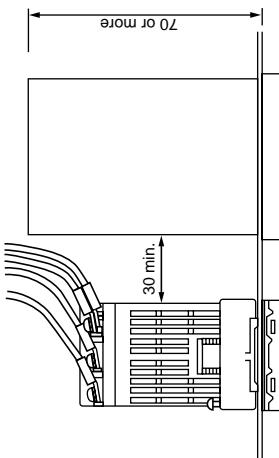

When there is another instrument (larger than 70mm) or a wall on the right side of this controller, be sure to install the controller keeping a space of more than 30mm.


1 Installation/mounting

Outline and Data Output Dimensions

Outline dimensions (Unit : mm)		Panel cutout dimensions (Unit : mm)	
		Packing Panel thickness 1 to 8mm	Mounting bracket Terminal screw M3x6

## 2 Wiring

**Terminal connection diagram (100 to 240 V AC)**

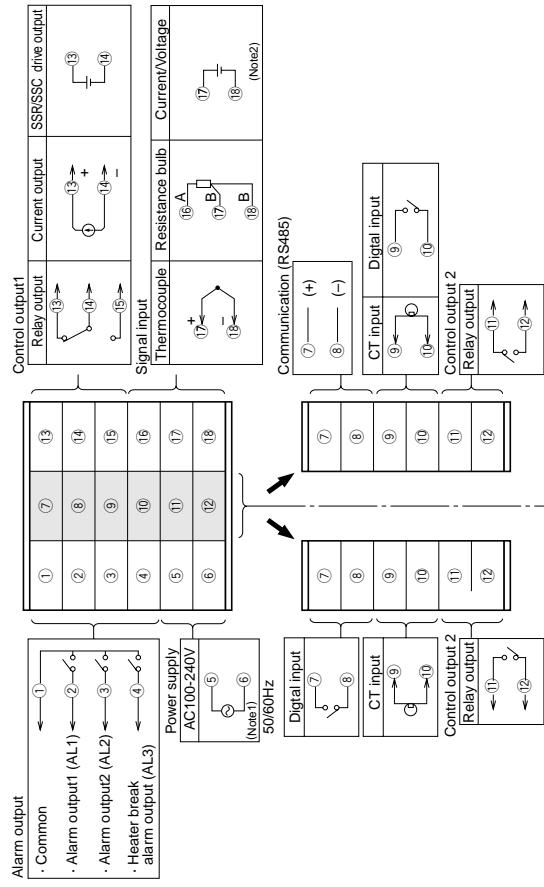

Note1) Check the power supply voltage before installation.  
Note2) Connect the I/V unit (250Ω resistor) (accessory) between the terminal (7) and (8) in case of current input.

## 3 Usage (Read before using)

**Name of Functional Parts and Functions**

Setting keys	Name	Function
(S1) Select key		The key shifting to the 1st, the 2nd or the 3rd block parameter. Switching the display between parameter and the data at the 1st, the 2nd and the 3rd block.
(S2) Up key		. The numerical value is increased by pressing the key once. The numerical value keeps on increasing by pressing the key continuously.
(S3) Down key		. For searching parameters within the 1st, the 2nd and the 3rd block. · The numerical value is decreased by pressing the key once. The numerical value keeps on decreasing by pressing the key continuously. · For searching parameters within the 1st, the 2nd and the 3rd block.
	Model : CT16	
Display/Indication	Name	Function
(1) Process value (PV)/parameter name display		1) Displays a process value (PV). 2) Displays the parameter symbols at parameter setting mode. 3) Displays various error indications (refer to the 8, Error indications).
(2) Set value (SV) indication lamp		The lamp is lit while a set value (SV) is displayed.
(3) Set value (SV)/parameter setting display		1) Displays a set value (SV). 2) Display the parameter settings at parameter setting mode. 3) Flickers at Standby mode. 4) Displays the set value (SV) and "SV-1" alternately when the SV switching function is used.
(4) Auto-tuning/self-tuning indicator		The lamp flickers while the PID auto-tuning or the self-tuning is being performed.
(5) Control output indication lamp		C1 : The lamp is lit while the control output 1 is ON. C2 : The lamp is lit while the control output 2 is ON.
(6) Alarm output 1 (AL1) indication lamp (Note 1)		The lamp is lit when the alarm output 1 is activated. It flickers during ON delay operation.
(7) Alarm output 2 (AL2) indication lamp (Note 1)		The lamp is lit when the alarm output 2 is activated. It flickers during ON delay operation.
(8) Heater break alarm output (AL3) indication lamp (Note 1)		The lamp is lit while the heater break alarm output is ON.

Note 1) Control output 2 and alarm function are optional.






## 6 Functions

### 6-1 ON/OFF control


- At ON/OFF control mode, output signal is as shown below.  
Set parameter "P" = 0 for selecting the ON/OFF control mode.  
Set the hysteresis to avoid chattering.  
(Default setting: Hys = 1)

- Parameter setting and operation example

Example 1 : Reverse operation

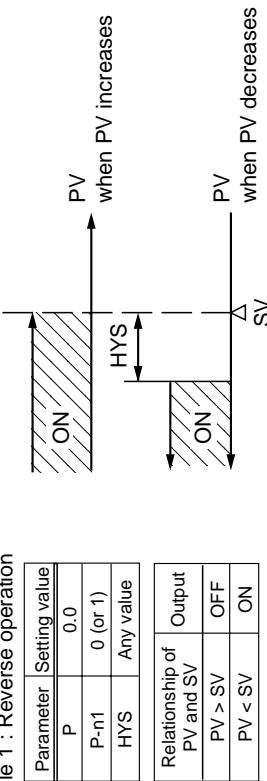

Example 2 : Direct operation

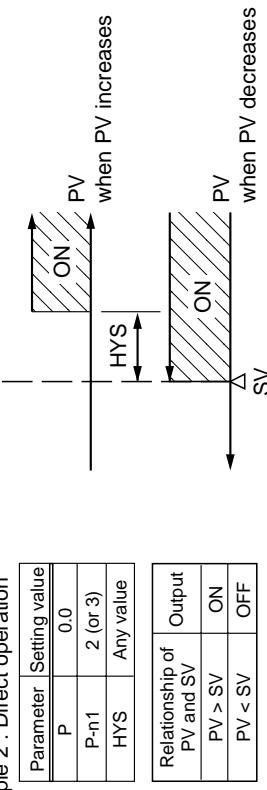

### 6-2 Auto-tuning (AT)

Autotuning is the automatic calculation and entering of the control parameters (P, I and D) into memory. Prior to the auto-tuning, complete the setting of input range (P-SL, P-SU, P-dP), a set value (SV), alarm setting (AL1, AL2), and cycle time (TC).


#### How to start the auto-tuning

Set the parameter AT as either "1" or "2" by using  $\triangle$  or  $\square$  key, and press the  $\text{SET}$  key to start the auto-tuning. Then the point indicator at the lower right starts blinking.


At the completion of Auto-tuning, the point indicator stops blinking, then parameter AT is automatically set to 0.

Setting code AT	When auto-tuning is cancelled or not performed.	Standard type (auto-tuning at SV)	Low PV type (auto-tuning at 10%FS below SV)
0		1	2

① Standard type (AT=1)

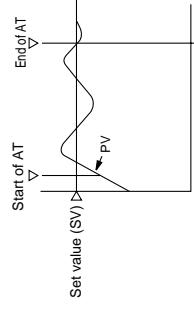

② Low PV type (AT=2) : Overshoot decreased at tuning.

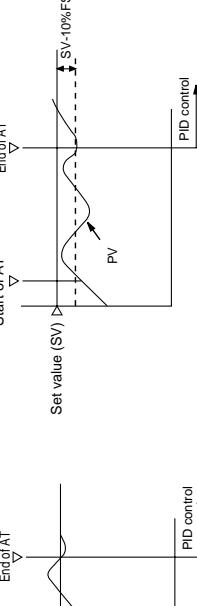

(a) The P.I.D. parameter calculated by auto-tuning remains even if the power is turned off. If the power is turned off before the auto-tuning is completed, you must restart the auto-tuning.

(b) The PV may be changed greatly depending on the process, because the control output is ON/OFF action (two position operation) in the auto-tuning. So, do not use the auto-tuning if the process does not allow a significant variation of PV. In addition, the auto-tuning should not be used in any process such as pressure control and flow control, where a quick-response is required.

(c) If the auto-tuning isn't completed in four hours, the auto-tuning is suspected to fail. In this case, check the wiring and parameters such as the control action, input type, etc.


(d) Carry out the auto-tuning again, if there is any change in SV, input range (P-SL, P-SU or P-dP) or process condition. Perform the auto-tuning if fuzzy control is selected as the control algorithm.

(e) When resetting the AT parameter, set the parameter to "0" once, then reset it.

### 6-3 Self-tuning

- 1) At power on, changing a set value or the external disturbance, tuning is made automatically so that the PID parameters are re-optimized.  
It is useful where modification of PID parameters is required repeatable due to frequent change in process condition.  
If high controllability is important, select the PID or fuzzy control algorithm and use auto-tuning.
  - 2) Setting for self-tuning
    - ① Turn on the power and set the SV.
    - ② Select SELF at "CTrL" (control algorithm) parameter.
    - ③ Turn off the power once.
    - ④ Turn on the power of the whole system. The controller should be turned on at the same time with the other equipments or even later. Otherwise, the self-tuning might not be performed successfully.
    - ⑤ Self-tuning starts. Then the point indicator at the lower right corner starts blinking until the PID parameters are re-optimized.
- Note) Whenever it is necessary to re-try the self-tuning, please set "CTrL" = PID once, and then start the above setting procedure from the beginning.

#### 2nd block parameter

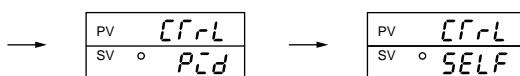

Set "CTrL" (control algorithm) as SELF.

PID	PID control
FUZY	Fuzzy control
SELF	Self-tuning control

#### 3) Self-tuning indication



The point indicator at the lower right corner starts blinking until the PID parameters are re-optimized.


- 4) Self-tuning is executed by any of the following conditions.
  - ① During temperature rise at power ON.
  - ② During temperature rise at SV changing if necessary.
  - ③ When control is out of stable condition and is judged as being out of stable condition continuously.
- 5) Self-tuning is not executed under the following conditions:
  - ① During standby mode
  - ② During ON/OFF control
  - ③ During auto-tuning
  - ④ During ramp/soak operation
  - ⑤ During input error
  - ⑥ With dual output ("P-n1" ≥ 4)
  - ⑦ When P, I, D or Ar is manually set

Under the following conditions, self-tuning is canceled.

  - ① When SV is changed.
  - ② When Self-Tuning can not be completed in about 9 hours after the start.
- 6) Cautions
  - Turn on the power of the whole system. The controller should be turned on at the same time with the other equipments or even later. Otherwise, the self-tuning might not be performed successfully.
  - Don't change the SV while the self-tuning is executing.
  - Once PID parameters are optimized, the self-tuning is not executed at the next power on unless SV is changed.
  - After the execution of self-tuning, if the controllability is not your expected level, please select PID or FUZZY at "CTrL" parameter, and then, start the auto-tuning.

## 6-4 Alarm function (option)

- 1) Kinds of alarm  
 • Absolute value alarm, deviation alarm, combination alarm, and zone alarm are available.  
 (For details, see Table 4, Alarm action type codes.)

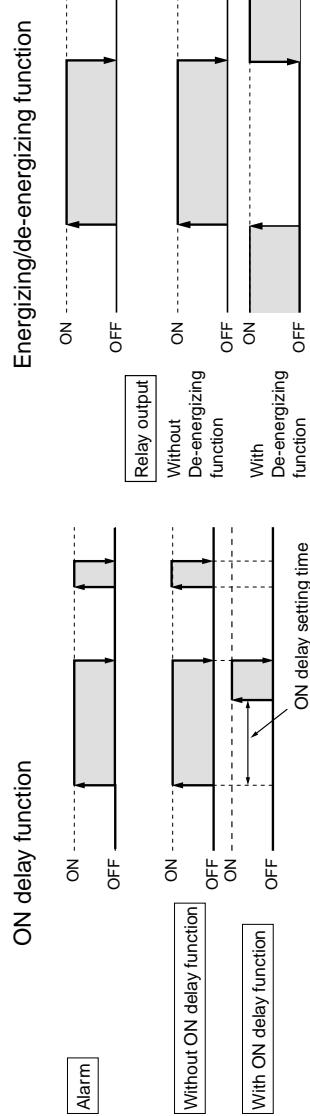

### 2) Alarm function

No.	Function	Description	Parameters to set	Cautions
①	Hysteresis	Set the hysteresis to avoid chattering.	Alarm 1 : $R_{10Y}$ Alarm 2 : $R_{20Y}$	1 Note that the ON delay function is effective for alarm in error status.
②	ON delay	The alarm is turned on with delay of a certain seconds as previously set after PV goes in the alarm band.	Alarm 1 : $d_{L1Y}$ Alarm 2 : $d_{L2Y}$	2 Even during "Err" display, alarms in error status work.
③	Alarm latch	Keeps the alarm ON status once an alarm is turned ON. To cancel the alarm latch, please take one of the following procedure. i) Turn ON the controller again. ii) Turn the alarm latch settings to OFF once. iii) Use alarm latch cancel parameter. iv) Cancel by Digital input (DI1). v) Cancel by communication function.		3 Even when "LLLL" or "UUUU" is displayed, an alarm function works normally. 4 Alarm action type codes in No.12 to 15 are also included in No.24 to 27. It is, therefore, recommended to use No.24 to 27. In addition, please note when selecting No.12 to 15, setting in ALM2, dLY2, and A2hy are effective. 5 With the HB alarm, ON delay function, de-energizing function and latch function cannot be used.
④	Error status alarm	Alarm is turned on when error indications are displayed.	Alarm 1 : $R_{10P}$ Alarm 2 : $R_{20P}$	6 The minimum alarm set value is -199.9. 7 As the alarm action type changed, the alarm set value may also be changed accordingly.
⑤	De-energizing	Alarm output can be de-energized.	Alarm 1 : $R_{10P}$ Alarm 2 : $R_{20P}$	8 Note that all of alarm outputs are not provided at the standby condition. 9 Error status alarm is not provided at the standby mode. 10 The HOLD function is effective even if the PV value is in the hysteresis area when the power is turned ON.

Combination of alarm functions  
 Please see the table as shown below.  
 O: Possible combination  
 X: Impossible combination


		Without HOLD/Timer	With HOLD	With Timer
	Alarm latch	O	O	X
	De-energizing	O	O	O
	ON delay	O	Note 1	X
	Alarm in error status	O	O	X

Note 1) The alarm is not turned on the first time the measured value is in the alarm band. Instead it turns on only when the measured value goes out of the band and enters it again.

No.	Items/Classification
1	Alarm in error status
2	Alarm at error indication
3	Alarm action type code
4	Alarm action
5	HB alarm
6	Alarm set value
7	Alarm at standby mode.
8	Alarm at standby
9	Alarm at standby mode.
10	Alarm at standby

## 6-5 Ramp/soak function

- Function  
Changes the set value (SV) as the time elapses according to a predetermined program pattern, as shown below.  
Either 4 ramp/soak x 2 patterns or 8 ramp/soak x 1 pattern can be programmed.  
The first ramp starts from the process value (PV) just before the programming is executed.

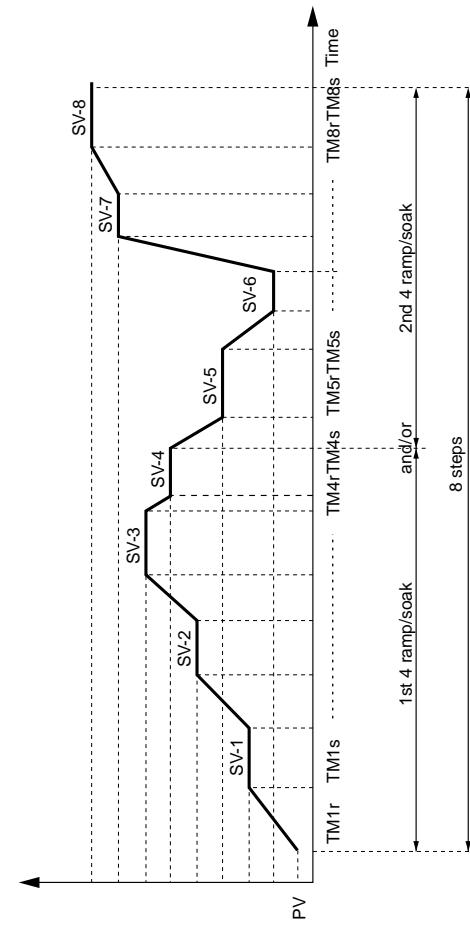

## 2. Setting

- Select the program pattern (PTn) and set the rUn at “ProG” parameter.
- Ramp/soak pattern can not be changed while ramp/soak program is running.


### Note:

- The ramp/soak program is cancelled if the controller becomes to standby mode.  
Then, if the controller becomes to operation mode, the program doesn't run again.

## 6-6 Communication function [option]

- Function
  - Data can be written/read through the MODBUS® protocol.
  - Before using this function, please set related parameters as shown below.

### 3rd block parameter

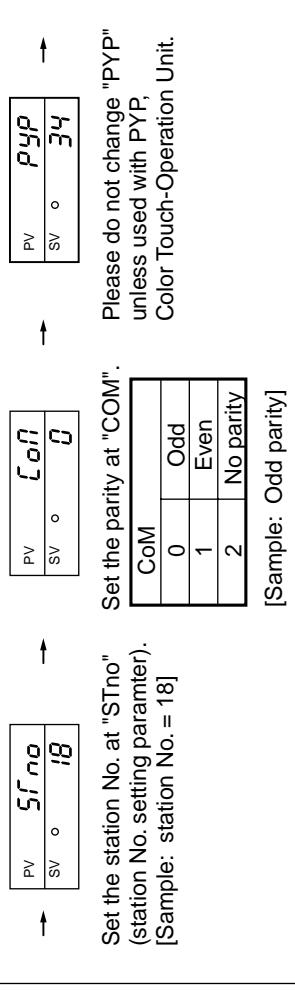

- Caution
  - Station No. can be set in the range of 0 to 255. (No communication is allowed with 0).
  - After changing the setting of parity at "COM", please power off and re-start the controller.
  - Baud rate is fixed to 9600 bps.

PTn	Pattern	Ramp/Soak
1	1	4
2	2	4
3	1 + 2	8


6-7 Digital input (DI function) [option]																																								
<p>1) Function . With Digital input, the following functions are available.</p> <ul style="list-style-type: none"> <li>① SV switching</li> <li>② Control mode; RUN/STANDBY selection</li> <li>③ Ramp/soak RUN/RESET selection</li> <li>④ Auto-tuning start/stop</li> <li>⑤ Alarm latch cancel</li> <li>⑥ Timer start/reset</li> </ul> <p>3) Table of DI function</p> <table border="1"> <thead> <tr> <th>DI function code</th> <th>Function</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Set value (SV) switching</td> <td>Switching between local SV and "SV - I" (remote SV)</td> </tr> <tr> <td>2</td> <td>Control mode, RUN/STANDBY</td> <td>At standby mode, control is not provided and SV flickers.</td> </tr> <tr> <td>3</td> <td>Auto-tuning (standard) start</td> <td>Start/Stop can be switched at the time of DI raising up or dropping down.</td> </tr> <tr> <td>4</td> <td>Auto-tuning (low PV) start</td> <td>When this function is not used, DI is not effective.</td> </tr> <tr> <td>5</td> <td>All alarm latch cancel</td> <td>ON/OFF delay timer operation is available. The remaining time of the timer can be checked with timer-1 and -2 display parameters. (first block).</td> </tr> <tr> <td>6</td> <td>Alarm 1 latch cancel</td> <td>RUN/RESET of ramp/soak can be performed at the time of DI raising up or dropping down.</td> </tr> <tr> <td>7</td> <td>Alarm 2 latch cancel</td> <td></td> </tr> <tr> <td>9</td> <td>ALM1 timer</td> <td></td> </tr> <tr> <td>10</td> <td>ALM2 timer</td> <td></td> </tr> <tr> <td>12</td> <td>Ramp/soak RUN/RESET</td> <td></td> </tr> </tbody> </table>	DI function code	Function	Description	1	Set value (SV) switching	Switching between local SV and "SV - I" (remote SV)	2	Control mode, RUN/STANDBY	At standby mode, control is not provided and SV flickers.	3	Auto-tuning (standard) start	Start/Stop can be switched at the time of DI raising up or dropping down.	4	Auto-tuning (low PV) start	When this function is not used, DI is not effective.	5	All alarm latch cancel	ON/OFF delay timer operation is available. The remaining time of the timer can be checked with timer-1 and -2 display parameters. (first block).	6	Alarm 1 latch cancel	RUN/RESET of ramp/soak can be performed at the time of DI raising up or dropping down.	7	Alarm 2 latch cancel		9	ALM1 timer		10	ALM2 timer		12	Ramp/soak RUN/RESET		<p>2) To use DI function; Select the function referring to the table shown below.</p> <p>3rd block parameter</p> <table border="1"> <tr> <td>PV</td> <td><math>dI^- - I</math></td> <td>DI function code (0 to 12)</td> </tr> <tr> <td>SV</td> <td><math>I^-</math></td> <td></td> </tr> </table>	PV	$dI^- - I$	DI function code (0 to 12)	SV	$I^-$	
DI function code	Function	Description																																						
1	Set value (SV) switching	Switching between local SV and "SV - I" (remote SV)																																						
2	Control mode, RUN/STANDBY	At standby mode, control is not provided and SV flickers.																																						
3	Auto-tuning (standard) start	Start/Stop can be switched at the time of DI raising up or dropping down.																																						
4	Auto-tuning (low PV) start	When this function is not used, DI is not effective.																																						
5	All alarm latch cancel	ON/OFF delay timer operation is available. The remaining time of the timer can be checked with timer-1 and -2 display parameters. (first block).																																						
6	Alarm 1 latch cancel	RUN/RESET of ramp/soak can be performed at the time of DI raising up or dropping down.																																						
7	Alarm 2 latch cancel																																							
9	ALM1 timer																																							
10	ALM2 timer																																							
12	Ramp/soak RUN/RESET																																							
PV	$dI^- - I$	DI function code (0 to 12)																																						
SV	$I^-$																																							

6-8 Other functions	
<p>The parameters "bAL" and "Ar" are masked at default setting. If necessary to appear these parameters, please refer to the following procedure.</p> <p>1) Function</p> <ul style="list-style-type: none"> <li>• "bAL" and "Ar" are functions to suppress overshoot. (Usually it is not necessary to change the setting.)</li> <li>2) If they aren't optimum value, sometime you don't get the good control. Usually it is not necessary to set them.</li> <li>3) "Ar" (Anti-reset wind-up) is automatically set by "Auto tuning".</li> </ul> <p><b>1 bAL</b></p> <p>MV is calculated by adding the offset (bAL) to MV', the result of PID calculation, from PV and SV.</p> <p><b>2 Ar</b></p> <p>The integral range is <math>SV \pm Ar</math>. Integral action don't work when PV is out of the range.</p> <p><b>Mask/Unmask bAL and Ar</b></p> <p><b>1 To unmask</b></p> <ol style="list-style-type: none"> <li>① Display the "dSP3" in the third block parameter and then subtract 128 from current value.</li> <li>② Display the "dSP4" in the third block parameter and then subtract 1 from current value.</li> </ol> <p><b>2 To mask</b></p> <ol style="list-style-type: none"> <li>① Display the "dSP3" in the third block parameter and then add 128 to current value.</li> <li>② Display the "dSP4" in the third block parameter and then add 1 to current value.</li> </ol>	<p>The parameters "bAL" and "Ar" are masked at default setting. If necessary to appear these parameters, please refer to the following procedure.</p> <p>1) Function</p> <ul style="list-style-type: none"> <li>• "bAL" and "Ar" are functions to suppress overshoot. (Usually it is not necessary to change the setting.)</li> <li>2) If they aren't optimum value, sometime you don't get the good control. Usually it is not necessary to set them.</li> <li>3) "Ar" (Anti-reset wind-up) is automatically set by "Auto tuning".</li> </ul> <p><b>1 bAL</b></p> <p>MV is calculated by adding the offset (bAL) to MV', the result of PID calculation, from PV and SV.</p> <p><b>2 Ar</b></p> <p>The integral range is <math>SV \pm Ar</math>. Integral action don't work when PV is out of the range.</p> <p><b>Mask/Unmask bAL and Ar</b></p> <p><b>1 To unmask</b></p> <ol style="list-style-type: none"> <li>① Display the "dSP3" in the third block parameter and then subtract 128 from current value.</li> <li>② Display the "dSP4" in the third block parameter and then subtract 1 from current value.</li> </ol> <p><b>2 To mask</b></p> <ol style="list-style-type: none"> <li>① Display the "dSP3" in the third block parameter and then add 128 to current value.</li> <li>② Display the "dSP4" in the third block parameter and then add 1 to current value.</li> </ol>

## 7 Setting of input type and control algorithm

1 Setting of the input type		
<ul style="list-style-type: none"> <li>* Skip this procedure if the input type is specified when you order.</li> </ul>		

① Select the type of control output action.		
Setting procedure		
		Description
		Set parameter "P-n1" = 0 or 1. (Refer to Table 2)
		Set parameter "P-n1" = 2 or 3. (Refer to Table 2)

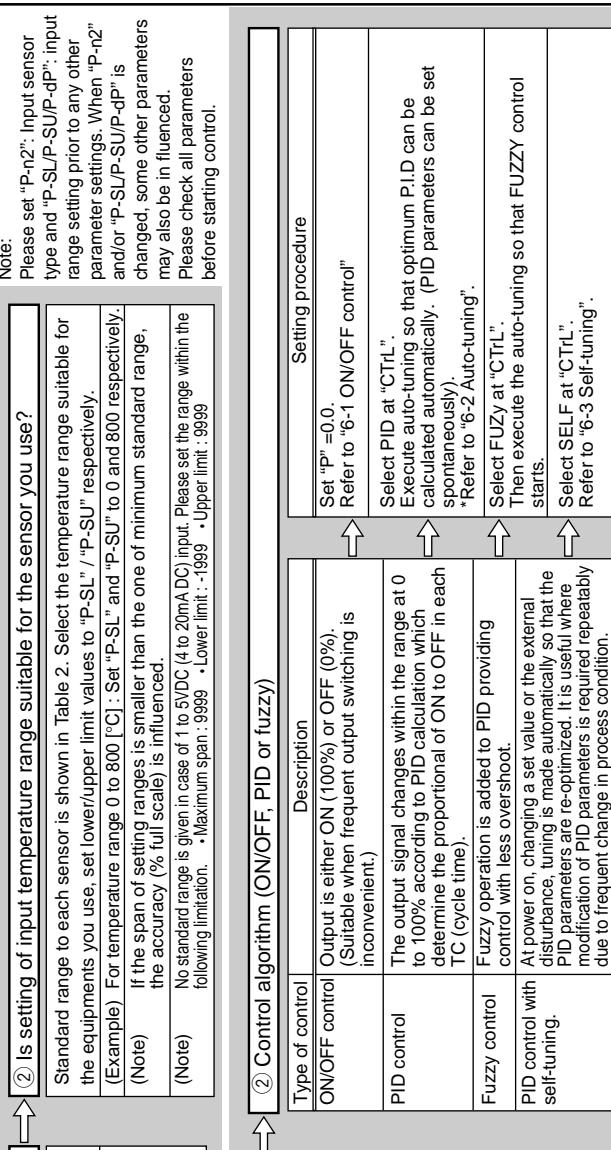

## 8 Error indications

This controller has a display function to indicate several types of error code shown below. If any of the error codes is displayed, please eliminate the cause of error immediately. After the cause is eliminated, turn off the power once, and then re-start the controller.

Error code	Possible cause	Control output	Group
UUUU	① Thermocouple burnt out. ② RTD (A) leg burnt out. ③ PV value exceeds P-SU by 5% FS.	① when the burn-out control output is set as the lower limit (standard): OFF or 4 mA or less  ② when the burn-out control output is set as the upper limit: ON or 20 mA or larger	I
LLLL	① The RTD leg (B or C) burnt out. ② The RTD leg (between A and B or A and C ) short. ③ PV value is below P-SL by 5%FS. ④ 1 to 5 VDC or 4 to 20mADC wiring open or short.		
LLLL	① PV value < -1999. Note) In case of RTD input, "LLLL" is not displayed even if the temperature becomes below -150 °C.	Control is continued until the value reaches -5% FS or less, after which burn-out condition will occur.	
Err (SV indication flickers)	Incorrect range setting (P-SL/P-SU).	OFF or 4mA or less	II
FALF	Fault in the controller.	Undefined (Stop using this controller immediately.) Contact with Fuji Electric Co., Ltd. or the nearest representatives.	

**Table 1**

Input type code			
Parameter : $P - n_2$			

Group	Input type	Code	Group	Input type	Code
RTD			II	1 to 5V DC, 4 to 20mA DC	16
. Pt100 (IEC)	1				
Thermocouple					
. J	2				
. K	3				
. B	4				
. S	5				
. T	6	TC ↔ RTD (within Group I)*			Can be modified by changing "P-n2"
. E	7				
. N	8	TC(RTD ↔ 1 to 5V DC 4 to 20mA DC) (Group II)*			Modification
. PL-II	9				not possible
	10				
	11				
	12				
	13				
	14				
	15				
	16				
	17				
	18				
	19				

Control output action code			
Parameter : $P - n_1$			

Code	Output	Control output action		Output at Burn-out*	
		Output 1	Output 2	Output 1	Output 2
0		Reverse action	---	Lower limit	Upper limit
1		Single (Control output 1)	---	Upper limit	Lower limit
2		Direct action	---	Upper limit	---
3		Reverse action	---	Lower limit	Upper limit
4		Reverse action	---	Upper limit	Lower limit
5		Reverse action	---	Lower limit	Upper limit
6		Reverse action	---	Upper limit	Lower limit
7		Direct action	---	Upper limit	Lower limit
8		Direct action	---	Lower limit	Upper limit
9	Dual	Direct action	---	Upper limit	Lower limit
10		Reverse action	---	Upper limit	Lower limit
11		Reverse action	---	Lower limit	Upper limit
12		Reverse action	---	Upper limit	Lower limit
13		Reverse action	---	Lower limit	Upper limit
14		Reverse action	---	Upper limit	Lower limit
15		Reverse action	---	Lower limit	Upper limit
16		Reverse action	---	Upper limit	Lower limit
17		Direct action	---	Lower limit	Upper limit
18		Direct action	---	Upper limit	Lower limit
19		Direct action	---	Lower limit	Upper limit

(\*) Outputs when Error Indication Group I.  
Please refer to 8 (Error indications).  
This is effective even in Standby mode.

Lower limit: OFF or 4mA or less  
Upper limit: ON or 20mA or more

[Caution for dual output]  
(option)

(1) Parameter "I" and "D" can not be set separately.  
(2) In case "P"=0 (ON/OFF control) for heating side, cooling side becomes ON/OFF control automatically.  
(3) In case "Cool" =0.0, cooling side becomes ON/OFF control. And hysteresis is fixed at 0.5%FS.

**Table 3**

Input range (Standard range)			
Parameter : $P-SL, P-SU, P-dP$			
Input signal type	Range (°C)	Range (°F)	Input signal type
RTD (IEC)	Pt100Ω	0 to 150	32 to 302
	Pt100Ω	0 to 300	32 to 572
	Pt100Ω	0 to 500	32 to 932
	Pt100Ω	0 to 600	32 to 1112
	Pt100Ω	-50 to 100	-58 to 212
	Pt100Ω	-100 to 200	-148 to 392
	Pt100Ω	-150 to 600	-238 to 1112
	Pt100Ω	-150 to 850	-238 to 1562
Thermo-couple	J	0 to 400	32 to 752
	J	0 to 800	32 to 1472
	K	0 to 400	32 to 752
	K	0 to 800	32 to 1472
	K	0 to 1200	32 to 2192
Thermo-couple	R	0 to 1600	32 to 2912
	B	0 to 1800	32 to 3272
	S	0 to 1600	32 to 2912
	T	-199 to 200	-328 to 392
	T	-150 to 400	-238 to 752
	E	0 to 800	32 to 1472
	E	-199 to 800	-328 to 1472
	N	0 to 1300	32 to 2372
	PL-II	0 to 1300	32 to 2372
DC voltage	1 to 5VDC	-1999 to 9999 (Scaling is possible) • Maximum span : 9999 • Lower limit : -1999 • Upper limit : 9999	

Note 1) Except for the following, the input accuracy is  $\pm 0.5\% FS \pm 1$  digit  $\pm 1^\circ C$   
 (Input accuracy does not be guaranteed for the ranges of measurement  
 other than in the table above.)      }      in these ranges, this controller may  
 R thermocouple 0 to  $400^\circ C$       }      display an incorrect process value  
 B thermocouple 0 to  $500^\circ C$       }      due to the characteristic of the sensor.

Note 2) In case a measuring range of -150 to  $600^\circ C$  or -150 to  $850^\circ C$  is used for  
 resistance bulb input, temperatures below  $-150^\circ C$  does not be indicated  
 correctly. Therefore, "LLLL" does not appear despite a continuous fall  
 below  $-150^\circ C$ .

Note 3) If the resistance bulb or thermocouple is used at a temperature below  
 the lowest value in the measurement range, the input accuracy cannot  
 be guaranteed.

Note 4) Addition of decimal point is impossible if the input range or span is larger  
 than 999.9 at the RTD/thermocouple input.

## Alarm action type code

**Parameter : P-RH , P-RL**

- Standard alarm code

	ALM1	ALM2	Alarm type	Action diagram
	0	0	No alarm	PV
Absolute value alarm	1	1	High alarm	AL1 AL2 PV
	2	2	Low alarm	AL1 AL2 PV
	3	3	High alarm (with hold)	AL1 AL2 PV
	4	4	Low alarm (with hold)	AL1 AL2 PV
Deviation alarm	5	5	High alarm	AL1 AL2 SV PV
	6	6	Low alarm	AL1 AL2 SV PV
	7	7	High/Low alarm	AL1 AL2 AL1 AL2 PV
	8	8	High alarm (with hold)	AL1 AL2 SV PV
	9	9	Low alarm (with hold)	AL1 AL2 SV PV
	10	10	High/Low alarm (with hold)	AL1 AL2 AL1 AL2 PV
Zone alarm	11	11	High/Low deviation alarm (ALM1/2 independent action)	AL1 AL2 AL1 AL2 SV PV
	-	12	High/Low absolute alarm	AL2 AL1 PV
	-	13	High/Low deviation alarm	AL2 AL1 SV PV
	-	14	High absolute /Low deviation alarm	AL2 SV AL1 PV
	-	15	High deviation /Low absolute alarm	AL1 AL2 SV PV

- Timer code

	ALM1	ALM2	Alarm type	Action diagram
Timer	32	32	ON delay timer	DI OUT dLY1 dLY2
	33	33	OFF delay timer	DI OUT dLY1 dLY2
	34	34	ON/OFF delay timer	DI OUT dLY1 dLY2 dLY1 dLY2

- Alarm code with dual set value

	ALM1	ALM2	Alarm type	Action diagram
High /Low limit alarm	16	16	High/Low absolute alarm	A1-L A2-L A1-H A2-H PV
	17	17	High/Low deviation alarm	A1-L A2-L A1-H A2-H SV PV
	18	18	High absolute /Low deviation alarm	A1-L A2-L SV A1-H A2-H PV
	19	19	High deviation /Low absolute alarm	A1-H A2-H A1-L A2-L SV PV
	20	20	High/Low absolute alarm (with hold)	A1-L A2-L A1-H A2-H PV
	21	21	High/Low deviation alarm (with hold)	A1-L A2-L A1-H A2-H SV PV
	22	22	High absolute /Low deviation alarm (with hold)	A1-L A2-L SV A1-H A2-H PV
	23	23	High deviation /Low absolute alarm (with hold)	A1-H A2-H A1-L A2-L SV PV
Zone alarm	24	24	High/Low absolute alarm	A1-L A2-L A1-H A2-H PV
	25	25	High/Low deviation alarm	A1-L A2-L A1-H A2-H SV PV
	26	26	High absolute /Low deviation alarm	A1-L A2-L SV A1-H A2-H PV
	27	27	High deviation /Low absolute alarm	A1-H A2-H A1-L SV PV
	28	28	High/Low absolute alarm (with hold)	A1-L A2-L A1-H A2-H PV
	29	29	High/Low deviation alarm (with hold)	A1-L A2-L SV A1-H A2-H PV
	30	30	High absolute /Low deviation alarm (with hold)	A1-L A2-L SV A1-H A2-H PV
	31	31	High deviation /Low absolute alarm (with hold)	A1-H A2-H A1-L SV PV

**Table 4**

- Note) · When alarm action type code is changed, alarm set value may also become different from previous settings.  
 Please check these parameters, turn off the power once, and then re-start the controller, before starting control.
- When selecting No.12 to 15, setting in ALM2, dLY2, and A2hy are effective, and output to the AL2 relay.

## Specification

Power voltage:	100 (- 15%) to 240 VAC (+10%), 50/60Hz
Power consumption:	15 VA or less/240 VAC
Relay contact output:	Control output 1: SPDT contact, 230 VAC / 30 VDC 3A (resistive load) Control output 2: SPST contact, 230 VAC / 30 VDC 3A (resistive load)
SSR/SSC driving output: (voltage pulse output)	ON: 24 VDC (17 to 25V DC) OFF: 0.5 VDC or less Maximum current ; 20mA or less Resistive load 850Ω or more
4-20mA DC output:	Allowable load resistor 600Ω or less
Alarm output (up to 2 outputs):	Relay contact (SPST contact) 230 VAC / 30 VDC 1A (resistive load)
Heater disconnection alarm output:	Relay contact (SPST contact) 230 VAC / 30 VDC 1A (resistive load)
Communication function :	RS-485 Modbus interface Transmission system ; Half-duplex bit serial start-stop synchronization Transmission rate ; 9600bps Transmission protocol ; In conformity to Modbus RTU Transmission distance ; Up to 500m (total length) Connectable units ; Up to 31units
Digital input :	Number of input;1 input Input contact capacity ; 5V, 2mA DC
Ambient temperature:	-10 to 50°C -10 to 45°C (when side by side mounting)
Operating ambient humidity:	90%RH or less (no condensation)
Preservation temperature:	-20 to 60°C

**Modbus RTU : A trademark of Modicon Corp.,USA**

# CT16 Model Code Configuration

Controller CT16, Format 48x48mm: V61724A-			8	9	10	11	12	13	14	-	15
Digit	Hardware specification	Preconfigured as									
8	<Input signal> Thermocouple / RTD, Pt-100 3 wire type (°C and °F possible) 4 - 20mA DC / 1 - 5 V DC	RTD, PT100 3 wire type (°C) 4 - 20mA DC	N								
9	<Control output 1> Relay contact output SSR or SSC drive output 4 - 20mA DC output		A								
10	<Control output 2> None Relay contact output		C								
11	<Optional specification 1> 8 ramps/soaks One alarm+8 ramps/soaks Heater break alarm+8 ramps/soaks One alarm+heater break alarm+8 ramps/soaks Two alarms + 8 ramps/soaks		E								
12	<Power supply> Standard (100 to 240 VAC free)		Y								
13	<Optional specification 2> None RS485 (MODBUS) One digital input RS485 (MODBUS)+1 digital input		A								
14	<None standard specification 1> Standard specification Others		4								
15	Version number		5								
			6								
			7								
			G								
			V								
			I								
			0								
			M								
			S								
			V								
			0								
			?								
			?								

NOTE: Only a few of all possible coding combinations are available.  
See our price list and catalog to identify the available combinations.

Subject to technical changes.

This technical documentation is protected by copyright. Translating, photocopying and disseminating it in any form whatsoever - even editings or excerpts thereof - especially as reprint, photomechanical or electronic reproduction or storage on data processing systems or networks is not allowed without the permission of the copyright owner and non-compliance will lead to both civil and criminal prosecution.



**ABB Automation Products GmbH**

Hoeseler Platz 2  
42579 Heiligenhaus, Germany  
Phone +49(0)29 56 12-5181  
Fax +49(0)29 56 12-5081  
<http://www.abb.com>

Subject to technical changes  
Printed in the Fed. Rep. of Germany  
42/61-77 EN Rev. 00  
Edition 02.02

Subject to technical changes.

This technical documentation is protected by copyright. Translating, photocopying and disseminating it in any form whatsoever - even editings or excerpts thereof - especially as reprint, photomechanical or electronic reproduction or storage on data processing systems or networks is not allowed without the permission of the copyright owner and non-compliance will lead to both civil and criminal prosecution.



---

**ABB Automation Products GmbH**

Hoeseler Platz 2  
42579 Heiligenhaus, Germany  
Phone +49(0)29 56 12-5181  
Fax +49(0)29 56 12-5081  
<http://www.abb.com>

Subject to technical changes  
Printed in the Fed. Rep. of Germany  
42/61-77 EN Rev. 00  
Edition 02.02