

Sensitive Earth-fault Relay

SPAJ 111 C

Product Guide



Features

- Sensitive low-set neutral overcurrent stage with definite time characteristic
- High-set neutral overcurrent stage with definite time characteristic
- Output relay functions to be freely configured
- Flexible adaptation to different types of application
- 1 A and 5 A energizing inputs
- Serial interface for connecting the relay to a fibre-optic serial bus and further to a substation or network control system
- Digital display of setting values, neutral current measured, values recorded at relay operation, indications, etc.
- Powerful software support for parameterization and supervision of the relay
- Continuous hardware and software self-supervision including auto-diagnosis
- Member of the SPACOM product family and ABB's Distribution Automation system
- CE marking according to the EC directive for EMC

Application

The sensitive earth-fault relay SPAJ 111 C is designed to be used as a neutral current measuring feeder earth-fault relay, as generator interturn fault protection, as capacitor bank unbalance protection and rotor earth-fault protection.

The sensitive earth-fault relay is suited for both primary and back-up earth-fault protection. The input impedance of the energizing

circuit of the earth-fault relay is extremely low which means that the relay can also be energized from low output core-balance current transformers. Core-balance current transformers can be recommended when extremely sensitive earth-fault protection is required. The earth-fault relay can also be energized from a set of three phase current transformers connected in parallel, a so called residual current connection.

Design

The sensitive earth-fault relay SPAJ 111 C is a secondary relay which is connected to the current transformers of the object to be protected. When an earth fault occurs, the relay delivers an alarm signal, trips the circuit breaker or starts an external auto-reclose relay, depending on the application and the configuration of the relay.

When the energizing current exceeds the set start value $I_{0>}$ of the low-set stage, the earth-fault relay starts. When the set operate time $t_{>}$ expires, the relay operates. In the same way the high-set stage starts once the set start value $I_{0>>}$ is exceeded and, when the set operate time $t_{>>}$ expires, the relay operates.

The start signal from the sensitive earth-fault relay is received as contact function. The start signal can be used, for instance, for blocking cooperating protection relays.

The relay contains one optically isolated logic input for external incoming control signals, generally blocking signals.

Data communication

The relay is provided with a serial interface on the rear panel. By means of a bus connection module type SPA-ZC 17 or SPA-ZC 21 the relay can be connected to the fibre-optic SPA bus. The bus connection module type SPA-ZC 21 is powered from the host relay, whereas the bus connection module SPA-ZC 17 is provided with a built-in power unit, which can be fed from an external secured

power source. The relay communicates with higher-level data acquisition and control systems over the SPA bus.

Self-supervision

The relay incorporates a sophisticated self-supervision system with auto-diagnosis, which increases the availability of the relay and the reliability of the system. The self-supervision system continuously monitors the hardware and the software of the relay. The system also supervises the operation of the auxiliary supply module and the voltages generated by the module.

When the self-supervision system detects a permanent internal relay fault, the IRF indicator on the relay front panel is lit. At the same time the output relay of the self-supervision system operates and a fault message is transmitted to the higher-level system over the serial bus. Further, in most fault situations, a fault code is shown in the display of the protection relay module. The fault code indicates the type of the fault that has been detected.

Auxiliary supply voltage

The auxiliary supply of the relay is obtained from an internal plug-in type power supply module. Two auxiliary power module versions are available: type SPTU 240S1 for the supply voltage range 80...265 V ac/dc and type SPTU 48S1 for the supply voltage range 18...80 V dc. The power supply module forms the internal voltages required by the protection relay and the I/O module.

Technical data

Table 1: Energizing inputs

| | | | |
|--|-----------------|----------------|--------|
| Terminals | | 25-27 | 25-26 |
| Rated current I_n | | 1 A | 5 A |
| Thermal withstand capability | continuously | 4 A | 20 A |
| | for 10 s | 25 A | 100 A |
| | for 1 s | 100 A | 500 A |
| Dynamic current withstand capability | Half-wave value | 250 A | 1250 A |
| Input impedance | | <100 mΩ | <20 mΩ |
| Rated frequency f_n , according to order | | 50 Hz or 60 Hz | |

Table 2: Output contact ratings

| | | | |
|---|--------------------------|--------------|----------------------------------|
| Type of contact | | Tripping | Signalling |
| Terminals | | 65-66, 68-69 | 70-71-72, 73-74-75, 77-78, 80-81 |
| Rated voltage | | 250 V ac/dc | |
| Thermal withstand capability | Carry continuously | 5 A | 5 A |
| | Make and carry for 0.5 s | 30 A | 10 A |
| | Make and carry for 3 s | 15 A | 8 A |
| Breaking capacity for dc, when the control/signalling circuit time constant $L/R \leq 40$ ms, at the control voltages | 220 V dc | 1 A | 0.15 A |
| | 110 V dc | 3 A | 0.25 A |
| | 48 V dc | 5 A | 1 A |

Table 3: Control input, communication and power supply

| | | | | |
|--------------------------|---|----------------------------------|------------------|--|
| External control input | Terminals | 10-11 | | |
| | Control voltage level | 18...265 V dc or 80...265 V ac | | |
| | Power consumption when input activated | 2...20 mA | | |
| Data communication | Transmission mode | Fibre-optic serial bus | | |
| | Data code | ASCII | | |
| | Selectable data transfer rates | 300, 1200, 2400, 4800 or 9600 Bd | | |
| | Fibre-optic bus connection module, powered from the host relay | for plastic fibre cables | SPA-ZC 21BB | |
| | | for glass fibre cables | SPA-ZC 21MM | |
| | Fibre-optic bus connection module with a built-in power supply unit | for plastic fibre cables | SPA-ZC 17BB | |
| for glass fibre cables | | SPA-ZC 17MM | | |
| Auxiliary supply modules | Power supply and I/O modules and voltage ranges | SPTU 240S1 | 80...265 V ac/dc | |
| | | SPTU 48S1 | 18...80 V dc | |
| | Power consumption | under quiescent conditions | ~4 W | |
| | | under operating conditions | ~6 W | |

Technical data (cont'd)

Table 4: Relay module SPCJ 1C7

| | | |
|--------------------------|---|---|
| Low-set stage $I_{0>}$ | Start current $I_{0>}$, setting range | 0.2...50% of I_n |
| | Operate time $t_{>}$ | 0.05...10.0 s |
| High-set stage $I_{0>>}$ | Start current $I_{0>>}$, setting range | 1...200% of I_n and ∞ , infinite |
| | Operate time $t_{>>}$ | 0.05...10.0 s |

Table 5: Tests and standards

| | | |
|--------------------------|---|-----------------------------|
| Test voltages | Dielectric test voltage (IEC 60255-5) | 2.0 kV, 50 Hz, 1 min |
| | Impulse test voltage (IEC 60255-5) | 5 kV, 1.2/50 μ s, 0.5 J |
| | Insulation resistance (IEC 60255-5) | >100 M Ω , 500 V dc |
| Interference tests | High-frequency (1 MHz) disturbance test (IEC 60255-22-1), common mode | 2.5 kV |
| | High-frequency (1 MHz) disturbance test (IEC 60255-22-1), differential mode | 1.0 kV |
| | Fast transients (IEC 60255-22-4 and IEC 61000-4-4), power supply inputs | 4 kV, 5/50 ns |
| | Fast transients (IEC 60255-22-4 and IEC 61000-4-4), other inputs | 2 kV, 5/50 ns |
| | Electrostatic discharge (IEC 60255-22-2 and IEC 61000-4-2), air discharge | 8 kV |
| | Electrostatic discharge (IEC 60255-22-2 and IEC 61000-4-2), contact discharge | 6 kV |
| Environmental conditions | Service temperature range | -10...+55°C |
| | Transport and storage temperature range (IEC 60068-2-8) | -40...+70°C |
| | Damp heat test (IEC 60068-2-3) | <95%, +40°C, 96 h |
| | Relative humidity (IEC 60068-2-30) | 93...95%, +55°C, 6 cycles |
| | Degree of protection by enclosure when flush mounted | IP 54 |
| | Weight | 3 kg |

Block diagram

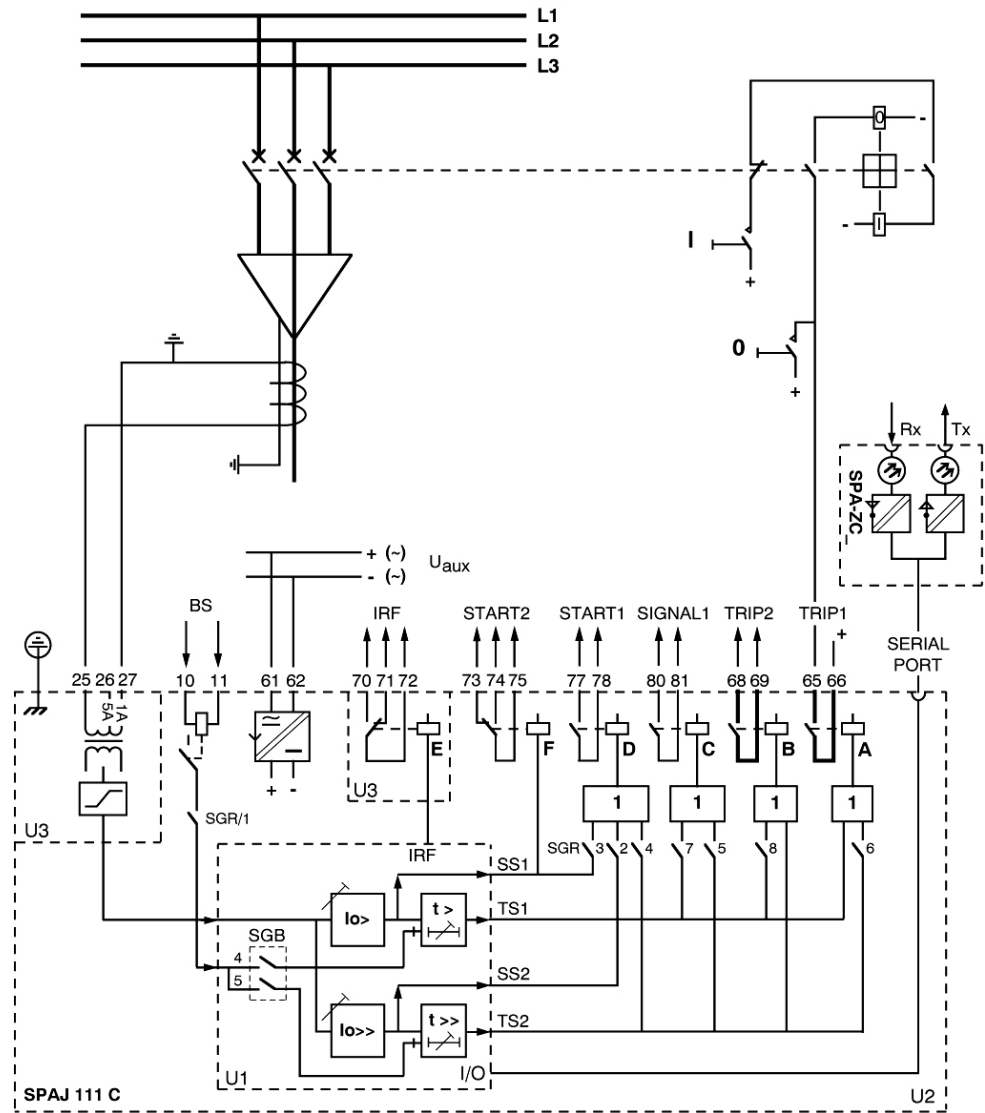


Fig. 1 Block diagram and sample connection diagram

bspaj111

Mounting and dimensions

Flush mounting

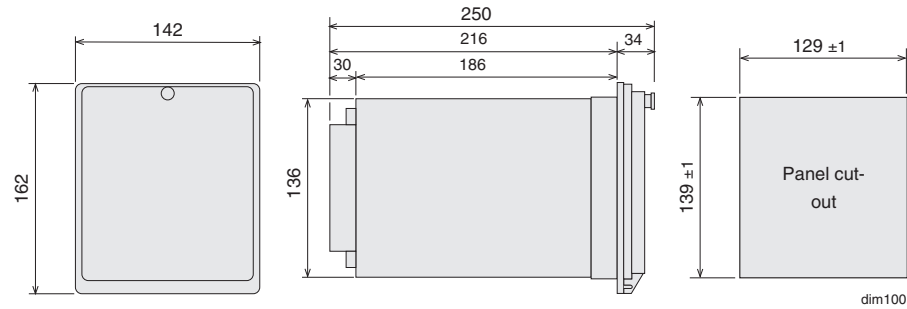


Fig. 2 Flush-mounting relay case (dimensions in mm)

Semi-flush mounting

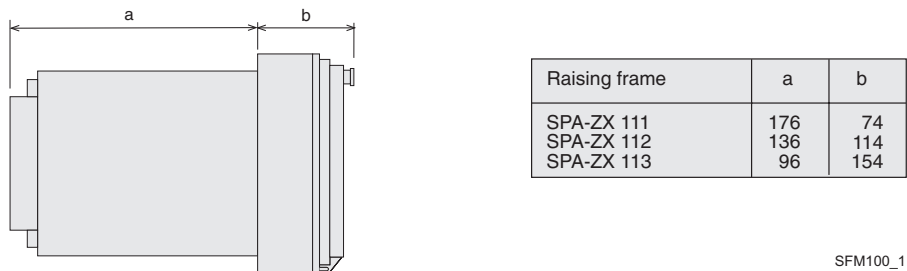


Fig. 3 Semi-flush mounting relay case (dimensions in mm)

Mounting in 19 inch cabinets and frames

An ancillary mounting plate, height 4U (~177 mm), is recommended to be used when the protection relays are to be mounted in 19 inch frames or cabinets. The ancillary mounting plate type SPA-ZX 104 accommodates three relays, type SPA-ZX 105 two relays and type SPA-ZX 106 one relay.

Projecting mounting

When projecting mounting is preferred, a relay case type SPA-ZX 110 is used. The relay case for projecting mounting is provided with front connectors.

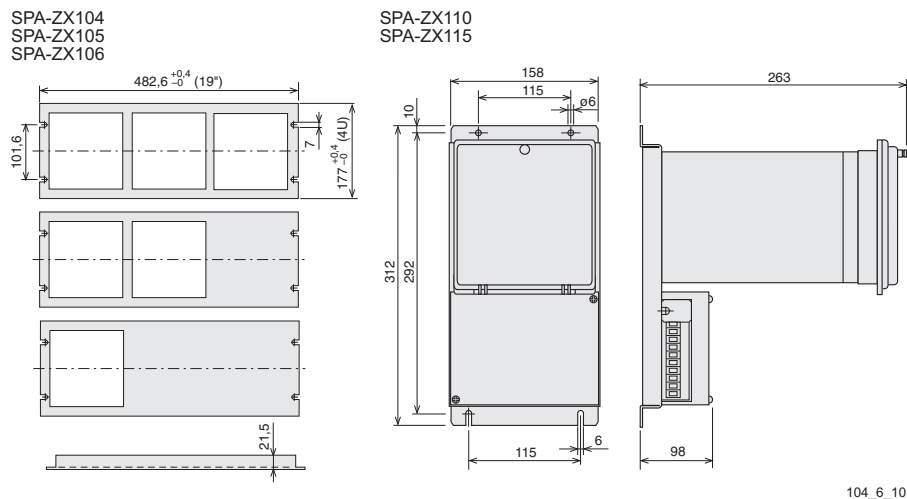


Fig. 4 Mounting cabinets and frames as well as projecting mounting (dimensions in mm)

Ordering

When ordering, please specify:

| Ordering information | Ordering example |
|----------------------------------|------------------------|
| 1. Type designation and quantity | SPAJ 111 C, 5 pieces |
| 2. Order number | RS 421 011-AA |
| 3. Rated values | $I_n=5$ A, $f_n=50$ Hz |
| 4. Auxiliary voltage | $U_{aux} =110$ V dc |
| 5. Accessories | - |
| 6. Special requirements | - |

Order numbers

| | |
|--|--|
| Earth-fault relay SPAJ 111 C without test adapter | RS 421 011-AA, CA, DA, FA |
| Earth-fault relay SPAJ 111 C including test adapter RTXP 18 | RS 421 211-AA, CA, DA, FA |
| The last two letters of the order number indicate the rated frequency f_n and the auxiliary voltage U_{aux} of the relay as follows: | AA equals $f_n = 50$ Hz and $U_{aux} = 80...265$ V ac/dc |
| | CA equals $f_n = 50$ Hz and $U_{aux} = 18...80$ V dc |
| | DA equals $f_n = 60$ Hz and $U_{aux} = 80...265$ V ac/dc |
| | FA equals $f_n = 60$ Hz and $U_{aux} = 18...80$ V dc |

References

Additional information

| | |
|---|--------------------|
| Manual "Sensitive earth-fault relay SPAJ 111 C" | 1MRS 750809-MUM EN |
|---|--------------------|



ABB Oy

Distribution Automation

P.O. Box 699

FI-65101 Vaasa, FINLAND

Tel +358 10 22 11

Fax +358 10 224 1094

www.abb.com/substationautomation