

# Manual motor starter MS116



Manual motor starters (also known as motor protection circuit breakers or manual motor protectors) are electromechanical protection devices for the main circuit mainly used to switch motors manually ON/OFF and protect them fuseless against short-circuits, overloads and phase failures. Fuseless protection with a manual motor starter saves costs, space and ensures a quick reaction under short-circuit condition, by switching off the motor within milliseconds. Fuseless starter combinations are setup together with contactors.

## Description

- Overload protection – trip class 10A
- Phase loss sensitivity
- Disconnect function
- Temperature compensation from -25 ... +55 °C
- Adjustable current setting for overload protection
- Suitable for three- and single-phase applications
- Trip-free mechanism
- Clear switch position indication ON/OFF



## Order data


MS116 screw terminals

Setting range	Rated operational power 400 V AC-3 kW	Type	Order code	weight  Pkg (1 pce)  kg
A				
0.10 ... 0.16	0.03 (1)	MS116-0.16	1SAM250000R1001	0.225
0.16 ... 0.25	0.06	MS116-0.25	1SAM250000R1002	0.225
0.25 ... 0.40	0.09	MS116-0.4	1SAM250000R1003	0.225
0.40 ... 0.63	0.18	MS116-0.63	1SAM250000R1004	0.225
0.63 ... 1.00	0.25	MS116-1.0	1SAM250000R1005	0.225
1.00 ... 1.60	0.55	MS116-1.6	1SAM250000R1006	0.265
1.60 ... 2.50	0.75	MS116-2.5	1SAM250000R1007	0.265
2.50 ... 4.00	1.50	MS116-4.0	1SAM250000R1008	0.265
4.00 ... 6.30	2.20	MS116-6.3	1SAM250000R1009	0.265
6.30 ... 10.0	4.00	MS116-10	1SAM250000R1010	0.265
8.00 ... 12.0	5.50	MS116-12	1SAM250000R1012	0.265
10.0 ... 16.0	7.50	MS116-16	1SAM250000R1011	0.265
16.0 ... 20.0	7.50	MS116-20	1SAM250000R1013	0.310
20.0 ... 25.0	11.0	MS116-25	1SAM250000R1014	0.310
25.0 ... 32.0	15.0	MS116-32	1SAM250000R1015	0.310

Note: For MS116 with pre-assembled auxiliary contact HKF1-11, please order 1SAM250005R10xx.

Manual motor starters should always be selected so that the actual motor current is within the setting range.

(1) 690 V AC

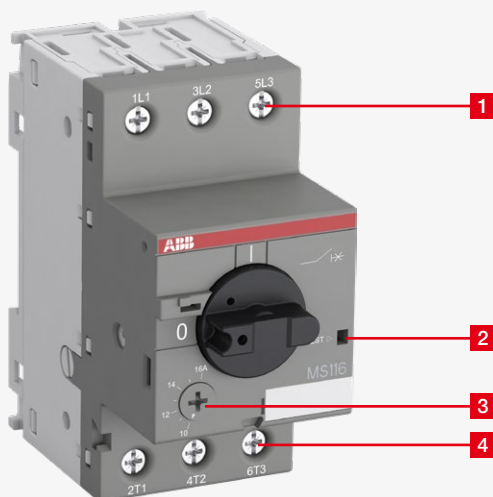

### Functional description


1. Terminals 1L1, 3L2, 5L3
2. Test function
3. Current setting range / Adjustable current setting for overload protection
4. Terminals 2T1, 4T2, 6T3

### Application


Manual motor starters (also known as motor protection circuit breakers or manual motor protectors) protect the load and the installation against short-circuits and overloads. They are three pole protection devices with thermal tripping elements for overload protection and electromagnetic tripping elements for short-circuit protection. Furthermore, they provide a disconnect function for safe isolation of the installation and the supply and they can be used for manual switching of loads.

Manual motor starters have a setting scale in amperes, which allows direct adjusting of the device without any additional calculation. In compliance with international and national standards, the setting current is the rated current of the motor and not the tripping current (no tripping at  $1.05 \times I$ , tripping at  $1.2 \times I$ ;  $I$  = setting current).


### Operation mode

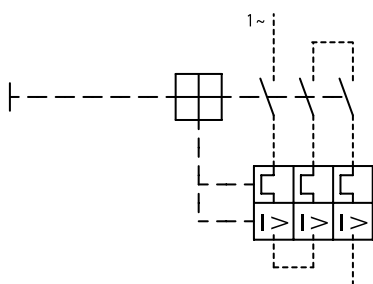

Single-phase operation

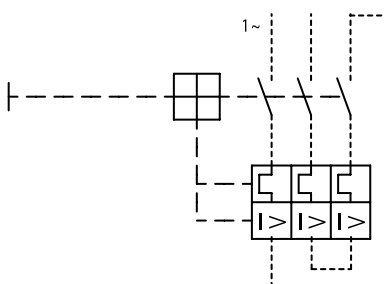


Single-phase operation

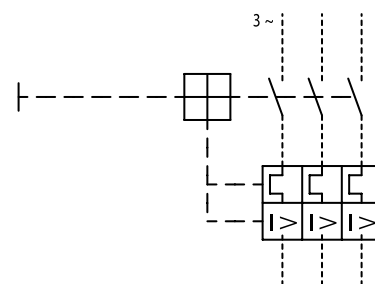


Three-phase operation

### Wiring diagram

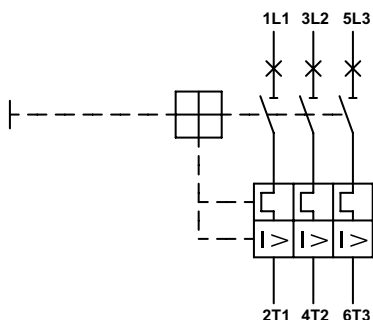


**Resistance and power loss per pole**

Type	Setting range		Resistance per pole $\Omega$	Power loss per pole	
	lower value A	upper value A		at lower value W	at upper value W
MS116-0.16	0.10	0.16	66.00	0.7	1.7
MS116-0.25	0.16	0.25	25.50	0.7	1.7
MS116-0.4	0.25	0.40	10.38	0.6	1.7
MS116-0.63	0.40	0.63	4.36	0.7	1.7
MS116-1.0	0.63	1.00	1.605	0.6	1.7
MS116-1.6	1.00	1.60	0.648	0.6	1.7
MS116-2.5	1.60	2.50	0.292	0.7	1.8
MS116-4.0	2.50	4.00	0.114	0.7	1.8
MS116-6.3	4.00	6.30	0.046	0.7	1.8
MS116-10	6.30	10.0	0.024	0.9	2.4
MS116-12	8.00	12.0	0.016	1.0	2.3
MS116-16	10.0	16.0	0.011	1.1	2.8
MS116-20	16.0	20.0	0.0057	1.5	2.3
MS116-25	20.0	25.0	0.0045	1.8	2.8
MS116-32	25.0	32.0	0.0030	1.9	3.1


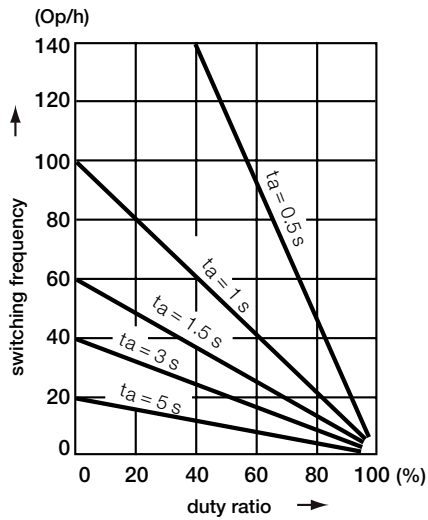


Intermittent periodic duty, ta: Motor starting time



### Main dimensions in mm, inches

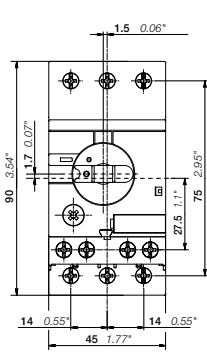



MS116 ≤ 16 A

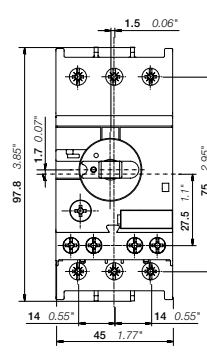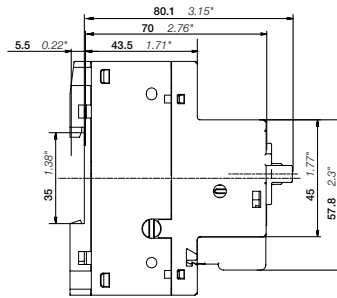


MS116 ≥ 20 A

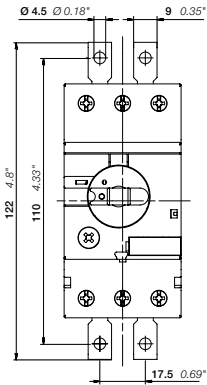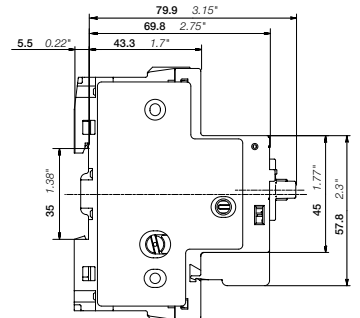

MS116 ≤ 16 A with screw fixing kit FS116 (accessory)

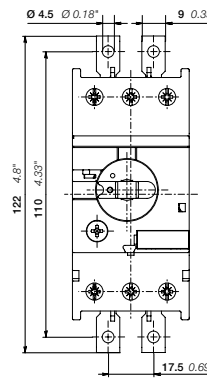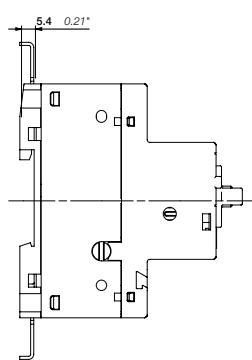

MS116 ≥ 20 A with screw fixing kit FS116 (accessory)

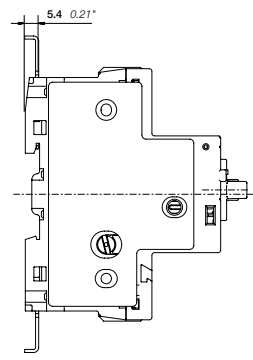






**Technical data IEC/EN**Data at  $T_A = 40\text{ °C}$  and at rated values, if nothing else indicated**Main circuit**

Terminal marking	1L1-3L2-5L3 2T1-4T2-6T3
Rated operational voltage $U_e$	690 V AC - V DC
Setting range - thermal overload protection	see table "Order data" on page 1
Rated operational current $I_e$	see table below
Rated instantaneous short-circuit current setting $I_i$	see table below
Rated service short-circuit breaking capacity $I_{cs}$	see table "Short-circuit breaking capacity and back-up fuses" on page 8
Rated ultimate short-circuit breaking capacity $I_{cu}$	
Trip class	10A
Rated frequency	50/60 Hz
Number of poles	3
Resistance per pole	see table "Resistance and power loss per pole" on page 3
Power loss per pole	

**Isolation data**

Rated impulse withstand voltage $U_{imp}$	6 kV
Rated insulation voltage $U_i$	690 V
Pollution degree	3

**Electrical connection**

Type	MS116 ≤ 16 A	MS116 ≥ 20 A
Connecting capacity		
 solid	1/2 x 1 ... 4 mm <sup>2</sup>	1/2 x 1 ... 2.5 mm <sup>2</sup> 1/2 x 2.5 ... 6 mm <sup>2</sup>
 stranded	1/2 x 1 ... 4 mm <sup>2</sup>	1/2 x 1 ... 2.5 mm <sup>2</sup> 1/2 x 2.5 ... 6 mm <sup>2</sup>
 flexible with ferrule	1/2 x 0.75 ... 2.5 mm <sup>2</sup>	1/2 x 0.75 ... 6 mm <sup>2</sup>
 flexible with insulated ferrule	1/2 x 0.75 ... 2.5 mm <sup>2</sup>	1/2 x 0.75 ... 6 mm <sup>2</sup>
 flexible without ferrule	1/2 x 0.75 ... 2.5 mm <sup>2</sup>	1/2 x 1 ... 2.5 mm <sup>2</sup> 1/2 x 2.5 ... 6 mm <sup>2</sup>
Stripping length	9 mm	10 mm
Tightening torque	0.8 ... 1.2 Nm	2 Nm
Recommended screw driver	M3.5	M4

Type	Rated instantaneous short-circuit current setting $I_i$ A	Rated operational current $I_e$ A
MS116-0.16	2.00	0.16
MS116-0.25	3.13	0.25
MS116-0.4	5.00	0.40
MS116-0.63	7.88	0.63
MS116-1.0	12.50	1.0
MS116-1.6	20.00	1.6
MS116-2.5	31.25	2.5
MS116-4.0	50.00	4.0
MS116-6.3	78.75	6.3
MS116-10	150	10
MS116-12	180	12
MS116-16	240	16
MS116-20	300	20
MS116-25	375	25
MS116-32	480	32

**General data**

Mechanical durability		100000
Electrical durability	MS116 ≤ 16 A	100000
	MS116 ≥ 20 A	50000
Duty time		100%
Operating frequency without early tripping		up to 15 operations/h or 60 operations/h with 40% duty ratio, if the motor breaking current 6 x I <sub>n</sub> and the motor starting time does not exceed 1 s
Dimensions (W x H x D)		see drawing on page 6
Weight		see table "Order data" on page 1
Mounting on DIN rail		TH35-15 (35 x 15 mm Mounting Rail) acc. to IEC 60715 TH35-7.5 (35 x 7.5 mm Mounting Rail) acc. to IEC 60715
Mounting position		position 1-6 (optional for single mounting)
Group mounting		on request
Minimum distance to other units same type	horizontal	0 mm
	vertical	150 mm
Minimum distance to electrical conductive board	horizontal, up to 400 V	0 mm
	horizontal, up to 690 V	> 1.5 mm
	vertical	75 mm
Degree of protection	housing / main circuit terminals	IP20 / IP10
Utilization category		A
Maximum operating altitude permissible		2000 m
Maximum operating frequency		170 cycles/h

**Environmental data**

Ambient air temperature		
Operation	open - compensated	-25 ... +55 °C
	open	-25 ... +70 °C
	enclosed (IB132)	0 ... +40 °C
Storage		-50 ... +80 °C
Ambient air temperature compensation		acc. to IEC/EN 60947-4-1
Resistance to vibrations acc. to IEC 60068-2-6		5g / 3 ... 150 Hz
Resistance to shock acc. to IEC 60068-2-27		25g / 11 ms

**Standards / directives**

Standards	IEC/EN 60947-1
	IEC/EN 60947-2
	IEC/EN 60947-4-1
	UL 60947-1
	UL 60947-4-1
	CSA-C22.2 No. 60947-1 CSA-C22.2 No. 60947-4-1
Low Voltage Directive	2014/35/EU
RoHS Directive	2011/65/EU

## Short-circuit breaking capacity and back-up fuses

Ics Rated service short-circuit breaking capacity

Icu Rated ultimate short-circuit breaking capacity

Icc Prospective short-circuit current at installation location

Note: Maximum rated current of the back-up fuses if Icc > Ics



Type	230 V AC / 400 V AC		440 V AC		500 V AC		690 V AC	
	Ics kA	Icu kA	Ics kA	Icu kA	Ics kA	Icu kA	Ics kA	Icu kA
MS116-0.16	50	100	50	100	30	100	30	100
MS116-0.25	50	100	50	100	30	100	30	100
MS116-0.4	50	100	50	100	30	100	30	100
MS116-0.63	50	100	50	100	30	100	30	100
MS116-1.0	50	100	50	100	30	100	30	100
MS116-1.6	50	100	50	100	30	100	30	100
MS116-2.5	50	75	10	30	10	20	5	10
MS116-4.0	50	75	6	18	6	15	2	3
MS116-6.3	50	50	6	18	6	10	2	3
MS116-10	50	50	6	18	6	10	2	3
MS116-12	25	50	6	15	6	10	2	3
MS116-16	16	16	6	15	4	10	2	3
MS116-20	10	16	3	15	3	10	2	3
MS116-25	10	16	3	15	3	10	2	3
MS116-32	10	16	3	15	3	10	2	3

## Technical data UL/CSA

### Main circuit

Maximum operational voltage	600 V
Manual Motor Controller ratings	see table "UL 508 — Manual Motor Controller" on page 8
Motor ratings	
Horse power	see table below
Full load amps (FLA)	see table below
Locked rotor amps (LRA)	see table below

### Electrical connection

Type	MS116 ≤ 16 A	MS116 ≥ 20 A
Connecting capacity		
 stranded	1/2 x AWG 16 ... 12	1/2 x AWG 16 ... 8
 flexible without ferrule	1/2 x AWG 16 ... 12	1/2 x AWG 16 ... 8
Stripping length	9 mm	10 mm
Tightening torque	10 ... 12 lb-in	18 lb-in
Recommended screw driver	M3.5 (Pozidriv 2)	M4 (Pozidriv 2)

### Motor ratings, single phase

hp Horse power

FLA Full load amps

LRA Locked rotor amps

Type	120 V AC			220 ... 240 V AC		
	hp	FLA	LRA	hp	FLA	LRA
MS116-0.16	-	0.16	0.96	-	0.16	0.96
MS116-0.25	-	0.25	1.5	-	0.25	1.5
MS116-0.4	-	0.4	2.4	-	0.4	2.4
MS116-0.63	-	0.63	3.78	-	0.63	3.78
MS116-1.0	-	1	6	-	1.0	6.0
MS116-1.6	-	1.6	9.6	1/10	1.5	-
MS116-2.5	-	2.5	15	1/6	2.2	-
MS116-4.0	1/8	4	24	1/3	3.6	-
MS116-6.3	1/4	6.3	37.8	1/2	4.9	-
MS116-10	1/2	9.8	58.8	1-1/2	10	-
MS116-12	1/2	9.8	58.8	2	12	-
MS116-16	1	16	96	2	12	-
MS116-20	1-1/2	20	120	3	17	92
MS116-25	2	24	144	3	17	127
MS116-32	2	24	144	5	28	162

**Motor ratings, three phase**

hp Horse power

FLA Full load amps

LRA Locked rotor amps

Type	220 ... 240 V AC			440 ... 480 V AC			550 ... 600 V AC		
	hp	FLA	LRA	hp	FLA	LRA	hp	FLA	LRA
MS116-0.16	-	0.16	0.96	-	0.16	0.96	-	0.16	0.96
MS116-0.25	-	0.25	1.5	-	0.25	1.5	-	0.25	1.5
MS116-0.4	-	0.4	2.4	-	0.4	2.4	-	0.4	2.4
MS116-0.63	-	0.63	3.78	-	0.63	3.78	-	0.63	3.78
MS116-1.0	-	1.0	6.0	-	1.0	6.0	1/2	0.9	8
MS116-1.6	-	1.6	9.6	3/4	1.6	12.5	3/4	1.3	10
MS116-2.5	1/2	2.2	20	1	2.1	15	1-1/2	2.4	16
MS116-4.0	1	4.2	30	2	3.4	25	3	3.9	25.6
MS116-6.3	1-1/2	6.4	40	3	4.8	32	5	6.1	36.8
MS116-10	3	9.6	64	5	7.6	46	7-1/2	9	50.8
MS116-12	3	9.6	64	7-1/2	11	63.5	10	11	64.8
MS116-16	5	15.2	92	10	20	81	10	11	64.8
MS116-20	5	15.2	92	10	14	81	15	17	93
MS116-25	7-1/2	22	127	15	21	116	20	22	116
MS116-32	10	28	162	20	27	145	25	27	146

**Manual Motor Controller**

Type	Manual Motor Controllers Branch circuit protection, max. size per NEC/CEC (1)		Maximum short-circuit current for motor disconnect (1)			
	Fuses	Circuit breaker	for motor disconnect (1)		for group installation	
	A	A	480 V kA	600 V kA	480 V kA	600 V kA
MS116-0.16	Any listed fuses. Size per NEC/CEC	Any listed UL489 / CSA C22.2 No5 circuit breaker. Size per NEC/CEC	30	5	18	5
MS116-0.25			30	5	18	5
MS116-0.4			30	5	18	5
MS116-0.63			30	5	18	5
MS116-1.0			30	5	18	5
MS116-1.6			30	5	18	5
MS116-2.5			30	5	18	5
MS116-4.0			18	5	18	5
MS116-6.3			18	5	18	5
MS116-10			18	5	18	5
MS116-12			18	5	18	5
MS116-16			18	5	18	5
MS116-20			18	5	18	5
MS116-25			18	5	18	5
MS116-32			18	5	18	5

(1) Suitable as motor disconnect only when provided with padlock SA1 or SA3...





---

**ABB STOTZ-KONTAKT GmbH**  
**Electrification Business**  
**Low Voltage Products and Systems**  
Eppelheimer Straße 82  
D-69123 Heidelberg / Germany  
Phone: +49 (0) 6221 7 01-0  
Fax: +49 (0) 6221 7 01-13 25  
E-Mail: [info.desto@de.abb.com](mailto:info.desto@de.abb.com)

---

**You can find the address of your local sales organization  
on the ABB home page**  
[https://new.abb.com/low-voltage/products/  
motor-protection/manual-motor-starter](https://new.abb.com/low-voltage/products/motor-protection/manual-motor-starter)

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regards to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG.

Copyright© 2019 ABB - All rights reserved