

---

USER GUIDE

MAN0126 rev 11

# ASPECT-Enterprise



### Style conventions used in this document:

**UI Text:** Text that represents elements of the UI such as button names, menu options etc. is presented with a grey background and border, in Tahoma font which is traditionally used in Windows UIs. For example:

Ok

**Standard Terms (Jargon):** Text that is not English Language but instead refers to industry standard concepts such as Strategy, BACnet, or Analog Input is represents in slightly condensed font. For example:

BACnet

**Code:** Text that represents File paths, Code snippets or text file configuration settings is presented in fixed-width font, with a grey background and border. For example:

```
$config_file = c:\CYLON\settings\config.txt
```

**Parameter values:** Text that represents values to be entered into UI fields or displayed in dialogs is represented in fixed-width font with a shaded background. For example

10°C

**Product Names:** Text that represents a product name is represented in bold colored text. For example

INTEGRA™

**Company Brand names:** Brands that are not product names are represented by bold slightly compressed text:

ABB Active Energy

**PC Keyboard keys:** Text representing an instruction to press a particular key on the keyboard is enclosed in square brackets and in bold font. For example:

[Ctrl]+[1]

<b>1</b>	<b>INTRODUCTION</b>	
	Considerations Prior To Implementation .....	5
<b>2</b>	<b>VMWARE IMAGE DEPLOYMENT</b>	
	Preparing For Image Deployment .....	6
	Deploying ASPECT-Enterprise To VMware .....	7
	Post Deployment .....	8
	Licensing .....	9
	Obtaining and Installing a Licence File .....	9
	Uploading the ASPECT-Enterprise Feature License .....	10
	Applying Updates To ASPECT-Enterprise .....	10
<b>3</b>	<b>SOFTWARE CONFIGURATION</b>	
	<b>Introduction .....</b>	<b>11</b>
	Tools Required .....	11
	<b>Connecting to Enterprise .....</b>	<b>11</b>
	<b>Log-In .....</b>	<b>11</b>
	<b>Control Panel .....</b>	<b>12</b>
	<b>Project Instance .....</b>	<b>12</b>
	Calendar Configuration .....	12
	Calendar File .....	13
	Calendar User .....	13
	Users and Groups .....	14
	Instance Services .....	14
	Persistence Manager .....	14
	Project Source .....	15
	Project Removal .....	15
	Aspect Control Engine Log .....	16
	License Item Status .....	16
	Project Performance .....	16
<b>4</b>	<b>DATABASE MANAGEMENT</b>	
	MySQL Administration .....	17
	SQLite Maintenance .....	18
	<b>Licensing .....</b>	<b>18</b>
	<b>Communication Setup .....</b>	<b>19</b>
	Out Of Service Manager (OSS) .....	19
	BACnet Settings .....	19
	BBMD Settings .....	20
	Modbus Network Properties .....	20
	Time Sync Settings .....	20
	<b>System Administration .....</b>	<b>21</b>
	User Manager .....	21
	System Services .....	21
	System Status .....	21
	Process Status .....	22
	System Updates .....	22
	OS Auto-Update .....	23
	Backup/Restore .....	23

table of contents

Ethernet Settings ..... 23

Network Diagnostics ..... 24

Time Settings ..... 24

Web Server Configuration ..... 29

Web Server SSL Configuration ..... 29

Image Proxy Configuration ..... 29

**System Logs ..... 30**

Diagnostic Buffer ..... 30

Remote Logging ..... 30

System Log ..... 31

Update Log ..... 31

# 1 Introduction

This document provides details on the software installation and configuration of **ASPECT®-Enterprise** Virtual Appliance. The information found within reviews information regarding deployment of VM images, as well as target administration of the **ASPECT-Enterprise** itself. Please review this document carefully before proceeding.

## CYBERSECURITY DISCLAIMER:

This product is designed to be connected to and to communicate information and data via a network interface. It is your sole responsibility to provide and continuously ensure a secure connection between the product and your network or any other network (as the case may be). You shall establish and maintain any appropriate measures (such as but not limited to the installation of firewalls, secure VPNs, application of authentication measures, encryption of data, installation of anti-virus programs, etc.) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. ABB Ltd and its affiliates are not liable for damages and/or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

## Considerations Prior To Implementation

To properly prepare for installation and deployment of **ASPECT-Enterprise** for Virtual Machines, please take the following considerations into account:

1. **ASPECT®** provides world-class server-based **BAS** solutions developed by Cylon and is routinely updated to include new features and enhancements to its technology. Regardless of whether or not you are deploying the virtual machine for the first time, please check to ensure you have the latest virtual machine images for **ASPECT-Enterprise**. If you are a building owner, please contact your Cylon Solution Integrator for assistance. If you are a Cylon Solution Integrator, please contact Cylon Technical Services by visiting the Cylon Toolbox and verifying product revisions.
2. Recommended System Requirements at the time of this document:
  - Dual 2.8Ghz Quad Core or 6-Core CPUs (Intel or AMD)
  - 16GB System Memory
  - 250GB+ SATA or SAS RAID Array (RAID 1 with hot spare suggested)
  - Supported 10/100/1000 MB Ethernet Adapter (Intel or Broadcom® suggested)
  - Redundant Power Supply • Available USB port for Software License Key
3. VMware Platforms Supported at the time of this document
  - VMware ESXi v5.0 or newer

**Note:** EXSI can be download from VMWARE <https://www.vmware.com>

4. Virtualisation Image Provisions
  - Enterprise Class Linux OS
  - Embedded MySQL Database Server ASPECT Runtime Engine

## 2 VMware Image Deployment

### PREPARING FOR IMAGE DEPLOYMENT

To deploy ASPECT-Enterprise onto a VMware environment, download the image from the Cylon Toolbox. The .zip file will contain images in either an OVA or OVF extension for newer releases of VMware. For older revision of VMware, an image with a VMX extension has also been provided to accommodate older versions of VMware that support the VMX image format.

To deploy the virtual appliance on VMware environments, you or an administrator must use the vSphere® Client Utility commonly provided with VMware ESX® 5.0 or higher. If you are deploying to an existing virtualization server, you must also have the appropriate permissions to access the server with the vSphere Client Utility. If you do not have this utility, please visit <http://www.vmware.com> for assistance with obtaining this utility. If you are unsure whether or not you have the appropriate permissions to access the virtualization server, please contact your network administrator for assistance.

Before installation, either copy the unzipped VMware image to a USB drive or have IT staff copy it over the network to the computer on which the vSphere Client Utility will be run. The images may be stored on any directory or drive. Alternatively, you may deploy the files directly from the USB drive itself. However, Cylon strongly recommends that you copy the files to your local PC for the most efficient deployment.

The downloaded content has the following file structure:

- ASPECT-Enterprise OVF Image - contains all necessary OVF and OVA files for deployments
- ASPECT-Enterprise VMX Image - contains all necessary VMX files for older VMware products


For either deployment method, please ensure that the drive you will deploy the image to has sufficient space for the image to expand as necessary.

**Note:** The minimum space recommended is 250GB+ SATA or SAS RAID Array (RAID 1 with hot spare suggested).


## DEPLOYING ASPECT-ENTERPRISE TO VMWARE

The following deployment process is documented around the use of vSphere Client v5.0.0 and VMware ESXi v5.0.0. or later. Depending on the revision, screen shots and dialog boxes may vary. To deploy the image, perform the following steps:

- With vSphere launched and connected to your virtualization server, select **File > Deploy OVF Template...** from the vSphere Client Utility.

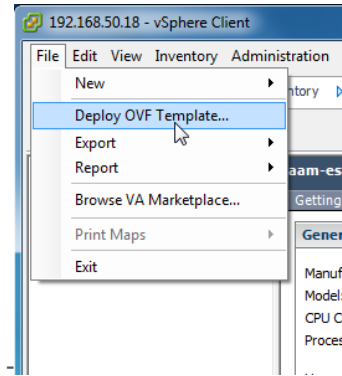

- Browse your system and find the `Aspect_Enterprise_OVF10.ova` file. In order to see OVA extension files, you may need to change the file type from OVF to OVA using the extension chooser in the bottom right-hand corner of the browser window.

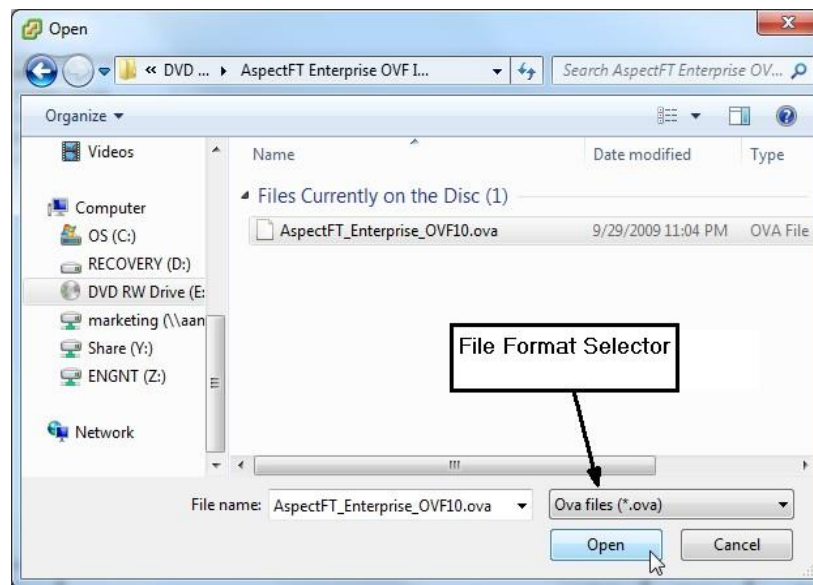


- Follow the remaining instructions for the wizard.

### POST DEPLOYMENT

After installing and launching the virtual appliance, the virtual appliance dashboard and console can be displayed. By default, the virtual appliance will acquire an IP address using DHCP. This address is displayed on the dashboard, along with instructions to manage the application by browsing to a provided address (e.g. `http://<ip-address>:5840`).

The use of the virtual appliance dashboard is not required. Some functions present in the virtual appliance dashboard are also part of ASPECT-Enterprise's built-in Web User Interface (**webUI**) and are discussed later in this document.

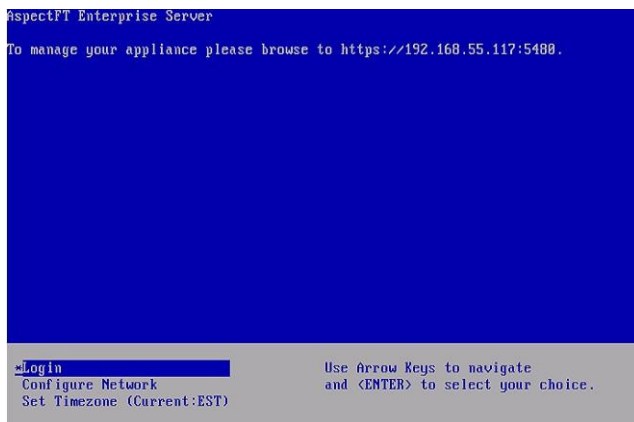



## LICENSING

ASPECT-Enterprise requires the use of a software license file.

**Note:** ASPECT-Enterprise version 3.01.01 and higher can support a "software unique ID (UID)" instead of a hardware-based unique ID. This is primarily to support virtual machine installations where the use of a USB device to furnish Aspect's license unique ID is not permitted by the site IT staff.

## OBTAINING AND INSTALLING A LICENCE FILE

**Note:** Ensure that the ASPECT-Enterprise target has been upgraded to 3.01.01 or higher. This process will silently fail on ASPECT 3.01.00 and lower.

**Note:** Ensure that the ASPECT-Enterprise server is at its required final IP address when carrying out this License Installation process. The active IP address is part of the calculation of the software UID and cannot be changed once the system is licensed, or the license validation will fail until a new license file is obtained.

**Note:** The Site ID is also used in creating the License and cannot be changed afterward. This will be displayed in the sidebar of ngAdmin

Make a backup copy of the current license file on the target.

Upload the supplied ASPECT-Enterprise Utility License to the target, replacing any license or initial stub license already installed.

**License Management**

Hardware ID: H32-WFBS-KHU  
 License ID: 123-ABDC-0000  
 License ID Mismatch  
 License Signature Valid

Upload license file:  
 No file chosen

**Contents of license file:** [Download](#)

```
#Aspect Enterprise Soft Token Utility License

# General Information
DateGenerated = 08/17/2017
HardwareID = 123-ABDC-0000
HardwareType = 311
UIDBasedHWID = True
SiteID = Utility License
```

The Utility License has a deliberately and universally invalid ID – it cannot be used to run ASPECT services. The purpose of the Utility License is to force the license subsystem to display the actual software UID

Please send the Hardware ID reported after the Utility License is installed, as shown above, to ABB Cylon order processing to obtain the actual license for the ASPECT-Enterprise Target.

## Uploading the ASPECT-Enterprise Feature License

The Licence file provided by Cylon Sales is an encrypted text-based license file that can be viewed from the WebUI of ASPECT-Enterprise or read using any standard text editor.

**Warning:** Do not attempt to manually alter or adjust the text contents of the viewed from the WebUI of ASPECT-Enterprise license file. Attempting to do so will render the license invalid.

This file must be uploaded through ASPECT-Enterprise's WebUI. To do this, log into the WebUI.

Select **Licensing** > **License** from the WebUI tree.

The **License Management** page displays the current license status of the ASPECT-Enterprise instance, as well as a method to upload/download license files.



Click **Browse** to locate the file on your PC.

Once located, click the **Upload** button to upload the license to ASPECT-Enterprise.

**Note:** When a license file is uploaded, Cylon recommends rebooting the ASPECT-Enterprise server to ensure the license file is successfully applied.

## APPLYING UPDATES TO ASPECT-ENTERPRISE

The downloaded content may contain patch updates to your revision of ASPECT-Enterprise. These updates are contained within a folder called "Aspect Updates". These updates can be applied via the ASPECT-Enterprise WebUI. To apply update files, please refer to the procedural document provided within this folder for additional information.

## 3 Software Configuration

### INTRODUCTION

The following provides details on the software configuration of **ASPECT-Enterprise**. Please follow the steps contained within this section for proper setup and configuration.

### TOOLS REQUIRED

The following tools will be required for proper configuration of the system:

- PC/Laptop
- Ethernet cross-over cable, or other network connection to **ASPECT-Enterprise**
- Standard web-browser such as Windows **Edge**, Mozilla **Firefox**, Google **Chrome**, Apple **Safari**, or other.
- **ASPECT-Enterprise** Software License
- The license for your **ASPECT-Enterprise** Server may already be installed, provided that the End User License Agreement for the unit was signed and returned to Cylon's Inside Sales department prior to shipment.

### CONNECTING TO ENTERPRISE


**ASPECT-Enterprise** is installed with a default IP address and subnet mask. Your laptop's network card must be configured in a manner where it may access this IP network setting. Refer to your operating system documentation for details on how to configure your network card.

See *Ethernet Settings* on page 23 for details on how to reconfigure **ASPECT-Enterprise** server IP Address.

### LOG-IN

To log in to **ASPECT-Enterprise**:

1. With your PC's network card configured, open any standard web browser.
2. Browse to the IP address of **ASPECT-Enterprise** as defined during installation.
3. If your connection is successful, the main login page of **ASPECT** will be displayed:

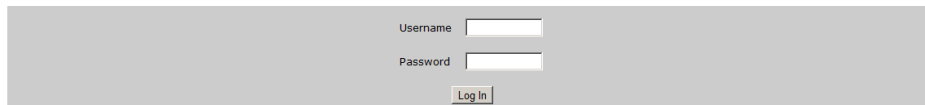


The screenshot shows a login interface with a light gray background. It contains two text input fields: the first is labeled 'Username' and the second is labeled 'Password'. Below these fields is a small button with the text 'Log In'.

4. Enter the case-sensitive default username and password into the fields provided.
5. Click the **Log In** button.

## CONTROL PANEL

When you successfully log in, you will be directed to the **Control Panel**. The **Control Panel** contains a navigation tree to the left of the web user interface; allowing users to select different configuration areas of the product.

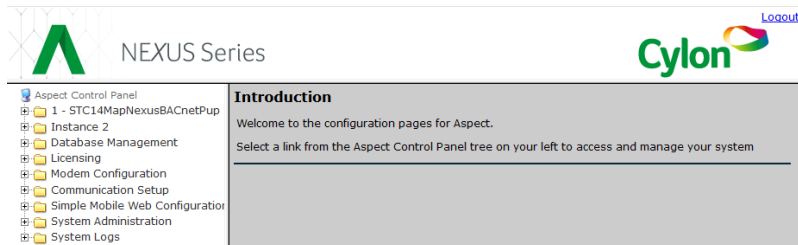

## PROJECT INSTANCE

One instance is available within the **ASPECT-Enterprise**. This provides the capability to host a project within the target. Within the Instance, options exist for the following:

- Calendar Configuration
- Users and Groups
- Instance Services
- Persistence Manager
- Project Source
- Project Removal
- AspectFT Control Engine Logs
- License Item Status
- Project Performance

## CALENDAR CONFIGURATION


The **Calendar Configuration** area is used to configure iCalendar integration variables of the **ASPECT-Enterprise**. Within this section there are two pages:

- Calendar File
- Calendar User

## CALENDAR FILE


**Calendar File** can be used to browse and modify what calendars have been previously published to the instance, as well as allow users to manually upload iCalendar files (with ICS file extensions) to the device.

- To upload a saved calendar file, simply select the **Browse/Choose File** button and locate the iCalendar file on your computer. Once located, click the **Upload** button.
- To delete a previously published calendar, place a checkmark next to the corresponding file and select the **Delete** button.

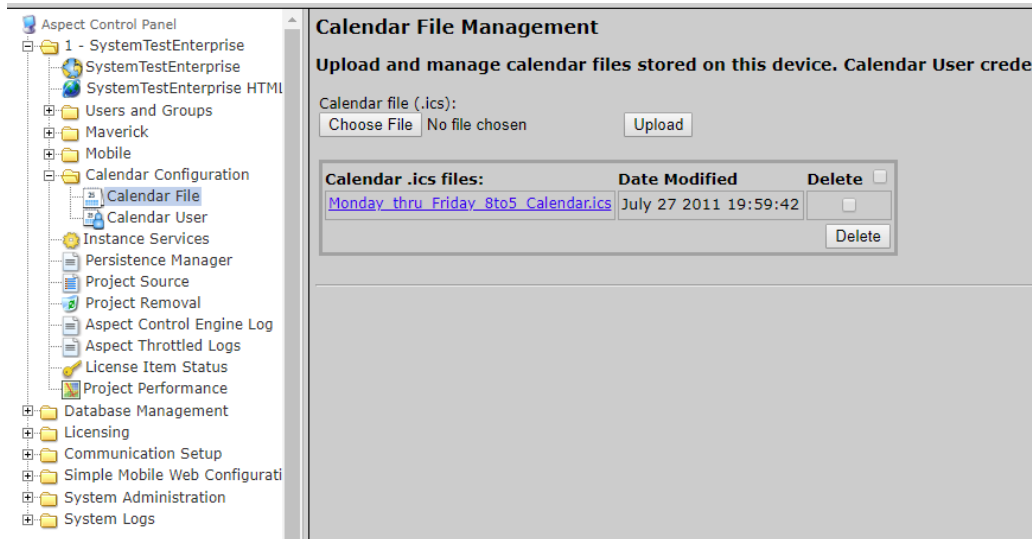


## CALENDAR USER

**Calendar User** provides the ability to change the default username and password credentials that are required to allow iCalendar-based tools to publish data to the ASPECT-Enterprise. By default, the username (**calendar**) and password (**user**) can be changed to any desired credential set. When referencing Calendars in ASPECT-Studio, these credentials must be specified in order to properly access the file.

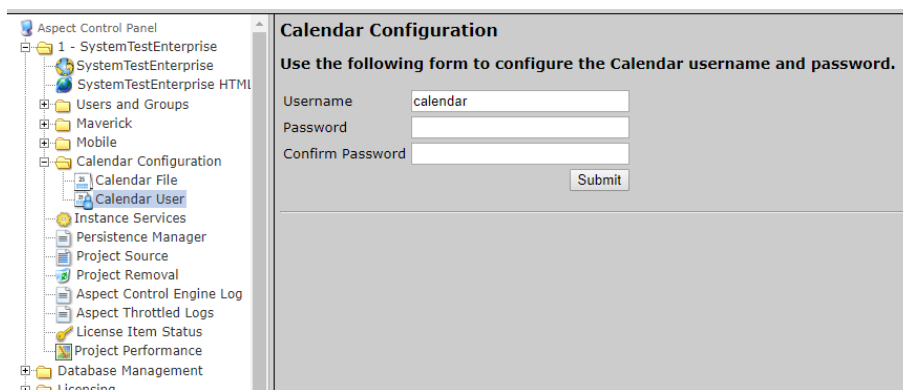


## USERS AND GROUPS

Users and Groups are included within the instance in the ASPECT-Enterprise. This provides the ability to manage users in the ASPECT instance it serves.

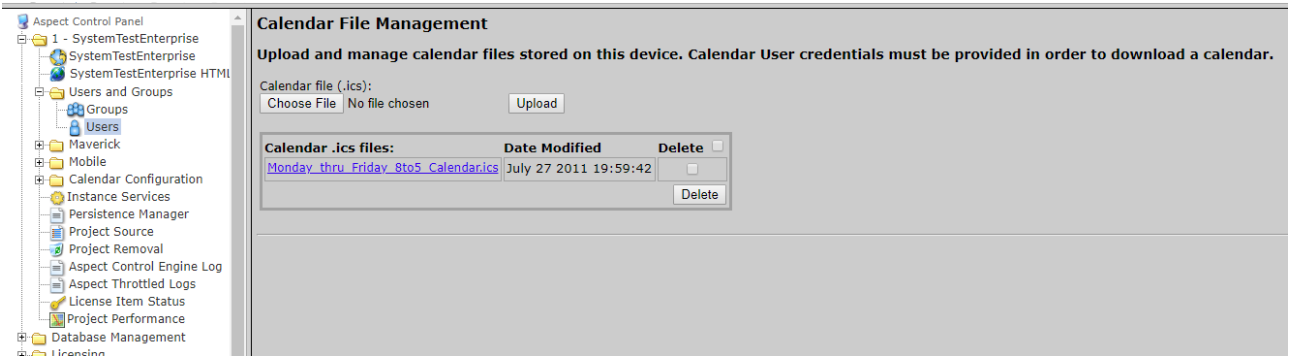


## INSTANCE SERVICES

The Instance Services provides users with the ability to restart the Aspect Control Engine for the instance. Only one option is available in the Instance Services drop-down, which will allow the instance to be reset.

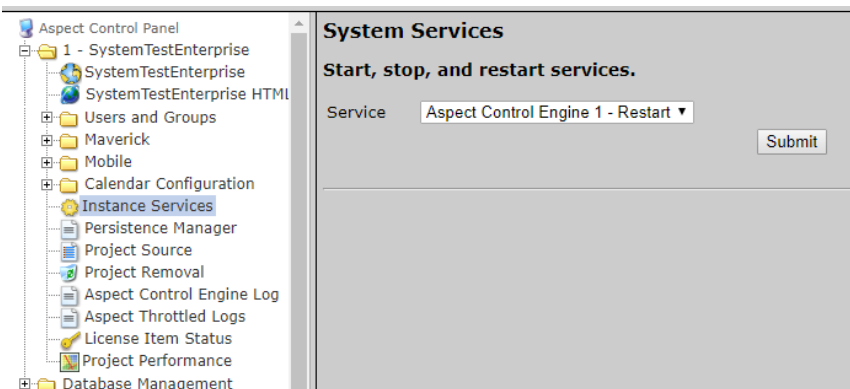


## PERSISTENCE MANAGER

The Persistence Manager area is used to manage and delete Persisted data. Persisted data is localized data stored from Persisted Elements that may be present in an ASPECT project.

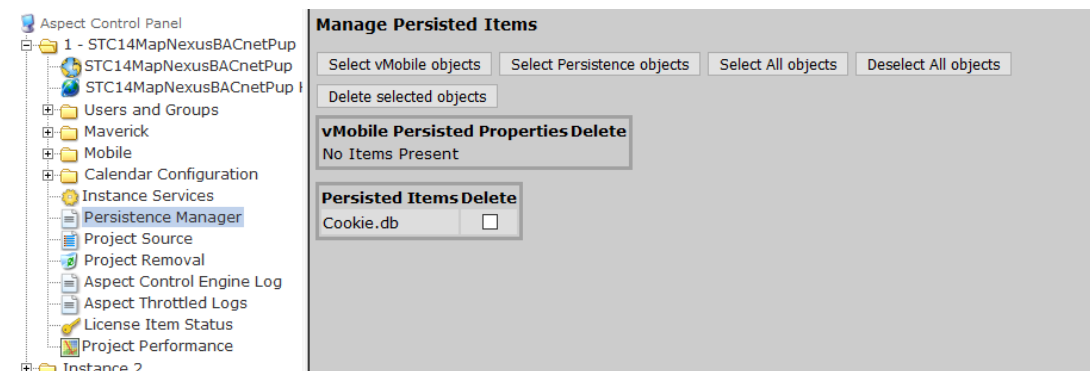

## PROJECT SOURCE


The **Project Source** page provides administrators with the ability to download a password-protected copy of the ASPECT project deployed to the Instance. When selecting this in the **Control Panel**, you will be prompted to re-enter your credentials in order to download a copy of the project. The required credentials will be the same as the ones used to originally deploy the project.

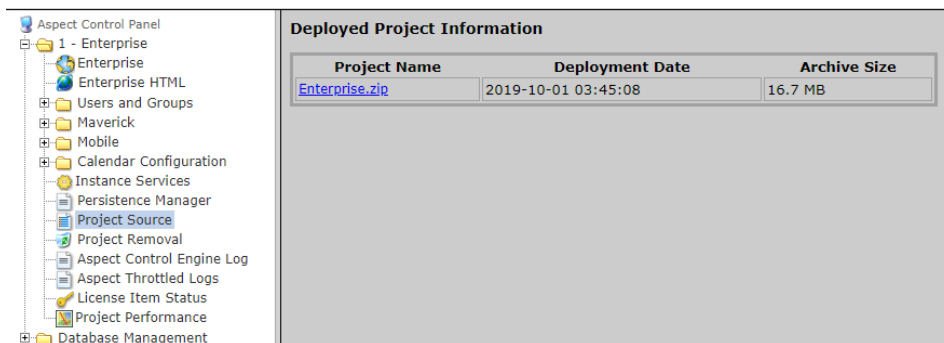

Project Name	Deployment Date	Archive Size
<a href="#">Enterprise.zip</a>	2019-10-01 03:45:08	16.7 MB

## PROJECT REMOVAL

The **Project Removal** page provides administrators the ability to remove a currently deployed project from an ASPECT instance.

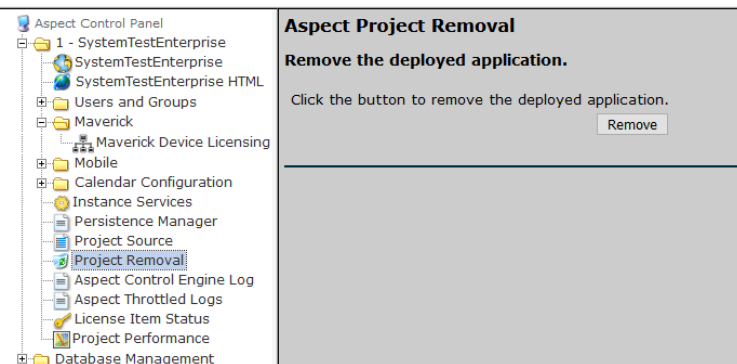

**Aspect Project Removal**

**Remove the deployed application.**

Click the button to remove the deployed application.

## ASPECT CONTROL ENGINE LOG

The **Aspect Control Engine log** provides administrators and technicians with the ability to view project status and debugging information relating to the health of the deployed **ASPECT** project. Up to 10 pages of **ASPECT** logs are contained and individual logs can be downloaded.

**Aspect Control Engine Log**

View Aspect Control Engine Logs.

aspect1.log

Select an Option To Filter the Log:  [Download the Aspect Control Engine log](#)

```
INFO : 2019-10-01 16:14:22,372 RESTART REQUEST RECEIVED... watchdogTimeout=[3]
com.aamatrix.util.LoggerUtil.info(LoggerUtil.java:164)
INFO : 2019-10-01 16:07:22,365 ScheduleDistributionQueue max retries exceeded for /C/N589_MapScheduleDistribution/Network_6
/006_001_UC32_24_CU243390351/COV_Medium, giving up this distribution. com.aamatrix.util.LoggerUtil.info(LoggerUtil.java:164)
INFO : 2019-10-01 16:07:22,365 ScheduleDistributionQueue max retries exceeded for /C/N589_MapScheduleDistribution/Network_6
/006_006_060_CBX_8R8/DigVirt_16B_Schedule, giving up this distribution. com.aamatrix.util.LoggerUtil.info(LoggerUtil.java:164)
INFO : 2019-10-01 16:07:22,361 ScheduleDistributionQueue max retries exceeded for /C/N589_MapScheduleDistribution/Network_5
/005_010_CBM24/Schedule_1, giving up this distribution. com.aamatrix.util.LoggerUtil.info(LoggerUtil.java:164)
```

## LICENSE ITEM STATUS

The **License Item Status** area provides the ability to view how many current license items a project may be using, as well as the maximum number of licenses available for a particular feature or function.

**Instance License Status:**

Token	Current	Max
ModbusRTUDevice	0	64
LicensedDevices	64	64
BACnetIPDevice	0	64
VStat	0	128
FTNetDevice	1	999999
LicensedPoints	1247	4000
ModbusIPDevice	0	64
UnitronNetwork	0	4096
PupDevice	0	64
BACnetDevice	0	64
FT	1	2
LicensedAamnet	1	999999
SdpDevice	0	0

## PROJECT PERFORMANCE

The **Project Performance** area provides the ability to dynamically view and monitor the status of **Threads**, **Maps**, **Serial Port Queue**, **Transaction Times** and **Ports** being used by the **ASPECT** project loaded into the target.

By default, all Tabs will update information every 15 seconds. You may adjust this update timer by choosing the **Settings** tab and changing the **Update Interval Parameters**.

**Threads** **Maps** **Port Pool** **Serial Port Queue** **Transaction Times** **Settings**

**Thread Status at 10:18:45 GMT-0400 (Eastern Daylight Time)**

Total Timers: 1  
Total Targets: 1


	Timebase	Target Class	HashCode	Target Count	ElapsedTime (ms)	Last Tick Time (s)	Load
	14.0	Default	1043272	1	16	9.8s ago	0.11%



## 4 Database Management

Database Management is the centralized location for all database storage and contains paths to MySQL administration and SQLite maintenance.

### MYSQL ADMINISTRATION

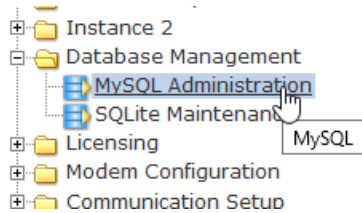

The **MySQL Administration** item in the webUI tree links to an administration interface for ASPECT's MySQL Database Server. To access the Database Interface, the user must enter (case sensitive) login credentials. The default credentials are:

- Username - **matrixac1**
- Password - **aam**

Language: English MySQL » Server

**Adminer 4.7.3**

DB:

[SQL command](#) [Import](#) [Export](#)

### Select database

[Create database](#) [Privileges](#) [Process list](#) [Variables](#) [Status](#)

MySQL version: **5.1.73** through PHP extension **MySQLi**


Logged as: **matrixac1@localhost**

	Database - Refresh	Collation	Tables	Size - Compute
<input type="checkbox"/>	<b>Aspect</b>	latin1_swedish_ci	?	?
<input type="checkbox"/>	<b>information_schema</b>	utf8_general_ci	?	?
<input type="checkbox"/>	<b>mysql</b>	latin1_swedish_ci	?	?
<input type="checkbox"/>	<b>phpmyadmin</b>	latin1_swedish_ci	?	?
<input type="checkbox"/>	<b>web_configuration</b>	latin1_swedish_ci	?	?

Selected (0)


Drop

**Note:** MySQL administration in ASPECT 3.03.02 and later uses Adminer. However, on devices running 3.03.01 or earlier the UI for MySQL administration is based on phpMyAdmin:

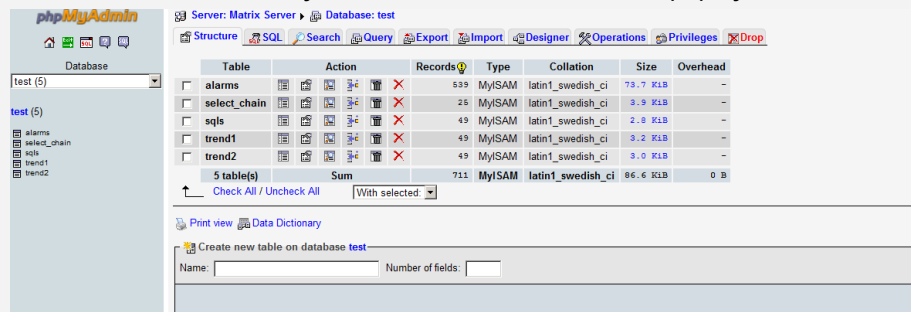


## SQLite MAINTENANCE

The **SQLite Maintenance** page provides users with the ability to manage the **SQLite** database. This page shows the database files and sizes.

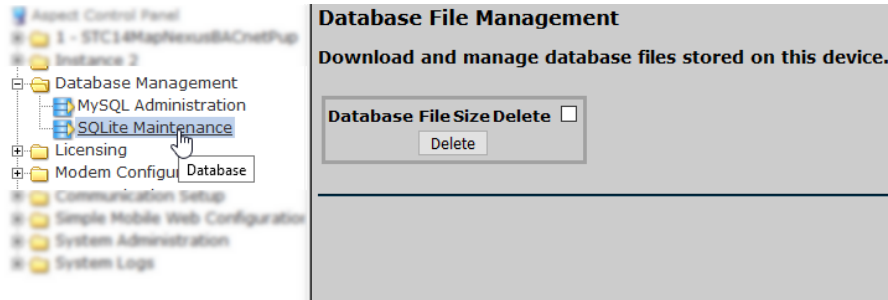

## LICENSING

The **License** page provides the ability to view the current license status of the **ASPECT-Enterprise** server as well as a method to upload/download license files. If a license file is uploaded, Cylon Controls recommends rebooting the **ASPECT-Enterprise** server to ensure the license file is successfully applied.

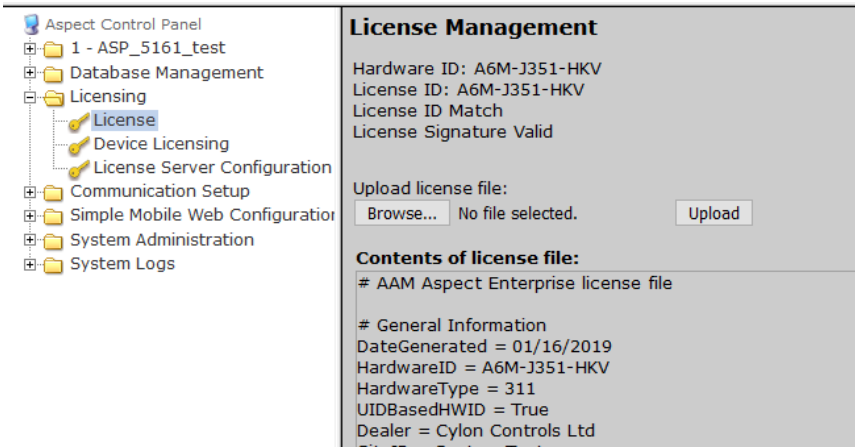

## COMMUNICATION SETUP

The **Communication Setup** page provides administrators the ability to configure, BACnet IP Router, BBMD, Time Synchronization settings, and the Out of Service Manager Manager.

### OUT OF SERVICE MANAGER (OSS)

The **Out Of Service Manager (OSS)** provides a single location that allows administrators to manually mark devices out of service using the Manual OOS check boxes.

### BACNET SETTINGS

The **BACnet Configuration** area allows configuration of read/write retries, port configuration, and router settings for BACnet/IP.

## BBMD SETTINGS

The **BBMD settings** area is used to configure the BACnet/IP Broadcast Management Device (BBMD) table setup for BACnet networks.

The screenshot shows the 'BBMD Configuration' page. On the left is a tree view with 'BBMD Settings' selected. The main panel has the title 'BBMD Configuration' and the instruction 'Configure BBMD.'. Below this is a link 'Add Device'. A table header is shown with columns: 'IP Address', 'UDP Port', 'Subnet', 'Mask', and 'Delete'. Below the table, a note states: 'Entries may only be added to the BBMD NAT configuration when BACnet NAT is enabled'. Another identical table header is shown below the note. At the bottom is a 'Submit' button.

## MODBUS NETWORK PROPERTIES

The **Modbus Network Properties** page is used to set the configuration for Modbus communications.

The screenshot shows the 'Modbus Network Properties' page. On the left, 'Modbus Settings' is selected in the tree view. The main panel is titled 'Modbus Network Properties' and contains a section 'Modbus Configuration'. This section includes five dropdown menus: 'Modbus Timeout(seconds)' set to 3.0, 'Modbus Write Retries' set to 0, 'Modbus Read Retries' set to 0, 'Modbus Out Of Service Time (seconds)' set to 60, and 'IP Gap Delay' set to 20. A 'Submit' button is located at the bottom right of the configuration section.

## TIME SYNC SETTINGS

The **Time Sync** Settings area provides the ability to configure BACnet network time synchronizations.

The screenshot shows the 'Time Sync Configuration' page. On the left, 'Time Sync Settings' is selected in the tree view. The main panel is titled 'Time Sync Configuration' and has the instruction 'Configure the BACnet Network configuration.'. It features a 'Time Sync Interval' dropdown set to '1 Hour'. Below this is a section for 'Time Sync Recipients (Up to four networks)' with four empty text input fields. A 'Submit' button is positioned at the bottom right.

## SYSTEM ADMINISTRATION

The **System Administration** area contains system settings for the **ASPECT-Enterprise**. These fields include the User Manager, System Services, System Status, System Updates, Ethernet Settings, Time Settings, Web Server Configuration, Process Status, and Image Proxy Configuration.

## USER MANAGER

The **User Manager** area provides fields to setup, add and remove administrative users from the **ASPECT-Enterprise**. Administrative users are granted full access to the **Aspect Control Panel** while users/groups created within an instance are only allowed access to deployed projects.

## SYSTEM SERVICES

The **System Services** area provides administrators with the ability to control key services relative to the target. Through this area, users can restart specific services of the **ASPECT-Enterprise**. Simply select an option from the drop-down and click **Submit**. A message will indicate that the service has been stopped/started/restarted successfully.

## SYSTEM STATUS

The **System Status** page provides details on the current health of the system including uptime, memory (RAM) utilization, disk space and all information pertaining to revision levels.

## PROCESS STATUS

This shows the result of a top command which produces an updating list of current processes running.

top - 15:32:00 up 39 days, 1:10, 0 users, load average: 0.00, 0.00, 0.00  
 Tasks: 90 total, 1 running, 89 sleeping, 0 stopped, 0 zombie  
 Cpu(s): 0.4%us, 0.1%sy, 0.0%ni, 99.5%id, 0.1%wa, 0.0%hi, 0.0%si, 0.0%st  
 Mem: 760396k total, 349452k used, 410944k free, 4020k buffers  
 Swap: 131064k total, 95388k used, 35676k free, 76868k cached

PID	USER	PR	NI	VIRT	RES	SHR	S	%CPU	%MEM	TIME+	COMMAND
1	root	20	0	19228	240	84	S	0.0	0.0	0:01.11	init
2	root	20	0	0	0	0	S	0.0	0.0	0:00.00	kthreadd
3	root	RT	0	0	0	0	S	0.0	0.0	0:00.00	migration/0
4	root	20	0	0	0	0	S	0.0	0.0	0:23.03	ksoftirqd/0
5	root	RT	0	0	0	0	S	0.0	0.0	0:00.00	migration/0
6	root	RT	0	0	0	0	S	0.0	0.0	0:04.16	watchdog/0
7	root	20	0	0	0	0	S	0.0	0.0	18:17.44	events/0
8	root	20	0	0	0	0	S	0.0	0.0	0:00.00	cgroup
9	root	20	0	0	0	0	S	0.0	0.0	0:00.00	khelper
10	root	20	0	0	0	0	S	0.0	0.0	0:00.00	netns
11	root	20	0	0	0	0	S	0.0	0.0	0:00.00	async/mgr
12	root	20	0	0	0	0	S	0.0	0.0	0:00.00	pm

## SYSTEM UPDATES

The **System Updates** area is used to perform firmware upgrades to the ASPECT device. These firmware updates can be obtained from **Error! Unknown document property name..**

**Update System - Confirm**

**CAUTION: Please be aware that the Aspect Control Engine will be shut down once you click continue.**

It is recommended to download a **Configuration Backup** using [Backup/Restore](#) before applying updates.

Click "Continue" to proceed to upload stage.

Clicking on the **Continue** button opens the upload page:

**Update System - File Upload**

Upload the ".aam" file and then submit the form to execute the system update.

Update Aspect  No file chosen

## OS AUTO-UPDATE

For troubleshooting purposes, the OS Auto-Update page is available.

This setting should remain at its default setting of **Enabled**, unless instructed by Cylon Technical Services to disable.



## BACKUP/RESTORE


**Backup /Restore** provides the means to backup an ASPECT target's device configuration (network addresses, port and driver configuration, etc). To create a backup, simply click the **Download** button.



## ETHERNET SETTINGS

The **Ethernet Settings** area permits for Ethernet address configuration of the ASPECT-Enterprise. The ASPECT-Enterprise can support static IP addresses or DHCP addressing from a valid DHCP server. Simply select the appropriate address setting for your application.

- To configure the device to use DHCP addressing, select the **Obtain an IP Address Automatically** radio button. In most DHCP environments, a resolvable DNS name or reserved IP address is assigned to the ASPECT-Enterprise by the local network administrator prior to configuring the device for this option.
- To configure the device to use a static IP address, select the **Use the following IP Address** radio button, then enter your **IP address**, **Subnet Mask**, **Gateway**, and **DNS information** into the boxes provided below.

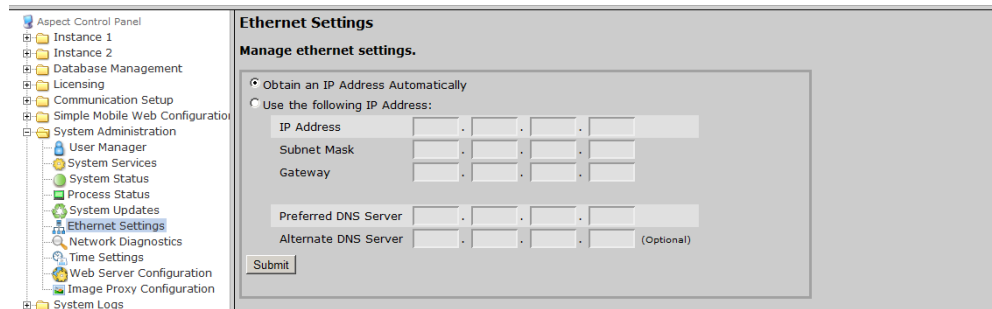

## NETWORK DIAGNOSTICS

The **Network Diagnostics** area contains useful troubleshooting methods for network connectivity problems without the need for additional tools.

## TIME SETTINGS

The **Time/Date Settings** area allows users to configure the **ASPECT-Enterprise** Time and Date parameters. In this section, users can set the following items using the appropriate drop-downs and editors:

- System Time - specified in military time
- System Date - specified in MM/DD/YYYY
- TimeZone/Region - specified in one of many configurable options
- Time Server Synchronization - Specifies an NTP time server on the Internet with which to sync the system time (via firewall). Refer to [pool.ntp.org](http://pool.ntp.org) for information relative to other available NTP servers available.

### Enterprise Host/VM NTP (Time Sync) Configuration

Some installations of **ASPECT-Enterprise** experience time drift if the **VMWare ESXi** host is configured with NTP (Network Time Protocol) enabled. This section outlines the procedure for disabling NTP on the **ESXi** host and enabling it on **ASPECT-Enterprise** Virtual Machine.


**Note:** The following sections use an IP address of **192.168.4.59** for the VM as an example. Replace this with the actual IP address of your VM,



## To Disable Time Sync from the VM to the ESXi Host


From VMWare ESXi web interface - shutdown the Virtual Machine

Open <https://192.168.4.61/ui/#/login> in a web browser and login with the root credentials created during installation.

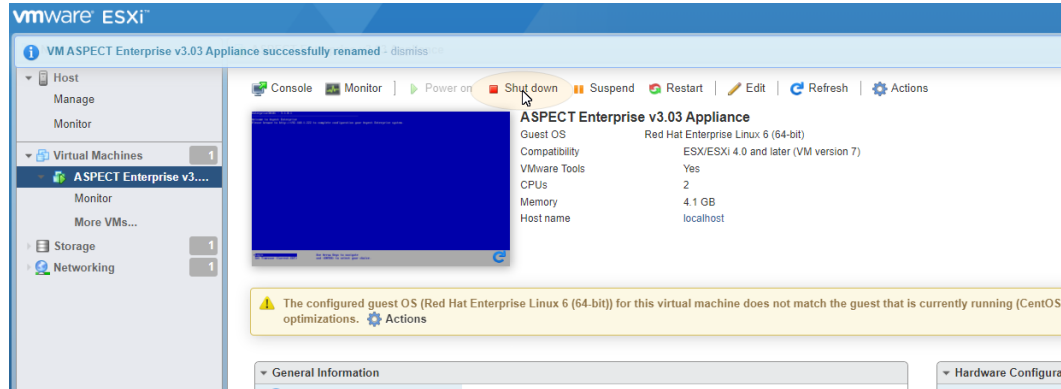

Enable SSH on the VMWare ESXi host machine:

right-click **Host**, select **services** and select **Enable Secure Shell (SSH)**

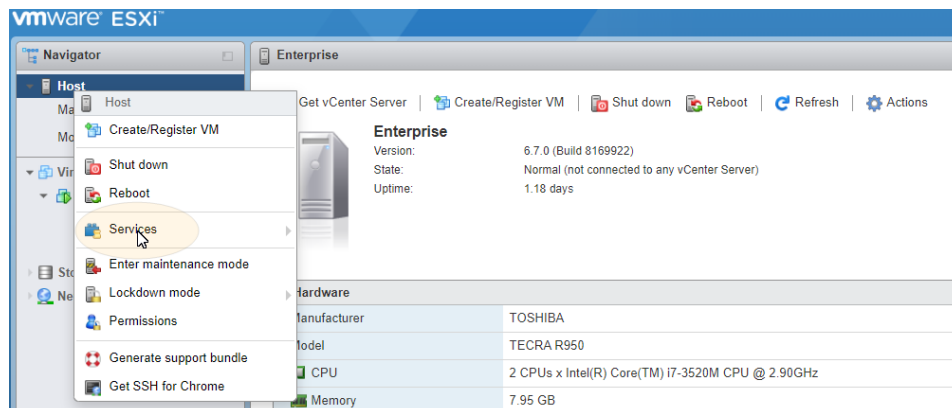

With any SSH client (e.g. Bitwise or PuTTY) log in to the VMWare ESXi Host as root credentials created during installation.

```
ssh 192.168.4.61
```

- Find the .vmx file

```
find / -name "*.vmx"
```

The output should be something like

```
/vmfs/volumes/5a1ee46e-a7a3a9e8-62d6-6c626d4d4c8f/Enterprise/Enterprise.vmx
```

- Edit the .vmx file using vi

```
vi /vmfs/volumes/5a1ee46e-a7a3a9e8-62d6-6c626d4d4c8f/Enterprise/Enterprise.vmx
```

- *change the following:*

```
tools.syncTime           = "FALSE"
time.synchronize.continue = "FALSE"
time.synchronize.restore  = "FALSE"
time.synchronize.resume.disk = "FALSE"
time.synchronize.shrink   = "FALSE"
time.synchronize.tools.startup = "FALSE"
save the file (press [esc] then enter :wq!)
```

- *Find the VMid of the Enterprise server*

Logged in as root:

```
vim-cmd vmsvc/getallvms
```

Output:

```
Vmid Name File Guest OS Version Annotation
```


```
1 Enterprise [Datastore1] Enterprise/Enterprise.vmx centos64Guest vmx-07 With the Aspect control engine you are
not limited to just one solution. Aspect is based upon open-standards used within multiple industries. Designed
to perform control sequences and building management routines from an array of device platforms, Aspect can
communicate utilizing drivers such as BACnet®, MODbus®, and PUP. Through varying aspects of the software, users
can scale their projects based on the size as well as hardware, and still receive the level of sophistication
and control they expect.
```

This shows the Vmid to be 1.

Reload the .vmx file

```
vim-cmd vmsvc/reload 1
```

Restart the VM

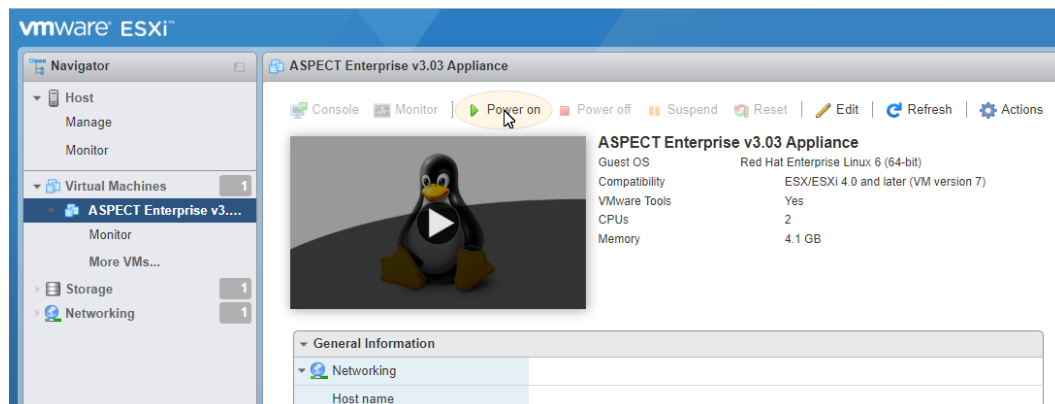

▪ *Verify that the DNS server configuration is correct in the ASPECT WebUI*

Current DNS server is shown in the Ethernet Settings:

Verify the DNS server name from the system administrator or run `ipconfig /all` from a windows server on the network.

```

Connection-specific DNS Suffix . : 
Description . . . . . : Intel(R) Wireless-AC 9560
Physical Address. . . . . : 48-F1-7F-52-94-AA
DHCP Enabled. . . . . : Yes
Autoconfiguration Enabled . . . . : Yes
IPv6 Address. . . . . : 2606:a000:1215:c6bc:29c6:606c:2e30:2206(Preferred)
Temporary IPv6 Address. . . . . : 2606:a000:1215:c6bc:95a8:fc84:e94b:5c86(Preferred)
Link-local IPv6 Address . . . . . : fe80::29c6:606c:2e30:2206%6(Preferred)
IPv4 Address. . . . . : 192.168.1.74(Preferred)
Subnet Mask . . . . . : 255.255.255.0
Lease Obtained. . . . . : Wednesday, October 2, 2019 1:09:04 PM
Lease Expires . . . . . : Thursday, October 3, 2019 1:09:05 PM
Default Gateway . . . . . : fe80::4eed:fbff:feae:6978%6
                          192.168.1.1
DHCP Server . . . . . : 192.168.1.1
DHCPv6 IAID . . . . . : 55112063
DHCPv6 Client DUID. . . . . : 00-01-00-01-23-F2-02-CD-00-0C-D1-9C-5E-A7
DNS Servers . . . . . : 2606:a000:1215:c6bc::1
                          192.168.1.1
NetBIOS over Tcpip. . . . . : Enabled
  
```

Verify that the DNS server IP address is correct as follows:

**Note:** Select Network Diagnostics from the ASPECT-Enterprise Control Panel tree, enter the DNS IP address from the Ethernet configuration screen and click on Start DNS Test. If the screen shows as specified above, the IP address is valid and you have a connection to good DNS Server. If the IP address is not a valid DNS Server, the black screen will be blank.

■ *Setup Time sync server on the VM in the ASPECT WebUI*

**Time/Date Settings**  
Use the following forms to configure time and date settings.

Set System Time	13 ▾ 47 ▾	Submit
Set System Date	10/16/2018	Submit
Set TimeZone/Region	Etc/UTC ▾	Submit
Time Server Synchronization	3.ie.pool.ntp.org	Submit

The NTP time server is toggled off by removing the time server name in the Time Server Synchronization field and clicking submit. And it is toggled back on by setting server name with a valid NTP host name or IP address.

The process for configuring NTP on an Aspect target is as follows:

1. Toggle the NTP service off
2. Set the system date to the current date and click submit
3. Set the system Time zone to your timezone and click submit
4. Set the system time to the current time and click submit
5. Toggle the NTP service on - enter a valid NTP server IP address or hostname and click submit

Failure to configure NTP and related parameters in this sequence could cause NTP to panic and subsequently shutdown effectively decommissioning the NTP service completely

## WEB SERVER CONFIGURATION

The **Web Server Configuration** area is used to set a label for the login screen and to change port settings for the following:

- Aspect Control Panel - defaults to port **80** (HTTP)
- Aspect Control Engine - defaults to port **7226**

**Note:** Make sure that each port change is saved, to avoid 2 services responding to the same port. This may cause connection access to that service to be lost.

Web Server Configuration		
Configure web server settings.		
Device Label	Enterprise	Submit
Port	80	Submit
Aspect Control Engine Port	7226	Submit
Simple Mobile Web Port	8080	Submit

## WEB SERVER SSL CONFIGURATION

The **SSL Certificate Management** page allows SSL certificates to be generated or uploaded.

**SSL Certificate Management**

Manage Port   Create Self-Signed Cert   Import Existing Cert

Aspect Target Admin UI ☒
 Use First Aspect Instance ☐

Save

## IMAGE PROXY CONFIGURATION

The **Image Proxy Configuration** page permits users to enable or disable image proxy, allowing ASPECT to access external sites to retrieve graphics.

**Image Proxy Access**

Use the form to enable or disable image proxy access.

Proxy Enabled ☐
 Proxy Disabled ☒

Save

The **System Logs** area provides users with the ability to view and download messages generated by the ASPECT-Enterprise and the Aspect control engine. The **System Logs** area provides three logs:

- ## DIAGNOSTIC BUFFER

Aspect Control Panel

- Instance 1
- Instance 2
- Database Management
- Licensing
- Communication Setup
- Simple Mobile Web Configuration
- System Administration
- System Logs
  - Diagnostic Buffer**
  - Remote Logging
  - System Log
  - Update Log

### Diagnostic Buffer

**View the output of kernel's diagnostic buffer**

[Download the output of the buffer](#)

```
Linux version 2.6.18-274.7.1.el5 (mockbuild@builder10.centos.org) (gcc version 4.1.2 20080704 (Red Hat 4.1.2-51)) #1 SMP
Thu Oct 20 16:20:37 EDT 2011
BIOS-provided physical RAM map:
BIOS-e820: 0000000000010000 - 0000000000009f800 (usable)
BIOS-e820: 0000000000009f800 - 000000000000a0000 (reserved)
BIOS-e820: 000000000000ca000 - 000000000000cc000 (reserved)
BIOS-e820: 000000000000dc000 - 000000000000e4000 (reserved)
BIOS-e820: 000000000000e8000 - 00000000000100000 (reserved)
BIOS-e820: 00000000000100000 - 000000000005fef0000 (usable)
BIOS-e820: 000000000005fef0000 - 000000000005fef0000 (ACPI data)
BIOS-e820: 000000000005fef0000 - 000000000005ff00000 (ACPI NVS)
BIOS-e820: 000000000005ff00000 - 0000000000060000000 (usable)
BIOS-e820: 00000000000600000 - 000000000006fec10000 (reserved)
BIOS-e820: 000000000006fec10000 - 000000000006fee01000 (reserved)
BIOS-e820: 000000000006fee01000 - 00000000000100000000 (reserved)
640MB HIGHMEM available.
896MB LOWMEM available.
found SMP MP-table at 000f69b0
Memory for crash kernel (0x0 to 0x0) notwithin permissible range
disabling kdump
Using x86 segment limits to approximate NX protection
```

The **Remote Logging** page is used to allow or disallow centralized syslog messaging. All **ASPECT** targets support the ability to send their log information to a centralized **ASPECT** target or IT-supported syslog server.

Aspect Control Panel

Instance 1

Instance 2

Database Management

Licensing

Communication Setup

Simple Mobile Web Configuration

System Administration

System Logs

Diagnostic Buffer

Remote Logging

System Log

Update Log

Remote Syslog Listener

Use the form to allow or disallow incoming remote syslog messages.

☒ Remote Syslog Messages Allowed

☐ Remote Syslog Messages Disallowed

Save

## SYSTEM LOG

The **System Log** area provides complete syslog information for the hardware. Information provided within this log includes boot up details and lower level information regarding runtime of the system.

**System Logs**

**View System Logs.**

[Download the System log](#)

- Nov 29 18:55:52 localhost kernel: usb 1-1: reset full speed USB device using uhci\_hcd and address 2
- Nov 29 18:51:37 localhost kernel: usb 1-1: reset full speed USB device using uhci\_hcd and address 2
- Nov 29 18:48:25 localhost kernel: usb 1-1: reset full speed USB device using uhci\_hcd and address 2
- Nov 29 18:47:30 localhost AspectWeb[2131]: BACnet Configuration modified: aamuser @ 10.10.2.1 (Mozilla/5.0 (Windows NT 6.1) AppleWebKit/535.2 (KHTML, like Gecko) Chrome/15.0.874.121 Safari/535.2)
- Nov 29 18:47:29 localhost kernel: ip\_conntrack version 2.4 (8192 buckets, 65536 max) - 228 bytes per conntrack
- Nov 29 18:47:29 localhost kernel: Netfilter messages via NETLINK v0.30.
- Nov 29 18:47:29 localhost kernel: ip\_tables: (C) 2000-2006 Netfilter Core Team
- Nov 29 18:47:29 localhost kernel: Removing netfilter NETLINK layer.

## UPDATE LOG

The **Update Log** shows all recent updates to the Operating System.

**Update Log**

**View Package Update Logs**

yum.log

[Download the update log](#)

- Nov 29 16:51:31 Installed: kernel.i686 2.6.18-274.12.1.el5
- Nov 28 04:15:45 Updated: mkinitrd.i386 5.1.19.6-71.el5\_7.1
- Nov 28 04:15:45 Updated: openldap.i386 2.3.43-12.el5\_7.10
- Nov 28 04:15:44 Updated: device-mapper-multipath.i386 0.4.7-46.el5\_7.2
- Nov 28 04:15:43 Updated: kpartx.i386 0.4.7-46.el5\_7.2
- Nov 28 04:15:43 Updated: glibc.i686 2.5-65.el5\_7.1
- Nov 28 04:15:41 Updated: nash.i386 5.1.19.6-71.el5\_7.1
- Nov 28 04:15:40 Updated: glibc-common.i386 2.5-65.el5\_7.1
- Nov 22 04:42:59 Updated: ntp.i386 4.2.2p1-15.el5.centos.1
- Nov 22 04:41:58 Updated: kudzu.i386 1.2.57.1.26-1.el5.centos.1



---

**ABB CYLON CONTROLS**

Clonshaugh Business & Technology  
Park  
Clonshaugh  
Dublin 17  
Ireland

Tel.: +353 1 245 0500  
Fax: +353 1 245 0501  
Email: [info@cylon.com](mailto:info@cylon.com)

---

**ABB CYLON CONTROLS**

ONE TECHNOLOGY LANE  
EXPORT,  
PA 15632

Tel.: +1 724 733-2000  
Fax: +1 724 327-6124