

ZDT
Oxygen Analyzer System

Installation and Operating Guide

Low Temperature Version,
for use with ZFG2 Probes

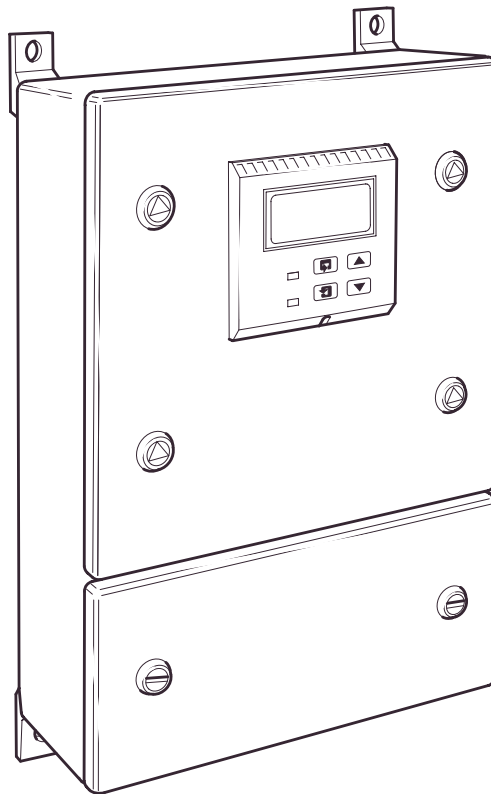


ABB PROCESS ANALYTICS

The Company

ABB Process Analytics specializes in the engineering, manufacture, sale and support of high quality, highly functional, analytical instrumentation for on-line analysis of process streams.

ABB Process Analytics is committed to quality leadership in the on-line analyser industry. The Company-wide, world-wide commitment is well expressed in the **quality statement** for ABB Process Analytics:

'We will conform to requirements and deliver defect-free products on time, to satisfy the needs of our internal and external customers.'

Use of Instructions



Warning.

An instruction that draws attention to the risk of injury or death.



Note.

Clarification of an instruction or additional information.



Caution.

An instruction that draws attention to the risk of damage to the product, process or surroundings.



Information.

Further reference for more detailed information or technical details.

Although **Warning** hazards are related to personal injury, and **Caution** hazards are associated with equipment or property damage, it must be understood that operation of damaged equipment could, under certain operational conditions, result in degraded process system performance leading to personal injury or death. Therefore, comply fully with all **Warning** and **Caution** notices.

Information in this manual is intended only to assist our customers in the efficient operation of our equipment. Use of this manual for any other purpose is specifically prohibited and its contents are not to be reproduced in full or part without prior approval of Technical Communications Department, ABB Process Analytics.

Health and Safety

To ensure that our products are safe and without risk to health, the following points must be noted:

1. The relevant sections of these instructions must be read carefully before proceeding.
2. Warning labels on containers and packages must be observed.
3. Installation, operation, maintenance and servicing must only be carried out by suitably trained personnel and in accordance with the information given.
4. Normal safety precautions must be taken to avoid the possibility of an accident occurring when operating in conditions of high pressure and/or temperature.
5. Chemicals must be stored away from heat, protected from temperature extremes and powders kept dry. Normal safe handling procedures must be used.
6. When disposing of chemicals ensure that no two chemicals are mixed.

Safety advice concerning the use of the equipment described in this manual or any relevant hazard data sheets (where applicable) may be obtained from the Company address on the back cover, together with servicing and spares information.

CONTENTS

Section	Page	Section	Page
1 INTRODUCTION	2	6 OPERATION	12
2 PREPARATION	3	6.1 Instrument Start-up	12
2.1 Checking the Instrument Type	3	6.2 Operating Page	12
3 MECHANICAL INSTALLATION	4	6.3 Operating Page Error Messages	13
3.1 Siting Requirements	4	7 PROGRAMMING	14
3.2 Overall Dimensions	5	7.1 Single-point Calibration	15
3.3 Mounting	5	7.2 Two-point Calibration	16
4 CONNECTIONS	6	7.3 Preset Calibration	18
4.1 Cable, Tubing and Gland Specifications	6	7.4 Access to Secure Parameters	19
4.2 Electrical Connections	6	7.5 Language Selection Page	19
4.2.1 General	6	7.6 Set Up Outputs Page	20
4.2.2 Access to Terminals	7	8 CALIBRATION	22
4.2.3 Connections	7	8.1 Equipment Required	22
4.2.4 Relay Contact Protection and Interference Suppression	8	8.2 Preparation	22
4.3 Selecting the Mains Input Voltage	8	8.3 Electrical Calibration Page	23
4.4 Replacing the Fuses	9	INDEX	24
4.5 Reference Air Supply	10		
5 CONTROLS AND DISPLAYS	11		
5.1 Displays	11		
5.2 Switch Functions	11		

1 INTRODUCTION

The ZDT Oxygen Analyzer is designed for continuous monitoring of oxygen content in applications using 'in situ' ZFG2 probes.

Operation and programming of the ZDT Analyzer is via four tactile membrane switches and a digital display located on the front of the instrument. Two l.e.d.'s on the front panel provide local alarm indication.

In operation, the instrument can display measured % oxygen, cell mV, cell temperature or probe heater output. Set up of alarm, retransmission and calibration parameters is achieved in programming mode, where key parameters are protected by a five-digit security code.

Measured %O₂ values can be retransmitted to remote equipment using the retransmission output facility. The range of values retransmitted can be set anywhere within the instrument's display range of 0 to 25% O₂, subject to the limits in Section 7.6.

Remote alarm indication is provided by two relay outputs. Relays are programmed to activate when the oxygen level moves either above or below a pre-defined set point. The second alarm relay can also be used as a 'general alarm' which activates in the event of an instrument or system fault.

An optional internal reference air unit is used to provide reference air supply for the ZFG2 probe. If this unit is not specified, reference air must be supplied to the probe from an alternative source.

For full installation and operation details of the ZFG2 probe refer to the probe operating instructions, *IM/ZFG2*.


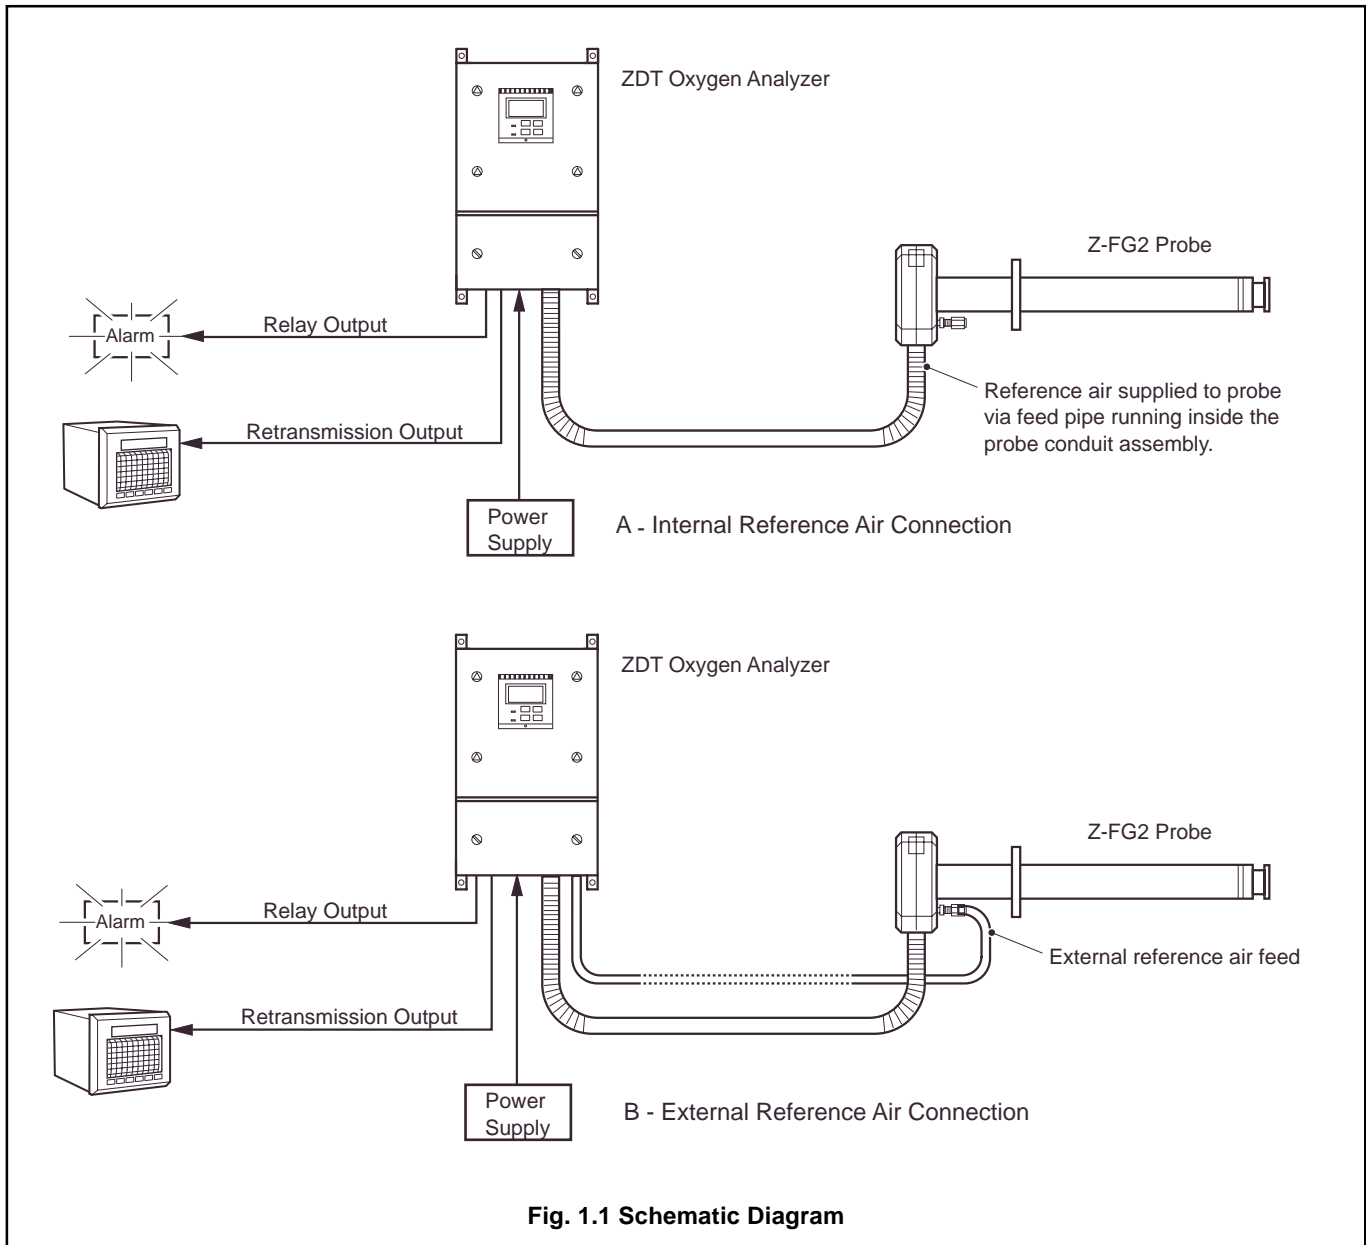


Fig. 1.1 Schematic Diagram

2 PREPARATION

2.1 Checking the Instrument Type – Fig. 2.1

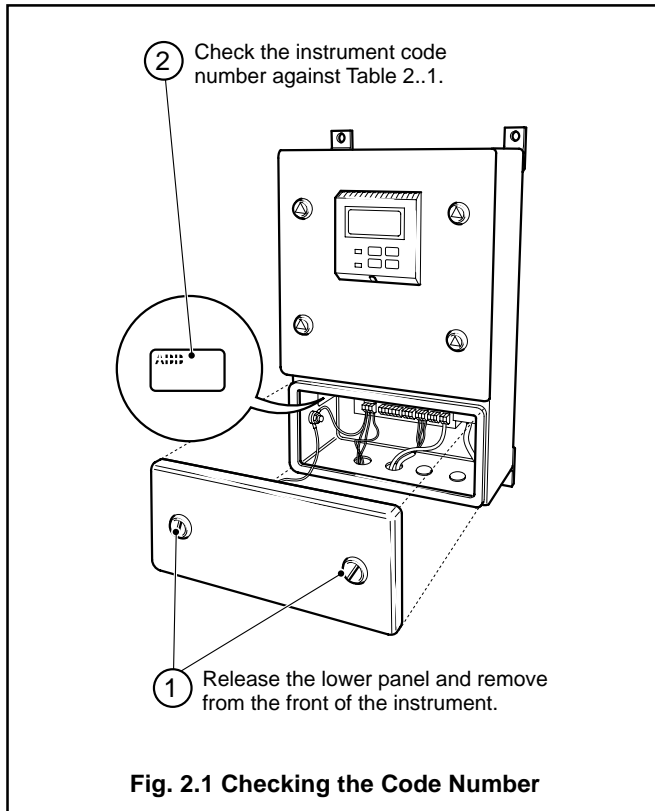

ZDT Oxygen Analyzer	ZDT/	0	1	X	X
Probe Type	ZFG2	0			
Thermocouple Type	Type K		1		
Reference Air Supply	None			0	
	External Output			1	
	Internal Output			2	
Mains Voltage	230V 50/60Hz				0
	110V 50/60Hz				1


Table 2.1 Instrument Identification

3 MECHANICAL INSTALLATION


3.1 Siting Requirements – Fig. 3.1

The instrument is designed for wall mounting and weighs approximately 9kg (20lb).


***** **Note.** If the flexible conduit supplied with Z-FG2 probes is of insufficient length [6m (20ft.) standard, 10m (33ft.) optional], it can be extended using a suitable junction box (part no. 003000060) and cables selected from Table 4.1. Alternatively, cables EXFG/0194 and EXFG/0195 can be used, up to a maximum of 100m (328ft.).

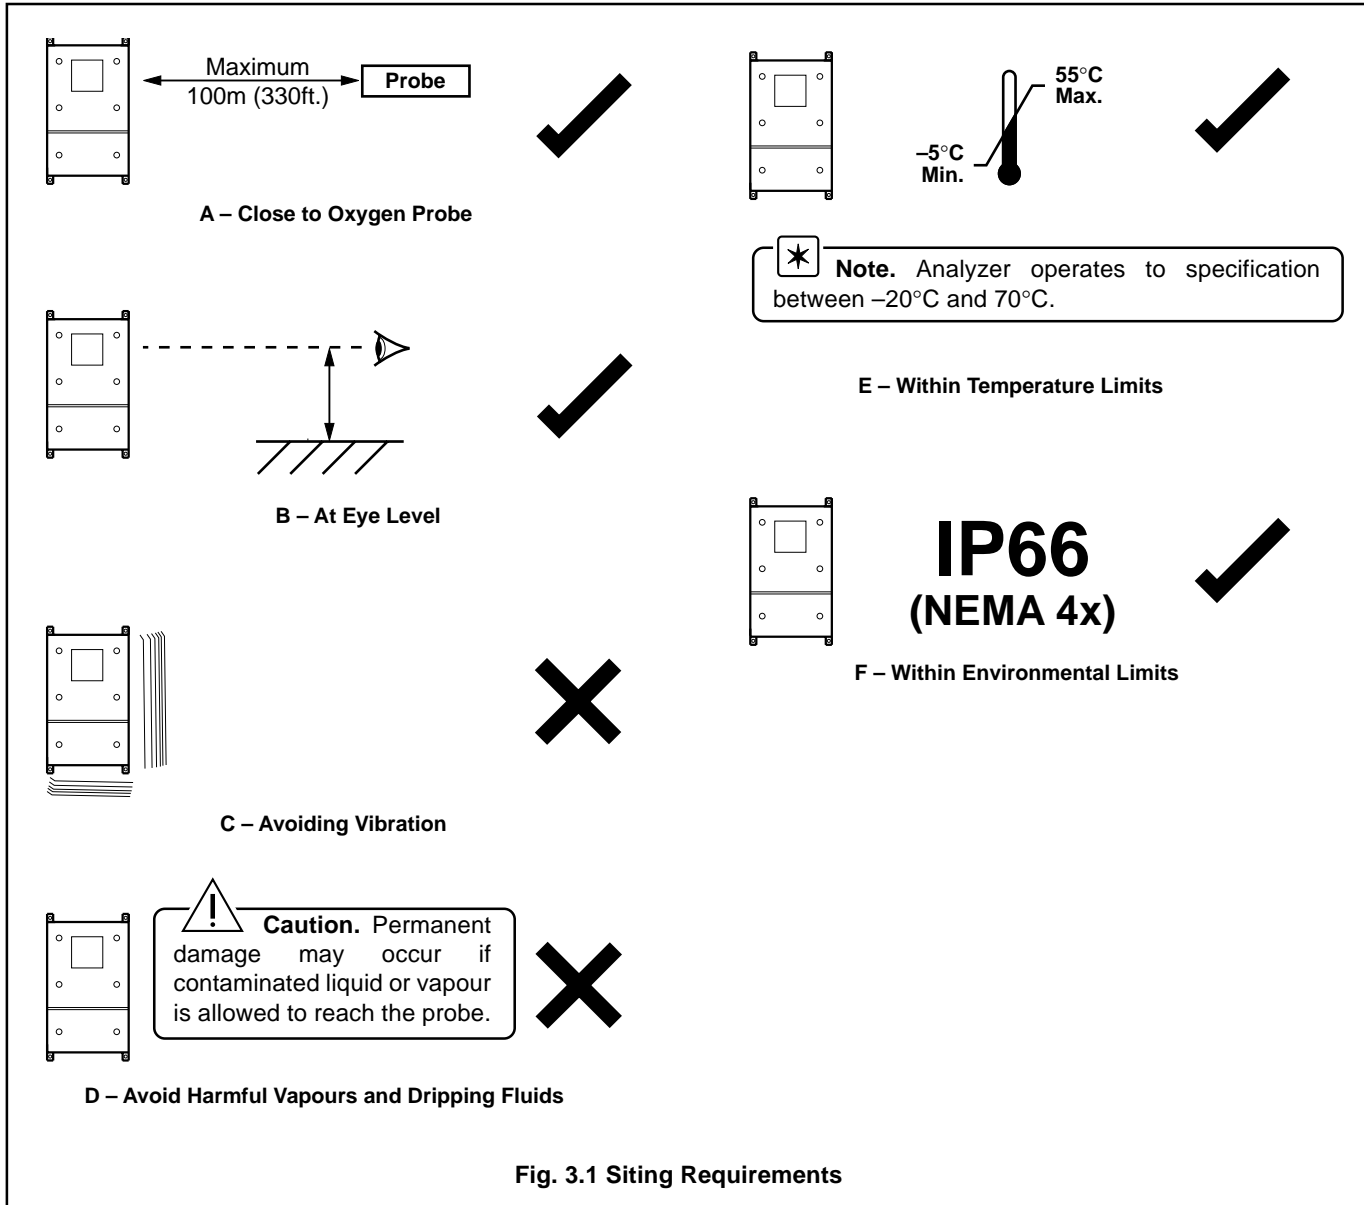

3.2 Overall Dimensions – Fig 3.2

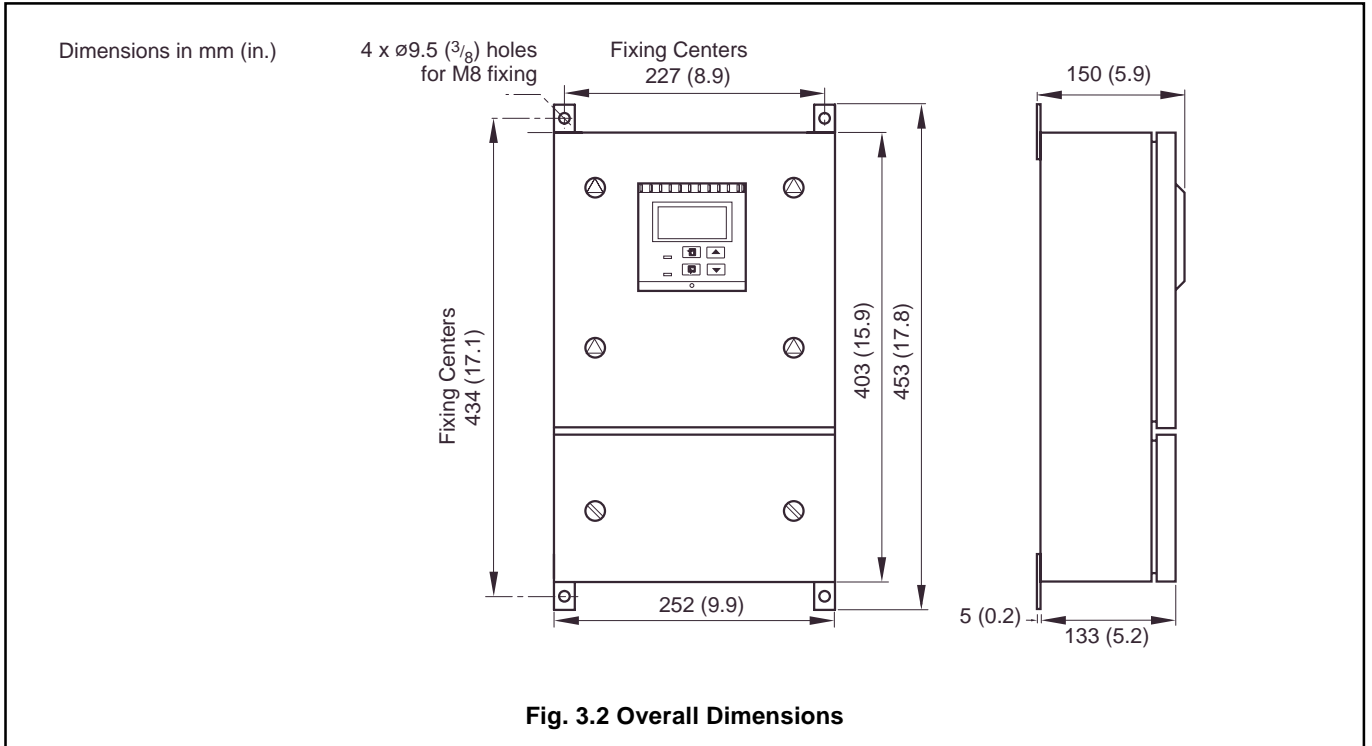

3.3 Mounting – Fig. 3.3

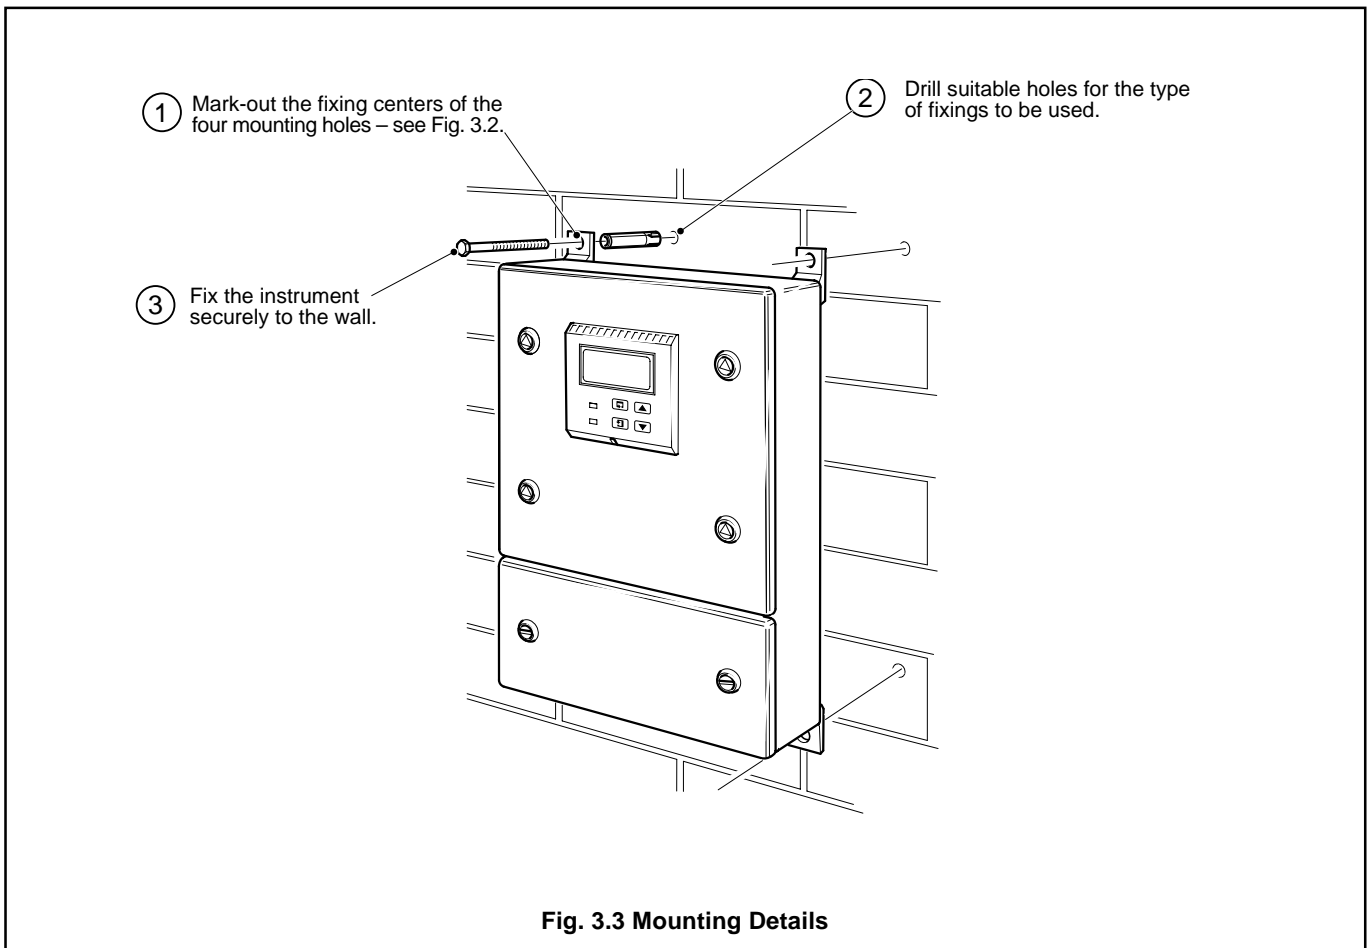

4 CONNECTIONS



Warning.

- Mains power – before making any connections, ensure that the power supply, any powered control circuits and high common-mode voltages are switched off.

4.1 Cable, Tubing and Gland Specifications



Information.

- Five 22mm (0.87 in.) diameter cable entries are provided in the base of the terminal chamber. The cable entries accept M20 glands (not supplied).
- External reference air connections are made via 1/4 in. compression fittings.

Cable/Tubing Reference	Description
Cell output cable	16/0.2mm laid up red and blue twin copper braid with overall p.v.c. sheath
Thermocouple cable	See Table 4.2
Heater cable	3-core 1mm ² copper (20m or 66ft. max.)* 3-core 1.5mm ² copper (32m or 105ft. max.)* 3-core 2mm ² copper (69m or 226 ft. max.)*
Air Tubing (Reference Air)	1/4 in. o.d. x 1/8 in. i.d. stainless steel, nylon or p.v.c. tube

Caution. The total loop resistance must be less than 2Ω.

* Total run length, including flexible conduit

Table 4.1 Cable References and Air Tubing Specification

Type of Thermocouple	Compensating Cable								
	British BS1843; 1952			German DIN 43714			American ANSI IMC96.1		
	+	-	Case	+	-	Case	+	-	Case
Ni-Cr/Ni-Al (Type K)	Brown	Blue	Red	Red	Green	Green	Yellow	Red	Yellow

Table 4.2 Thermocouple Wiring

4.2 Electrical Connections

4.2.1 General



Information.

- **Earthing (grounding)** – a stud terminal is fitted to the case bus-bar earth (ground) connection – see Fig. 4.2
- **Cable routing** – always route signal output cables and mains-carrying/relay cables separately, ideally in earthed metal conduit. Twist the signal output leads together or use screened cable with the screen connected to the case earth stud.

Use only the cables and air tubing specified in Table 4.1.

Fit suitable cable glands into the entries to be used and blank-off any unused entries using the bungs supplied.

Ensure that the cables enter the instrument through the glands nearest the appropriate screw terminals and are short and direct. Do not tuck excess cable into the terminal compartment.


- **Relays** – the relay contacts are voltage-free and must be connected in series with a power supply and the alarm/control device which they are to actuate. Ensure that the contact rating is not exceeded.

Refer also to Section 4.2.4 for relay contact protection details when the relays are to be used for switching loads.

- **Retransmission output** – Do not exceed the maximum load specification for the selected current retransmission range (see the associated specification sheet, *SS/ZDT/FG*).


The retransmission output is isolated. Therefore the –ve terminal must be connected to earth (ground) if connecting to the isolated input of another device.

4.2.2 Access to Terminals – Fig. 4.1

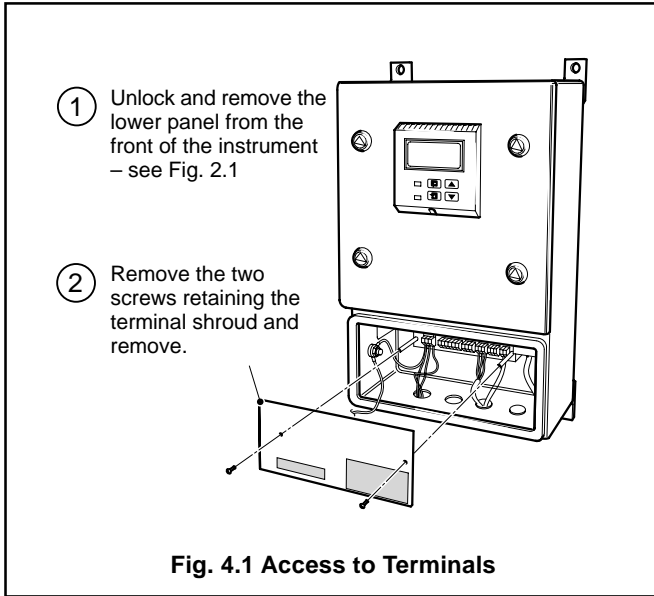

4.2.3 Connections – Fig. 4.2

- ① Mains:
Live to 'L'
Neutral to 'N'
Earth to 'E'
- ② Retransmission Output (4 to 20mA):
Positive to 'RTX +'
Negative to 'RTX -'
- ③ Relay outputs 1 and 2
'N/C' – normally closed
'C' – common
'N/O' – normally open
- ④ Secure the probe conduit fitting in the appropriate gland and make the following connections:
Cell output – red to 'CELL +', blue to 'CELL -', screen to 'CELL SCR'
Thermocouple – white to 'T/C +', blue to 'T/C -'
Probe heater – Live to 1st 'H' terminal, Neutral to 2nd 'H' terminal (Polarity unimportant). Earth to 'E'

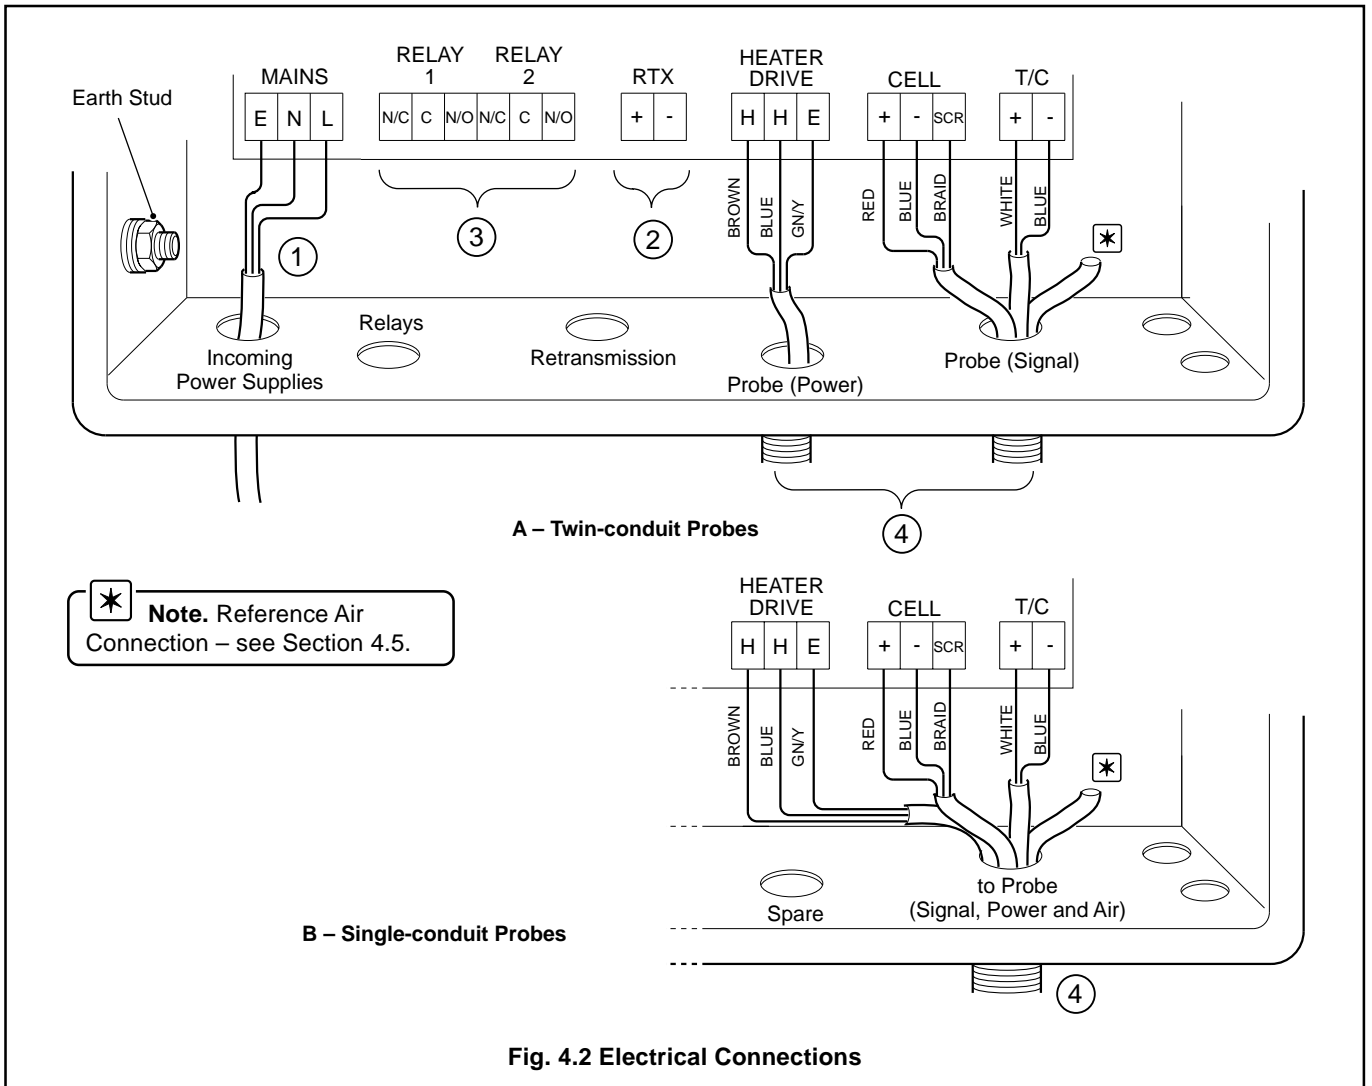

...4 CONNECTIONS


4.2.4 Relay Contact Protection and Interference Suppression – Fig. 4.3

To reduce the risk of instrument malfunction or incorrect readings when switching inductive loads, suppression components must be fitted across the relay contacts.

For a.c. applications, fit a 100R/0.022 μ F RC suppressor unit (part no. B9303) as shown in Fig. 4.3A. If the instrument malfunctions (incorrect readings) or resets (display shows '88888') when the relays operate, a larger RC network is required. Contact the manufacturer of the switched device for details of the RC unit required.


For d.c. applications fit a diode – see Fig. 4.3B. For general applications use a 1N5406 type (600V peak inverse voltage at 3A – part no. B7363).

*** Note.** For reliable switching the minimum voltage must be greater than 12V and the minimum current greater than 100mA.

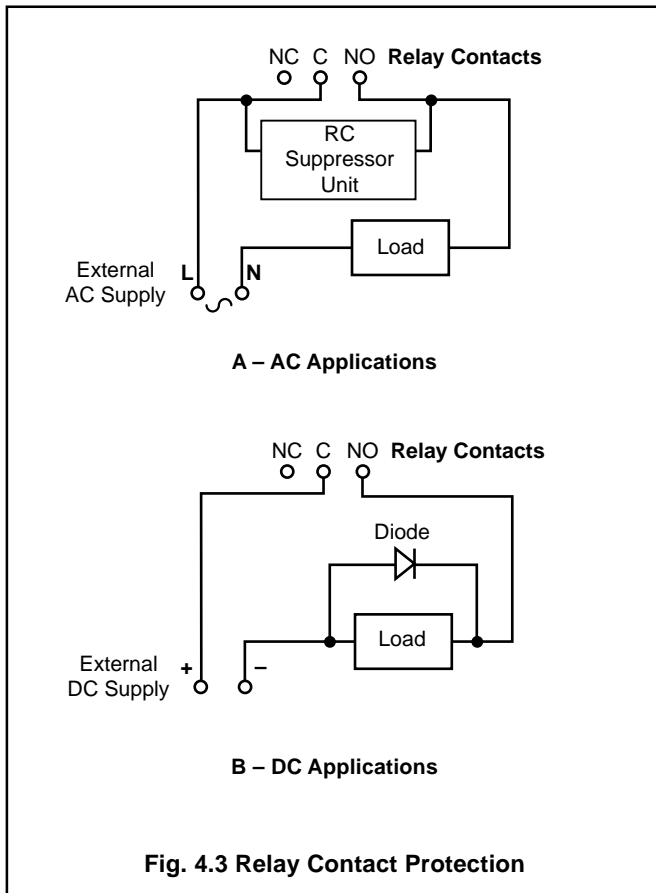

4.3 Selecting the Mains Input Voltage – Fig. 4.4

Input voltages (230V or 110V) for the main analyzer p.c.b. and the probe heater supply p.c.b. are selected by two switches located on their respective p.c.b.'s.

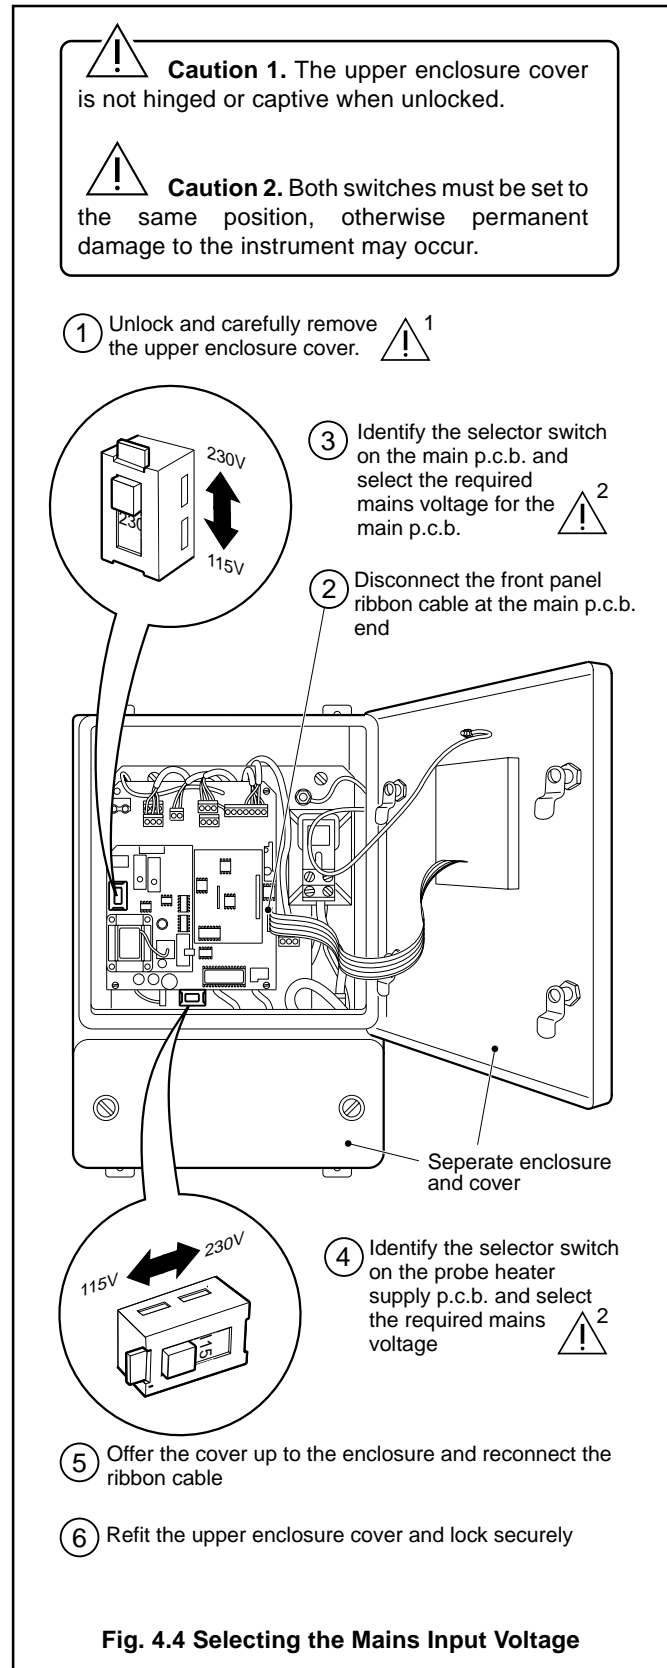

4.4 Replacing the Fuses – Fig. 4.5

The instrument is protected by two fuses located on the probe heater supply p.c.b. In order to replace the fuses, the main analyzer p.c.b. must be removed for access as shown.

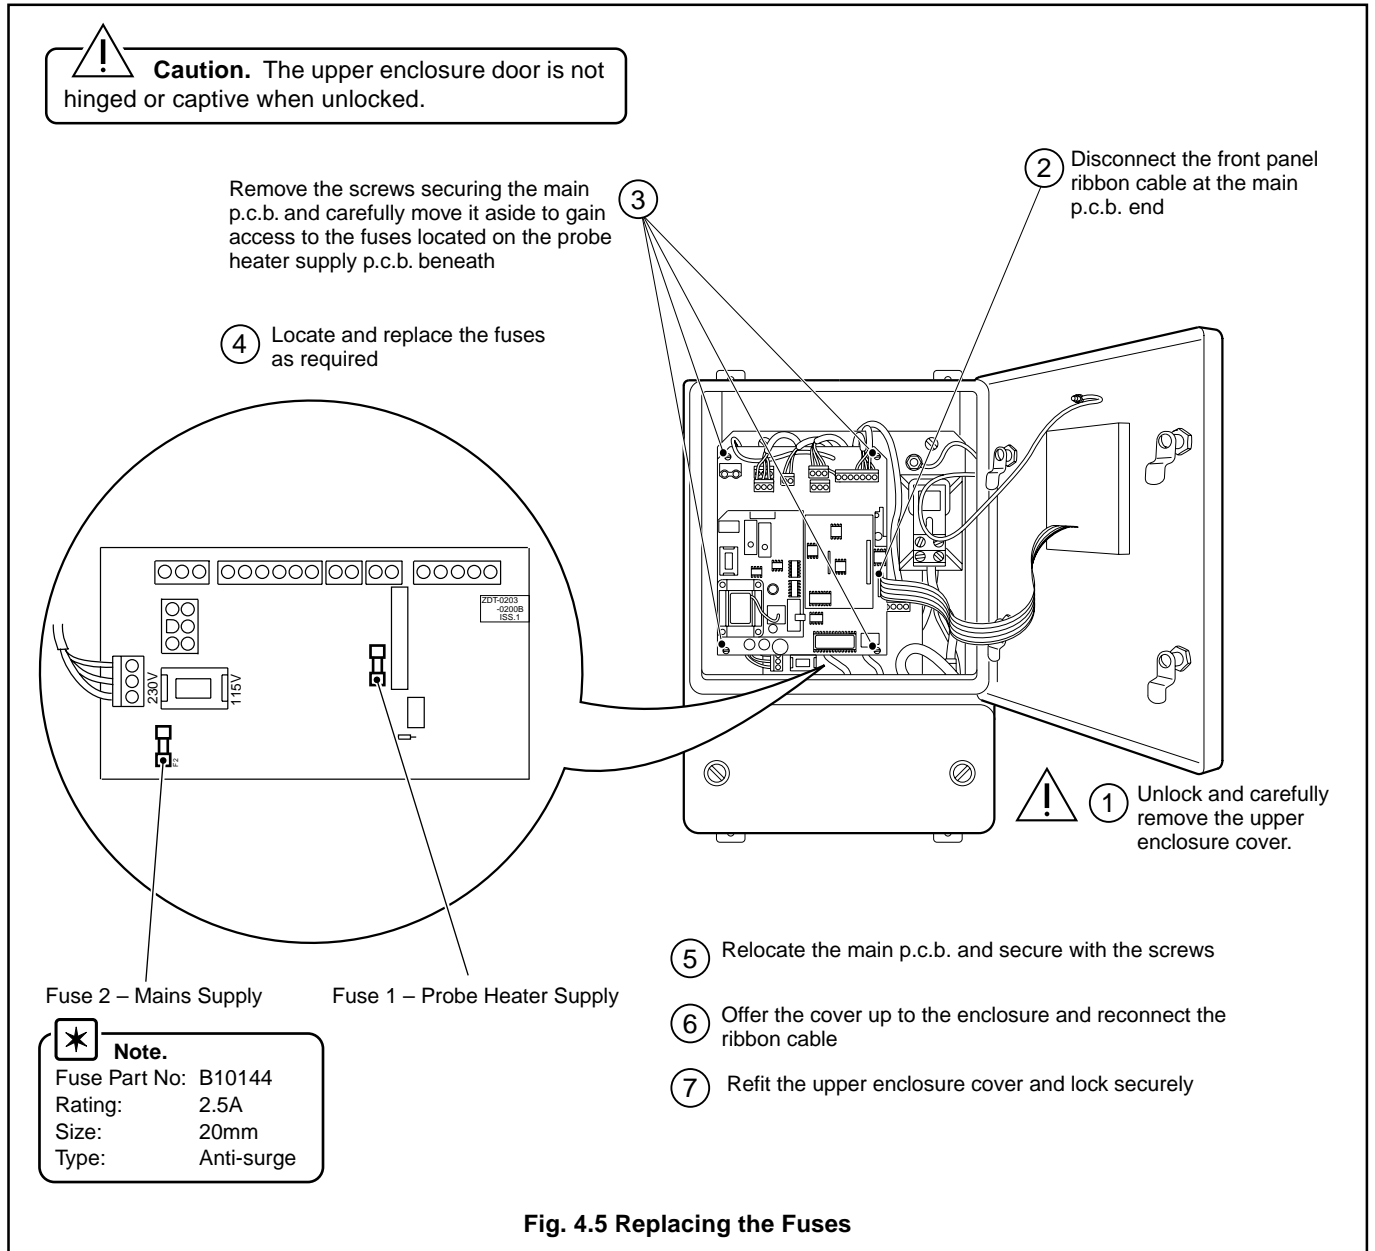


Fig. 4.5 Replacing the Fuses

...CONNECTIONS

4.5 Reference Air Supply – Fig. 4.6

ZDT Analyzer Code Number	Reference Air Supply	Compatible Oxygen Probes
ZDT/010X No reference air supply.	Reference air to the probe must be provided from a separate source – Refer to the installation and operating instructions supplied with the probe.	Either code listed below, providing the reference air to the probe is supplied from an external source.
ZDT/011X Reference air supply with external connection.	For use with probes fitted with an external reference air input – see Fig 4.6B	ZFG2/XXXXXXXX2X
ZDT/012X Reference air supply with internal connection.	For use with probes fitted with an internal reference input – see Fig 4.6A	ZFG2/XXXXXXXX1X

Table 4.3 Analyzer and Probe Compatibility

i Information. The location of the Analyzer code number is shown in Fig. 2.1. Refer to the probe's operating instructions, *IM/ZFG2* for information on locating the code number of the probe.


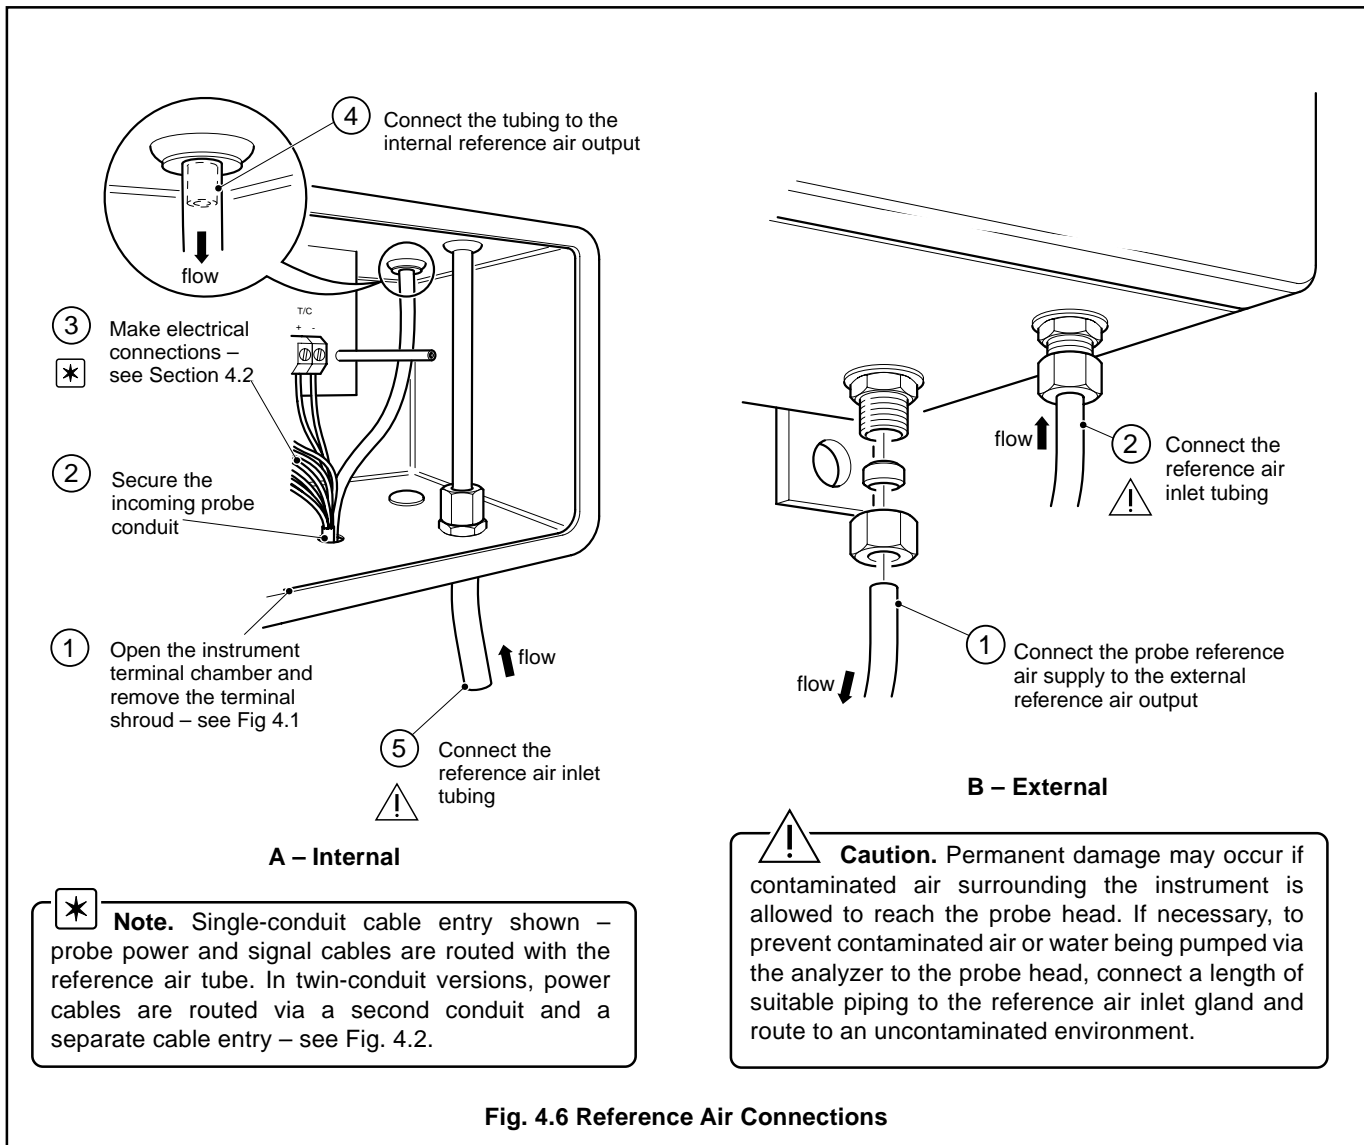


Fig. 4.6 Reference Air Connections


5 CONTROLS AND DISPLAYS

5.1 Displays – Fig. 5.1


The display comprises a 5-digit, 7-segment digital upper display line and a 16-character dot-matrix lower display line. In operation, the upper display line shows actual values of % oxygen, temperature, cell millivolts or alarm set points. In programming mode it is used to display programmable parameters. The lower display line shows the associated units and/or other programming information.

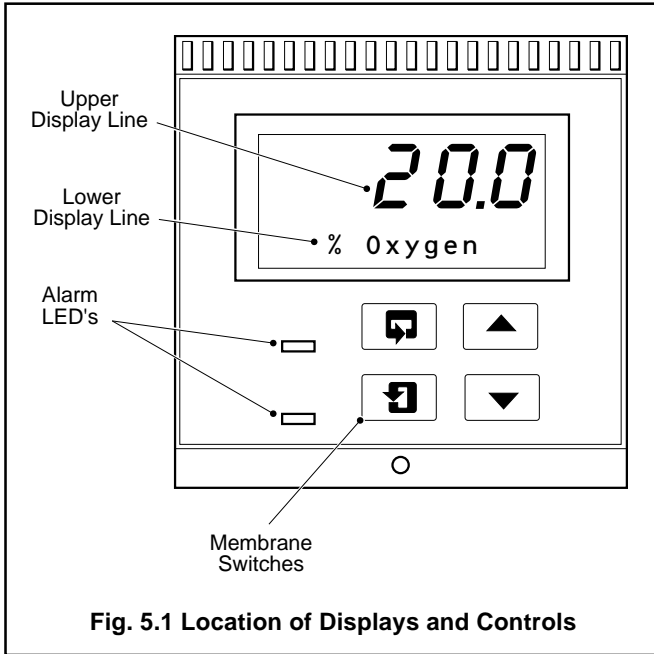


5.2 Switch Functions – Fig. 5.2

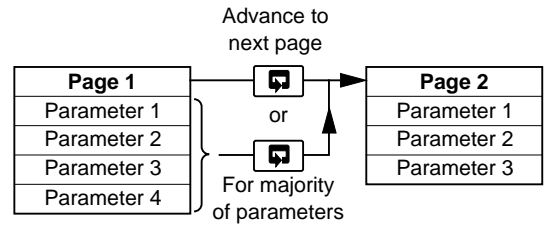

A – Advancing to Next Page

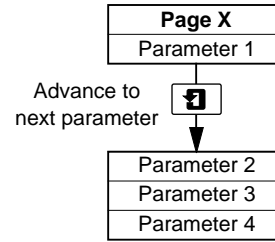

B – Moving Between Parameters

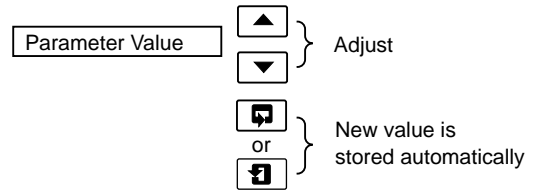

C – Adjusting and Storing a Parameter Value



D – Selecting and Storing a Parameter Choice

Fig. 5.2 Membrane Switches


6 OPERATION

6.1 Instrument Start-up

Ensure all electrical connections have been made correctly and apply power to the instrument.

6.2 Operating Page

The operating page is a general use page in which continuously updated measured values and preset parameters can be viewed but not altered. To adjust or set a parameter refer to the programming pages in Section 7.

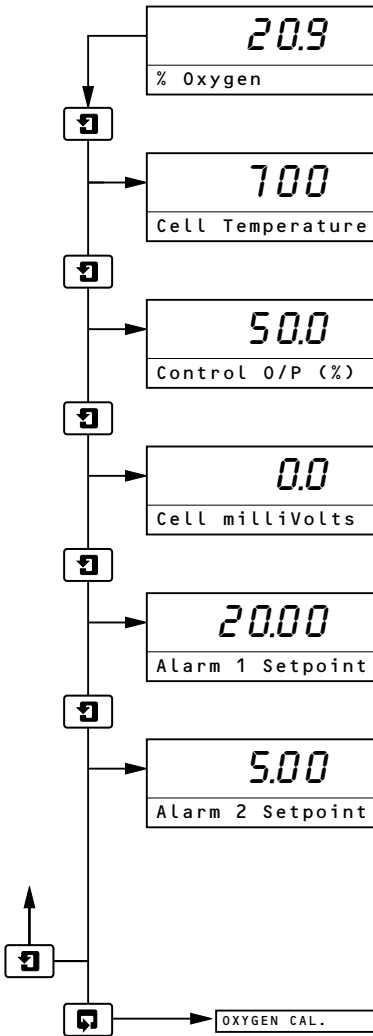

% Oxygen

The upper display indicates the measured oxygen value. If over or under temperature is monitored, the upper display shows '-----' and an error message is displayed on the lower dot matrix display – see Section 6.3.

Cell Temperature (°C)

The upper display indicates the measured cell temperature in °C.

Control Output (%)

The upper display indicates the heater control mark/space ratio.

Cell Millivolts

The upper display indicates the measured cell millivolts.

Alarm 1 Set Point

The upper display indicates the alarm 1 set point, displayed as % oxygen. The set point value and the relay/l.e.d. action is programmed in the **Set Up Outputs Page** – see Section 7.6.

Alarm 2 Set Point

***** **Note.** This frame is not displayed if the 'Alarm 2 Action' parameter has been set to 'General Alarm' – see Section 7.6.

The upper display indicates the Alarm 2 set point, displayed as % oxygen.

Press to return to the top of the **Operating Page**.

Press to advance to **Oxygen Calibration Page**.

***** **Note.** If Alarm 2 has been programmed as a general system/instrument alarm, the associated front panel l.e.d. is illuminated when the alarm is active and Relay 2 has de-energized.

6.3 Operating Page Error Messages

When an error has been detected, the following error messages appear in the **Operating Page**, in place of the % oxygen display.

Error Message	Possible Cause
NV MEMORY ERROR	The contents of the non-volatile memory have not been read correctly during power up. To rectify the fault, switch off, wait 10 seconds and switch on again. If the fault persists contact the Company.
CELL WARMING UP	The temperature in the probe oven has not reached a sufficient temperature to obtain suitable readings (<690°C).
CELL STABILIZING	After the cell temperature reaches 690°C, a delay of five minutes is allowed for the cell output to stabilize.
CALIBRATION FAIL	The last single- or two-point calibration failed.
T / C OPEN CIRCUIT	The thermocouple connections are open circuit or the thermocouple temperature is > 1000°C.


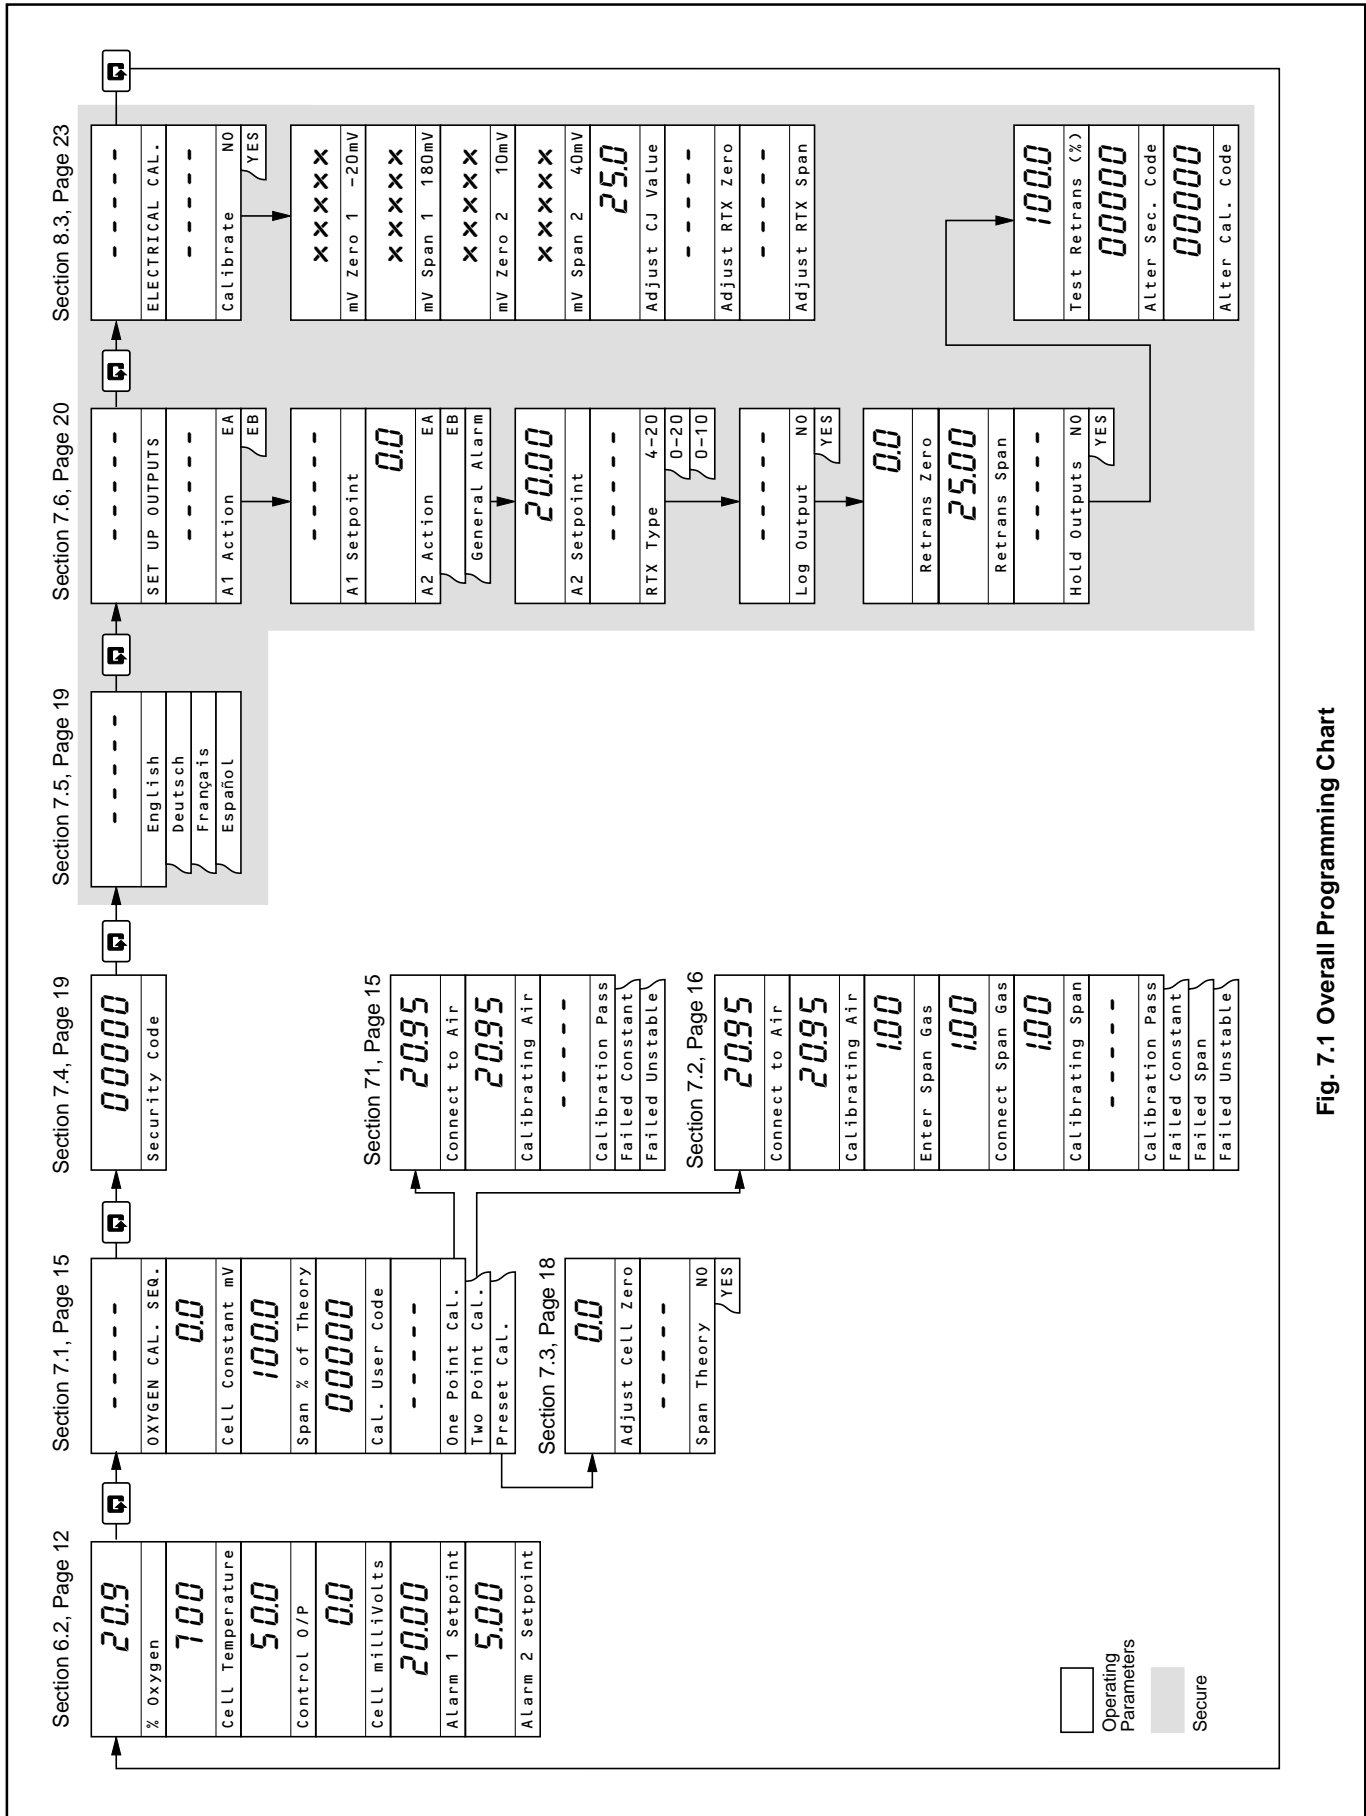


Fig. 7.1 Overall Programming Chart

*** Note.** Before commencing a gas calibration procedure the analyzer and probe must be switched on and allowed to operate for at least one hour to allow the system to stabilize thermally.

7.1 Single-point Calibration

The calibration sequence involves standardizing the analyzer and the oxygen probe, using air as the test gas. Until a calibration sequence has been completed successfully, the existing slope remains unaffected.

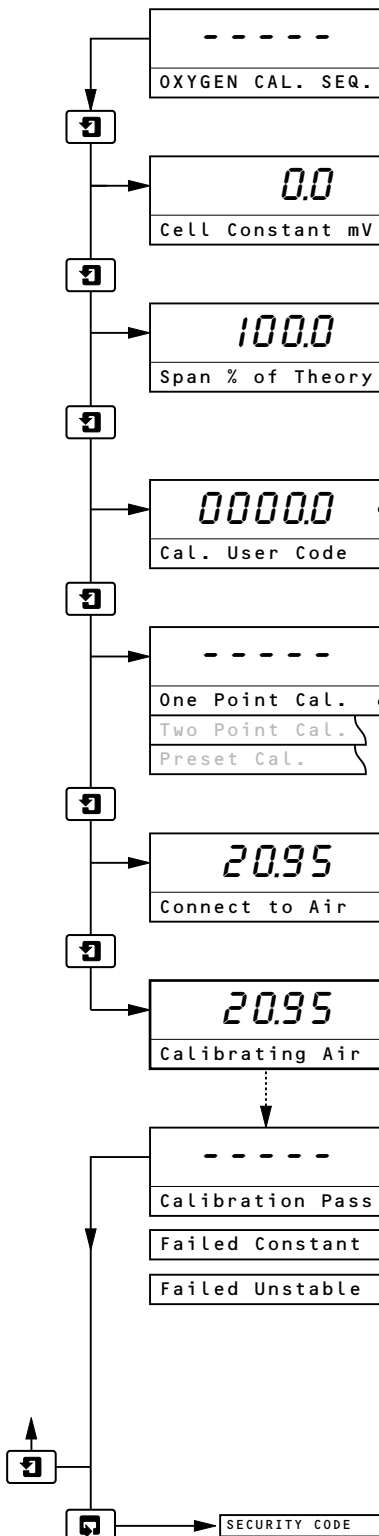

Oxygen Calibration Sequence

Cell Constant mV

The upper display shows the millivolt offset of the oxygen probe from the last successful calibration.

Span % of Theory

A value between 90 and 110% should be displayed. The display indicates the oxygen probe output slope using parameters derived at the last successful two-point calibration or using the preset values.

Calibration User Code

[00000 to 19999]

If an incorrect value is entered, access to the calibration page is inhibited and the display returns to the top of the oxygen calibration page.

One Point Calibration

Select the one-point calibration sequence.

Connect to Air

Connect the air supply to the probe (refer to the probe operating instructions, *IM/ZFG2*). The upper display indicates the measured % oxygen.

Calibrating Air

The upper display indicates the measured % oxygen. When a stable reading is detected the display advances automatically to the next frame. To abort calibration, press either the or switch.

Calibration Pass/Fail

On completion a calibration status message is displayed:


- Calibration Pass: Calibration sequence successful
- Failed Constant: Cell offset >±10mV
(upper display shows cell mV output)
- Failed Unstable: Cell output unstable (drifting).

*** Note.** If the sensor calibration is unsuccessful then the 'Cell Constant mV' and 'Span % of Theory' parameters are unaffected. The instrument continues to operate using parameters stored during the last successful calibration.

Press to return to the top of the **Oxygen Calibration Page**.

Press to advance to the **Secure Parameters Page**.

7.2 Two-point Calibration

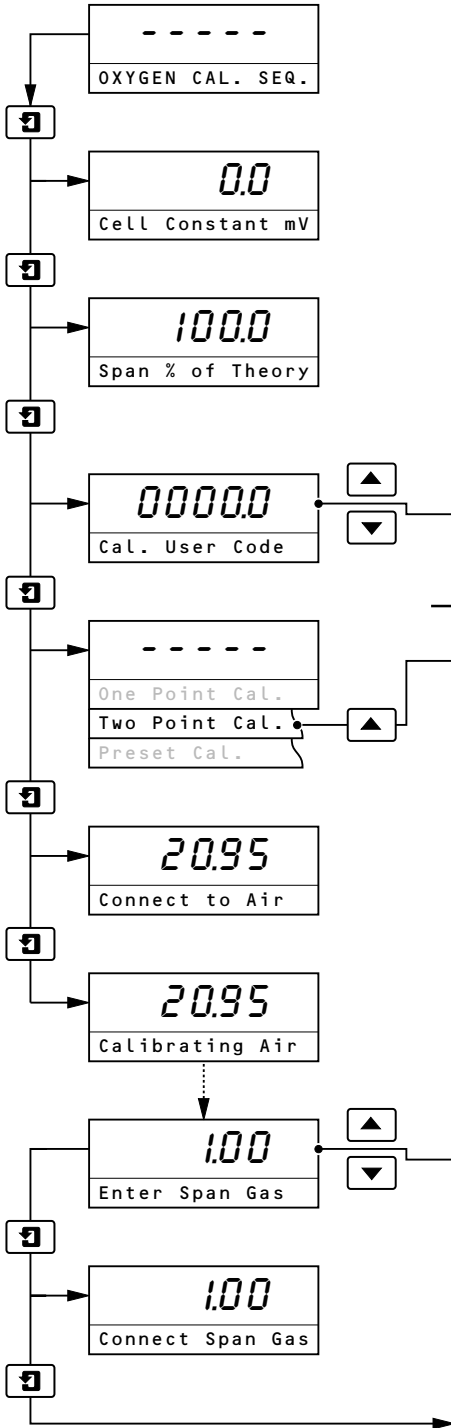

Oxygen Calibration Sequence

Cell Constant mV

The upper display shows the millivolt offset of the oxygen probe from the last successful calibration.

Span % of Theory

A value between 90 and 110% should be displayed. The display indicates the oxygen probe output slope using parameters derived at the last successful two-point calibration or using the preset values.

Calibration User Code

[00000 to 19999]

If an incorrect value is entered, access to the calibration page is inhibited and the display returns to the top of the oxygen calibration page.

Two Point Calibration

Select the two-point calibration sequence.

Connect to Air

Connect the air supply to the probe (refer to the probe operating instructions, IM/ZFG2).

The upper display indicates the test gas value in % oxygen.

Calibrating Air

The upper display indicates measured % oxygen. The display advances automatically to the next frame when a stable reading is detected. To abort calibration, press either the or switch to advance to the next frame.

Enter Span Gas

[between 0.10 and 10.00% Oxygen]

Set the oxygen content of the gas used to calibrate the span.


Connect Span Gas

Connect the span gas to the probe (refer to installation and operating instructions supplied with the probe). The upper display indicates the test gas value in % oxygen.

Continued on next page

...7.2 Two-point Calibration

Continued from previous page

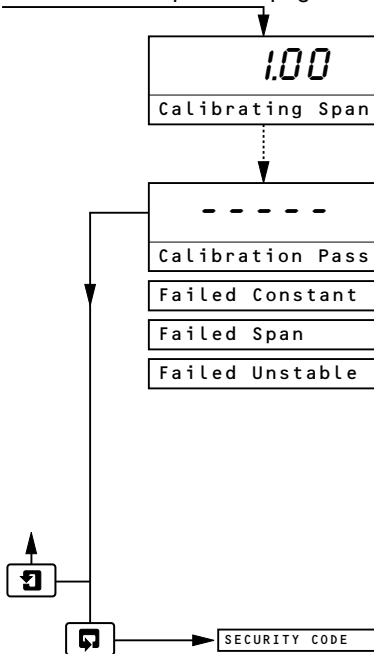**Calibrating Span**

The upper display indicates measured % oxygen. The display advances automatically to the next frame when a stable reading is detected. To abort calibration, press either the or switch to advance to the next frame.

Calibration Pass/Fail

On completion a calibration status message is displayed.


Calibration Pass:	Calibration sequence successful
Failed Constant:	Cell offset >±10mV (upper display shows cell constant)
Failed Span %:	Cell output <90% or >110% of slope (upper display shows measured slope)
Failed Unstable:	Cell output unstable (drifting).

Note. If sensor calibration is unsuccessful then the 'Cell Zero mV' and 'Span % of Theory' parameters are unaffected. The instrument continues to operate using parameters stored during the last successful calibration.

Press to return to the top of the **Oxygen Calibration Page**.

Press to advance to the **Secure Parameters Page**.

7.3 Preset Calibration

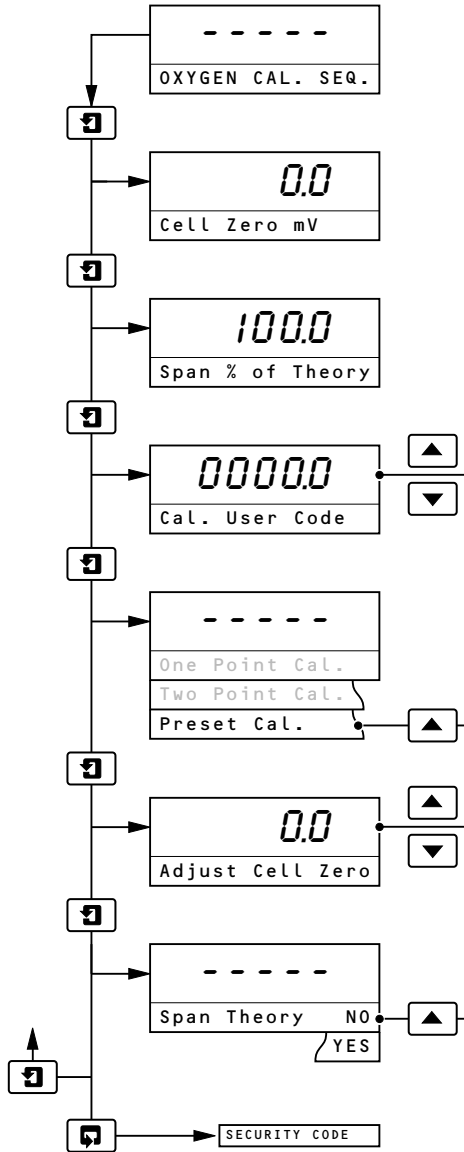

Oxygen Calibration Sequence

Cell Zero mV

The upper display shows the millivolt offset of the oxygen probe from the last successful calibration.

Span % of Theory

A value between 90 and 110% should be displayed. If the value is outside these limits then the oxygen probe must be checked.

Calibration User Code

Enter the required code number between 00000 and 19999, to gain access to the calibration page. If an incorrect value is entered, access to the calibration page is inhibited.

Preset Calibration

Select the preset calibration sequence.

Adjust Cell Zero

[0 to ±10mV]

The upper display shows the cell output (in mV) corresponding to a reading of 20.95 %O₂. Adjust the reading to correspond with the probe.

Span Theory


Select 'YES' if the 'Span % of Theory' parameter is to be reset to 100%. Select 'NO' to retain the existing value.

Press to return to the top of the Oxygen Calibration Page.


Press to advance to the Secure Parameters Page.

7.4 Access to Secure Parameters


A 5-digit security code is used to prevent tampering with the secure parameters.

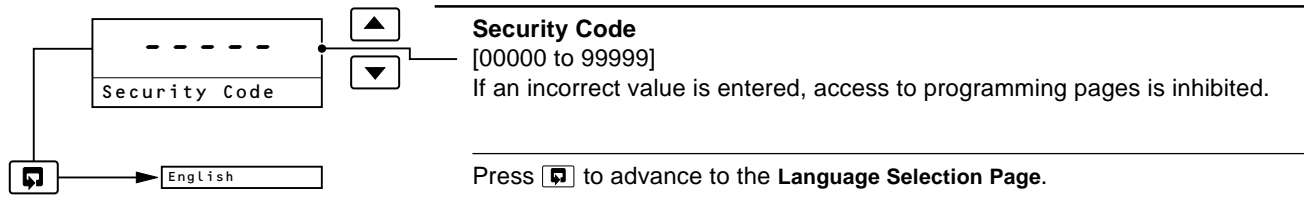

7.5 Language Selection Page

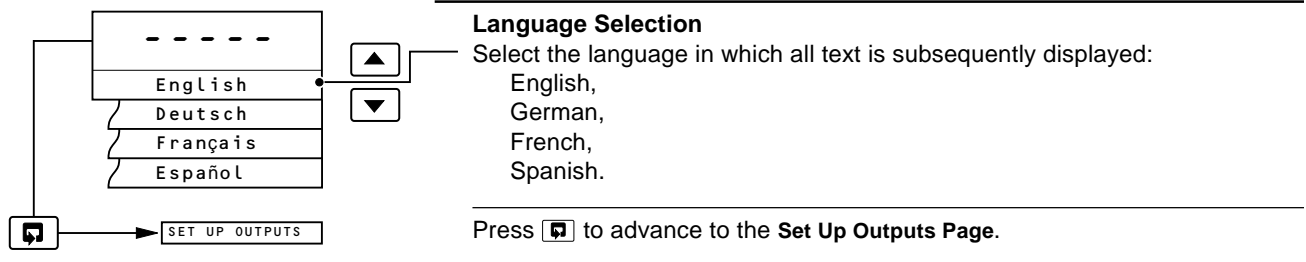

7.6 Set Up Outputs Page

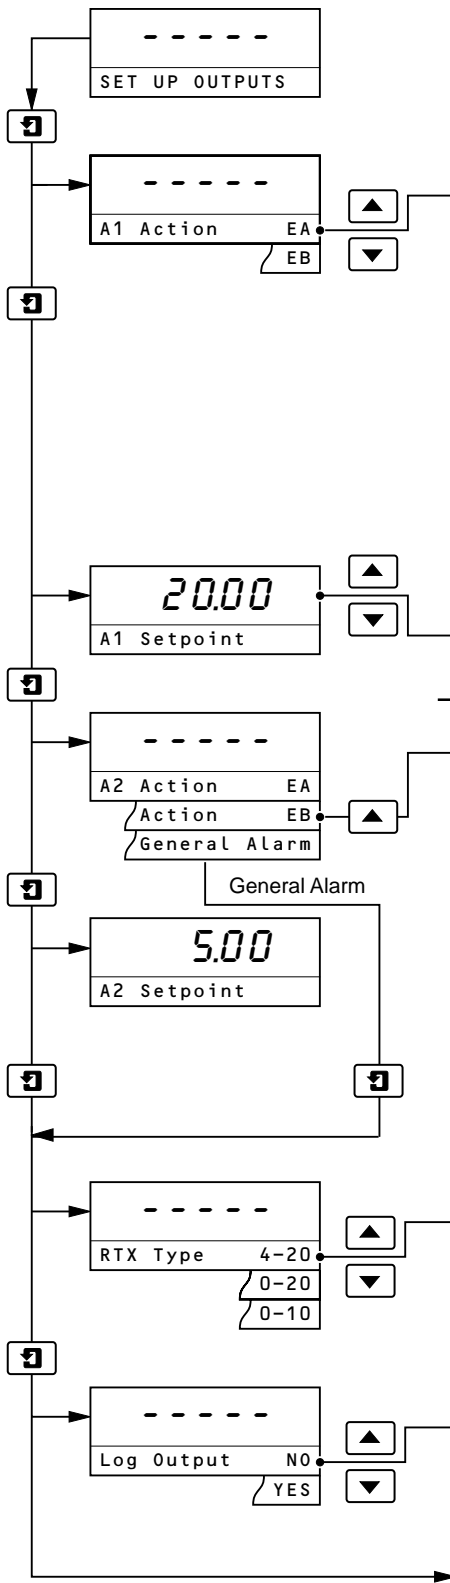

Set Up Outputs

Alarm A1 Action

Select the required alarm action from the following table:

Alarm Action	LED Action		Relay Action	
	Input Above Set Point	Input Below Set Point	Input Above Set Point	Input Below Set Point
EB	ON	OFF	DE-ENERGIZED	ENERGIZED
EA	OFF	ON	ENERGIZED	DE-ENERGIZED

The set point band is defined as the actual value of the Set Point plus or minus the hysteresis value. The hysteresis value is fixed at 0.1% of set point. Alarm action occurs if the input value is above or below the Set Point band. If the input moves within the Set Point band the last alarm action is maintained.

Alarm 1 Set Point

The alarm set point can be set to any value within the oxygen range. [0.00% to 25.00%]

Alarm A2 Action

Set the required alarm action from the above table.

If the alarm action is set to 'General Alarm', the relay is de-energized and the associated front panel I.e.d. is illuminated when one or more of the following conditions applies: thermocouple open circuit; cell warming up; calibration fail, cell stability check, power failure.

Alarm A2 Set Point

The alarm set point can be set to any value within the oxygen range of 0.3% to 25.0%.

*** Note.** This frame is not displayed if the 'Alarm 2 Action' parameter has been set to 'General Alarm'

Retransmission Type

The retransmission output is assigned to the oxygen range.

Select the retransmission output current range required (4 to 20mA, 0 to 20mA or 0 to 10mA).

Logarithmic or Linear Output

The retransmission can be assigned to give a logarithmic or linear output.

Select the output required:

- YES – Logarithmic
- NO – Linear

Continued on next page

...7.6 Set Up Outputs Page

Continued from previous page

Retransmission Zero
Set the required retransmission zero value, in % oxygen units.
[0% to 20.00% (linear output)]
or
[0.01% to 0.25% (logarithmic output)].

Retransmission Span
Linear Output – Set the required retransmission span value, in % oxygen units. The retransmission span value must be at least 5% above the retransmission zero value.
[5% to 25.00%]
Logarithmic Output – The retransmission span is preset to two decades above the zero value and cannot be adjusted. For example, if the zero is set to 0.2%, the span is preset to 20.00% .

Hold Outputs
The retransmission and alarm outputs can be held to prevent inadvertent operation during a test gas calibration sequence.

Test Retrains
The instrument transmits a test signal of 0, 25, 50, 75 and 100% of the retransmission range selected above. The % test signal selected is shown on the upper display.

Example – when the **Retransmission Type** parameter is set to '0–20' (mA) and the Test Retrains signal is set to '50%', the retransmission output value is forced to 10mA.

Alter Security Code
[00000 to 99999]
Set the security code used to gain access to secure parameters – see Section 7.4.

Alter Calibration Code
[00000 and 99999]
Set the code used to gain access to the oxygen calibration facility – see Sections 7.1 to 7.3.

Press **[Return]** to return to the top of the **Set Up Outputs Page**.

Press **[Back]** to advance to the **Electrical Calibration Page**.

8 CALIBRATION


* **Note.** Electrical calibration is carried out prior to despatch and further calibration is not normally necessary. However, if inaccurate or inconsistent readings are obtained, follow the procedures detailed in this Section.

8.1 Equipment Required

- Millivolt source (cell input simulator), -20.0 to 180.0mV .
- Millivolt source (temperature input simulator), 10.0 to 40.0mV .
- Digital voltmeter (current output), 0 to 20mA .
- 'Mercury-in-glass' Thermometer, to measure ambient temperature.


8.2 Preparation

- Switch off the mains supply. Disconnect the probe and retransmission output terminations from the instrument – see Fig. 4.2.
- Connect the millivolt sources and the milliammeter to the appropriate terminals – see Fig. 8.1.
- With all covers fitted, switch on the mains supply to the instrument and allow ten minutes for the circuits to stabilize.
- Select the **Electrical Calibration Page** and proceed as detailed in Section 8.3, following.

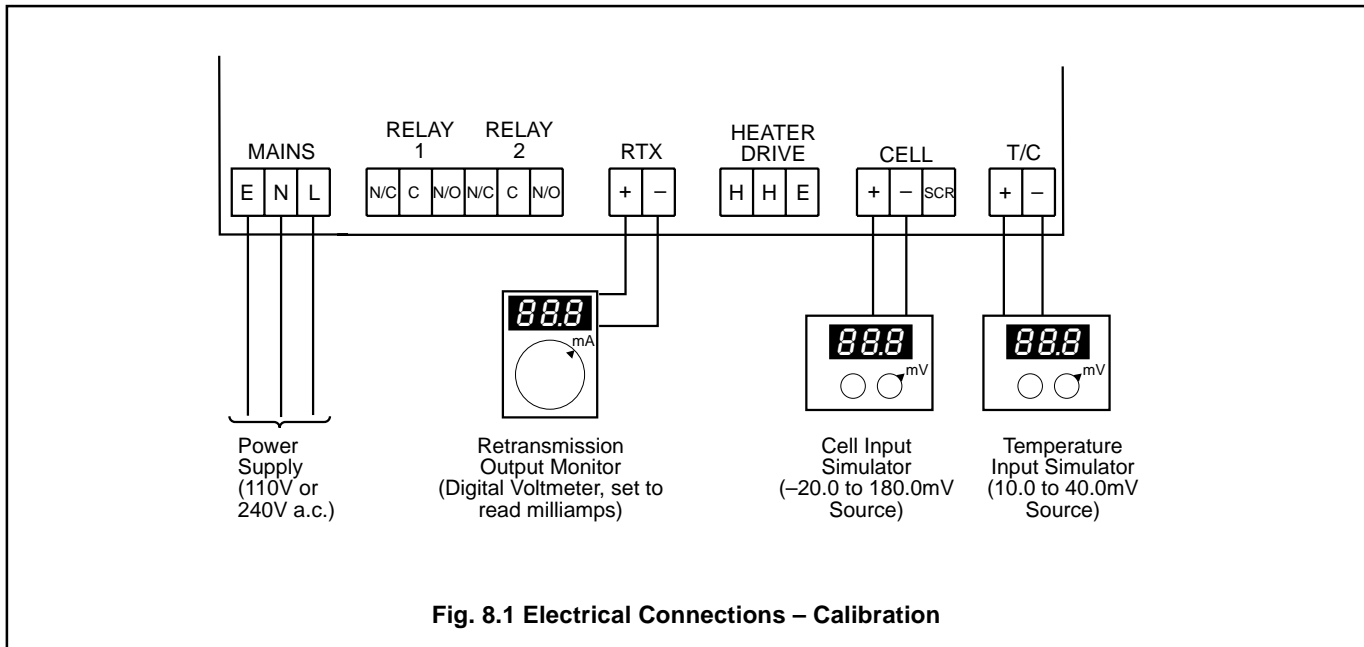

8.3 Electrical Calibration Page

In this section the actual values denoted by 'x x x x x' are not important and should only be used to determine display reading stability.

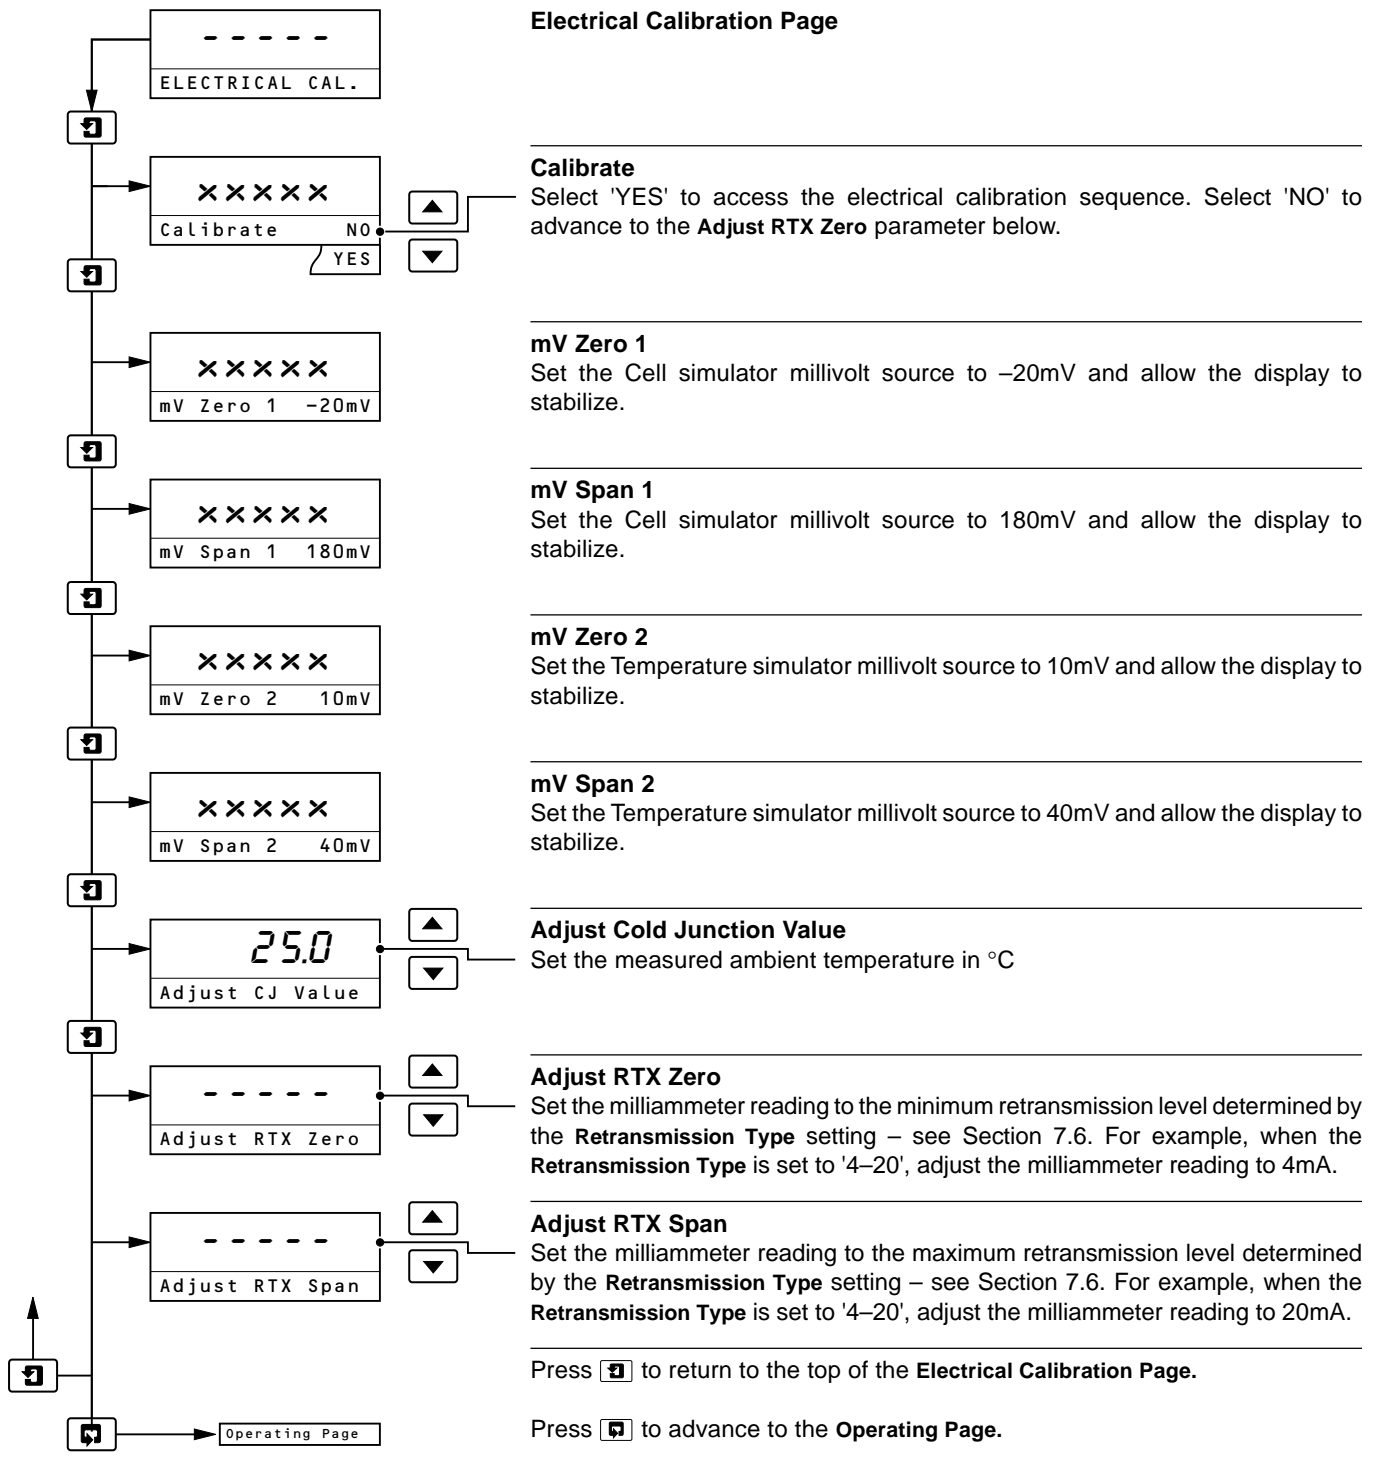

INDEX

A

Alarms 2, 12, 20
Analyzer and Probe Compatibility 10

C

Cables 6
Calibration
 Electrical – see Electrical Calibration
 Oxygen – see Oxygen Calibration
Checking the Instrument Code 3
Connections 6, 7
Controls 11

D

Displays 11
 Language Selection 19
 Measured %O₂ 12

E

Electrical Calibration
 Connections 22
 Displays 23
 Equipment Required 22
Electrical Connections 6, 7
Error Messages 13

F

Fault Finding – see Error Messages
Fuses 9

H

Heater Output 2, 6, 12, 13

I

Interference Suppression 8
Introduction 2

L

Log/Linear Output 20

M

Mechanical Installation 4
Membrane Switches 2, 11
Mounting 5

O

Operating Displays 12
Outputs – see Retransmission Output
Overall Dimensions 5
Oxygen Calibration 15
 Fail 13, 15, 17
 Preset 18
 Single-point 15
 Two-point 16
 User Code 15, 16, 18

P

Programming Overview 14

R

Reference Air
 Connections 10
 Supply 2, 3
Relays – see also: Alarms
 Connections 6, 7
 Contact Protection 8
Retransmission Output 2, 6, 20, 21

S

Schematic Diagram 2
Security Code 19, 21
Siting 4
Specification
 Air Tubing 6
 Cables 6
Start-up 12

T

Terminals – Access 7
Thermocouple 7, 13, 20

V

Voltage Selection 8

CUSTOMER SUPPORT

Service, Support and Maintenance

ABB Process Analytics' commitment to quality doesn't end when we deliver our equipment.

We also provide, at the client's request: start-up services, maintenance services, training services, reconditioning, repair and replacement parts services.

Training services are available for virtually every aspect of operating and maintaining ABB Process Analytics analyzers and systems. Training may be arranged on-site or at any of our training centres.

Maintenance services are available on an unscheduled, as needed basis, or by way of long-term, scheduled maintenance agreements.

Facilities

ABB Process Analytics' primary manufacturing and administrative facility is located in Lewisburg, West Virginia. We also operate sales and service centres in Houston, Texas; Baton Rouge, Louisiana; Sarnia, Ontario; UK; France; Italy; The Netherlands and Singapore. Training centres are located in Lewisburg, Houston and Europe.

For complete information and assistance with ABB Process Analytics analyzers, systems and services, contact any of our facilities for details of your nearest Service and Repair Centre.

United States

ABB Process Analytics
843 N. Jefferson Street
Lewisburg, WV 24901
USA
Office: (304)647-4358
FAX: (304)645-4236

United Kingdom

ABB Process Analytics Ltd
Howard Road
Eaton Socon, St. Neots
Cambs. UK PE19 3EU
Office: 44-1480-404440
FAX: 44-1480-405775

Benelux

ABB Process Analytics BV
Pampuslaan 89
1382 JM Weesp
Netherlands
Office: 31-2944-17291
FAX: 31-2944-13656

Pacific Rim

ABB Industry Pte. Ltd.
No. 2 Ayer Rajah Crescent
Singapore 0513
Office: 65-776-5711
FAX: 65-778-0222

Canada

ABB Process Analytics
1362 Lambton Mall Road
Unit#18
Sarnia, Ontario N7S 5R6
CANADA
Office: (519)541-0011
FAX: (519)541-0012

Middle East

ABB ARESCON
PO Box 2774
Manama, Bahrain
Office: 973-725377
FAX: 973-725332

France

ABB Instrumentation
Process Analytics Div
6/8 Rue Peupliers
BP 430-92004 Nanterre
Cedex, France
Office: 33-1-4769-7280
FAX: 33-1-4242-3995

Italy

ABB Instrumentation SpA
Process Analytics Division
Valle Edison, 50
20099 Sesto S. Giovanni - MI
Italy
Office: 39-2-262321
FAX: 39-2-26232902



ABB Process Analytics
843 N. Jefferson Street
Lewisburg, WV 24901
USA
Office: (304)647-4358
FAX: (304)645-4236

The Company's policy is one of continuous product improvement and the right is reserved to modify the information contained herein without notice.

© ABB 2000

Printed in UK (03.00)

IM/ZDT/FG-PA Issue 4