

NOTES:

1. WARNING!

Using a non-factory RS485 data cable between radio and first unit may result in damage and may void system warranty.

2. Zero second Listen Time is required.

3. All installations in hazardous locations must comply with requirements of certification drawing 2015246-CD.

4. Maximum length of RS485 bus is 4000 Ft. @9600 baud using Totalflow cable P/N 2011648-001 or equivalent.

5. No Star Configurations.

Jumper 1 to 2 on J11 to terminate last unit on bus.

Jumper 2 to 3 on J11 for first and intermediate units.
or
If the first unit is the only unit, jumper 1 to 2 to terminate.

Totalflow RS-485 Cable
P/N 2011648-001
Between Each Unit

Communications Module
Totalflow P/N 2015193-002
In Each Unit


Totalflow Cable
P/N 2100759-004
Pre-Spliced or
2100759-001

6. Cable Shielding – Cable segments between units should have their shields terminated on one end only. The RS-485 Cable (P/N 2011648-001) has two shields, each with its own drain wire. When connecting multiple units together, connect the two drain wires on the first unit to one of the two ground screws on the bottom left-hand side of the enclosure. Cut the cable and terminate the wiring on the second unit but do not connect the drain wires. On the next segment between the second and third units, connect the two drain wires to the second unit but not to the third unit. Repeat this process until all units are wired.

PRIMARY SETUP ITEMS FOR FREEWAVE RS-485 RADIOS:

1. Modem Mode = 3 (Point to MultiPoint Slave).
2. Modem Baud = 6 (9600) - (other baud rates can be used but needs to match flow computer's baud rate).
3. RS232/485 = 2 (RS485)
4. Number Repeaters (Enter number of repeaters)
5. NetWork ID (Enter address ID of radio which is also the same as the Master Radio's ID).

Note: Typically, all other setup items can be left in their default state.

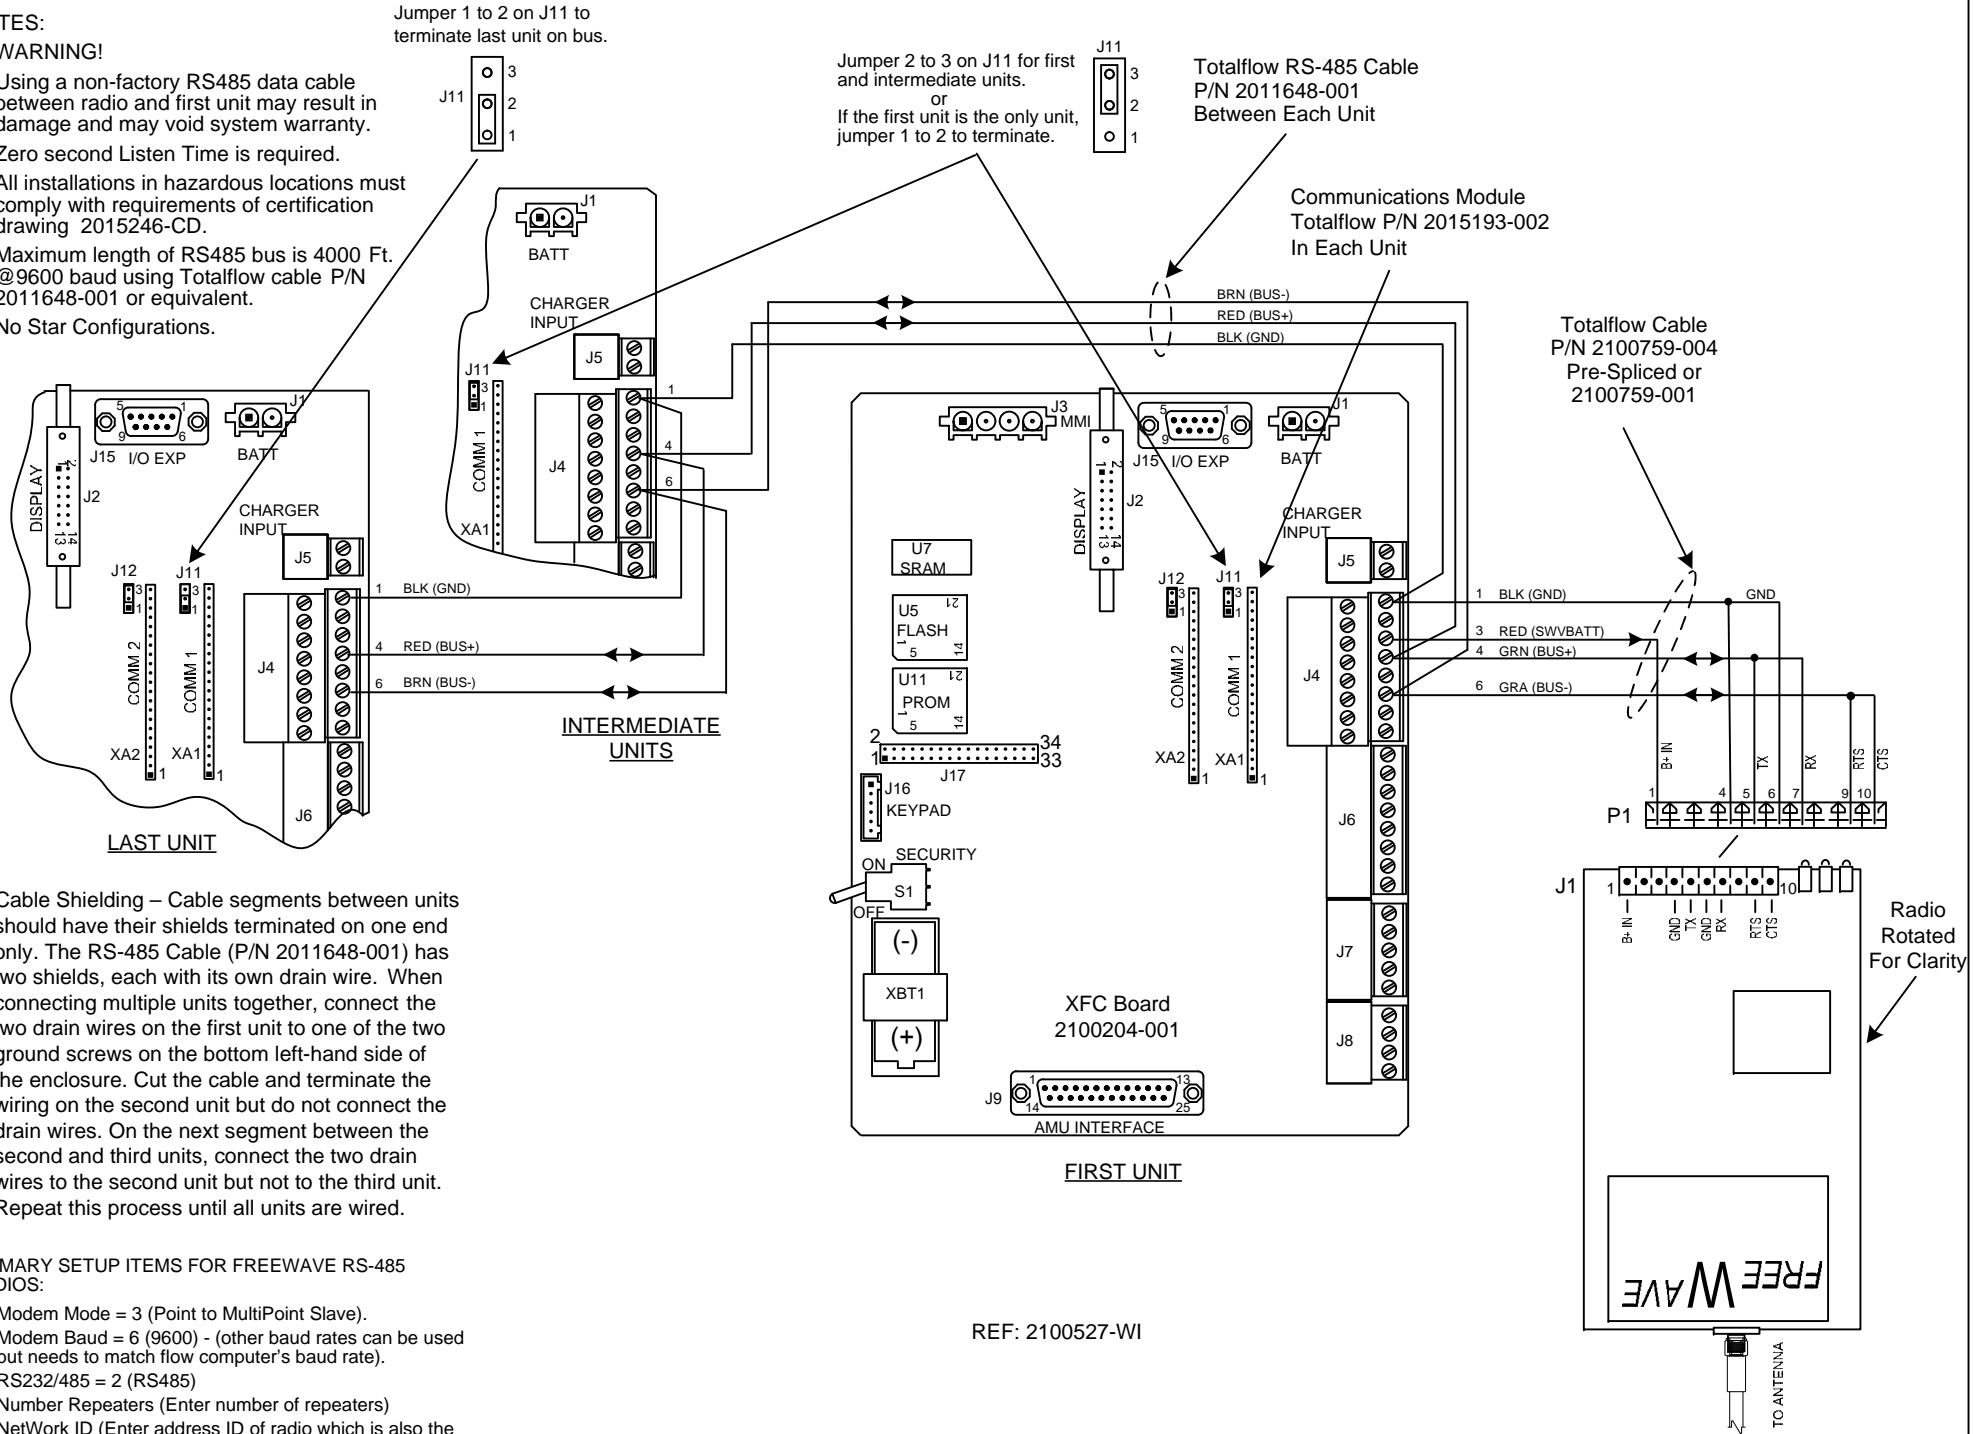

REF: 2100527-WI

ABB	TOTALFLOW Products	ACTION	DOC TYPE	TITLE	DWG NO.	REV	SHEET
		L15883	UD	XFC COMM 1 (2100204 BD) TO FREEWAVE RADIO (RS-485)	2101754	AA	1 OF 1