

# Operating Instructions Busch-Wächter®

6847-500 AGS-...  
220 MasterLINE select



1	Safety.....	3
2	Intended use .....	3
3	Environment.....	3
4	Setup and function .....	4
4.1	Features of function and equipment.....	4
4.2	Detection ranges .....	5
4.2.1	Overview of the detection ranges.....	5
4.2.2	Limitation of the detection range .....	5
5	Technical data.....	6
6	Installation and electrical connection .....	7
6.1	Requirements for the electrician .....	7
6.2	Mounting .....	8
6.2.1	Mounting methods .....	8
6.2.1.1	Wall mounting .....	9
6.2.1.2	Wall mounting with gradient.....	9
6.2.1.3	Ceiling mounting .....	9
6.2.1.4	Corner mounting .....	10
6.2.2	Installation sites .....	10
6.2.3	Preparing the installation.....	11
6.2.4	Mounting steps.....	12
6.3	Electrical connection .....	13
6.3.1	Standard connection .....	13
6.3.2	Standard connection with extension unit push-button.....	13
6.3.3	Standard connection with RC suppressor 6899 and relay .....	13
7	Commissioning .....	14
7.1	Setting / limiting the coverage and the detection range.....	14
7.2	Activation test.....	15
8	Operation .....	16
8.1	Control elements .....	16
8.2	Standard operation .....	16
8.3	Standard operation (time- and brightness dependent) .....	17
8.4	Auxiliary post operation.....	17
8.4.1	Operation with extension unit push-button .....	17
9	Remote control.....	18
9.1	Control elements of the remote control .....	18
9.2	Technical data of the remote control.....	18
9.3	Commissioning of remote control.....	19
9.4	Battery change of remote control .....	19

## 1 Safety



### Warning

#### Electric voltage!

Risk of death and fire due to electrical voltage of 230 V.

- Work on the 230V supply system may only be performed by authorised electricians!
- Disconnect the mains power supply prior to installation and/or disassembly!

## 2 Intended use

The device is to be used exclusively with the components that are supplied and licensed as described in chapter "Setup and function".

## 3 Environment



### Consider the protection of the environment!

Used electric and electronic devices must not be disposed of with domestic waste.

- The device contains valuable raw materials which can be recycled. Therefore, dispose of the device at the appropriate collecting depot.

All packaging materials and devices bear the markings and test seals for proper disposal. Always dispose of the packaging material and electric devices and their components via the authorized collecting depots and disposal companies.

The products meet the legal requirements, in particular the laws governing electronic and electrical devices and the REACH ordinance.

(EU Directive 2002/96/EC WEEE and 2002/95/EC RoHS)

(EU REACH ordinance and law for the implementation of the ordinance (EC) No.1907/2006)

## 4 Setup and function

The Busch-Watchdog 220 MasterLINE select is a movement detector with a detection range of 220° and is ideal for application in the commercial or private sector and is suitable for mounting to walls- or ceilings. At the appropriate installation height it offers a detection-free zone of approximately one meter.

The Busch-Watchdogs are passive infrared movement detectors which switch loads via the KNX bus when sources of heat move within its detection range.  
Busch Watchdog is not an intrusion or attack alarm.

### 4.1 Features of function and equipment

- Coverage of 16 m
- Continuous light switching
- Presence simulation
- Storage of brightness switching threshold can be adjusted separately
- Operation with IR remote control possible
- Extension unit operation
- Detection-free zone of a height of approximately 1 meter
- Dismantling protection
- Display for detection and operation mode
- Disc-type detection level

## 4.2 Detection ranges

### 4.2.1 Overview of the detection ranges

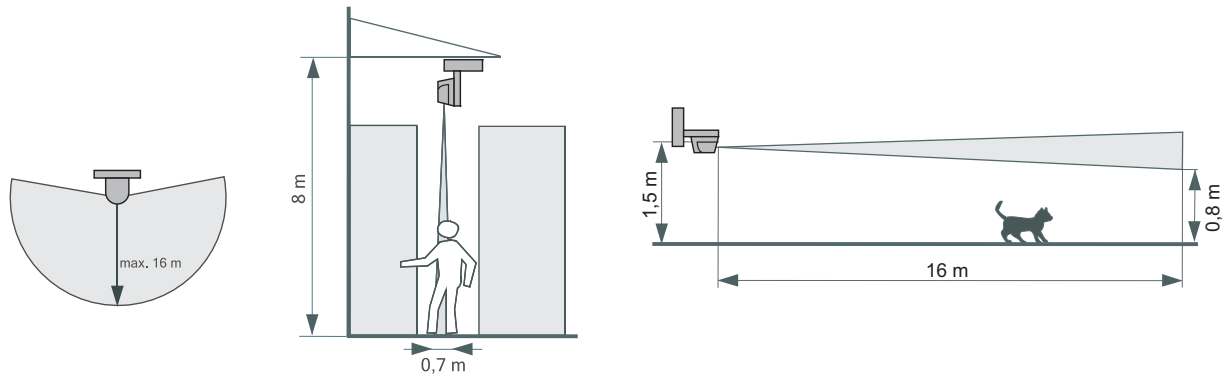


Fig. 1: Detection ranges

#### Detection range

- The detection range is 220° and the coverage is 16 m.

#### Ceiling mounting

- It offers precise surveillance in small corridors if mounted to the ceiling at a maximum height of 8 m. It forms a type of curtain in the detection range.

#### Ceiling mounting in a detection-free zone:

- At a mounting height of 1.5 m the movement detector offers a detection-free zone of approximately one meter from the ground.

### 4.2.2 Limitation of the detection range

The horizontal detection range of the Busch-Watchdog is 220°. The detection range can be limited in case of special local circumstances.

To do this, proceed as follows.

- Cut the included adhesive film to the desired length.
- Glue the section of covering foil from the front onto the area of the sensor of your Busch-Watchdog where the detection is to be blocked out.



#### Note

For an illustration see chapter 7.1 on page 14.

## 5 Technical data

Designation	Value
Nominal voltage	230 V AC $\pm$ 10%, 50/60 Hz
Switching capacity	3680 W/VA
Maximum switching current:	16 AX
Maximum power loss	< 1 W
Horizontal detection • Busch-Watchdog 220	220°
Twilight sensor	0.5 ... 300/ $\infty$ lux
Switch-off delay	10 seconds ... 30 minutes
Short-time pulse • Pulse duration • Pause time • Pause time with continuous light / presence simulation	1 second 9 seconds 55 seconds
Coverage (if mounted 2.5 m high)	Maximum of 16 m
Operating temperature	-25°C ... 55°C
Protection type	IP 55



### Information for the connection of ballasts

Please observe the following points regarding high inrush currents for ballasts:

- The ballast manufacturer's specification determines the possible number of ballasts.

## 6 Installation and electrical connection



### Warning

#### Electric voltage!

Risk of death due to electrical voltage of 230 V during short-circuit in the low-voltage line.

- Low-voltage and 230 V lines must not be installed together in a flush-mounted socket!

### 6.1 Requirements for the electrician



### Warning

#### Electric voltage!

Install the device only if you have the necessary electrical engineering knowledge and experience.

- Incorrect installation endangers your life and that of the user of the electrical system.
- Incorrect installation can cause serious damage to property, e.g. due to fire.

The minimum necessary expert knowledge and requirements for the installation are as follows:

- Apply the "five safety rules" (DIN VDE 0105, EN 50110):
  1. Disconnect from power;
  2. Secure against being re-connected;
  3. Ensure there is no voltage;
  4. Connect to earth and short-circuit;
  5. Cover or barricade adjacent live parts.
- Use suitable personal protective clothing.
- Use only suitable tools and measuring devices.
- Check the supply network type (TN system, IT system, TT system) to secure the following power supply conditions (classic connection to ground, protective earthing, necessary additional measures, etc.).

## 6.2 Mounting



### Warning

#### Electric voltage!

Risk of death and fire due to electrical voltage of 230 V.

- Work on the 230 V supply system may only be performed by authorised electricians!
- Disconnect the mains power supply prior to installation and/or disassembly!




### Caution

#### Risk of damaging the device!

The lens of the device is sensitive and can easily sustain damage.

- Do not press on the lens when setting the device!

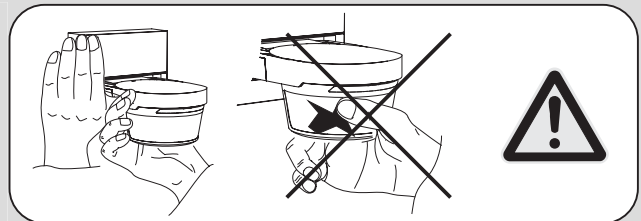

### 6.2.1 Mounting methods

There are four methods of mounting the Busch-Watchdog MasterLINE range.

The mounting hole is compatible with all previously available Busch-Watchdog models.

The possible mounting methods are described in the following.



### Note

The adapters for the following mounting methods must be ordered separately:

- Wall mounting with gradient
- Ceiling mounting (for the desired position)
- Corner adapter



#### 6.2.1.1 Wall mounting

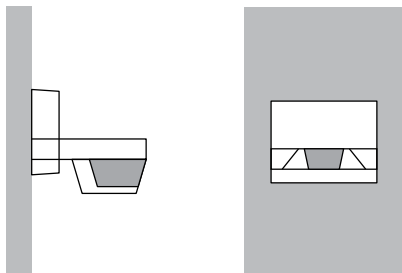


Fig. 2: Wall mounting

Classic wall mounting

#### 6.2.1.2 Wall mounting with gradient.

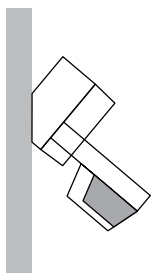


Fig. 3: Wall mounting with gradient.

Wall mounting with gradient is recommended on a building situated on a hill or with a gradient. This allows the detection range to be used effectively.

#### 6.2.1.3 Ceiling mounting

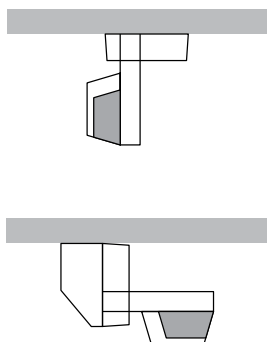


Fig. 4: Ceiling mounting

There are two options for ceiling mounting:

1. From the bottom for a wider detection range.
2. With a corner adapter, which allows the device to be ideally positioned.

#### 6.2.1.4 Corner mounting

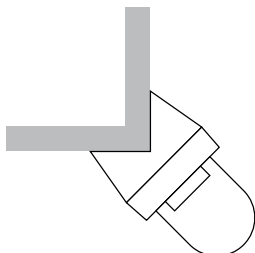


Fig. 5: Corner mounting

The combination with a corner adapter is recommended for an optimal 280° detection range.



#### Note

Detailed user information is available via the link <http://www.busch-jaeger-katalog.de/index.php> in the Busch-Watchdog category under accessories.

#### 6.2.2 Installation sites

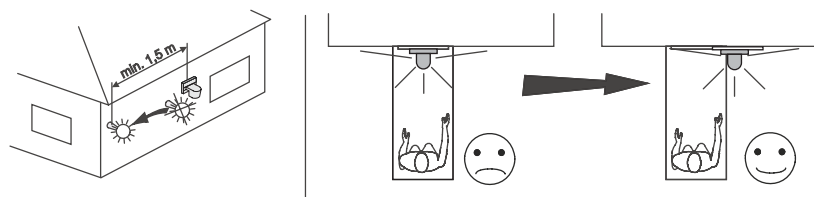


Fig. 6: Installation sites

- The distance between light and movement detector should be at least 1.5 m.
- For optimum detection of persons the approach into the detection range should always be offset and never frontal.

### 6.2.3 Preparing the installation

To prepare the installation of the device, perform the following steps:

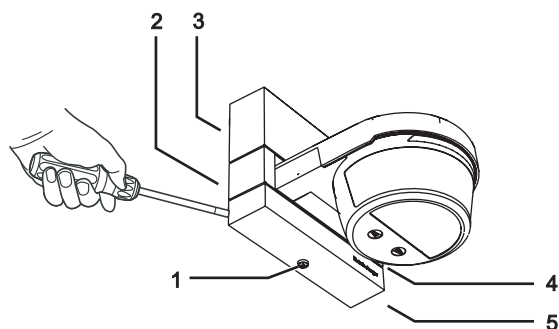


Fig. 7: Preparing the installation

1. Remove the locking screw (1) (if installed).
2. Press in clamps 2 - 5 on the sides of the housing with a suitable tool.
3. Carefully remove the front of the device.

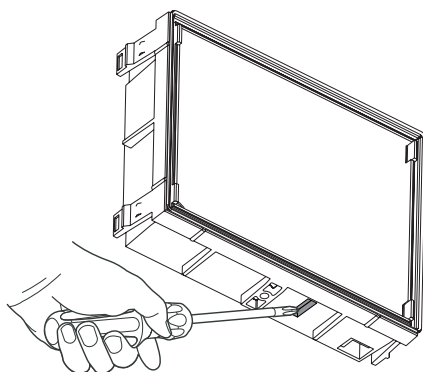


Fig. 8: Opening the water drain

Depending on where the device is installed, the water drain may have to be opened.

- To do this, pierce the plastic membrane on the bottom of the device.

The installation is prepared.

#### 6.2.4 Mounting steps





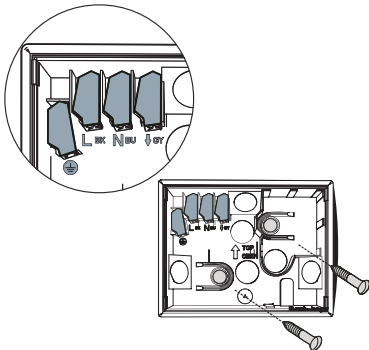


Fig. 9: Mounting the bottom of the device

1. Mount the device to the wall.
  - Do not use countersunk head screws for mounting to the wall.
  - Use screws with a head diameter of 6.5 mm - 8.5 mm.
2. Connect the power to the device, see section 6.3.
  - Observe the maximum admissible cable cross sections.
- The bolting dimensions of the base may be compatible with existing bores on older versions of the Busch-Watchdog.
- Latch the upper part of the device onto the base.

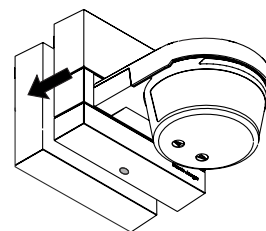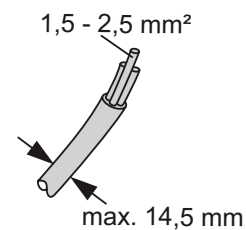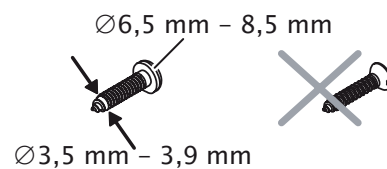

3. To protect the device against unauthorized opening, the enclosed screw can be used on the bottom of the device.
  - To protect the device against unauthorized opening, screw the enclosed screw into the bottom of the device.

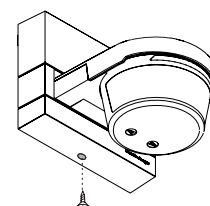

## 6.3 Electrical connection

### 6.3.1 Standard connection

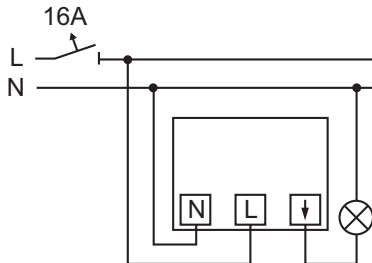


Fig. 10: Standard connection

With one circuit breaker the maximum sum current of 16 A is admissible for both relays.

### 6.3.2 Standard connection with extension unit push-button

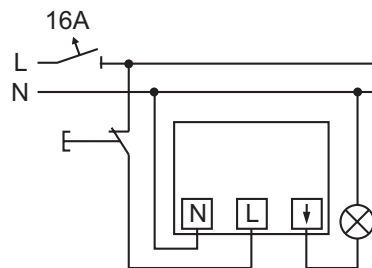


Fig. 11: Standard connection with extension unit push-button



#### Note

For more information see chapter "Extension unit operation" 8.4 on page 17.

### 6.3.3 Standard connection with RC suppressor 6899 and relay

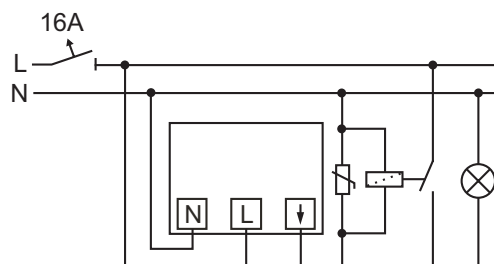


Fig. 12: Standard connection with RC suppressor

## 7 Commissioning

### 7.1 Setting / limiting the coverage and the detection range




#### Caution

##### Risk of damaging the device!

The lens of the device is sensitive and can easily sustain damage.

- Do not press on the lens when setting the device.

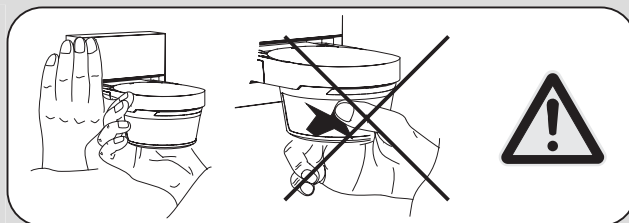

Use the following steps to set the coverage and the detection range:

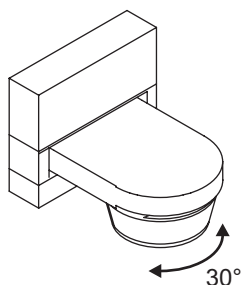


Fig. 13: Adjusting the lateral detection range

1. Adjust the lateral detection range by turning the head of the device.



Fig. 14: Adjusting the coverage

2. Adjust the coverage by lifting or lowering the head of the device.
  - The minimum coverage is 6 m.

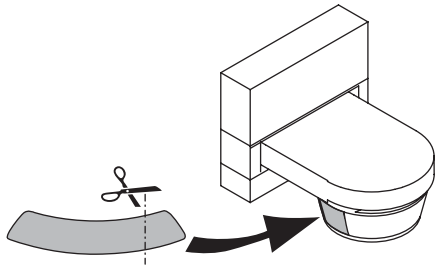


Fig. 15: Adjusting the detection range by masking

3. The range can be specifically limited by gluing on the enclosed foil.
  - Cut the enclosed foil to the size required.

The coverage and the detection range are set.

## 7.2 Activation test

The activation test can be triggered manually on the device or via the service remote control. (For additional control elements, see separate operating manual).

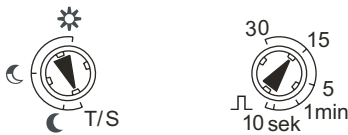


Fig. 16: Control elements

To carry out the activation test, perform the following steps:

1. Set selector switch to T/S.
  - The device is now in test mode for 10 minutes (daytime operation, switch-off delay 2 sec.). In addition, each detection is indicated by the status LED flashing quickly.
  - The device then switches back to standard operating mode.
2. To carry out additional activation tests, set the selector switch back to position T/S or interrupt the operating voltage supply for more than 15 seconds.
  - The device is now in test mode for another 10 minutes. Test mode is exited automatically after 10 minutes or by adjusting the brightness.

## 8 Operation

### 8.1 Control elements

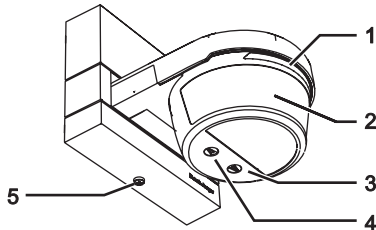


Fig. 17: Control elements

No.	Function
1	LED <ul style="list-style-type: none"><li>• On – continuous light set (only possible with remote control)</li><li>- Flashes fast - detection in test mode</li><li>• Flashes 3 times - detection in standard and normal operation</li><li>• Flickers - incoming IR signals (remote control)</li></ul>
2	Lens
3	Trim potentiometer for switch-off delay, short-time pulse
4	Trim potentiometer for brightness value, test/standard operation
5	Screw for dismantling safety

### 8.2 Standard operation



Fig. 18: Standard operation

The lighting during twilight remains switched on for 3 minutes after the last detection.



After activating the mains supply voltage the device remains in test mode for 10 minutes (see chapter "Activation test").



8.3 Standard operation (time- and brightness dependent)

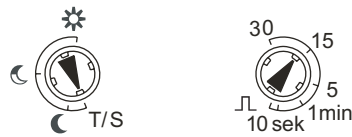


Fig. 19: Normal operation

Set the values for the brightness limit value and the switch-off delay (ON period of the light after the last detection).

Short-time pulse for activating the staircase light timer switches or door bells.

Icon	Function
	Switching during all brightness levels
	Switching at nightfall
	Switching during complete darkness
	Short-time pulse

8.4 Auxiliary post operation

8.4.1 Operation with extension unit push-button

Aside from the movement detector being triggered by the infrared radiation in the detection range, manual operation is possible via an extension unit push-button.

For example, when an exit is not within the detection range of the movement detector, the extension unit push-button can be used. The lighting can there be switched on or off manually with the push-button.

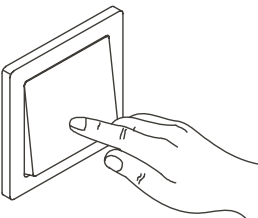


Fig. 20: Operation with extension unit push-button

- When operating with an extension unit push-button, the lighting for the set operating mode is switched on.

## 9 Remote control

### 9.1 Control elements of the remote control

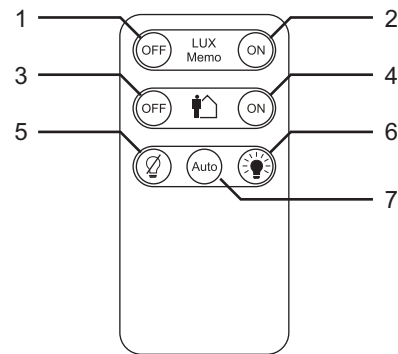


Fig. 21: Control elements

No.	Function
1	Resetting the switch-on brightness to the settings of the potentiometers on the Busch-Watchdog. - Press the button for at least 1 second.
2	The current brightness is set as switch-on brightness. - Press the button for at least 1 second.
3	Deactivation of presence simulation.
4	Presence simulation activation. - Continuous light between twilight and 22:30 p.m. CET or 23:30 CEST. Followed by movement detection.
5	Light deactivation for 4 hours. - No detection of movement.
6	Light activation for 4 hours. - No detection of movement.
7	Resetting to automatic movement detection.



The sensitivity of the movement sensors can be adjusted to surroundings which are particularly restless or free of movement.

### 9.2 Technical data of the remote control

Designation	Value
Operating voltage:	3 V DC
Battery type:	CR 2025
Battery life:	Approximately 2 years
Coverage:	Maximum of 6 m
Protection type:	IP 40
Operating temperature:	0°C ... 45°C

### 9.3 Commissioning of remote control

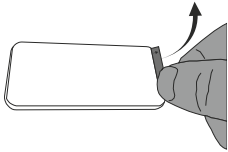


Fig. 22: Removing the protective foil from the battery

Remove the protective foil from the battery before commissioning.

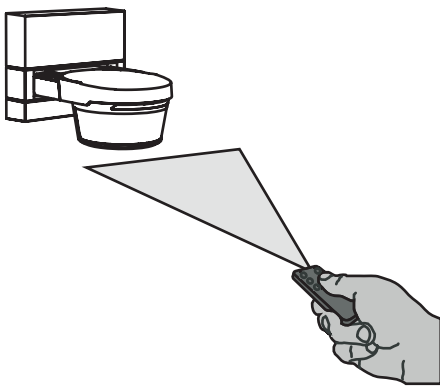


Fig. 23: Programming the remote control

- Press the "AUTO" button on the remote control for at least 3 seconds within the period of 10 minutes after activating the power on the Busch-Watchdog.
  - The Busch-Watchdog must be de-energized beforehand for at least 30 seconds.
  - The remote control will then automatically connect itself to the Busch-Watchdog, and the Busch-Watchdog will flash if the reception is correct.
  - Repeat these steps to program a maximum of 9 additional remote controls.

### 9.4 Battery change of remote control

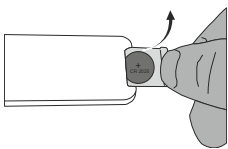


Fig. 24: Changing the battery

1. Pull the battery holder out of the remote control.
2. Insert a new battery of type 2025.
  - The plus pole of the battery (+) must be on top.
3. Push the battery holder back into the device.

A member of the ABB Group

**Busch-Jaeger Elektro GmbH**

PO box  
58505 Lüdenscheid

Freisenbergstraße 2  
58513 Lüdenscheid  
Germany

**www.BUSCH-JAEGER.com**

info.bje@de.abb.com

**Central sales service:**

Phone: +49 (0) 2351 956-1600

Fax: +49 (0) 2351 956-1700

**Notice**

We reserve the right to at all times make technical changes as well as changes to the contents of this document without prior notice.

The detailed specifications agreed to at the time of ordering apply to all orders. ABB accepts no responsibility for possible errors or incompleteness in this document.

We reserve all rights to this document and the topics and illustrations contained therein. The document and its contents, or extracts thereof, must not be reproduced, transmitted or reused by third parties without prior written consent by ABB.

Copyright© 2012 Busch-Jaeger Elektro GmbH  
All rights reserved

1473-1-8137 | Rev. 01 | 11.2012